



RR-939 Remote Control Owner's Manual

Once the programming is complete, you select a component with the press of a button and turn the RR-939 into the remote control for your Rotel CD player or your Sony TV set or your Panasonic video recorder. Then, you simply press command buttons that duplicate the functions on the remote that came with your component.

To get started, look at the layout of the RR-939 and the following operating instructions:

Device Buttons 1

Eight buttons at the top of the RR-939 determine which set of commands is currently active. For example, if you press the AUDIO button (labeled AUD), the RR-939 becomes the remote control for your Rotel Surround Sound Processor. If you press the TV button, the RR-939 becomes the remote control for your TV set.

These buttons are also used in programming the RR-939. See the PROGRAMMING section below for details.

Command Buttons 2

This large group of buttons duplicates the functions on the remote controls for your audio/video components. A general description of these functions follows. Detailed information on the specific function of each button can be found in the CONTROL COMMANDS tables at the back of this manual.

At the top of this group of buttons are basic controls such as Power, Volume, Channel Selection, etc.

Below these is a group of buttons that duplicate the transport functions on a tape recorder or VCR (Stop, Play, Pause, etc.) as well as the Up and Down commands that might be found on a cable or satellite TV receiver.

The next group of buttons duplicates the numeric keypad buttons such as might be used for direct track selection on a CD Player or direct channel selection on a TV set. Included in this section are special command buttons providing functions found on various components.

At the bottom of this group of buttons are ten round source selection buttons labelled CD, TUNER, TAPE, etc. These duplicate the source input selection buttons on a receiver, preamplifier, or surround sound processor. The function of these buttons is not the same as the DEVICE buttons at the top of the remote control. The DEVICE buttons determine which command set is active on the RR-939. The source select COMMAND buttons switch inputs on the audio/video component being controlled.

To operate the RR-939:

Step One: Press a DEVICE button to activate the commands for the desired component. This command set will remain active until you press a different DEVICE button.

Step Two: Press COMMAND buttons to operate the component you have selected.

Remember that the COMMAND buttons duplicate many controls on many different types of audio/video components and their function may vary depending on the type of component selected. For example, the PLAY/SELECT button engages the play mode on a CD Player, but it duplicates the SELECT function on a cable TV converter.

Note: The RR-939 tells you which command set is active. Each time you press a COMMAND button, the active DEVICE key blinks red to tell you which component you are controlling. If the COMMAND button that you press has no function in the active command set (for example, the numeric keys in VCR mode), no DEVICE button will blink, indicating that the COMMAND button is inactive.

The COMMAND buttons are labelled, often with multiple labels if the button serves different purposes for different kinds of components. As long as you remember that pressing a DEVICE button turns the RR-939 into, for example, a CD player remote control or a VCR remote control, the functions of each button should be intuitive. Tables listing the function of each button for each type of component can be found in the back of this manual.

A few buttons have a second function, activated by pressing and releasing the SHIFT button before pressing the COMMAND button, as described below.

Macro Buttons 3

A macro is a series of individual commands triggered by pressing one button. Macros make operating a complex home entertainment system much easier. For example, think of playing a videotape: You turn on the TV, turn on the VCR, select the TV input connected to the VCR, and, finally, put the VCR into Play mode. That's four separate commands — and it may take you as many as six pushes on various buttons to execute them. A macro makes this simpler by executing all the needed commands with just one push of a button.

There are five MACRO buttons on the RR-939 — the four buttons labeled M1, M2, M3, and M4, along with the POWER button. A sequence of up to eight different com-

TV Codes

A Mark	112	Memorex	004 007 072
Admiral	072 081 161	Metz	088
Akai	001 146	MGA	001 004 024 042
Ampro	073 167	Minerva	088
Anam	043 054 055 056 080 104 108 112	Mitsubishi	004 024 040 042 109 146
AOC	001 004 058 112	MTC	001 004 062 101
Candle	001 002 003 004	NAD	015 025
Capehart	058	NEC	001 019 024 040 056 130 134
Cetronic	043	Nikei	043
Citizen	001 002 003 004 101 143	Onking	043
Classic	043	Onwa	043
Concerto	004	Optonica	019 081
Contec	043 051	Panasonic	034 056 080 164 001 003 004 024 056 059 060 063 064 127 143 164
Coronado	143	Philco	001 003 004 005 038 059 093 164 180 181 182 183 184 185 186 187 188 189 190 192
Craig	054	Pioneer	004 018 023 025 135 176
Crown	143	Portland	004 143
Curtis Mathes	001 004 101 143	Proscan	144 160 161 167
CXC	043	Proton	004 058 143 171 173
Daewoo	004 055 103 111 114 127 143	Quasar	034 056
Daytron	004 143	Radio Shack	004 019 047 127 143
Dynasty	043	RCA	001 004 023 024 056 065 074 144 152 156 160 161
Dynatech	062	Realistic	007 019 047
Electrohome	024 143	Runco	072 169
Emerson	001 004 005 028 043 047 048 051 096 143 151 153 154 155	Sampo	001 004 058
Fisher	007 057	Samsung	004 101 127 133 143 160
Funai	028 043	Sanyo	007 020 021 033 053 057 082
Futuretech	043	Scott	004 028 043 048 143
GE	004 008 009 034 056 073 074 091 130 144 155 160 161	Sears	004 007 015 028 030 057 082 094 143 160
Goldstar	004 106 110 112 113 119 127 143	Sharp	004 014 019 022 028 143 175
Grundig	203 204 205 207 209	Signature	072
Hallmark	004	Sony	070 085 126 139
Hitachi	004 007 010 011 012 023 075 143 158 163	Soundesign	003 004 028 043
Infinity	164	Spectricon	112
Inkel	129	SSS	004 043
JBL	164	Supre Macy	002
JCP	001	Sylvania	001 003 059 060 063 064 127 160 164
JCPenny	004 008 024 030 065 101 143 160	Symphonics	052
Jensen	013	Tandy	081
JVC	034 038 070 083	Tatung	056 062
Kenwood	001 070	Technics	034 080
Kloss	002 059	Techwood	004
KTV	043 143 154	Teknika	002 003 004 024 028 043 072 101 143
Lodgenet	072	Telerent	072
Logik	072	Tera	172
Luxman	004	Thomson	194 195 196 197 198 199 200 201
LXI	007 015 052 081 160 164		
Magnavox	001 003 004 022 059 060 061 063 064 127 164		
Marantz	001 164		
Matsui	164		

TMK	004	MGA	045 046 059
Toshiba	015 030 040 062 101	Minolta	004 020
Totevision	143	Mitsubishi	004 020 046 051 059 061 142
Universal	008 009	MTC	034 040
Video Concepts	146	Multitech	024 034
Vidikron	174	NEC	012 023 043 048
Vidtech	004	Nordmende	043
Wards	004 008 009 019 028 060 061 063 064 072 074 164	Optonica	053 054
Yamaha	004	Panasonic	070 133 140
York	004	Pentax	004 020 031 063
Yupiteru	043	Philco	031 034 067
Zenith	072 073 095 103 112	Philips	031 034 054 067 101 162 166 167 168 169 170 171
Zonda		Pilot	101

VCR Codes

Aiwa	034	RCA	004 020 034 040 041 107 109 140 144 147
Akai	043 046 124 142 146	Realistic	001 008 010 014 031 034 040 053 054 101
Ampro	072	Ricoh	058
Anam	031 103	Runco	072
Audio Dynamics	012 023 043	Salora	014
Broksonic	035 037 129	Samsung	017 040 107 109 113 115 124
Canon	028 031	Sansui	043 048 135
Capehart	108	Sanyo	001 007 010 014 040 134
Craig	001 040 135	Scott	017 037 129 131
Curtis Mathes	031 041	Sears	001 004 008 009 010 014 017 020 081 101
Daewoo	007 010 017 065 108 111	Sharp	031 054
Daytron	108	Shintom	024
DBX	012 023 043	Sony	001 009 031 052 056 057 058
Dynatech	034 053	Soundesign	034
Electrohome	006 017 025 027 029 031 034 035 036 037 046 101 129 131 138 153	STS	004
Emerson	009 017 025 027 029 031 034 035 036 037 046 101 129 131 138 153	Sylvania	031 034 059 067
Fisher	001 008 009 010	Symphonic	034
Funai	034	Tandy	010 034
GE	031 063 072 107 109 144 147	Tatung	043
Go Video	132 136	Teac	034 043
Goldstar	004 012 020 101	Technics	031 070
Harman Kardon	012 045	Teknika	031 034 101
Hitachi	018 026 034 043 063 137 150	Thomas	034
Instant Replay	031	Thomson	177 178
JCL	031	TMK	006
JCPenny	004 012 040 101	Toshiba	004 008 017 059 082 131
Jensen	043	Totevision	040 101
JVC	012 031 043 048 055 060 130 150 152	Unitex	040
Kenwood	014 034 048	Vector Research	012
Lloyd	034	Victor	048
LXI	001 004 009 017 034	Video Concepts	012 034 046 141
Magin	040	Videosonic	040
Magnavox	031 034 041 067 068	Wards	001 004 017 024 031 034 040 053 054 131
Marantz	012 031 067 069	Yamaha	012 034 043
Marta	101	Zenith	034 048 056 058 072 080 101
Matsui	027 030		
MEI	031		
Memorex	001 010 014 031 034 040 053 072 101 134 139		

RR-939

REMOTE CONTROL

The Rotel Co., Ltd.

10-10 Shinsen-Cho
Shibuya-Ku
Tokyo 150-0045
Japan

Phone: +81-3-5458-5325

Fax: +81-3-5458-5310

Rotel of America

54 Concord Street
North Reading, MA 01864-2699
USA

Phone: 978-664-3820

Fax: 978-664-4109

Rotel Europe

Meadow Road
Worthing, West Sussex BN11 2RX
England

Phone: +44 (0)1903 524 813

Fax: +44 (0)1903 524 831

Rotel Deutschland

Kleine Heide 12
D-33790 Halle/Westf.
Germany

Phone: 05201-87170

Fax: 05201-73370

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>