 
 


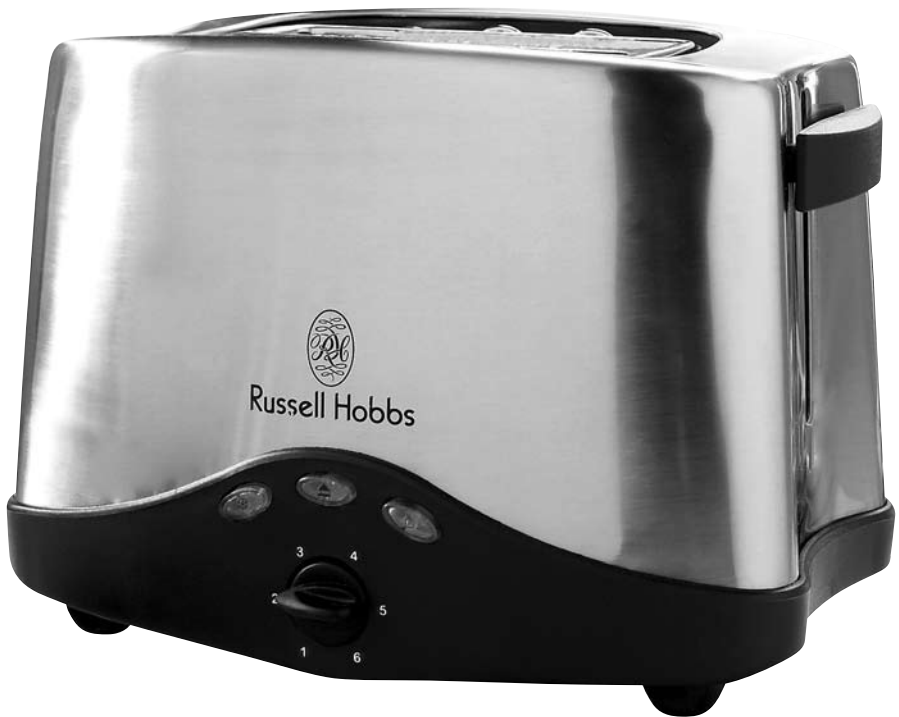


Russell Hobbs




instructions

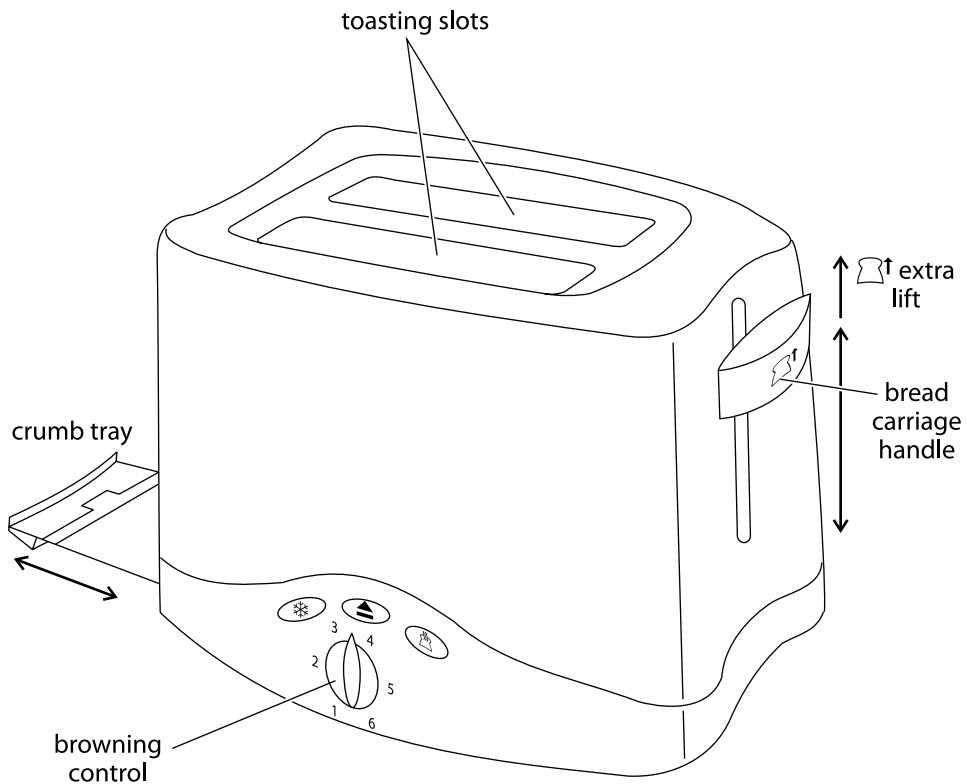

buttons/lights

 frozen bread

 eject

 reheat

Read the instructions and keep them safe. Pass them on if you pass the toaster on. Remove all packaging, but keep it till you're satisfied the toaster is working.

important safeguards

Follow basic safety precautions, including:



- 1 The toaster must only be used by or under the supervision of a responsible adult. Use and store the toaster out of reach of children.
- 2 Don't put the toaster in liquid, don't use it in a bathroom, near water, or outdoors. 
- 3 Sit the toaster upright on a firm, level, heat-resistant surface.
- 4 Don't put it on or near anything that could be damaged even by moderate heat.
- 5 Bread may burn. Don't use the toaster near or below curtains or other combustible materials, and watch it while it's hot.
- 6 The area round the toasting slots gets very hot – don't touch.
- 7 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 8 If you're not using both slots, don't let anything get into the empty slot, as both slots will be "live" when the bread carriage handle is lowered.
- 9 Don't let the toasting slots become covered during toasting, or while the toaster is still hot.
- 10 Don't cover the toaster or put anything on top of it.
- 11 If bread gets jammed, unplug the toaster, let it cool, then carefully remove the bread. Don't use anything sharp, you'll damage the elements.
- 12 Don't toast sandwiches or buttered items, the fillings or the butter may burn.
- 13 Don't use torn, curled, or misshapen bread, you may jam the toaster.
- 14 Unplug the toaster when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.
- 15 Clean the crumbs out of your toaster frequently, to avoid a build up of crumbs. This is unhygienic and could cause a fire hazard.
- 16 Don't use the toaster unless the crumb tray is fitted and closed.
- 17 Keep the toaster and the cable away from sources of heat.
- 18 Don't use the toaster for any purpose other than those described in these instructions.
- 19 This toaster must not be operated by an external timer or remote control system.
- 20 Don't use the toaster if it's damaged or malfunctions.
- 21 If the cable is damaged, return the toaster, to avoid hazard.

household use only


before using for the first time

- 1 Turn the browning control to the highest setting (6).
- 2 Operate the toaster empty, to cure the new elements. This may smell a bit, but it's nothing to worry about. Ensure the room is well ventilated.

toasting bread

- 3 Sit the toaster upright on a stable, level, heat-resistant surface.
- 4 Don't put it on or near anything that could be damaged even by moderate heat.
- 5 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 6 Bread may burn. Don't use the toaster near or below curtains or other combustible materials and watch it while it's hot.
- 7 Put the plug into the power socket (switch the socket on, if it's switchable).
- 8 Turn the browning control to the required setting (1 = light, 6 = dark).
- 9 Put bread into the toasting slots (maximum thickness 25mm).
- 10 Press the bread carriage handle down fully – it won't lock down unless the toaster is connected to the electricity supply.
- 11 The  light will come on, and the elements will heat up.
- 12 When it's done, the toast will pop up, the  light will go out, and the elements will turn off automatically.


 
eject

- 13 To stop the toaster before it's finished, press the  button. The toast will pop up, and the elements will turn off.

extra lift

- 14 After toasting small items (bagels, crumpets, etc.) the bread carriage handle may be raised further, to allow them to be removed more easily.



frozen bread

- 15 This takes the guesswork out of toasting frozen bread.
- 16 There's no need to adjust the browning control, leave it at your favoured setting.
- 17 Put the frozen bread into the slots.
- 18 Lower the bread carriage handle, then press the  button.
- 19 The  light will come on, and the toasting time will be altered automatically to give the same degree of browning you get with unfrozen bread.

caution don't try to defrost bread – you'll probably wreck the toaster

- a) toasting frozen bread changes ice to steam, which escapes via the toasting slots
- b) defrosting bread on a low setting changes ice to water, which drips into the toaster, over the electronics and maybe the elements, causing mayhem

reheating toast

- 20 There's no need to adjust the browning control.
- 21 Put the toast into the slots.
- 22 Lower the bread carriage handle, then press the  button.
- 23 The  light will come on, the toast will be given a short burst of heat, then it'll pop up, and the lights will go out.
- 24 You must only reheat plain, "unbuttered" toast.

hints and tips

- 25 When toasting more than one slice of bread, use slices of similar size, thickness and freshness.
- 26 Old (yesterday's) bread contains less moisture, so makes crisper toast.
- 27 Old or thin bread cooks faster than fresh or thick bread, so use a lower setting.

28 Sweet bread products (tea cakes, fruit loaf, etc.) brown much more quickly than ordinary bread, so should be toasted on a lighter setting.

crumbs

29 Clean the crumbs out of your toaster frequently, to avoid a build up of crumbs. This is unhygienic and could cause a fire hazard.

30 Unplug the toaster and let it cool.

31 Slide the crumb tray out and empty it.

32 Wipe it with a damp cloth, dry, then slide it back into place under the toaster.

33 Don't use the toaster unless the crumb tray is fitted and closed.

care and maintenance

34 Unplug the toaster when not in use, before moving and before cleaning. Let it cool before cleaning and storing away.

35 Wipe outer surfaces with a damp cloth. If necessary, use a little washing-up liquid.

36 Don't let anything enter the slots, you might damage the elements.

37 Don't put the toaster in liquid.

 
38 Don't use harsh or abrasive cleaning agents or solvents.

connection

The product must be earthed.

It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician.

Don't use a non-rewireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

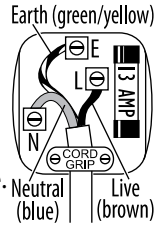

service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right).

Customer Service

(correspondence only)

Salton Europe Ltd

Failsworth

Manchester

M35 0HS

Customer Returns

Salton Europe Ltd

Heath Mill Road

Wombourne

Wolverhampton

WV5 8AQ

Customer Service (service@saltoneurope.com)

telephone 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

online

www.russellhobbs.co.uk for more products.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>