



Russell Hobbs

Instruction Manual

Washing Machine



Model number: RH1042

Please read these instructions carefully and keep them for future reference.

For Customer Services, Spare Parts & Manufacturer's Warranty Information, please call
0845 208 8750

Opening times: Monday – Friday 8am – 6pm
Saturday: 9am – 1pm

Contents

Before Use	3
Safety Warnings.....	3
Recommendations	4
Installation	4
Removing transportation screws	5
Leveling the machine	6
Electrical connection	6
Water inlet connection.....	6
Water discharge connection.....	7
Technical specifications	8
Preparing your laundry	8
Using your machine	10
Detergent	10
Control Panel	11
Detergent Drawer.....	11
Selecting a Programme.....	12
Additional Functions.....	12
Using your machine	13
Before Use	13
First Wash.....	13
Selecting a Programme.....	13
Additional Functions.....	13
Child Lock	15
Running the machine	15
Program selection and features	15
Start/Pause	15
Starting the programme	15
Changing the programme	15
Cancellation of the Programme.....	15
End of programme	15
Maintenance and Cleaning	16
Water Inlet Filters	16
Cleaning the pump.....	16
Cleaning the detergent drawer.....	18
Cleaning your machine	18
Drawer filter.....	18
Body.....	19
Drum	19
Trouble Shooting	19
Energy Efficiency	21

Before Use

Safety Warnings

- You should remove the transportation bolts from your machine before the first usage. Faults occurring in machines operated with transportation bolts fitted are not covered by the warranty.
- Do not use an extension lead for this appliance. Only plug directly into a wall socket.
- Do not plug into any damaged plug sockets
- In case the power cable becomes damaged, contact **0845 208 8750** for advice and do not use the machine.
- Never pull the cable when unplugging – always grip the plug itself.
- Do not plug in, or remove the plug with wet hands.
- Never touch the machine with wet hands or feet.
- Never open the detergent drawer when the appliance is running.
- Never force the door to open when the washing machine is running.
- Do not touch the discharging hose or water from the discharging hose.
- In case of any breakdown, unplug the appliance first and then turn the tap off. Do not attempt to repair by yourself, always contact **0845 2088750** for advice.
- Remember that the packaging materials from your machine may be dangerous for children. Keep the packaging materials in a place where children cannot reach them. Dispose of the packaging materials appropriately.
- Do not allow any children to play with the washing machine.
- Keep any pets away from the washing machine.
- Your washing machine should only be used by adults following the information provided in this instruction manual.
- Your machine is designed to be used domestically. Commercial use will invalidate the warranty.
- Repair or any modification to the machine, other than by an approved technician will invalidate the warranty.
- The ideal operating temperature of your machine is 15-25°C.
- Do not place your machine on carpet as this will block ventilation in to the base.
- Do not keep inflammable liquids near your machine.
- Do not put the discharging hose of your machine in a bucket or sink.
- Your machine is not covered under warranty for faults caused by any kind of external factors (pesticides, fire, etc.).
- The appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.


Recommendations

- **Ensure you run the machine empty on a full cycle at 90°C with detergent before using the machine properly for the first time.**
- Put detergent into the drawer at the beginning of each wash.
- It is recommended that you wash only extremely dirty laundry in prewashing programme.
- The amount of laundry you put in your washing machine should not exceed 6kg.
- If your machine is not going to be used for a long time you should unplug the appliance, turn off the water inlet and leave the door slightly open. This is so that the inside of your machine will remain dry and will not cause an unpleasant smell of damp.


Installation

Removing transportation bolts

Transportation bolts, which are located at the back of the machine, must be removed before using or running the machine.

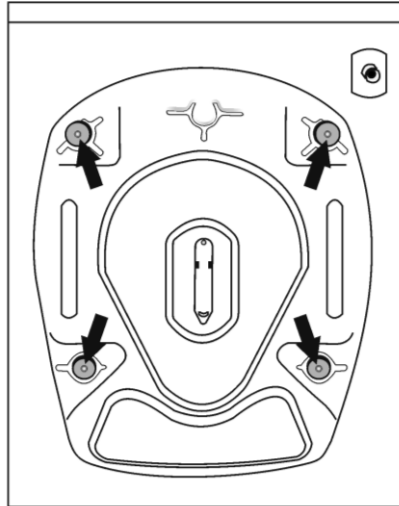

Loosen the bolts by rotating counterclockwise with a suitable spanner.

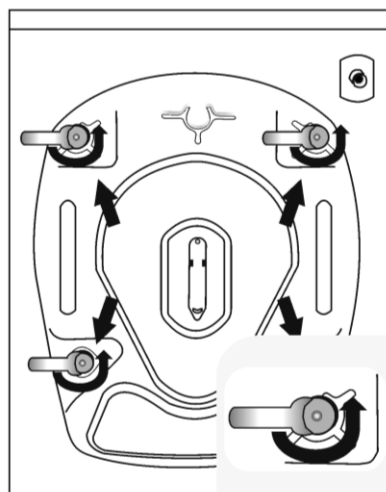


Pull out the screws together with the coloured plastic spacer, (the bolts that have been removed from the machine should be kept in case the machine needs to be used in future).


To seal the holes insert the supplied plastic caps.

Leveling the machine

- Your machine should be installed on a hard surface – do not install onto a carpet.
- For your machine to work quietly and without any vibration, it should be settled on a flat, non-slippery and tough ground.
- Loosen the plastic adjustment nut.

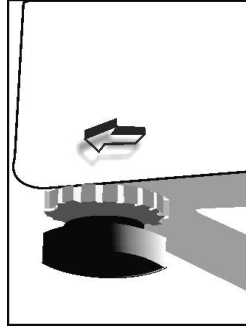

- Adjust the feet upward and downward by rotating them clockwise and anti clockwise.

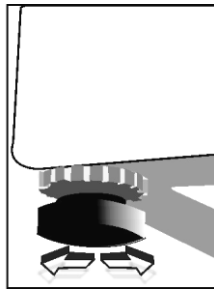

- When the correct balance has been achieved, tighten the plastic adjustment nut again by rotating it clockwise.
- Never put cardboard, wood or other materials under your machine to try and stabilise the unit.


Electrical connection

- Your washing machine is set to 220-240V and 50Hz.
- The mains cord of your washing machine is equipped with a specific grounded plug. This plug should always be inserted to a grounded socket of 13 amps. The current value of the fuse should be 10 amps. If you don't have a suitable plug socket, please contact **0845 208 8750**.
- **We do not take responsibility for any damage that occurs due to ungrounded usage.**
- Operating your machine under low voltage will cause the life cycle of your machine to be reduced and its performance to be restricted.

Water inlet connection


Only a qualified engineer should install this machine

- Your machine has a single water (cold) inlet.
- To prevent leakages on the connection joints, 1 seal is included in the hose packing, (Fit this seal on the end of the water inlet hose at the tap side.)
- Connect the bracketed end of the water inlet hose to the water inlet valve at the rear of the machine and the other end to your tap.
- Water pressure of 0,1-1 MPa from your tap will enable your machine to work more efficiently, (0,1 MPa pressure means water flow of more than 8 litres in 1 minute from a fully opened tap).
- After all connections are completed, check for leakages around the connection joints by turning on your tap completely and seeing if any water escapes.
- Be sure that water inlet hose is not folded, broken or crushed.
- Mount the water inlet hose to a 3”/4 geared water tap.

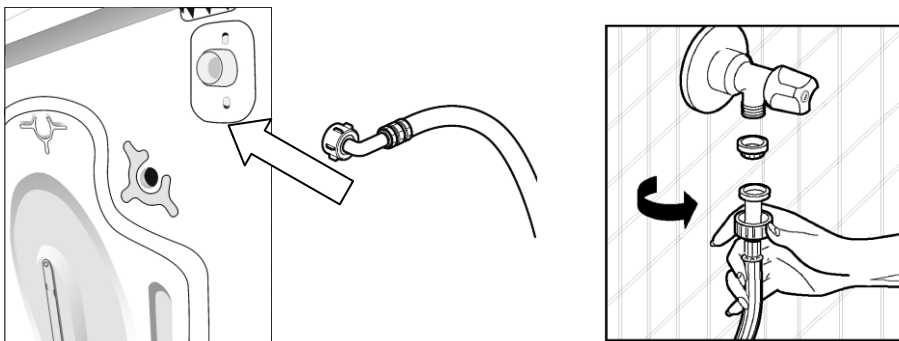

Water discharge connection

- Ensure that the water inlet hoses are not folded, twisted, crushed or elongated by stretching.
- The water drain hose should be mounted at a height of minimum 60 cm, maximum 100 cm from the ground.
- The end of the water drain hose can be fitted directly to the drainage hole.
- Never attempt to extend the water drain hose by adding extra parts.

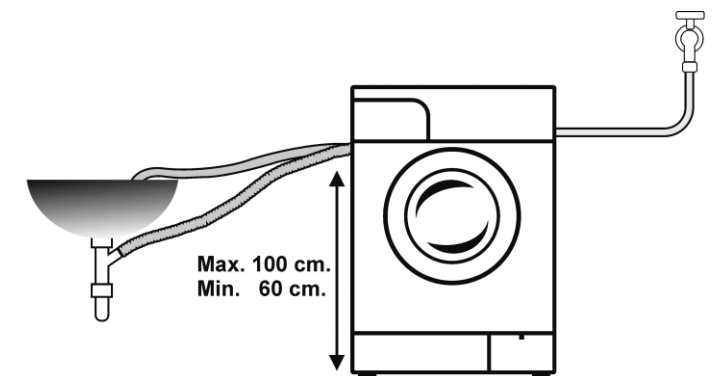

Technical specifications







Operating voltage / frequency (V/Hz)	(220-240) V ~/50Hz
Total current (A)	10
Water pressure (Mpa)	Maximum: 1 Mpa Minimum: 0.1 MPa
Total power (W)	2100
Maximum dry laundry capacity (kg)	5
Spin Speed (rev / min)	1000
Programme number	12
Dimensions (Height x Width x Depth) (mm)	845 x 597 x 527





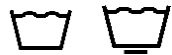










Preparing your laundry

- Separate your clothes according to their type (cotton, synthetic, sensitive, woolen, etc), washing temperature, dirtiness and colour.
- Never wash your white and coloured clothes together.
- Since your new coloured clothes may shed dye on the first wash, wash them separately.
- Be careful that no metal pieces are found on or in the pockets of your clothes - remove if anything is found.
- Zip and button up your clothes.
- Remove the plastic or metal hooks and laces of curtains or place them inside a washing bag and tie.

WARNING: Faults that emerge due to the penetration of foreign objects into your machine are not included within the warranty.

- Reverse textiles such as trousers, knitwear, t-shirt and sweat suit.
- Wash socks, handkerchief and suchlike small laundry items in a washing net.

		
Normal washing	Maximum washing temperature is 90°C	Maximum washing temperature is 60°C
		
Maximum washing temperature is 30 °C	Hand washing	No washing

		
Whitening available	No whitening	Ironing temperature is maximum 110°C
		
Ironing temperature is maximum 150°C	Ironing temperature is maximum 200°C	No ironing
		
Dry cleaning available	No dry cleaning	Leave on a flat place
		
Hang when wet	Dry by hanging	Drying by twirling is not allowed
		
Dry cleaning in gas oil, pure alcohol and R113 is allowed	Perchloroethylene R11, R113, Petroleum	Perchlorinethylene R11, R113, Gas oil

Using your machine

- Open the door of your machine.
- Place your laundry in your machine.

Note: Maximum loading capacity may vary based on the laundry type you wash, degree of contamination and the programme you have chosen. Do not exceed maximum dry loading capacity indicated in the programme table for washing programmes.

You can take the following table of weights as an indication.

LAUNDRY TYPE	WEIGHT (Kg)
Towel	0.2
Linen	0.5
Bathrobe	1.2
Quilt cover	0.7
Pillow slip	0.2
Underwear	0.1
Tablecloth	0.25


- Place each piece of laundry into the machine individually.
- Ensure that no laundry is caught between the cover and below the seal when closing the door of your machine.
- When closing the door, push the door of your machine until you hear the locking sound – this indicates the door is fully closed.
- Close the door of your machine properly; otherwise your machine will not start the washing operation.

Detergent

The amount of detergent needed per cycle will depend on the following criteria:


- Refer to detergent manufacturers guidelines to determine how much detergent is needed. Do not prewash your less stained laundry items and only put a slight amount of detergent in the 2nd compartment of the detergent drawer.
- For very dirty and stained laundry items, select a programme including prewashing, and put ¼ of the normal amount of detergent in the 1st compartment of the detergent drawer then put the remaining ¾ of it into the 2nd compartment.
- Use detergents produced for automatic washing machines in your machine. The amount of detergent you should use for your laundry is printed on the detergent package.
- The amount of the detergent you will use will increase as the amount of laundry increases.
- Put the softener in the softener compartment in the detergent drawer. Do not exceed the MAX level. Otherwise, softener will flow into the washing water when flushing through.
- Softeners with a high density should be thinned with water before being put in the drawer. This is because high-density softener may block the pipes.

Control Panel

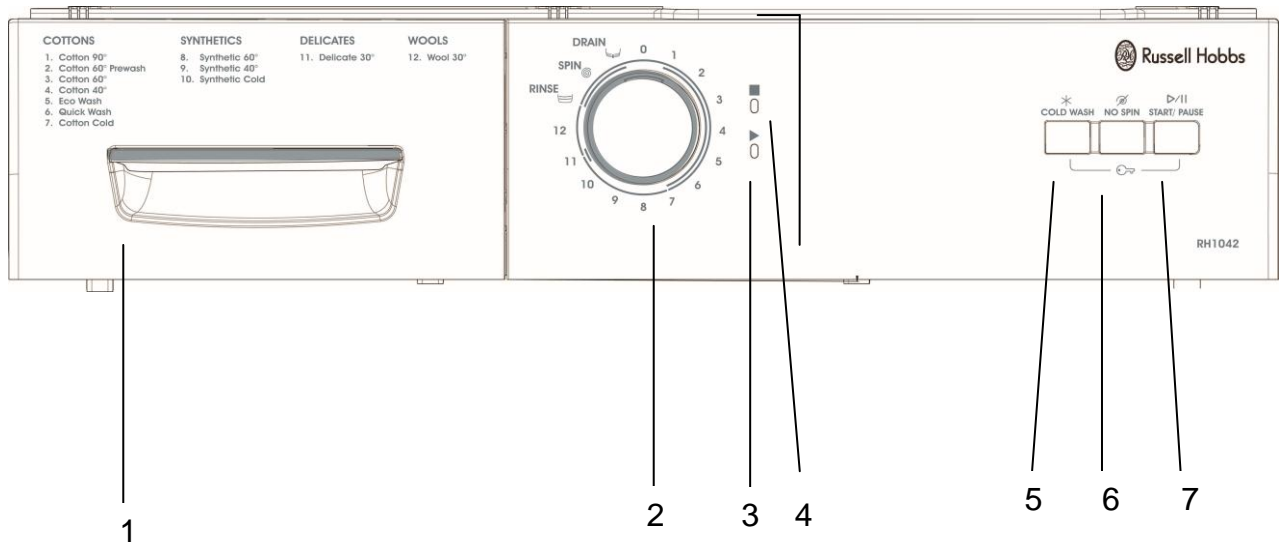

1	Drawer
2	Programme Knob
3	Programme ready light
4	Programme end light
5	Cold wash
6	No spin
7	Start/Pause cycle


Detergent Drawer

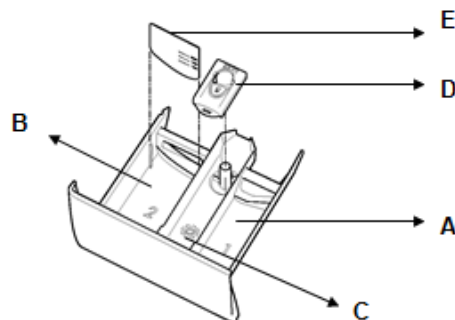




- A. Prewashing compartment
- B. Main washing compartment
- C. Softener compartment
- D. Siphon cover
- E. Liquid level detergent plate

Selecting a Programme

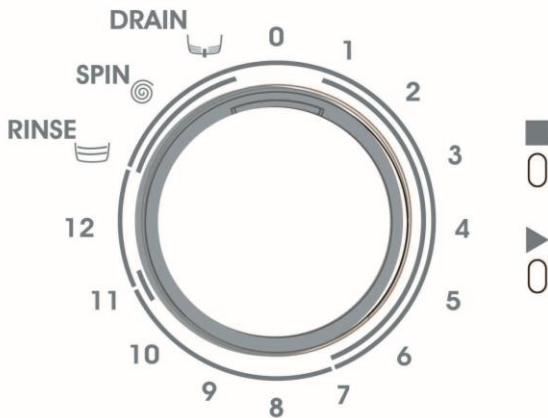Select the required washing programme by rotating the programme knob in either direction (clockwise or anti-clockwise). Ensure that the programme knob is aligned with the required programme.



1	Cotton 90°C
2	Cotton 60°C with prewash
3	Cotton 60°C
4	Cotton 40°C
5	Eco wash
6	Quick wash
7	Cotton cold
8	Synthetic 60°C
9	Synthetic 40°C
10	Synthetic cold
11	Delicate 30°C
12	Wool 30°C
	Rinse
	Spin
	Drain
0	OFF

Additional Functions



Press this button to start a selected programme or to pause a programme already in progress. To resume a paused cycle, press once again.



After selecting a programme, press this button to deactivate the spin function which is automatically included in all programs. This function is recommended for sensitive clothes where the label recommends against spinning.



After selecting a programme, press this button to wash clothing with cold water only. This will reduce energy consumption and water usage.

Using your machine

Before Use

- Plug your machine in.
- Turn on the tap connected to the machine.
- Open the machine door.
- Place your laundry in your machine.
- Push the door of your machine until hearing the locking sound to close it.
- Select the programme you require.
- Put detergent and softener in the detergent drawer.

First Wash

Before using the machine for laundry, ensure you run the machine on a cycle of 95°C, with detergent and without laundry.

Selecting a Programme




Select the appropriate programme for your laundry from the programme table below.

Additional Functions

Before starting the programme, you can select an additional function if you so wish.

- Press on the button of the additional function you wish to select.
- If the additional function button lights up, the function will activate when the cycle starts.
- If an additional function fails to activate, this is because not all additional functions are available with all programmes.

PROGRAMME	DETERGENT COMPART.	MAX DRY LOAD CAPACITY (kg)	TYPE OF LAUNDRY	EXPLANATIONS
		RH1042		
1 COTTON 90°	2	5	Dirty, boil, cotton and linen textile	Underwears, sheet, table cloth, t-shirt, shirt, towel
2 COTTON 60° (PREWASH)	1+2	5	Very dirty, cotton, coloured and linen textile	
**3 COTTON 60°	2	5	Dirty, cotton, coloured and linen textile	
4 COTTON 40°	2	5	Slightly dirty, paint to get out, cotton, coloured and linen textile	
5 ECO WASH	2	5	Dirty, cotton, coloured and linen textile	
6 QUICK WASH	2	2,5	Slightly dirty, cotton, coloured and linen textile	
7 COTTON COLD	2	5	Slightly dirty cotton, coloured and linen textile. Washed without heating the tap water.	
8 SYNTHETIC 60°	2	3	Dirty, synthetic or synthetic mixture textile	Nylon socks, blouse
9 SYNTHETIC 40°	2	3	Slightly dirty, synthetic or synthetic mixture textile	Nylon socks, blouse
10 SYNTHETIC COLD	2	3	Slightly dirty, synthetic or synthetic mixture sensitive laundry. Washed without heating the tap water.	Nylon socks, blouse
11 DELICATE 30°	2	2	Slightly dirty, cotton, coloured, synthetic or synthetic mixture sensitive laundry	Silk mixture, shirt, blouse, polyester, poliamid, mixture textile
12 WOOL 30°	2	2	Dirty, hand and machine to wash wool laundry	All wool laundry

 RINSING	When you need an additional rinsing to be done to your clothes after the washing process, you can use this programme for all kinds of clothes.
 SPINNING	When you need an additional spinning to be done to your clothes after the washing process, you can use this programme for all kinds of clothes.
 DRAINING	This program is used to drain the dirty water inside after the washing process of your machine. If you want the water inside your machine to be drained before the program ends, you can use this programme.

Child Lock

Child lock is used in order to protect the washing cycle from the effects of unwanted button activations during the cycle. The Child lock is activated by pressing the first and third button on the control panel at the same for more than 3 seconds. When child lock is activated LEDs on the function buttons will blink to indicate that Child Lock is active. In order to deactivate Child Lock, the same buttons (1st and 3rd) should be pressed again for more than 3 seconds. Deactivation of Child Lock is shown by blinking of the LED on the Start/Pause button.

Running the machine

Program selection and features

Select an appropriate programme for your clothing by turning the main knob.

Start/Pause

By pressing this button, you can start the programme you have selected or pause a running programme.

Starting the programme

- Adjust the programme knob **to** the programme you desire.
- The programme ready light will be on.
- If you want, you can select one or more additional functions.
- Run the programme which you have selected by pressing the Start/Pause button.

Changing the programme

If you have selected a programme and you want to continue with another:

- Press the Start/Pause button.
- Bring the program knob to **the** O (off) position.
- Adjust the programme knob to the programme you desire, (you can select the program that you desire from Table 1).
- The programme ready light will be on.
- By pressing the Start/Pause button, run the programme which you have selected.

Cancellation of the Programme

To end a programme early:

- Press the Start/Pause button.
- Turn the programme knob to O (off) position.
- Turn the programme knob to “Draining” or “Spinning” programmes.
- The programme ready light will be on.
- Run the programme you have selected by pressing the start/pause button.

End of programme

- Your machine will automatically stop when the programme you have selected ends.
- The programme end light will be on.

For Customer Services, Spare Parts & Manufacturer's Warranty Information please call **0845 208 8750**

Maintenance and Cleaning



When cleaning your machine, ensure that the machine is unplugged and the water supply is closed off.

Water Inlet Filters

Filters are used to avoid dirt and foreign substances in the water from entering the machine. These are on the tap and on the ends of water valves along the water inlet hose of your machine. If your machine cannot intake sufficient amounts of water despite the tap being open, these filters should be cleaned.

- Detach the water inlet hoses.
- Remove the filters on water inlet valves using pliers and then clean it with a brush in water.
- Disassemble the filters on the tap end of the water inlet hoses manually and clean it.
- Having the filters cleaned, you can fit them in the same way reversely.


CAUTION: Filters of water inlet valves may be clogged due to a contaminated water tap or lack of necessary maintenance or valves may be broken down, causing water to leak into your machine continuously. **Breakdowns that may arise because of these reasons are not covered under warranty.**

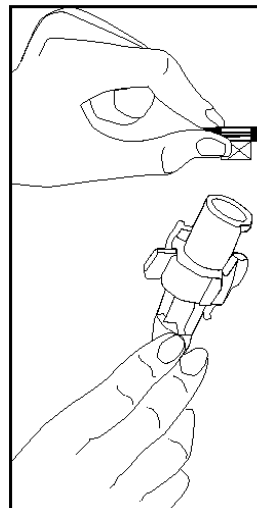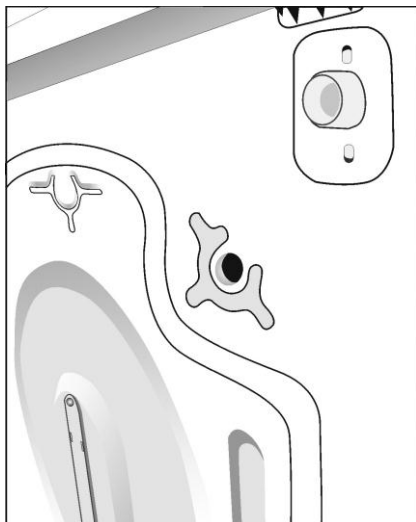


Cleaning the pump

A filter system is available which avoids threads from your laundry and tiny materials from entering into the pump during the water discharging operation carried out by your machine after completing washing. This prolongs the lifecycle of your pump. It is recommended that you clean your pump filter once in 2 months. To clean pump filter:

- Depress the lug downwardly to uncover the pump section of the toe board and pull it towards yourself and extract it.

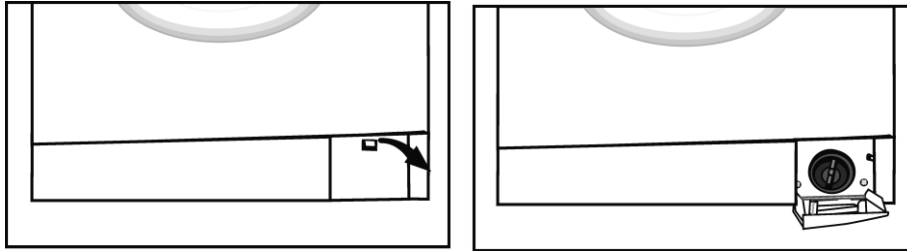

- Before opening the filter cover, place a towel on the ground immediately in front of the filter hole to soak up remaining water.

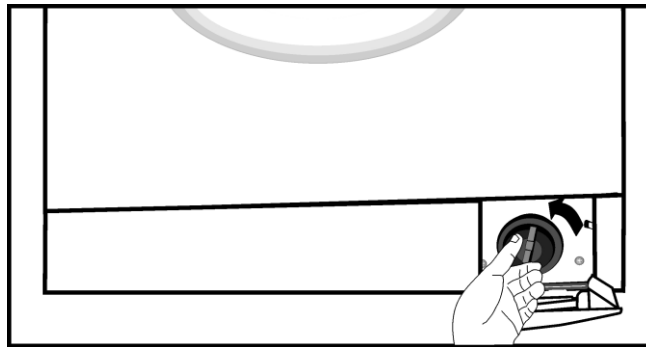

- Loosen the filter cover in and allow water to flow out.
- Clean the foreign objects present in the filter.
- Check whether the pump rotates with your hands.
- After cleaning the filter, fit the filter cover by rotating it clockwise.
- Fit the pump section of the toe board.
- Remember that water will leak if you do not fit the filter cover properly.


WARNING!

As water in the pump may be hot, do not remove the filter cover until the machine has had sufficient time after a cycle to cool down.


Cleaning the detergent drawer

Your detergent may deposit residue in the detergent drawer over time. To clean the residue formed, disassemble the detergent drawer regularly. To eject the detergent drawer:

- Pull the detergent drawer out fully.

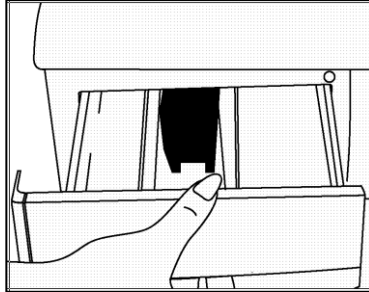

- Continue to pull gently while pressing the detergent cover to allow the drawer to slide out.

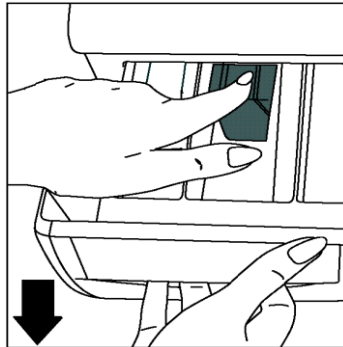

- Flush it using a brush.
- Collect residues in the housing of the detergent drawer without dropping them inside the machine.
- To assemble the detergent drawer after drying it using a towel or dry cloth, resettle the detergent drawer by depressing on the flush cover and fit it by pushing forward.
- **Do not wash your detergent drawer in a dishwasher.**

Cleaning your machine

Drawer filter

Disassemble the detergent drawer. Disassemble the flush stopper and clean the softener residues completely. Refit the flush stopper after cleaning it. Check whether it has settled properly.



Body

Clean the outer body of your machine with warm water and a non-inflammable cleaning agent that will not abrade the body of your machine. After rinsing with some water, dry using a soft and dry cloth.

Drum

Do not leave metallic objects such as needles, paper clips, coins, etc. in your machine. These objects will lead to formation of rust stains in the drum. To clean such rust stains, use a non-chlorine cleaning agent and follow the instructions of the manufacturers of the cleaning agent. Never use wire wool or similar hard objects for cleaning rust stains.

Trouble Shooting

All repairing operations required for your machine should be carried out by a qualified engineer. Contact an engineer on **0845 208 8750**. If your machine requires a repair or if you cannot remove the fault by the help of the information provided as follows:

- Unplug your machine.
- Turn the tap off.
- Contact the nearest authorised service.

FAULT	POSSIBLE CAUSE	REMOVING METHODS
Your machine does not start.	It is not plugged in.	Plug machine in.
	Fuse blown.	Replace the fuse.
	Electricity cut-off.	Check mains power.
	Start/pause button not pressed.	Press on start/pause button.
	Programme knob 'stop' position.	Switch the programme knob to the desired position.
	The machine door is not completely closed.	Close the machine door.
Your machine does not intake water.	Water tap is turned off.	Turn your faucet on.
	Water inlet hose may be twisted.	Check water inlet hose.
	Water inlet hose clogged.	Clean water inlet hose filters.
	Valve inlet filter clogged.	Clean the valve inlet filters.
	The machine door is not completely closed.	Close the machine door.

FAULT	POSSIBLE CAUSE	REMOVING METHODS
Your machine does not discharge water.	Discharging hose clogged or twisted.	Check the discharging hose.
	Pump filter clogged.	Clean the pump filter.
	Laundry settled in the machine unevenly.	Spread your laundry in the machine evenly.
Your machine vibrates.	The feet of your machine have not been adjusted.	Adjust the feet on your machine.
	Safety assembly fitted for transport not disassembled.	Disassemble the safety assembly of your machine. (**)
	Less amount of laundry in the appliance.	This will not block operation of your machine.
	Your machine overloaded with laundry or laundry settled unevenly.	Do not put in laundry more than the amount recommended and settle the laundry in the machine evenly.
	Your machine rests on a hard surface.	Prevent your machine from resting on hard surfaces.

Energy Efficiency

Energy and water consumption may vary based on water pressure, water hardness, water temperature, ambient temperature, laundry amount, additional function selection, and voltage fluctuations.

It will reduce energy and water consumption to use your machine with the laundry capacity proposed for the selected programme, wash your less dirty or daily laundry in short programmes, carry out cleaning and maintenance periodically, use your machine at the convenient time intervals specified by electricity vendor.

For manufacturer's warranty
information please call

0845 208 8750


Opening times:

Monday - Friday

9am until 5pm

Saturday: 9am – 1pm

Revision 3

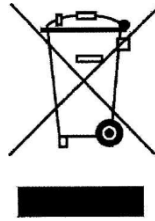

This symbol is known as the 'Crossed-out wheellie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to make sure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

We reserve the right due to possible changes to design to alter the instruction manual without prior notice.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>