




Russell Hobbs

6KG 1200 Spin Speed Washing Machine

Instruction Manual

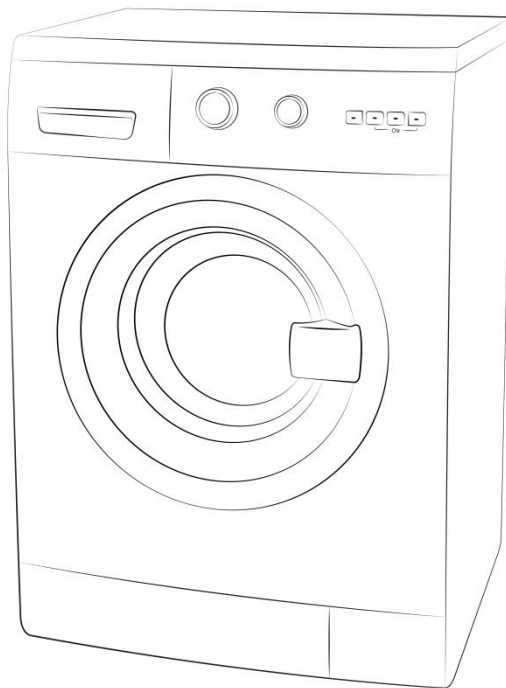

Model number: RHWM61200B

For Customer Services & Spare Parts please call **0845 208 8750**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit
us at **www.productcareuk.com**

Contents

Safety Instructions	3 - 4
Before using the appliance	5 - 6
Installation	6 - 10
How to use	11 - 18
Washing procedure & program selection	19 - 20
Maintenance	21 - 24
Removing stains	25
Trouble shooting	26 - 27
Specification	28
Connections to mains supply	29
Spare parts	30

For Customer Services & Spare Parts please call **0845 208 8750**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Safety Instructions

- Do not use an extension lead for this appliance. Only plug directly into a wall socket.
- Do not plug in damaged plug sockets
- In case the power cable becomes damaged, contact **0845 208 8750** for advice.
- Never pull the cable when unplugging – always grip the plug itself.
- Do not plug-in or pull-out the plug from the receptacle with wet hands to prevent electric shock.
- Never touch the machine with wet hands or feet.
- Never open the detergent drawer when the appliance is running.
- Never force the door to open when the washing machine is running.
- Do not touch discharging hose and water during discharging as the appliance may reach high temperatures when running.
- In case of any breakdown, unplug the appliance first and then turn the tap off. Do not attempt to repair by yourself, always contact **0845 208 8750** for advice.
- Remember that packaging materials of your machine may be dangerous for children. Keep the packaging materials in a place where children cannot reach or dispose of them appropriately.
- Do not allow your children to play with the washing machine as it is an electrically-driven appliance.
- Keep your pets away from your machine.
- Your machine should only be used by adults in line with the information provided in this user's manual.
- Your machine is designed to be used domestically. Commercial use will cause your warranty to be cancelled.
- Anyone's intervention to your machine except for a qualified engineer, in anyway will cause your warranty to be invalid.
- Ideal operating temperature of your machine is 15-25°C.
- Do not place your machine on carpet as this will block ventilation of the base.
- Do not keep inflammable liquids near your machine.
- You should remove the transport bolts of your machine before the first usage. Faults occurring in machines operated with transport bolts fitted are not covered by the warranty.
- Do not put the discharging hose of your machine in a bucket or sink.
- Your machine is not covered under warranty for faults caused by any kind of external factors (pesticides, fire, etc.).

For Customer Services & Spare Parts please call **0845 208 8750**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at

www.productcareuk.com

Safety Instructions

- The appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Recommendations

- **Ensure you run the machine empty on a full cycle at 90°C with detergent before using the machine properly for the first time.**
- Put detergent into the drawer at the beginning of each wash.
- It is recommended that you wash only extremely dirty laundry in prewashing programme.
- The amount of laundry you put in your washing machine should not exceed 7kg.
- If your machine is not going to be used for a long time you should unplug the appliance, turn off the water inlet and leave the door slightly open. This is so that the inside of your machine will remain dry and will not cause an unpleasant smell of damp.




Important note:

Please read this booklet before installing and switching on this appliance. The manufacturer assumes no responsibility for incorrect installation and usage as described in this booklet.

For Customer Services & Spare Parts please call **0845 208 8750**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Before using the appliance


- **Transportation screws which are located at the back of the machine, must be removed before using or running the machine. You will void the manufacturer's guarantee if these are not removed before using or running the machine**
- **Before installation, check that all parts listed below are present. If any parts are missing, please contact the product care service team on 0845 208 8750.**

Inlet hose	Manual	Cap holder
		

Note

The drawings in the book may vary from your washer model. They are designed to show the different features of all models covered by this book. Your model may not include all features.


The Front of the machine

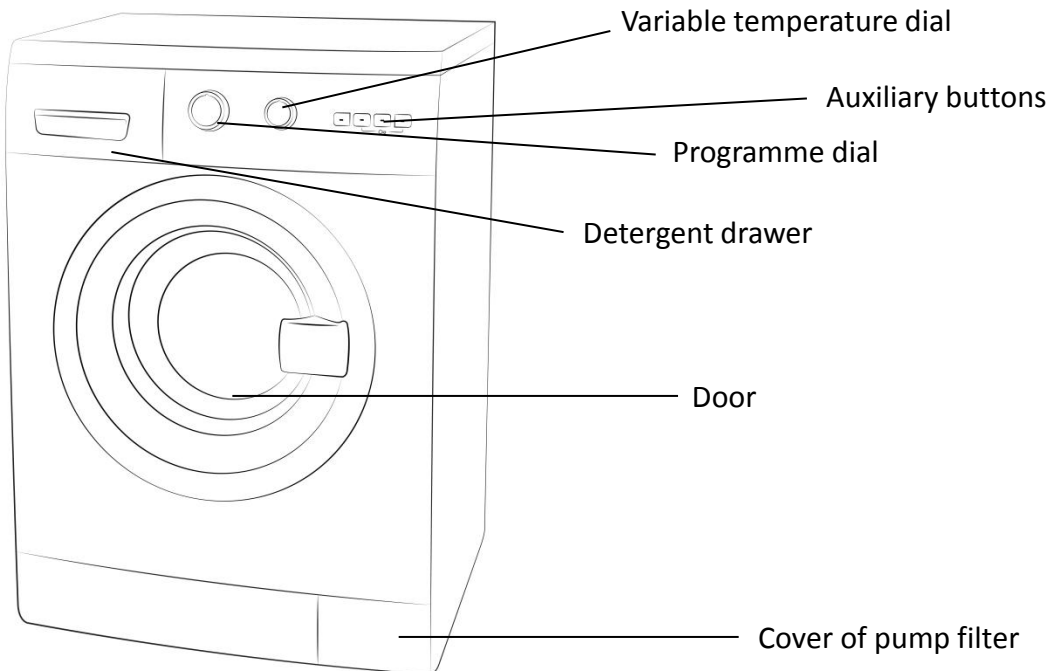

For Customer Services & Spare Parts please call **0845 208 8750**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Before using the appliance


The Back of the machine

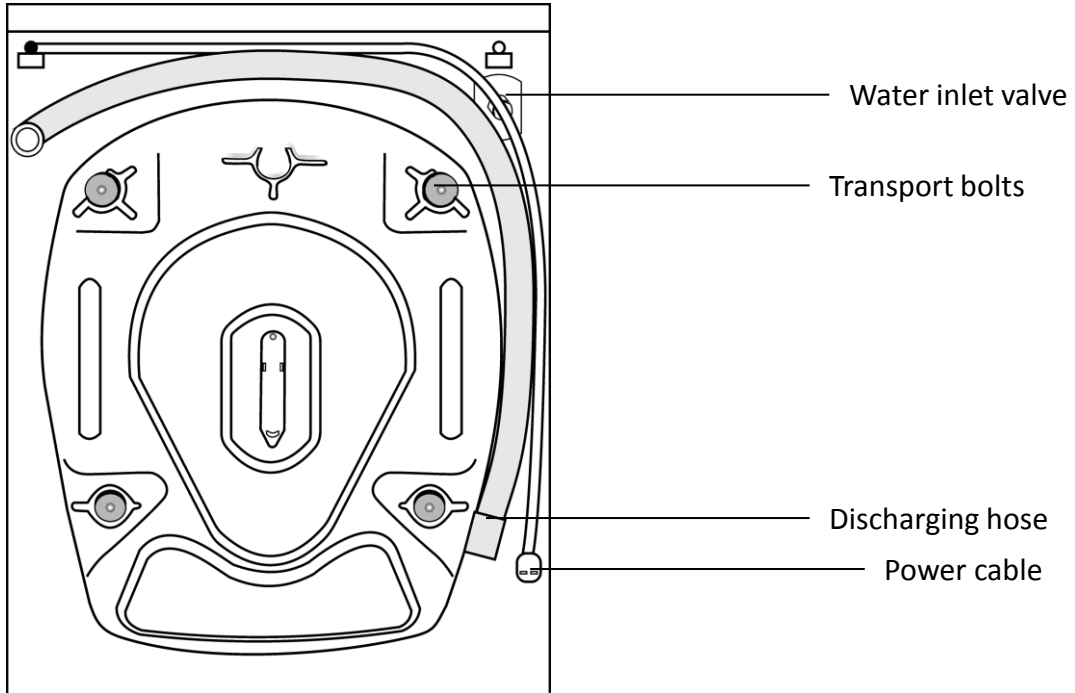




For Customer Services & Spare Parts please call **0845 208 8750**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Installation


1. Before operating the washing machine, remove the 4 transportation screws and rubber spacers from the back of the machine. If the screws are not removed, it may cause heavy vibration, noise and product malfunction, (voiding the guarantee).

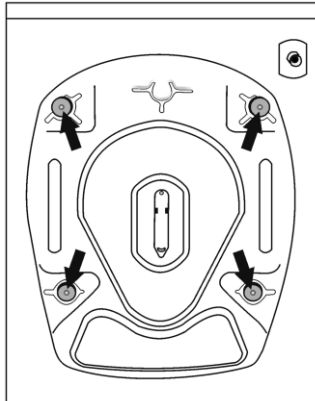

2. Unscrew the 4 screws with a wrench, spanner or cross-tip screwdriver. Keep the 3 screw as they will need to be re-used if the machine has to be transported.

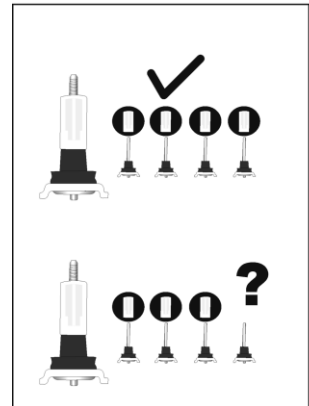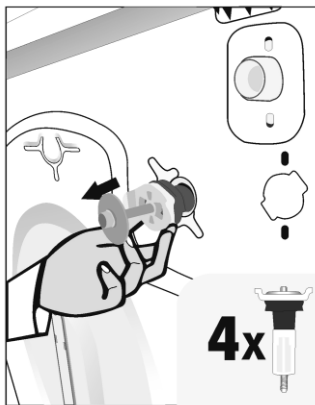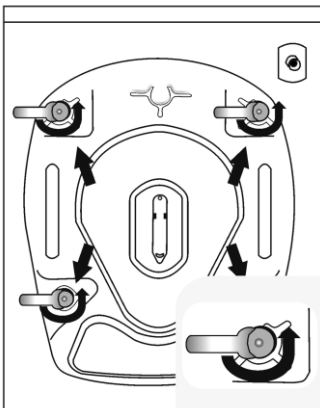


3. Close the holes with the cap holders supplied

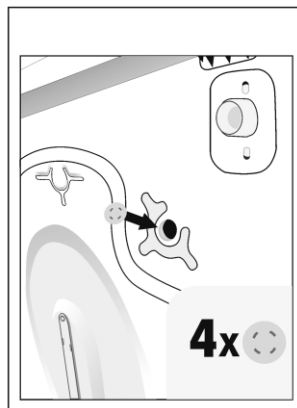

Installation

4. Adjust the level of washing machine by the adjustable feet. Please check if there is a gap between the four adjustable feet and the floor. If there is then adjust the level of the washing machine by turning the adjustable feet. Make sure that the machine does not sway and that it is completely level. After the adjustment is finished, turn the fixing nuts up tightly, so that the adjustment that has been made is fixed.

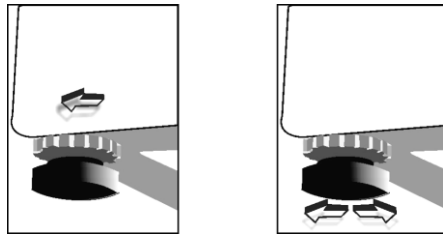


NOTE

The machine should not sway and all the adjustable feet should sit/touch the floor.

Location of the Washing Machine

- Check location where the washer will be installed. Make sure you have everything necessary for correct installation.
- Do not place or store your washer below 0°C (32°F) to avoid any damage from freezing.
- Do not place or store laundry products on top of washer at any times.
- Install the washer on the horizontal solid floor, flat, non-slippery and tough floor. Do not install onto a carpet.
- If the washer is installed on an unsuitable floor, it could make considerable noise, vibrate severely and cause a malfunction. If the washer is not level, adjust the leg up or down for horizontal installation.
- Never put cardboard, wood or other materials under your machine to try and stabilise the unit
- Ventilation openings must not be obstructed.
- Leave some space (right & left : 2cm, rear : 10cm).
- In case of built-in installation, the distance between top of the washer and bottom of upper plate should be at least 3mm.

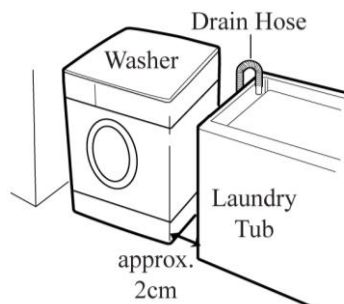

Installation

Electrical connection

- Your washing machine is set to 220-240V and 50Hz.
- The mains cord of your washing machine is equipped with a specific earthed plug. This plug should always be inserted to a earthed socket of 13 amps. The current value of the fuse should be 10 amps.
- **We do not take responsibility for any damage that occurs due to non earthed usage.**
- Operating your machine under low voltage will cause the life cycle of your machine to be reduced and its performance to be restricted.

Water

The washer should be connected to the water mains using new hose sets. Old hose sets should not be reused. In using only one water tap or in case of only one water inlet valve, connect the inlet hose to the cold water inlet valve.







Water inlet hose connection

- **Be careful not to confuse hot water inlet and cold water inlet.**
- Your machine has a single water (cold) inlet.
- To prevent leakages on the connection joints, 1 seal is included in the hose packing, (Fit this seal on the end of the water inlet hose at the tap side.)
- After all connections are completed, check for leakages around the connection joints by turning on your tap completely and seeing if any water escapes.
- Be sure that the water inlet hoses are not folded, twisted, crushed or elongated by stretching.




For Customer Services & Spare Parts please call **0845 208 8750**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Installation

Ordinary tap (not included)
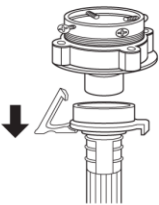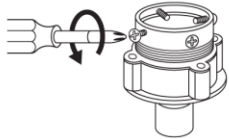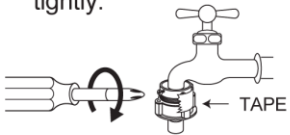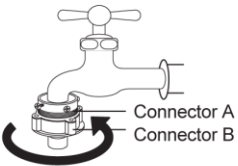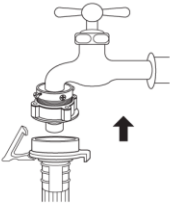
<p>① Pull down the collar of the inlet hose to separate it from the water tap adapter.</p> 	<p>② Loosen the four screws in the water tap.</p> 	<p>③ Fit the water tap adapter into the water tap and tighten the four screws evenly while pushing up the adapter so that the rubber packing can attach to the water tap tightly.</p> 
<p>④ Remove the tape, and screw connector B into connector A tightly.</p> 	<p>⑤ Connect the inlet hose to the water tap adapter by pulling down the collar of the hose end.</p> 	<p>⑥ Connect the inlet hose adapter of the hose to the water inlet of the washing machine by turning it clockwise to be fixed tightly.</p>  <p>• Please check the rubber packing inside the inlet hose adapter of the hose.</p>

Screw-shaped tap

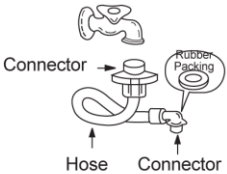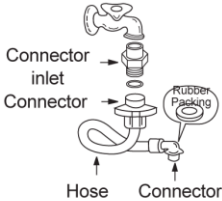
<p>① Connect the inlet hose to the water tap by screwing the connector tightly.</p> 	<p>② Connect the connector-inlet supplied if necessary.</p> 	<p>③ Insert the inlet hose adapter into the water inlet of a washing machine and turn it to be fixed.</p>  <p>* Check the packing in the inlet</p>
---	---	--

For Customer Services & Spare Parts please call **0845 208 8750**
 Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Installation

Water drainage

- Never forget to install drain hose before operating your washer.
- The water drain hose should be mounted at a height of minimum 60 cm, maximum 100 cm from the ground.
- The end of the water drain hose can be fitted directly to the drainage hole on the back side of the washer.
- When installing the drain hose pipe, secure it tightly with a string or tie extensions are available but is not included.
- Never attempt to extend the water drain hose by adding extra parts.
- If the drain hose is too long, do not force it back into the washer. This will cause abnormal noise and damage to the product.

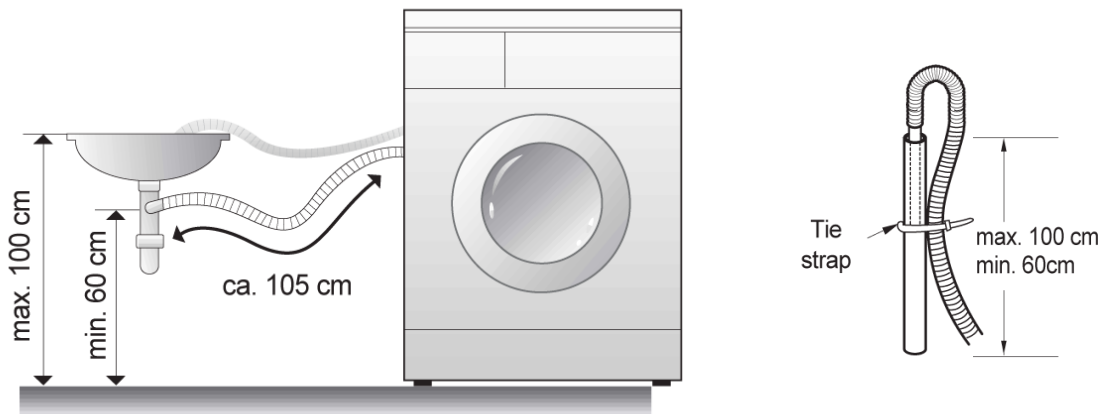


For Customer Services & Spare Parts please call **0845 208 8750**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit
us at **www.productcareuk.com**

How to use

To obtain the best washing results, you must operate your washer properly. This section gives you this important information.

Preparing clothes for washing

- Close zippers, snaps, and hooks to avoid snagging other items.
- Remove pin, buckles, and other hard objects to avoid scratching the washer interior.
- Empty pockets and pull them inside out.
- Turn down cuffs and turn synthetic knits inside out to avoid pilling.
- Reverse textiles such as pants, knitwear, t-shirt and sweat suit
- Tie strings and sashes to avoid tangling.
- Treat spots and stains. (See 'Removing stains' section).
- Follow the washing instructions supplied on the clothing

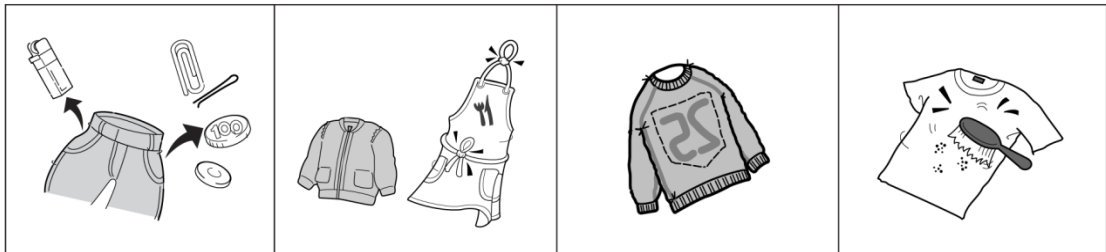

Important note

Faults that emerge due to the penetration of foreign objects will void the manufacturer's guarantee

- Separate heavily soiled items from lightly soiled ones, even if they would normally be washed together.
- Separate dark colours from light colours, colourfast items from non-colourfast item
- Wash lint producers and lint collectors separately.

Loading clothes for washing

- Drop items into the washer loosely. Items should move easily through wash water for the best cleaning and wrinkle-free results.
- Load washer properly and select the correct load size setting.
- Overloading and selecting a setting too small for the wash load can :
 - Cause poor cleaning
 - Increase wrinkling
 - Create excessive lint
 - Wear out items faster (because of pilling)

Mix large and small items in each load. Load evenly to maintain washer balance. An unbalanced load can make the washer vibrate during spin.

How to use

- Reduce wash time when using a small load size setting. A load with only a few small items needs less wash time.
- Use a large load size setting to reduce wrinkling with permanent press clothes and some synthetic knits. These items should have more room to move in the water than heavy items. (towels, jeans).
- Ensure that no laundry is caught between the cover and below the seal when closing the door of your machine.
- When closing the door, push the door of your machine until you hear the locking sound – this indicates the door is fully closed.
- Close the door of your machine properly; otherwise your machine will not start the washing operation

Important note:


Maximum loading capacity may vary based on the laundry type you wash, degree of contamination and the programme you have chosen. Do not exceed maximum dry loading capacity indicated in the programme table for washing programmes. The following table of laundry weights should be used as an indication of what you are loading into the machine:

Laundry type	Weight (Kg)
Towel	0.2
Linen	0.5
Bathrobe	1.2
Duvet/quilt cover	0.7
Pillow case	0.2
Underwear	0.1
Tablecloth	0.25

How to use

Adding detergent

- Please use only the powder detergent for the front loader washing machine.
- Please use the correct amount of detergent in conformity with the instruction of the detergent manufacturer.
- Using a large amount of detergent, more than the recommended amount, can cause lots of soapsuds and will overload to the motor. In addition, this will deteriorate the washing and rinse performance.

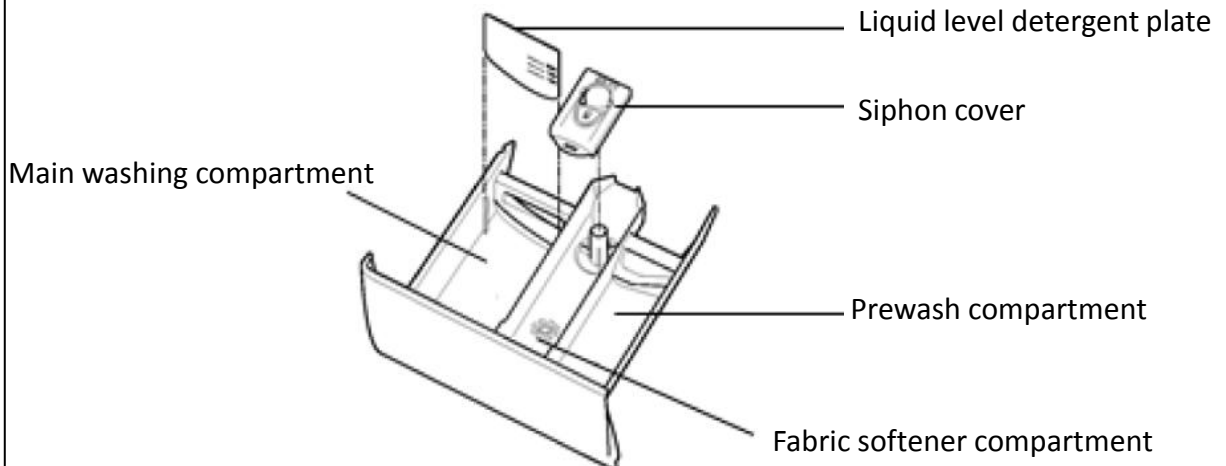

Adding fabric softener

- If desired, add measured liquid fabric softener to the softener inlet.
- Pour liquid fabric softener into the dispenser using the amount recommended on the packaging of the fabric softener.
- Do not exceed the maximum fill line.
- Overfilling can cause early dispensing of the fabric softener which could stain clothes.
- Do not open the detergent case when water is supplied.
- Avoid pouring fabric softener directly on the clothes.

For Customer Services & Spare Parts please call **0845 208 8750**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit
us at **www.productcareuk.com**

How to use



Detergent drawer

Program dial

Temperature dial

Auxiliary functions


Select the required washing programme by rotating the programme dial in either direction (clockwise or anti-clockwise). Ensure that the programme dial is aligned with the required programme.

The washing water temperature of a selected programme can be changed by using the Temperature dial. The temperature can be changed between cold wash ("Temp") and 90°C.

Important note

- The temperature of a selected programme cannot be increased, it can only be reduced.
- The temperature that is selected by the Temp dial will override the temperature of the selected programme, but only if the Temp dial temperature is lower than the temperature of the programme that has been selected.

Once the correct program and the correct temperature have been selected, and the door is closed. Press the Start/pause auxiliary button and the washing machine will start.

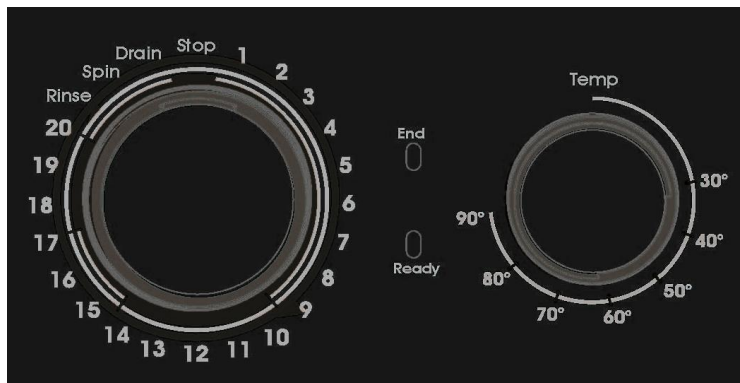

How to use

Start/pause button

Used to start a selected program or pause during operation.

Important note

- If you want to cancel/reset a programme after it has started, press the Start/pause button, turn the programme dial to the stop.
- Wait a while Ready light goes out, turn the dial to the required new programmed, wait again while the Red light comes on and the press the Start/pause button.
- Once a new programme is selected the product will discharge the water from the old programme

Auxiliary function buttons

Rinse hold

- This function is recommended to be used when the laundry cannot be removed immediately after the end of a programme, as this will prevent creasing.
- When this button is pressed, the last rinsing water is not drained. For the program to continue after it gets to this point, repress the Rinse hold button.

Note

If you do not want your sensitive clothes to be spun or you want them to spin gently, turn the programme dial to Stop position. Then turn the dial to the drain or spin programme and press the Start/pause button. If the program you have selected is the Drain programme, your machine will drain the water. If you have selected the Spin programme, your machine will perform a spinning operation and then end the program.

Extra rinse

You can have an extra rinse completed in addition to the rinses to the ones in the different washing programmes by simply pressing the Extra rinse button.

Easy iron

By using this function, your clothes will be less wrinkled after washing, (if taken out immediately after the programme it has been selected with has finished).

Important note

- If you forget to use any of the additional functions before a programme has started, press the additional function button you require. If the indicator light of the function button you have pressed stays on the additional function will be activated, if the indicator light flashes or flashes and goes out then the additional function will not be activated.

How to use

- **The Easy iron and Rinse hold functions cannot be used in conjunction**

Function indicator lights

- When the Start/pause button or any function button is pressed, the corresponding light turns on.
- The light turns off when the function button or start/pause button is re-pressed, or when the process that has been selected is complete.

Important note

The function indicator lights are also used in failure detection system mentioned in section 9.

To cancel/reset a programme

- If you want to cancel/reset a programme after it has started, press the Start/pause button, turn the programme dial to the stop.
- Wait while the Ready light goes out, turn the dial to the required new programmed, wait again while the Red light comes on and the press the Start/pause button.
- Once a new programme is selected the product will discharge the water from the old programme.

To end a running programme

- If you want to end a running program early, press the Start/pause button and turn the program dial to the Stop position.
- Turn the program dial to “Drain” or “Spin” programmes.
- The program ready light will come on and press the Start/pause button.

Programme ending

- Your machine will automatically stop when the programme you have selected ends and the End light will come on.
- Turn the program dial to Stop position and wait for approximately 2 minutes until the door is unlocked and it can be opened.
- You can open the door by pulling the handle of the door towards yourself and you are now able to take out your laundry from the machine.
- After you have unloaded your laundry from the machine leave the door open so the interior of your machine can dry.
- Turn of the power at the plug socket and unplug your machine.

How to use

Before Use

- Plug in the machine
- Ensure the inlet hose is connected correctly and turn the inlet valve from its closed position to the open position.
- Check that the drainage pipe is connected correctly.
- Open the machine door.
- Place your laundry in your machine.
- Push the door of your machine until hearing the locking sound.
- Select the programme you require.
- Press/select any of the auxiliary functions that are required and if applicable to the programme*
- Put detergent and softener in the detergent drawer, (if required).
- Press the Start/pause button

First Wash

Before using the machine for laundry, ensure you run the machine on a cycle of 95°C, with detergent and without laundry.

Auxiliary Functions

- Before starting the programme, you can select an additional function if you so wish.
- Press on the button of the additional function you wish to select.
- If the additional function light on the function button pressed stays on continuously, the function you have selected will be activated.
- If the additional function light on the function button pressed **flashes or flashes and goes out**, the function you have selected will not be activated.
- The Easy iron and Rinse hold functions cannot be used in conjunction.
- If an additional function fails to activate, this is because not all additional functions are available with all programmes.

Important note


If the power is turned off at any stage of the washing programme and then turned on, your machine will continue the programme from the point where it was interrupted. This is not harmful for your machine.

For Customer Services & Spare Parts please call **0845 208 8750**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit
us at **www.productcareuk.com**

How to use

Child lock

- Child lock is used in order to protect the washing cycle from the effects of unwanted button activations during the cycle. The Child lock is activated by pressing the Extra rinse and Start/pause buttons on the control panel at the same time for more than 3 seconds.

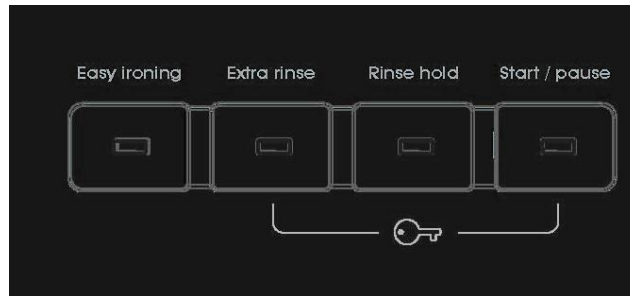

- When child lock is activated LEDs on the function buttons will flash to indicate that Child Lock is active.
- When any of the programmes are running and the child lock is active, if another programme is selected after programme dial is switched to the Stop position, the programme already running will continue.
- In order to deactivate the Child lock, the same buttons, (Extra rinse and Start/pause), should be pressed again for more than 3 seconds.
- Deactivation of Child lock is shown by flashing of the LED on the Start/pause button.

Important note

Your machine will inactivate the temperature and function buttons when the child lock is activated.

For Customer Services & Spare Parts please call **0845 208 8750**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit
us at **www.productcareuk.com**

Washing procedure & programme selection

Programme table

PROGRAMME & PROGRAMME TEMPERATURE (°C)	MAXIMUM AMOUNT OF DRY LAUNDRY (kg)	Laundry type
1. Cotton 90°	6	Very dirty cotton and flax textiles: Underwear, linen, tablecloth(s), towel(s), bedclothes, etc
2. Cotton 60° (prewash)	6	Very dirty & solid cotton and flax textiles: Underwear, linen, tablecloth(s), towel(s), bedclothes, etc
**3. Cotton 60°	6	Normal dirty cotton and flax textiles: Underwear, linen, tablecloth(s), towel(s), bedclothes, etc.
4. Cotton 40°	6	Normal dirty colour and flax textiles: Underwear, linen, tablecloth(s), towel(s), bedclothes, etc.
5. Eco wash 40°	6	Normal dirty colour and flax textiles: Underwear, linen, tablecloth(s), towel(s), bedclothes, etc.
6. Cotton 30°	6	Slightly dirty colour and flax textiles: Underwear, linen, tablecloth(s), towel(s), bedclothes, etc.
7. Quick wash 30° 30'	3	You can wash your dirty cotton, colour and flax textiles in 30 minutes.
8. Cotton cold	6	Very slightly dirty colour and flax textiles: Underwear, linen, tablecloth(s), towel(s), bedclothes, etc.
9. Mix wash 40°	6	Suitable for mixed items of laundry made of cotton and easy-care fabrics sensitive to heat. The programme temperature and mechanical agitation is designed to be appropriate to both normal dirty cotton, flax and synthetic based laundry.
10. Synthetic 60°C	3	Very dirty synthetic or synthetic-mixed textiles: Nylon socks, shirts, blouses, synthetic-including trousers etc.
11. Baby wash 50°C	3	Baby clothes are delicate and baby skin is really reflective to detergent, this programme has an extra rinse with heating which purifies laundry from detergent. Although program has heating step in the main wash, it also applies heating during rinses and it helps to get rid of stains, odours and some microorganisms.
12. Synthetic 40°C	3	Normal dirty synthetic or synthetic-mixed textiles: Nylon socks, shirts, blouses, synthetic-including trousers etc.
13. Sport wear light 40°C	3	Sportswear items which are mainly made of special fibers, (in particular a synthetic kind), that the washing label recommends that they should be washed sensitively under a low temperature. In that way, the speciality of sportswear textile, badges, wording, etc should be protect during the washing process.
14. Synthetic cold	3	Slightly dirty synthetic or synthetic-mixed textiles: Nylon socks, shirts, blouses, synthetic-including trousers etc.
15. Delicate 40°	2	Normal dirty silk-mixed laundries with machine wash labels
16. Delicate 30°	2	Normal dirty silk-mixed laundries with machine wash labels
17. Delicate Cold	2	Slightly dirty silk-mixed laundries with machine wash labels
18. Hand wash 35°	2	Sensitive and woollen laundries with non-machine wash labels, that are recommended to be washed by hand.
19. Wool 30°	2	Normal dirty Woollen laundries with machine wash labels (PLEASE CHECK EACH INDIVIDUAL CLOTHING ITEM'S LABEL – ADJUST TEMPERATURE IF NECESSARY).
20. Wool cold	2	Very slightly dirty Woollen laundries with machine wash labels (PLEASE CHECK EACH INDIVIDUAL CLOTHING ITEM'S LABEL – ADJUST TEMPERATURE IF NECESSARY).
Rinse	If you want to additionally rinse your laundry after a programme has finished, you can use this programme for any kind of laundries.	
Spin	If you want to additionally wring your laundry after a programme has finished, you can use this programme for any kind of laundries.	
Drain	This programme is used to drain the dirty water inside after the washing process of your machine. If you want the water inside your machine to be drained before the programme ends, you can use this programme.	

(*) You can use softeners in all programs (except spinning and draining programs) optionally. When you arrange the quantity of the softener, comply with the warning of the softener producer. Fill your softener in its (softener) compartment of the detergent drawer. Program duration, energy consumption and water consumption values may vary according to wash load weight and type, selected extra functions, tap water and ambient temperature.
Note: You can open the door of your machine 2 minutes after the completion of washing operation. (The duration of 2 minutes is required to open the door of your machine is not included in the washing period).

Washing procedure & programme selection

Error Messages

Your machine is equipped with systems that continually self-check during washing operations and then take the necessary precautions and warn you in case of any breakdown.

Failure code	Failure indicator	Probable failure	The process to be done
Err 01	The start/pause light blinks.	The door is not shut properly.	Shut the door properly so that you hear the click. If the problem persists, turn off the machine unplug and contact Product Care (0845 208 8750) or a qualified engineer.
Err 02	The programme ready light blinks.	The water level in your machine is below heater. The pressure of your water supply may be low or locking.	Turn on the tap fully. Your water may be cut, check it. If the problem continues, your machine will automatically stop after a while. Unplug your machine, turn off the tap and contact Product Care (0845 208 8750) or a qualified engineer.
Err 03	The start/pause light and programme ready light blinks .	The pump has failed or the pump filter is obstructed.	Clean the pump filter. However, if the problem persists contact Product Care (0845 208 8750) or a qualified engineer.
Err 05	The program ready light and programme end light blink.	The heater of your machine or the heat sensor has failed.	Turn off your machine and unplug. Turn off your tap and contact Product Care (0845 208 8750) or a qualified engineer.
Err 06	The programme ready light and programme end light blink.	The motor has failed.	Turn off your machine and unplug. Turn off the tap and contact Product Care (0845 208 8750) or a qualified engineer.
Err 07	The programme start/pause light, ready light and programme end light stays on permanently.	Configuration error.	Turn off your machine and unplug. Turn off the tap and contact Product Care (0845 208 8750) or a qualified engineer.
Err 08	The start/pause light, programme ready light and programme end light blink.	Fault error	Turn off your machine and unplug. Turn off the tap and contact Product Care (0845 208 8750) or a qualified engineer.
Err 09	The programme ready light and programme end light stays on permanently.	The network voltage is too high or too low.	If the network voltage is lower than 150V or higher than 260V, your machine will automatically stop. When the network voltage is recovered, your machine will continue its operation.

(*) See the chapter regarding maintenance and cleaning of your machine.

Maintenance

The correct care of your washer can extend its life. This section explains how to care for your washer properly and safely.

- When cleaning your machine, ensure that the machine is unplugged and the water supply is closed off.

Cleaning your Washing Machine

Exterior

- Wipe up detergent, bleach, and other spills with a soft, damp cloth or sponge as and when they occur.
- Occasionally wipe the outside of the washer to keep it looking like new.

Interior

- Clean interior with 250ml of chlorine bleach mixed with 500ml of detergent. Run washer through a complete cycle. Repeat this process if necessary.

Important note

- **Do not put sharp or metal object in your washer, or they can damage the finish. Check all pockets for pins, clips, money, bolts, nuts, etc.**
- **Do not lay these objects in your washer after emptying pockets.**

Winter storage or moving care

Install and store your washer where it will not freeze. Because some water may stay in the hoses, freezing can damage your washer. If you store or move your washer during freezing weather, winterize it.

To winterize washer

- Turn off water faucet.
- Disconnect and drain water inlet hoses.
- Run washer on a drain and spin setting (see page 10) for 1 minute.
- Unplug the power supply cord.

To use washer again

- Flush water pipes and hoses.
- Reconnect water inlet hoses.
- Turn on water faucet.
- Reconnect power supply cord.

For Customer Services & Spare Parts please call **0845 208 8750**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at

www.productcareuk.com

Maintenance

Non-use or vacation care

Operate your washer only when you are at home.



If you are on vacation or don't use your washer for an extended period of time, you should:

- Unplug the power supply cord or turn off electrical power to the washer.
- Turn off the water supplier to the washer.

This helps avoid accidental flooding (due to a water pressure surge) while you are away.

Cleaning the water inlet filter

- Filters are used to avoid dirt and foreign substances in the water from entering the machine. These are on the tap and on the ends of water valves along the water inlet hose of your machine.
- If your machine cannot take sufficient amounts of water despite the tap being open, these filters should be cleaned.
- Detach the water inlet hoses.
- Remove the filters on water inlet valves using pliers and then clean it with a brush in water.
- Disassemble the filters on the tap end of the water inlet hoses manually and clean it.
- Having the filters cleaned, you can fit them in the same way reversely.
- **Filters of water inlet valves may be clogged due to a contaminated water tap, lack of necessary maintenance or valves may be broken. Which will cause water to leak into your machine continuously. Breakdowns or faults that may arise because of these reasons are not covered under manufacturer's guarantee.**

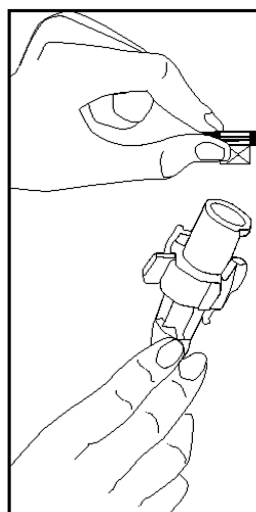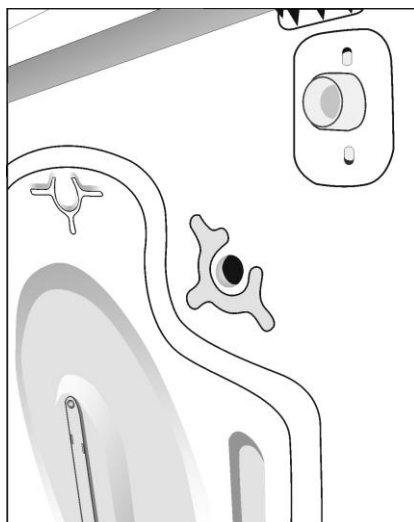

For Customer Services & Spare Parts please call **0845 208 8750**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at

www.productcareuk.com


Maintenance

Cleaning the drain filter


- This drain filter is used to screen foreign objects such as threads, coins, pins, buttons etc.
- If the drain filter is not cleaned regularly (after every 10 times of use), a drain problem could be caused.
- Depress the lug downwardly to uncover the pump section of the toe board and pull it towards yourself and extract it.

CAUTION

Be careful when draining if the water is hot.

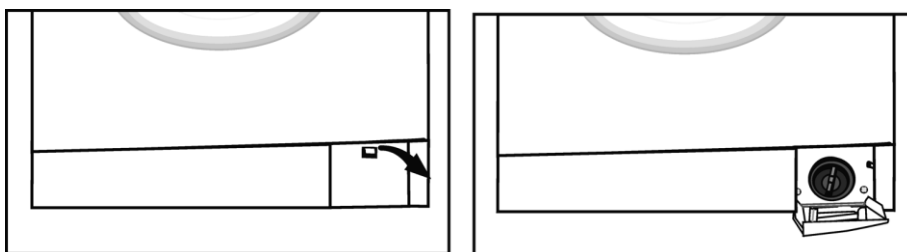

- Before opening the filter cover, place a towel on the ground immediately in front of the filter hole to soak up remaining water.

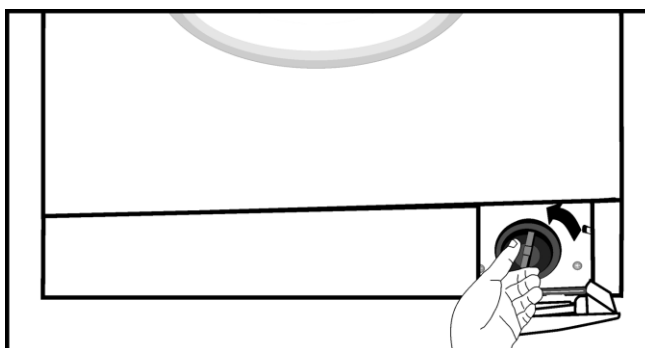

- Loosen the filter cover in and allow water to flow out.
- Clean the foreign objects present in the filter.
- Check whether the pump rotates with your hands.
- After cleaning the filter, fit the filter cover by rotating it clockwise.
- Fit the pump section of the toe board.
- Remember that water will leak if you do not fit the filter cover properly.

For Customer Services & Spare Parts please call **0845 208 8750**



Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at

www.productcareuk.com



Maintenance

Cleaning the detergent case

- After a while detergent and fabric softeners leave a deposit in the case;
- It should be cleaned from time to time with a jet of running water. If necessary it can be removed completely from the machine by pressing the catch downwards and by pulling it out.
- To facilitate cleaning, the upper part of the fabric softener compartment can be removed.

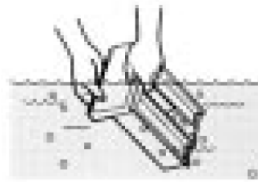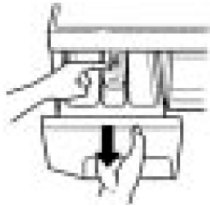

- Detergent can also accumulate inside the recess which should be cleaned occasionally with a brush.
- Once you have finished cleaning, replace the case and run a rinse cycle without laundry.

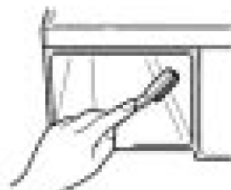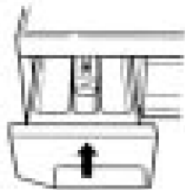

For Customer Services & Spare Parts please call **0845 208 8750**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Removing stains

Stained, heavily-soiled, or greasy items may need to be prewashed or soaked for best results. Soaking helps remove protein-type stains like blood, milk or grass. Prewashing helps loosen soil before washing.

Stain removal rules

- Use warm water for soaking or prewashing stained laundry. Hot water can set stains.
- Most stains are easier to remove when they are fresh.
- Before treating any stain, find out what kind of stain it is, how old the stain is, what kind of fabric it is, and whether the fabric is colourfast (Check the care label).
- Washing and drying can set some stains.
- Start with cold or warm water. Hot water can set some stains.
- When bleach is recommended, use a bleach that is safe for the fabric.
- Put the stained area face down on a paper towel or white cloth. Apply the stain remover to the back of the stain. This forces the stain off fabric instead of through it.

Stain removal guide

STAIN	TO REMOVE
Blood	Rinse immediately in COLD water. If stain remains, soak in cold water with an enzyme prewash.
Chewing gum	Use ice in plastic bag to harden the gum. Scrape off what you can and the sponge with white spirits.
Cocoa, Chocolate	Sponge with COLD water and soak in an enzyme prewash. If stains persist, rub in a little detergent and rinse in cold water.
Coffee	Blot up quickly and rinse out in COLD water. Rub in a little detergent and wash in the maximum temperature allowed for the fabric type.
Cream/Milk Ice cream	Rinse in COLD water and wash normally. If stain is still apparent, sponge with white spirits.
Deodorant	Rub affected area with white vinegar and then rinse out in COLD water. Sponge with white spirits. Treat stiffened areas with enzyme prewash.
Egg	Soak in a COLD enzyme prewash, rinse and wash normally.
Fabric/Softener	Rub affected area with bar soap and wash normally.
Fruit stains	Treat as soon as possible by sponging with COLD water. Rub a little detergent on the stain and wash normally.
Grass	Sponge with white spirits. Rub in an enzyme prewash and wash as normally.
Grease and oil	Lay the affected area face down on an absorbent cloth and work from the back. Sponge with white spirits or dry cleaning fluid. Wash normally.
Iron or rust	Apply lemon juice and salt and place in the sun. Wash normally.
Lipstick	Sponge with white methylated spirits and wash normally.
Mildew	Wash in WARM water and detergent. Moisten area with lemon juice, dry in the sun and wash normally. If stain persists and the fabric allows, use a bleach.
Mud	Brush off any dry mud. Rinse in cold water. If stain persists rub in a little detergent and wash normally.
Paint-oil based	Scrape off any fresh paint and sponge with a non flammable dry cleaning fluid and wash normally.
Paint-water based	Treat while still wet, rinse in WARM water and wash normally.
Scorch marks	Dampen a cloth with hydrogen peroxide, lay it over the affected area and press with a fairly hot iron.

Trouble shooting

- All repairs to your machine should be carried out by a qualified engineer or by an appointed engineer from Product Care, **(0845 208 8750)**.
- Before contacting a qualified engineer or Product Care, please see if the problem your machine has developed can be solved with the help of the below:

Fault	Possible cause	Removing methods
Your machine does not discharge water.	Discharging hose is clogged or twisted.	Check the discharging hose, then either clean or untwist.
	Pump filter clogged.	Clean the pump filter.
	Laundry settled in the machine unevenly.	Spread your laundry in the machine evenly.
Your machine vibrates.	The feet of your machine have not been adjusted.	Adjust the feet on your machine.
	Transportation screws have not been removed	Remove transportation screws
	Less amount of laundry in the appliance.	This will not block operation of your machine.
	Your machine is overloaded with laundry or laundry settled unevenly.	Do not put in laundry more than the amount recommended and settle the laundry in the machine evenly.
	Your machine rests on a hard surface.	Prevent your machine from resting on hard surfaces.
Your machine does not start.	It is not plugged in.	Plug machine in.
	Fuse blown.	Replace the fuse.
	Electricity cut-off.	Check mains power.
	Start/pause button not pressed.	Press on start/pause button.
	Programme dial 'stop' position.	Switch the programme dial to the desired position.
	The machine door is not completely closed.	Close the machine door.
Your machine does not intake water.	Water tap is turned off.	Turn your faucet on.
	Water inlet hose may be twisted.	Check water inlet hose and untwist.
	Water inlet hose clogged.	Clean water inlet hose filters.
	Valve inlet filter clogged.	Clean the valve inlet filters.
	The machine door is not completely closed.	Close the machine door.

For Customer Services & Spare Parts please call **0845 208 8750**
 Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit
 us at **www.productcareuk.com**

Trouble shooting

- All repairs to your machine should be carried out by a qualified engineer or by an appointed engineer from Product Care, **(0845 208 8750)**.
- Before contacting a qualified engineer or Product Care, please see if the problem your machine has developed can be solved with the help of the below:

Fault	Possible cause	Removing methods
Excessive foam is formed in the detergent drawer.	Excessive amount of detergent used.	Press the Start/pause button. To eliminate foam formation, mix a spoon of softener with half litre of water, and pour the mixture in the detergent drawer. After 5-10 minutes, press the Start/pause button again. For next washing operation, use the correct amount of detergent.
	Wrong detergent used.	Use detergents produced only for automatic washing machines.
Unsatisfactory washing result.	The dirtiness of your laundry does not match the programme you have chosen.	Select the programme appropriate for correct dirtiness of your laundry. (see programme table)
	Amount of detergent used insufficient.	Adjust the amount of detergent based on the dirt level of your laundry.
	Your machine is overloaded with laundry	Load your machine with laundry, amount of which should not exceed maximum laundry capacity

For Customer Services & Spare Parts please call **0845 208 8750**
 Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit
 us at **www.productcareuk.com**

Specification

Specification

Model	RHWM61200B
Dimension (mm)	(H)845 X (W)597 X (D) 527
Maximum mass of dry close (kg)	6.0
Unit Weight (kg)	68.5 (Net) / 71.5 (Gross)
Water pressure (Mpa)	Maximum: 1 Mpa / Minimum: 0.1 Mpa
Spin Speed (RPM)	1200
Operating Water Pressure	0.03MPa ~ 0.8MPa (0.3kgf/cm ² ~ 8kgf/cm ²)
Operating voltage / frequency (V/Hz)	(220-240) V ~/50Hz

For Customer Services & Spare Parts please call **0845 208 8750**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit
us at **www.productcareuk.com**

Connection to the mains supply

WARNING- THIS APPLIANCE MUST BE EARTHED

This appliance is designed to operate from a mains supply of AC230V ~ 50HZ.
Check that the voltage marked on the product corresponds with your supply voltage.

This product is fitted with a 13A plug complying with BS1363.

If this plug is unsuitable or needs to be replaced, please note the following:

Important: The wires in the mains lead are
Coloured in accordance with the following code:

GREEN/YELLOW - EARTH

BLUE - NEUTRAL

BROWN - LIVE



For UK use only – Plug fitting details (where applicable):

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:


The GREEN/YELLOW wire is the EARTH and must be connected to the terminal which is marked with the letter E or by the earth symbol or coloured GREEN or GREEN/YELLOW.

The BLUE wire is the NEUTRAL and must be connected to the terminal marked with the letter N or coloured BLACK.

The BROWN wire is the LIVE wire and must be connected to the terminal marked with the letter L or coloured RED.

Always ensure that the plug cord grip is fastened correctly.

If a 13A (BS1363) fused plug is used it must be fitted with a 13amp fuse conforming to BS1362 and be BSI or ASTA approved.

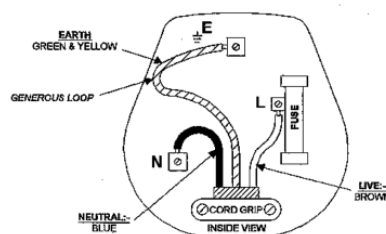

For Customer Services & Spare Parts please call **0845 208 8750**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at **www.productcareuk.com**

Spare parts

Spare parts	Contact details
Detergent drawer	Available at www.productcareuk.com or call 0845 208 8750
Door	Available at www.productcareuk.com or call 0845 208 8750
Door seal	Available at www.productcareuk.com or call 0845 208 8750
Adjustable leg(s)	Available at www.productcareuk.com or call 0845 208 8750
Inlet hose	Available at www.productcareuk.com or call 0845 208 8750
Plastic caps	Available at www.productcareuk.com or call 0845 208 8750
Pump	Available at www.productcareuk.com or call 0845 208 8750
Motor	Available at www.productcareuk.com or call 0845 208 8750
PCB	Available at www.productcareuk.com or call 0845 208 8750
Other	Available at www.productcareuk.com or call 0845 208 8750

For Customer Services & Spare Parts please call **0845 208 8750**
 Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit
 us at www.productcareuk.com

For Customer Services & Spare Parts
please call

0845 208 8750

Opening times: Monday - Friday
8am – 6pm & Saturday 9am – 1pm

or visit us at

www.productcareuk.com

Revision 1



This symbol is known as the 'Crossed-out wheellie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to make sure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

We reserve the right due to possible changes to design to alter the instruction manual without prior notice.

For Customer Services & Spare Parts please call **0845 208 8750**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit
us at **www.productcareuk.com**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>