

**SAMSUNG**

# OWNER'S INSTRUCTIONS


AW0505M

AW0595M

AW050BM

AW050DM
 
## Window-type Room Air Conditioner (Cool)

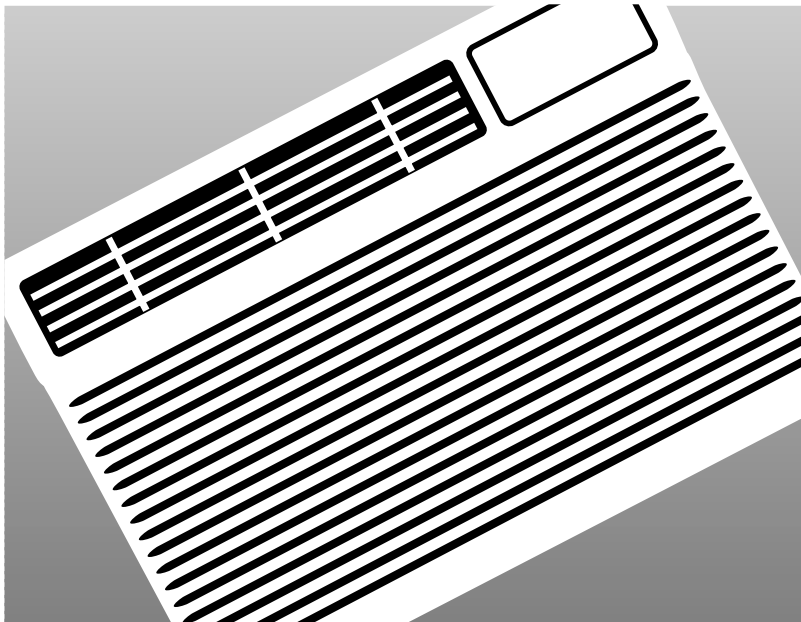

## Safety Precautions

*The following safety precautions must be taken when using your air conditioner.*



### **WARNING**

Risk of electric shock. • Can cause injury or death. • Disconnect all remote electric power supplies before servicing, installing or cleaning. • This must be done by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.

#### **DURING OPERATION**

- ◆ Users of this product are cautioned not to attempt repair of this product at their own discretion. Instead, they are requested to directly contact a designated service center or the outlet at which the product was purchased.
- ◆ Never spill any kind of liquid into the unit. Should this happen, unplug or main switch off the unit and contact an authorized service center.
- ◆ Do not insert anything between the air outlet blades because the inner fan may be damaged and could cause injury. Keep children away from the unit.
- ◆ Do not place any obstacles in front of the unit.
- ◆ Do not spray liquid of any kind into the indoor unit. Should this happen, switch off the breaker used for your air conditioner and contact your installation specialist.
- ◆ Make sure that the unit is correctly ventilated at all times:  
Do not place clothing or other materials over it.
- ◆ If the wireless remote control will not be used for a long time, remove the batteries. (If applicable)
- ◆ When using a wireless remote control, the distance should not be more than 7 meters from the air conditioner. (If applicable)
- ◆ The air conditioner must be plugged into its own specific power source, which must be installed in compliance with national wiring, earthing and safety regulations.
- ◆ If the power cord is damaged in any way, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- ◆ This device must be installed according to the national electrical rules.
- ◆ The appliance must be installation that the plug should be easily accessible after installation.
- ◆ If the fuse on PC board is broken please change it with the type of T 3.15A 250V.
- ◆ The breaker of the air conditioner should be all-pole switch; and the distance between its two contacts should be no less than 3.5mm. Such means for disconnection must be incorporation in the fixed wiring.

#### **DISPOSING OF THE UNIT**

- ◆ Before throwing out the device, it is necessary to pull back the battery cells and get rid of them safely for recycling reasons.
- ◆ When you need to dispose of the unit, consult your dealer. If pipes are removed incorrectly, refrigerant may blow out and come into contact with your skin, causing injury. Releasing refrigerant into the atmosphere also damages the environments.
- ◆ Please recycle or dispose of the packaging material for this product in an environmentally responsible manner.

#### **OTHERS**

- ◆ Never store or ship the air conditioner upside down or sideways to avoid damage to the compressor.
- ◆ The appliance is not intended for use by young children or infirm persons without supervision: Young children should be supervised to ensure that they do not play with the appliance.
- ◆ Max current is measured according to IEC standard for safety and current is measured according to ISO standard for energy efficiency.

 
 
# Contents

---

◆ PREPARING YOUR AIR CONDITIONER	
■ Safety Precautions .....	2
■ Description of Each Component .....	4
■ Getting Started .....	5
◆ OPERATING YOUR AIR CONDITIONER	
■ Cooling Your Room .....	6
■ Ventilating Your Room .....	7
■ Switching the Air Conditioner Off .....	8
■ Adjusting the Air Flow Direction Horizontally .....	9
■ Adjusting the Air Flow Direction Vertically .....	9
◆ RECOMMENDATIONS FOR USE	
■ Power Failure .....	10
■ Temperature and Humidity Ranges .....	10
■ Cleaning Your Air Conditioner .....	11
■ Solving Common Problems .....	12
■ Technical Specifications .....	13

# Description of Each Component

Design and shape are subject to change.

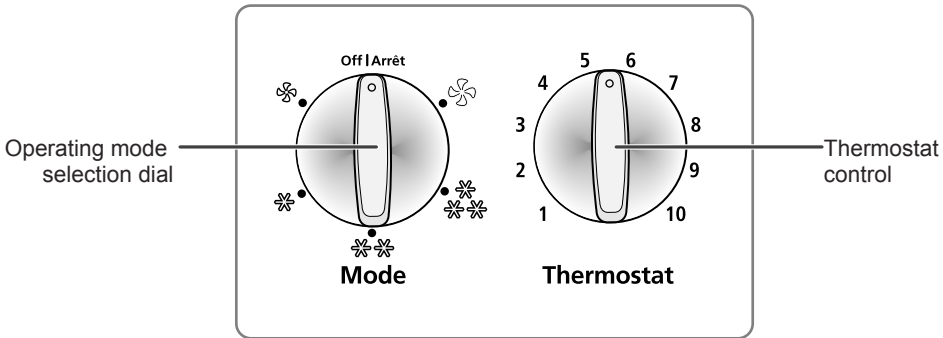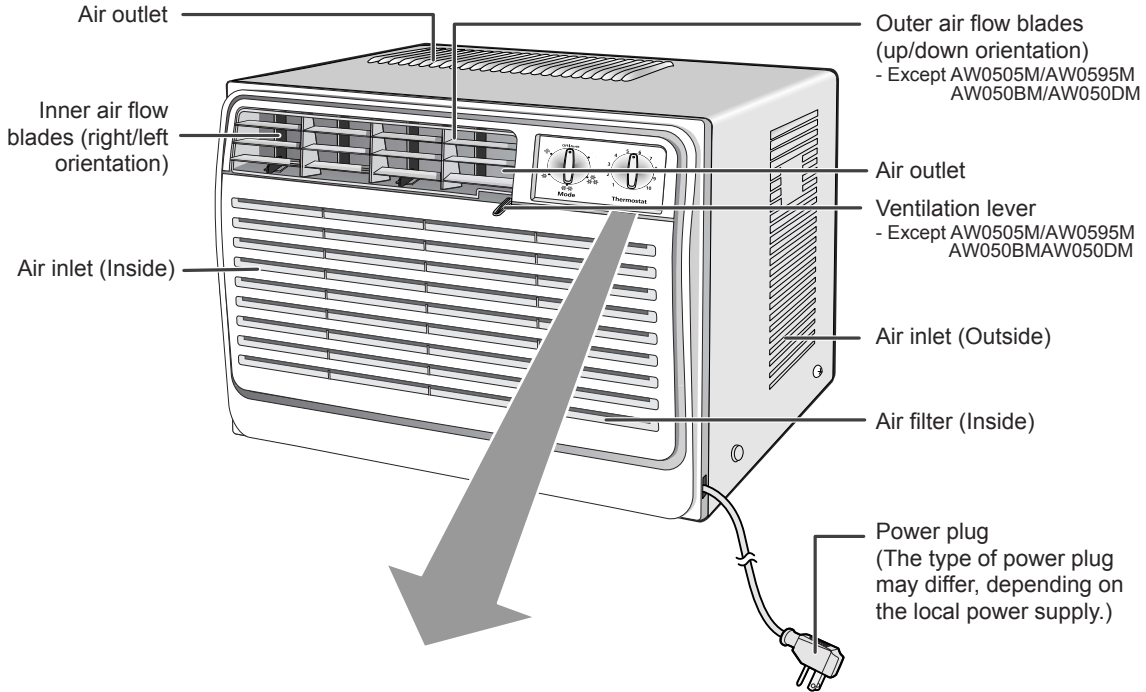


# Getting Started

*You have just purchased a Samsung window-type room air conditioner which should be installed following your Owner's Instructions.*

*Your Owner's Instructions contain much valuable information on using your air conditioner. Please take the time to read them as they will help you take full advantage of the unit's features.*

 
*The illustrations in the step-by-step procedures use four different symbols:*

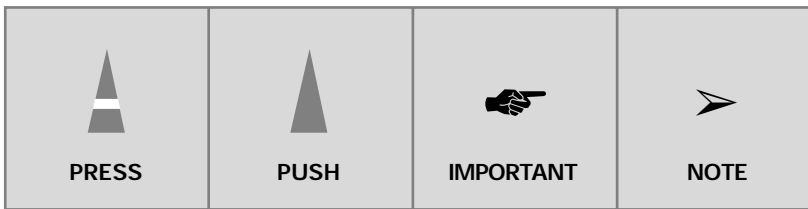

# Cooling Your Room

**You must select the COOL mode if you wish to adjust the:**

 
- ◆ **Cooling temperature**
- ◆ **Fan speed when Cooling**

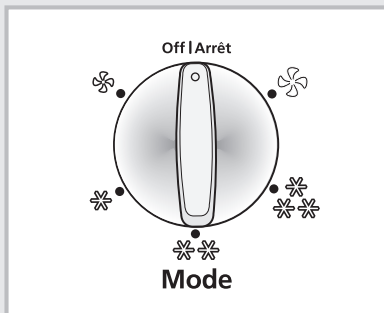

- 1 Turn the operating mode selection dial and set it to "❄️", "❄️❄️" or "❄️❄️❄️"

**Result:** The air conditioner starts up in cool mode.

 ➤ You can change modes at any time.

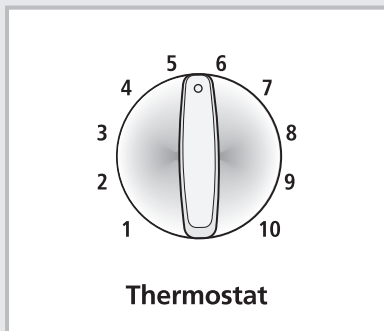


- 2 Turn the THERMOSTAT control to the desired position.

Possible temperatures: Can be set between 18°C and 29°C.


**Result:** The air conditioner starts cooling if the room temperature is higher than the selected temperature.

- 3 To control the direction of the air flow, refer to page 9.


**If the air in your room is stale, you can ventilate the room using the Fan feature. (Except AW0505M | AW0595M | AW050BM | AW050DM)**



- 1 If you wish to discharge stale air, push the ventilation lever on the front of the unit to the right and open position (  ).

 **Result:** The air inside the room circulates and stale air is discharged outside.

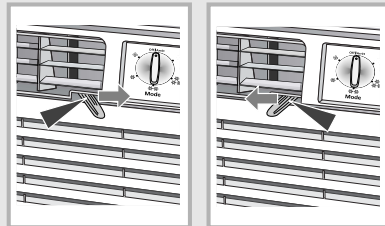

Otherwise, push the ventilation lever to the left and closed position (  ).

 
**Result:** The air simply circulates inside the room.



- 2 Turn the operating mode selection dial and set it to "  " or "  " position.


**Result:** The air conditioner starts up in fan mode.

- 
- ◆  : The fan turns rapidly.
  - ◆  : The fan turns slowly.
  - ◆ You can change modes at any time.

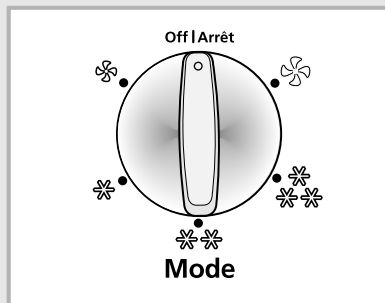

- 3 To control the direction of the air flow, refer to page 9.

# Switching the Air Conditioner Off

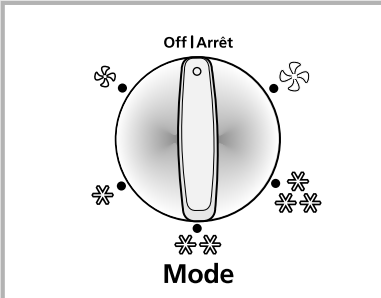 

*You can switch the air conditioner off whenever you want.*

- 1 To switch the unit off, simply set the operating mode selection dial to the " Off | Arrêt " position.


Result: The air conditioner stops operating.



## Adjusting the Air Flow Direction Horizontally

 *Depending on the position of the unit in your room, you can adjust the orientation of the inner air flow blades on the unit.*

Adjust the air flow blades to the desired position by sliding them side to side.

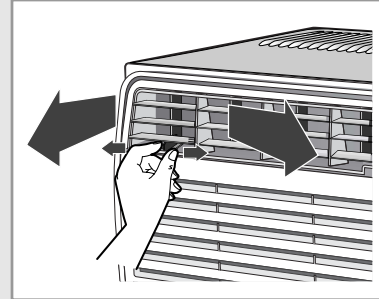


## Adjusting the Air Flow Direction Vertically

*The outer air flow blades can be adjusted to control the vertical air flow direction. (Except AW0505M | AW0595M | AW050BM | AW050DM)*

<b>RECOMMENDATION</b>	<b>When...</b>	<b>Adjust the blades to face...</b>
	Cooling	Upwards.

Adjust the air flow blades to the desired position, by pushing them upwards or downwards.

 - If you orient the air flow blades downwards and the unit operates in Cool mode for long periods of time, dew may:
- Form on the surface of the blades
  - Drip from the blades

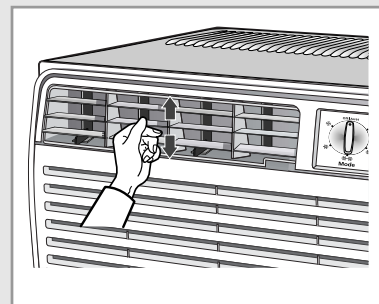

## Power Failure

---

If a power failure occurs, the air conditioner is switched off. When the power comes back on, the air conditioner starts up again automatically.

---

## Temperature and Humidity Ranges

The following table indicates the temperature and humidity ranges within which the air conditioner can be used.

Mode	Indoor Temperature	Outdoor Temperature	Indoor Humidity
Cooling	21°C to 32°C approx.	21°C to 43°C approx.	80% or less

 
 
 
If the air conditioner is used at...	Then...
Higher temperature	The automatic protection feature may be triggered and the air conditioner stopped.
Lower temperature	A water leakage or some other malfunction may happen if the heat exchanger freezes.
Higher humidity levels	Water may condense on and drip from the surface of the unit if it is used for long periods.

# Cleaning Your Air Conditioner

*Be sure to clean the air filter periodically to maintain the air conditioner in the best condition for a long period of time.*

➤ **When cleaning the air conditioner, turn it off and pull out the power plug.**

- 1 Open the front grille by pulling the tabs on both sides of the grille. Then lift it up slightly to open the front grille completely.
- 2 Grab the tabs on the filter and pull it up and out.
- 3 Remove all dust on the air filter with a vacuum cleaner or brush.
- 4 When you have finished, insert the air filter back into its original position.
- 5 Wipe the surface of the unit with a neutral detergent and then wipe it again with dry cloth.  
(Be sure not to use benzene, solvent or other chemical products.)

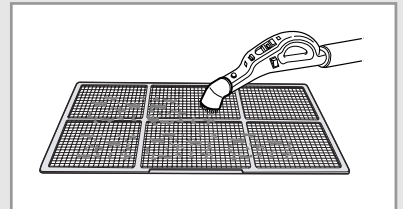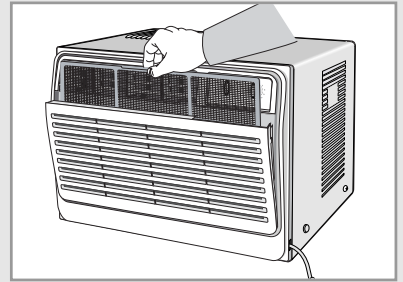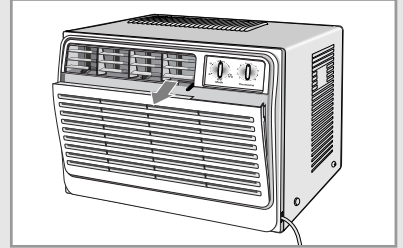

➤ If you...	Then...
Will not be using the air conditioner for a long period of time	Set the fan going for a few hours to dry the inside of the air conditioner thoroughly. Switch the air conditioner off and unplug it from the wall socket. Clean the filter and outer surfaces.
Have not used the air conditioner for a long period of time	Set the fan going for a few hours to dry the inside of the air conditioner thoroughly.

# Solving Common Problems

*Before contacting an authorized service center, perform the following simple checks. They may save you the time and the expense of an unnecessary call.*

Problem	Explanation / Solution
The air conditioner does not operate at all.	<ul style="list-style-type: none"><li>◆ Check for a power failure.</li><li>◆ Check the voltage. (See the technical specifications)</li><li>◆ Check the power plug for disconnection.</li><li>◆ Check to see whether the operating mode selection dial is placed in the " off / Arrêt " position. (Set it to the desired position.)</li><li>◆ Check to see whether the room temperature is too low. - Refer to page 10 for details about temperature condition.</li></ul>
The air comes out smoothly, but cooling is not effective.	<ul style="list-style-type: none"><li>◆ Set the THERMOSTAT control to the desired position. - When the number on the THERMOSTAT control is too high, the room temperature may be too warm.</li><li>◆ Check to see whether there is an open window or leakage of cool air to the outside. - Close the window, and fill the gap.</li><li>◆ Check to see whether there is any obstacle adversely affecting the flow of the air inside and outside the room. - Remove the obstacle or change the position of the air conditioner.</li><li>◆ Check to see whether the air filter is clogged with dust or contaminated with foreign substances. - Clean the air filter.</li><li>◆ Check to see whether there is any direct sunlight facing the air conditioner. - Block the sunlight with a sunshade.</li><li>◆ Check to see whether there is any electric device generating heat. - Do not use the air conditioner together with any heating device.</li></ul>
Odors are permeating the room during air conditioning.	<ul style="list-style-type: none"><li>◆ Ventilate the room.</li></ul>

# Technical Specifications

***Design and specifications are subject to change without notice.***

Model		Power Supply
AW0505M	AW050BM	115V~, 60Hz
AW0595M	AW050DM	

# YOUR SAMSUNG ROOM AIR CONDITIONER WARRANTY

## Limited Warranty to Original Purchaser

Samsung will repair or replace, at our option, this product if found defective within the warranty period beginning from the original date of purchase. This Samsung Product is warranted by SAMSUNG ELECTRONICS CANADA Inc. against manufacturing defects in materials or workmanship for the period specified.

Labor

1 Year (In home)

Parts

1 Year

## Limited 5-Years Compressor Warranty

Within one year of purchase Samsung Electronics Canada Inc. will provide a replacement compressor if it is found to be defective in material or workmanship. During the existing four years (second through fifth year) Samsung Electronics Canada Inc. will provide a replacement only, without charge, if it is found to be defective in material or workmanship. Labor to install the compressor during these existing four years is not included in the warranty. All warranty repairs must be performed by a Samsung Authorized Service Centre.

## Obligation of the Original Owner

The original dated purchase receipt must be retained as proof of purchase and presented to the Authorized Service Centre before warranty services are rendered.

## Exclusions of the Warranty

This warranty does not cover damage due to accident, fire, flood and/or other Acts of God: misuse, incorrect line voltage, improper installation, improper or unauthorized repairs, commercial use, or damages which occur in shipping. Exterior and interior finish and plastic parts, are not covered under this warranty, Customer adjustments which are explained in the instruction manual are not covered under the terms of this warranty. This warranty will automatically be voided for any unit found with a missing or altered serial number. This warranty is valid only on products purchased and used in Canada.

**SAMSUNG ELECTRONICS CANADA INC.**  
55 Standish Court, Mississauga, Ontario L5R 4B2



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>