



UPSTAGE™ BY SAMSUNG®




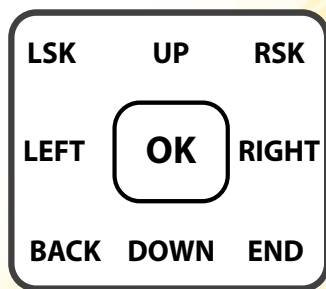 
QUICK TIPS

©2007 SPRINT NEXTEL. ALL RIGHTS RESERVED. SPRINT AND OTHER TRADEMARKS ARE TRADEMARKS OF SPRINT NEXTEL.



Navigation Pad – Key Mapping

When you turn on the phone for the first time, UpStage™ begins an onscreen tutorial session which helps you better understand how to use the touch-sensitive Navigation Pad.

Each successful step takes you to additional screens where you'll learn another skill. Press  to complete each screen and continue to the next page.



Key Map functions (see image at left) are activated with a single press:

- **Left/Right Softkeys** allow you to select softkey actions or menu items corresponding to the bottom left and right text on the display screen.
- **Up Key** () allows you to access the main menu. Use both the **Up** and **Down** keys to move focus up or down by a single row or entry with each touch.
- **Left/Right Keys** allow you to move focus left or right by a single entry or menu at a time with each touch.
- **OK/Enter Key** () allows you to accept a highlighted selection.
- **Back Key** (lower-left) deletes characters from the display while in text entry mode. While in a menu, touching the **Back** key returns you to the previous menu.
- **End Key** (lower-right). Touch this key to exit from any screen and return to the idle/standby screen.

Note: This tutorial can be re-activated by launching the **Menu >Tools > Phone Tutorial** option.

Navigation Pad – Sweeping

The Navigation Pad allows you to use both single press activation (previous page) and a scrolling/sweeping motion.

This “sweeping” action across either the Horizontal or Vertical area of the Navigation Pad (similar to that of a notebook’s touchpad) allows you to scroll by a set interval.

Examples of sweeping:

- **Half Sweep** allows you to scroll through a menu or list by one selection at a time with each half sweep. This dragging action only covers a small section of the pad.



- **Full Sweep** allows you to scroll by two selections at a time with each full sweep. This dragging action covers an entire side of the pad (the entire top/bottom/side).




Using the Virtual Keypad

UpStage™ gives you the ability to choose how you would like to enter information.

Although most phones only let you use the keypad to enter text and numbers, UpStage goes one step beyond by giving you the choice (on certain data entry screens) to use either the phone’s keypad or a Virtual Keypad, which is driven by the Navigation Pad.

To use the Virtual Keypad:

Each version of the Virtual Keypad contains a vertical selection at the left of the screen. To use this feature, just press the **Up** or **Down** keys to make a selection.

- Use your Navigation Pad to scroll down the column and highlight your selection. Entering text using the Virtual Keypad is made easier as the phone implements a smart dictionary to help determine the correct word.
- With the correct value or letter selected, press  to accept the entry. Continue making selections.
- Press **Done** (left softkey) to accept the entry and continue to the next screen.

 
Locking Your Phone



The **Lock** button allows you to lock both the phone's keypad and Navigation Pad.

To quickly lock the phone:

- Slide the **Lock** button in the direction of the arrow to lock the phone's keypad and Navigation Pad. Locking the phone in this manner activates the power save mode. All incoming calls are still received, any assigned ring tones will begin playing, and Caller ID information will be displayed on the last active screen.
- Slide the **Lock** button back to the unlock position to unlock both the phone's keypad and Navigation Pad. The phone returns to the previously active screen.

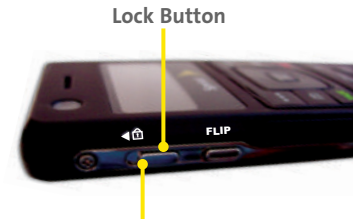 


Seeing the Red background indicates the phone is locked.

To quickly unlock the phone:

- Slide the **Lock** button back towards the **FLIP** button (seen above) to unlock both the phone's keypad and Navigation Pad. The phone returns to the previously active screen.

Note: When the phone is locked, press the Volume key to view the Time and Date. Locking the phone reduces battery consumption, extends phone usage, and prevents inadvertent dialing.

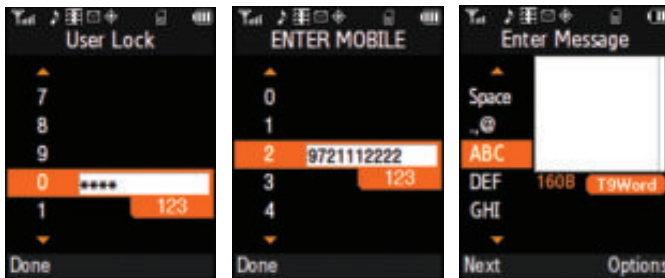

Switching Between Screens

The **FLIP** button allows you to switch between the Main LCD and the smaller Phone Display screen.

This toggling between the two screens also activates/deactivates certain side-specific features.

 
Note: As a general rule, most alpha-numeric entry is done via the Phone's keypad (except for those instances where the Virtual Keypad can be used), and access of the main menu options is done via the Main LCD on the MP3 side.

To navigate between the two screens:

- Press the **FLIP** button to toggle between the Main LCD (large LCD) and the Phone Display screen (small LCD).

As the phone switches between the two screens, the currently active LCD displays a "Flip the phone" image, turns off, and then power-up the other LCD screen. The unused screen stays inactive while the other screen remains active and in use.

Note: When one side of the phone is active, its corresponding input hardware (keypad or Navigation Pad) can be used to make selections and enter data. When one side is active, the input hardware on the other side remains inactive.

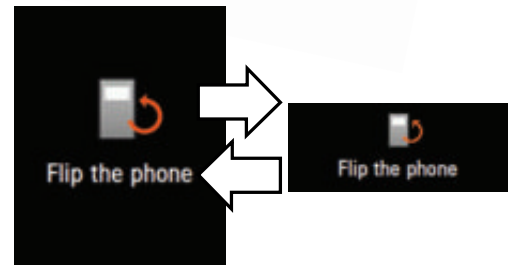

Using the Sprint Music Manager

UpStage™ lets you use the Sprint Music Manager application to manage the music content on your PC and then easily copy it to your phone's microSD™ card. Just install the software from your CD and you're on your way.




This application can help you organize, search for, purchase, play, and burn digital music files.

Sprint Music Manager tabs include:

- **Transfer:** Allows you to copy compatible music files from your PC to your phone's microSD card. A USB connection (via USB Data Cable) must be used to access and transfer music.
- **Get Music:** Provides access to several online music sites where you can purchase new music.
- **Manage:** Displays a list of all current music files found on your PC. These files are organized by category (Song, Artist, Album, Genre), Playlist, and Digital Lounge Downloads.

Syncing Music Between PC and Phone

The Sprint Music Manager lets you transfer music from your existing music collection (on PC) or that you've purchased from leading online music stores to your phone's microSD card:

- Verify you have music files available on your computer.
- Firmly insert the microSD card into your phone.
(Note the orientation of the card's gold contact pins.)
- Connect the USB cable to your computer and then to your phone.
- From your phone's Main LCD, use the Navigation Pad to select **Sync My Music** and press . The computer displays "New Device Detected" and a new drive letter will then be assigned to the phone.
- Launch the **Sprint Music Manager** application and click the **Manage** tab.
- Click **Add Music** to launch the Add Music Wizard.
- Select **Full Search**, place a checkmark next to each music file format you wish to search for (MP3, WMA, MP4, and WAV), and click **Search**.



 
 
- Click on the **Transfer** tab and then double-click the **Songs** listing in the left pane.
- Highlight all the song(s) you wish to download to your phone and then drag them to the gray Music Transfer List section at the bottom of the window.
- Once you have all the songs you wish to transfer, click **Transfer Now** to begin copying the songs to your phone.

Warning! Do not disconnect the phone while a transfer is in progress.

 
 

 

Note: A Memory card is required to listen to any music stored or downloaded to the phone. The number of files you can store depends on the size and format options of the memory card.

 
Playing Your Music

UpStage™ makes playing your music a snap:

- Use the Navigation Pad to highlight the **Music Library** icon from the Main LCD.
- Press  to activate the Sprint Music Store - **Player** tab which lists all of your currently available playlists.
- From the Player tab, highlight either: **All My Music** or a previously created Playlist and press . You'll see a screen with three tabs:
 - ▶ **Songs**: Lists your music files alphabetically by Song Title.
 - ▶ **Artists**: Lists and groups your music files alphabetically by Artist.
 - ▶ **Genres**: Lists and groups your music files by song Genre.

To play a particular song:


 
 

- Highlight a song title and press .
- Use the Volume keys on the side of the phone to control the volume.
- While a song is playing, use  or  to go to the previous or next song.
- While a song is playing, press and hold  or  to advance or rewind within the same song.
- Press **End** to launch an onscreen popup.
- Select **Send to Background** to continue listening and return to the standby screen. Select **Exit** to stop the application.

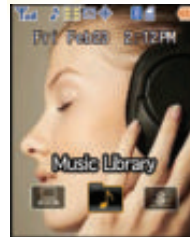

Buying New Music

UpStage™ also makes buying new music quick and easy:

Note: Prior to using this feature, you must have previously enabled Power Vision via the main menu: **(Menu > Settings > Power Vision > Enable Vision)**.

- Use the Navigation Pad to highlight the **Buy Music** icon from the Main LCD.
- Press  to activate the Sprint Music Store. If you haven't already, you'll have to set up a Music Store password (initially, this is the last four digits of the Social Security number assigned to your account).
- Highlight the first **Password** field and press . Use the Virtual Keypad to enter the password information.
- Select **Done** (left softkey) to save your password and return to the previous screen.
- Repeat the previous two step to confirm the password information.
- After you've established your password, select **Create an Account** to complete the registration process and continue to the Sprint Music Store.
- Navigate through the various categories. When you are ready to buy a song:
 - ▶ Highlight the song and press  to bring up the artist and song information, as well as artwork.
 - ▶ To buy the song, use the Navigation Pad to highlight **Buy Song** and press .

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>