

SAMSUNG

DVD



V I D E O

SAMSUNG

ELECTRONICS

SAMSUNG ELECTRONICS AMERICA INC.
105 CHALLENGER ROAD, RIDGEFIELD
PARK, NJ 07660 U.S.A.

DVD PLAYER

DVD/VIDEO-CD/CD

DVD-C600

FOR YOUR NEAREST SAMSUNG
SERVICE CENTER
DIAL 1-800-SAMSUNG

AH68-00636U

Precautions



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER(OR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

CAUTION: DVD PLAYERS USE AN INVISIBLE LASER BEAM WHICH CAN CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE PLAYER CORRECTLY AS INSTRUCTED.

CAUTIONS

Caution: To prevent electric shock, match wide blade of plug to wide slot, fully insert.
Attention: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

This product satisfies FCC regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances, such as radios and televisions, use shielded cables and connectors for connections.

FCC NOTE (for U.S.A):

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect this equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- This class B digital apparatus meets all requirements of the Canadian Interference -- Causing Equipment Regulations.

CLASS 1 LASER PRODUCT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT

Precautions

WARNING

To reduce the risk of fire or shock hazard, do not expose this DVD player to rain or moisture.

CAUTION

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVER AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

Note:

- This unit can be used only where the power supply is AC 120V, 60Hz. It cannot be used elsewhere.
- This DVD player is designed and manufactured to respond to the Region Management Information. If the Region number of a DVD disc does not correspond to the Region number of this DVD player, the DVD player cannot play the disc.
- This device is protected by U.S. patent numbers 4,631,603, 4,577,216 and 4,819,098 and other intellectual property rights. The use of Macrovision's copy protection technology in the device must be authorized by Macrovision and is intended for home and other limited pay-per-view uses only, unless otherwise authorized in writing by Macrovision. Reverse engineering or disassembly is prohibited.

Handling Cautions

- Before connecting other components to this player, be sure to turn them all off.
- Do not move the player while a disc is being played, or the disc may be scratched or broken, and the player's internal parts may be damaged.
- Do not put a flower vase filled with water or any small metal objects on the player.
- Be careful not to put your hand into the disc tray.
- Do not place anything other than the disc in the disc tray.
- Exterior interference such as lightning and static electricity can affect normal operation of this player. If this occurs, turn the player off and on again with the POWER button, or disconnect and then reconnect the AC power cord to the AC power outlet. The player will operate normally.
- Be sure to remove the disc and turn off the player after use.
- Disconnect the AC power cord from the AC outlet when you don't intend to use the player for long periods of time.
- Clean the disc by wiping in a straight line from the inside to the outside of the disc.

Disc Storage

Be careful not to harm the disc because the data on these discs is highly vulnerable to the environment.

- Do not keep under direct sunlight.
- Keep in a cool ventilated area.
- Store vertically.
- Keep in a clean protection jacket.

Maintenance of Cabinet


For safety reasons, be sure to disconnect the AC power cord from the AC outlet.

- Do not use benzene, thinner, or other solvents for cleaning.
- Wipe the cabinet with a soft cloth.


Before You Start

T

Accessories

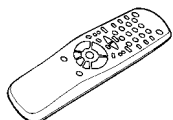


Remote Control

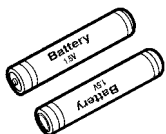

Batteries for Remote Control (AA Size)



 Video/Audio Cable



S-Video Cable



User's Manual

Install Batteries in the Remote

- 1 Open the battery cover on the back of the remote.
- 2 Insert two AA batteries. Make sure that the polarities (+ and -) are aligned correctly.
- 3 Replace the battery cover.

If remote doesn't operate properly:

- Check the polarity + - of the batteries (Dry-Cell)
- Check if the batteries are drained.
- Check if remote sensor is blocked by obstacles.
- Check if there is any fluorescent lighting nearby.

General Features6	• Front Panel Display 10
Disc Type and Characteristics8	• Rear Panel11
Description9	Tour of the Remote Control12
• Front Panel Controls9	

SETUP

Choosing a Connection14	• Connection to a TV15
• Connection to an Audio System.....14	

CONNECTIONS

Playing a Disc16	Using the Display Function20
Operating the Disc Changer 18	Repeat Play21
Using the Search & Skip Functions 19	Program Playback in a Specific Order22

BASIC FUNCTIONS

Using the Disc View Function 23	Changing the Camera Angle26
Selecting the Audio Language24	Using the Bookmark Function27
Selecting the Subtitle Language 25	Using the Zoom and 3D Sound Functions ...28

ADVANCED FUNCTIONS

Using the Setup Menu 29	Setting Up the Audio Options 33
Setting Up the Language Features30	Setting Up the Display Options34
Setting Up the Parental Control 32	

CHANGING SETUP MENU

Controlling a TV with the Remote.....35	Specifications37
Troubleshooting Guide36	Warranty38

REFERENCE

General Features

DVD Changer

The DVD Changer holds 5 discs and provides full random play with fast disc changes.

Excellent Sound

Dolby Digital, a technology developed by Dolby Laboratories provides crystal clear sound reproduction.

Screen

Video with MPEG-2 compression technology. Both regular and widescreen(16:9) pictures can be viewed.

Slow Motion

An important scene can be viewed in slow motion.

Programmed Play

You can program tracks to play in desired order.

Parental Control

The parental control allows users to set the level necessary to prohibit children from viewing harmful movies such as those with violence, adult subject matter, etc.

Various On-Screen Menu Functions

You can select various languages(Audio/Subtitle) and screen angles while enjoying movies.

Repeat

You can repeat a song or movie simply by pressing the REPEAT button.

General Features






COPY PROTECTION

- Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.
- This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Disc Type and Characteristics

This DVD player is capable of playing the following types of discs with the corresponding logos:

Disc Types (Logos)	Recording Types	Disc Size	Max. Playing Time	Characteristics
	Audio + Video	5"	Single-sided 240 min. Double-sided 480 min.	<ul style="list-style-type: none"> DVD contains excellent sound and video due to Dolby Digital and MPEG-2 system. Various screen and audio functions can be easily selected through the on-screen menu.
		3 1/2"	Single-sided 80 min. Double-sided 160 min.	
	Audio + Video	5"	74 min.	<ul style="list-style-type: none"> Video with CD sound, VHS quality & MPEG-1 compression technology.
		3 1/2"	20 min.	
	Audio	5"	74 min.	<ul style="list-style-type: none"> CD is recorded as a Digital Signal with better audio quality, less distortion and less deterioration of audio quality over time.
		3 1/2"	20 min.	

* DO NOT play CD-ROM, CD-I, and DVD-ROM in this player!
(CDGs play audio only, not graphics.)

Disc Markings



• Playback Region Number

NTSC

• NTSC broadcast system in U.S.A., Canada, Korea, Japan, etc.



• Dolby Digital disc

STEREO

• Stereo disc

DIGITAL SOUND

• Digital Audio disc




• DTS disc

Playback Region Number

Both the DVD player and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.

The Region Number for this player is described on the rear panel of the player.

Description-Front Panel

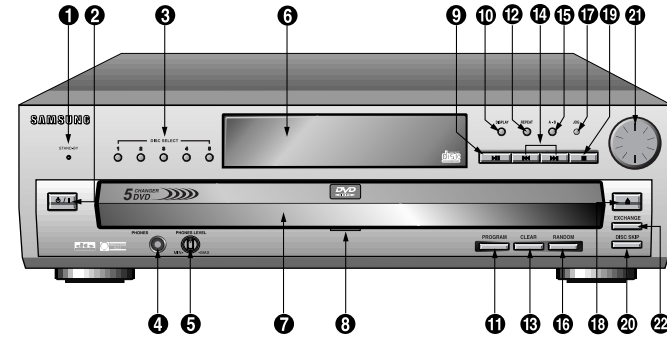


Front Panel Controls

- 1 STANDBY LAMP**
 - When the unit is first plugged in, the indicator lights. When power is pressed on, the lamp goes out.
- 2 POWER ON/OFF**
 - Use to turn your player on and off (standby).
- 3 DISC SELECT**
 - Use to select the desired disc loaded in the DVD CHANGER.
- 4 HEADPHONES JACK**
 - You can attach headphones here for private listening.
- 5 HEADPHONES VOLUME**
 - Use to adjust headphones volume level.
- 6 FRONT DISPLAY**
 - Operation indicators are displayed here.
- 7 DVD CHANGER (TRAY)**
 - Press OPEN/CLOSE to open and close the disc changer.
- 8 GREEN LAMP**
- 9 PLAY/PAUSE**
 - Begin or pause disc play.
- 10 DISPLAY**
 - Displays the current disc mode.
- 11 PROGRAM**
 - Use to playback a disc in programmed order.
- 12 REPEAT**
 - Allows you to repeat play a title, chapter, track, or disc.
- 13 CLEAR**
 - Use to remove menus or status displays from the screen.
- 14 SKIP/SEARCH**
 - Use to skip or search a scene or music.
- 15 REPEAT A-B**
 - Allows you to repeat sections between point A and point B.
- 16 RANDOM**
 - Use to playback a disc in random order.
- 17 JOG**
 - Press this button to activate the frame by frame advance feature. Then turn the SHUTTLE dial to go from one frame to another.
- 18 OPEN/CLOSE**
 - Press to open and close the disc tray.
- 19 STOP**
 - Stops disc play.
- 20 DISC SKIP**
 - Use to skip a disc in order.
- 21 SHUTTLE DIAL**
 - Performs fast or slow motion playback.
- 22 EXCHANGE**
 - Press this button when you want to change a disc without stopping playback of the current disc.

NOTE

- To Connect Headphones (not included)**
Turn the headphone volume down to the minimum setting before connecting. Adjust to your desired volume after connection.


Description-Front Display

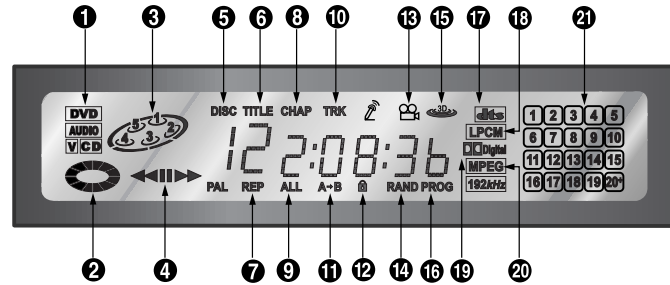

Front Panel Display

- | | |
|-----------------------------------|------------------------------|
| ❶ DISC TYPE INDICATOR | ❷ PARENTAL LEVEL INDICATOR |
| ❷ DISC OPERATION ROTARY INDICATOR | ❸ ANGLE INDICATOR |
| ❸ DVD CHANGER INDICATOR | ❹ RANDOM INDICATOR |
| ❹ OPERATION INDICATOR | ❺ 3D SOUND INDICATOR |
| ❺ DISC INDICATOR | ❻ PROGRAM PLAY INDICATOR |
| ❻ TITLE INDICATOR | ❼ DTS INDICATOR |
| ❼ REPEAT INDICATOR | ❽ LINEAR PCM INDICATOR |
| ❽ CHAPTER INDICATOR | ❾ DOLBY DIGITAL INDICATOR |
| ❾ ALL REPEAT INDICATOR | ❿ MPEG INDICATOR |
| ❿ TRACK INDICATOR | ⓫ DISC INFORMATION INDICATOR |
| ⓫ A-B REPEAT INDICATOR | |


Description-Rear Panel

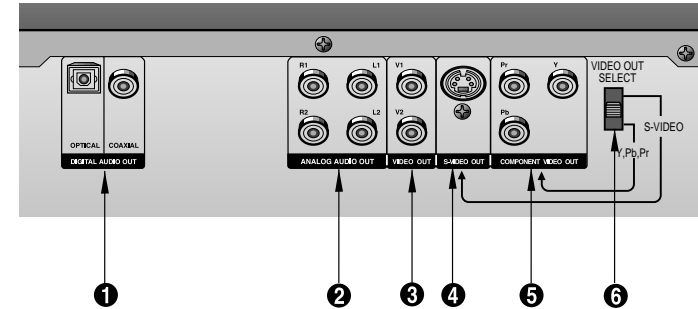

Rear Panel

- | | |
|--|---|
| ❶ DIGITAL AUDIO OUT JACK | ❺ COMPONENT VIDEO OUT JACKS |
| • Use either an optical or coaxial digital cable to connect to a compatible Dolby Digital receiver. Use to connect to an A/V Amplifier that contains a Dolby Digital decoder or DTS decoder. | • Use these jacks if you have a TV with Component Video input jacks. These jacks provide Pr, Pb and Y video. Along with S-Video, Component Video provides the best picture quality. Y, Pb, Pr must be selected in the VIDEO OUT SELECT. |
| ❷ AUDIO OUT JACKS | ❻ VIDEO OUT SELECT SWITCH |
| • Connect to the Audio input jacks of your television, audio/video receiver, or VCR. | • Use the switch to set video out. |
| ❸ VIDEO OUT JACK | • If Y, Pb, Pr is selected, S-Video may not work. |
| • Use a video cable to connect to the Video input jack on your television. | • If S-Video is selected, Y, Pb, Pr may not work. |
| ❹ S-VIDEO OUT JACK | |
| • Use the S-Video cable to connect this jack to the S-Video jack on your television for a higher quality picture. S-Video must be selected in the VIDEO OUT SELECT. | |

Tour of the Remote Control

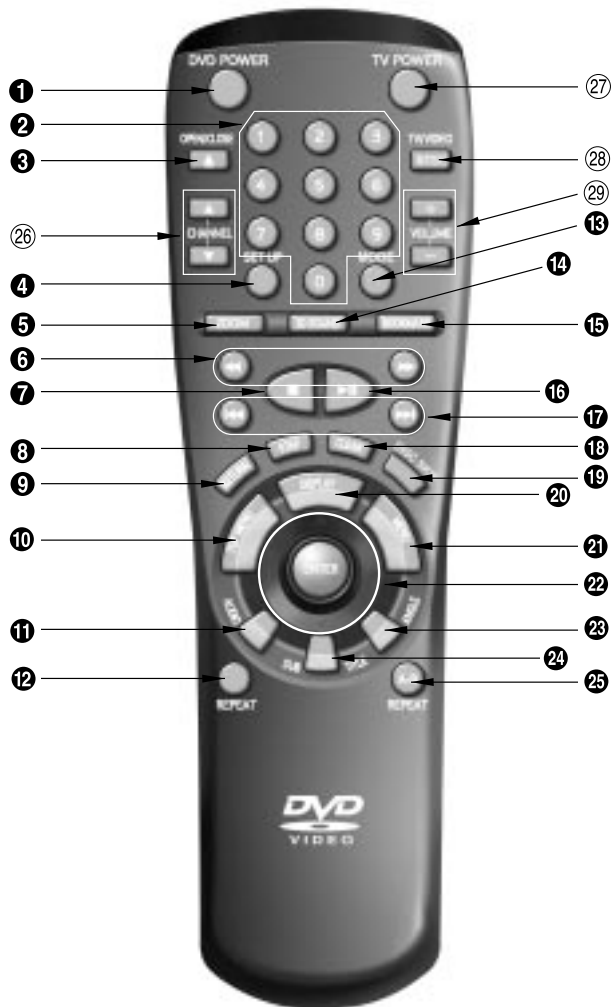

Tour of the Remote Control

DVD Function Buttons

- ❶ **DVD POWER Button**
- ❷ **NUMBER Buttons**
- ❸ **OPEN/CLOSE Button**
- ❹ **SETUP Button**
 - Brings up the DVD player's Setup menu.
- ❺ **ZOOM Button**
- ❻ **SEARCH Buttons**
 - Allows you to search forward/backward through a disc.
- ❼ **STOP Button**
- ❽ **STEP Button**
 - Advances playback one frame at a time.
- ❾ **RETURN Button**
 - Returns to a previous menu.
- ❿ **TOP MENU Button**
 - Accesses a music or video display directly.
- ⓫ **AUDIO Button**
 - Use this button to access various audio functions on a disc.
- ⓬ **REPEAT Button**
 - Allows you to repeat play a title, chapter, track, or disc.
- ⓭ **MODE Button**
 - Allows you to program a specific order.
- ⓮ **3D SOUND Button**
- ⓯ **BOOKMARK Button**
- ⓰ **PLAY/PAUSE Button**
 - Begin/Pause disc play.
- ⓱ **SKIP Buttons**
 - Use to skip the title, chapter, or track.
- ⓲ **CLEAR Button**
 - Use to remove menus or status displays from the screen.
- ⓳ **DISC SKIP Button**
 - Use to skip a disc in order.
- ⓴ **DISPLAY Button**
 - Displays the current disc mode.
- ⓵ **MENU Button**
 - Brings up the Disc menu.
- ⓶ **ENTER/DIRECTION Button (UP/DOWN or LEFT/RIGHT Button)**
 - This button functions as a toggle switch.
- ⓷ **ANGLE Button**
 - Use to access various camera angles on a DVD.
- ⓸ **SUBTITLE Button**
- ⓹ **A-B REPEAT Button**
 - Use to mark a segment to repeat between A and B.

TV Function Buttons

- ⓺ **CHANNEL UP/DOWN Buttons**
- ⓻ **TV POWER Button**
 - Use to set the remote to control a compatible TV.
- ⓼ **TV/VIDEO Selection Button**
- ⓽ **VOLUME UP/DOWN Buttons**

Choosing a Connection


The following show examples of connections commonly used to connect the DVD player with a TV and other components.

Before Connecting the DVD Player

- Always turn off the DVD player, TV, and other components before you connect or disconnect any cables.
- Refer to the owner's manuals of additional components you are connecting for more information on those particular components.



Connection to an Audio System

Method 1

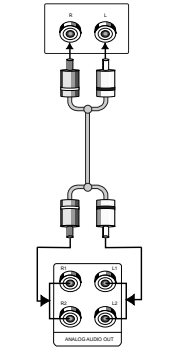

Analog Audio Out

Method 2

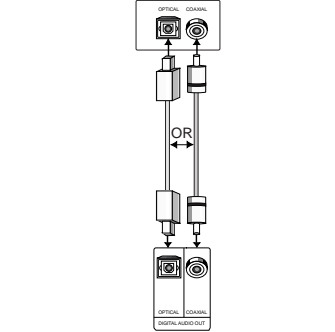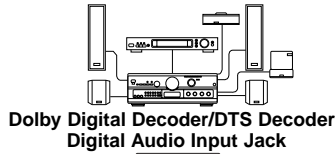

Digital Audio Out

AUDIO

DVD

Choosing a Connection


Connection to a TV (For Video)

TV (Normal, Widescreen, Projection, etc..)

Method 1

Method 2

Method 3

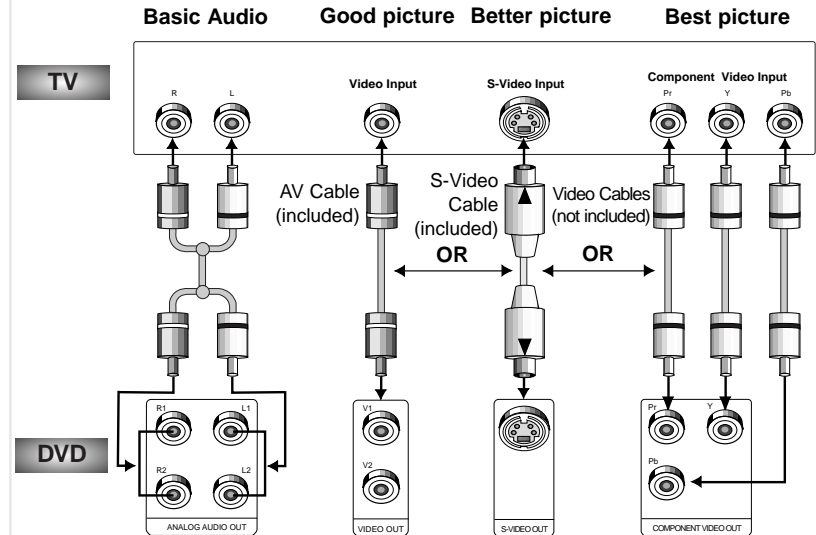

CONNECTIONS

- **Method 1** DVD Player + TV with Video Input Jack
- **Method 2** DVD Player + TV with S-Video Input Jack
(If S-Video is selected in the VIDEO OUT SELECT.)
- **Method 3** DVD Player + TV with Component Video Jacks
(If Y, Pb, Pr is selected in the VIDEO OUT SELECT.)

NOTE

- If Y, Pb or Pr is selected, S-Video may not work.
- If S-Video is selected, Y, Pb or Pr may not work.

Before Playback

- Turn on a TV and press the TV/VIDEO button to select video mode.
- Turn on your Audio System and select AUX, CD or DVD.
- Refer to your AUDIO User's Manual.

SELECT MENU LANGUAGE

Press	1	for English
Touche	2	pour Français
Drücken	3	für Deutsch
Pulse	4	para Español
Premere	5	per Italiano
Toets	6	voor Nederlands

After plugging in the player, the first time you press the DVD POWER button, this screen comes up :

If you want to select the language, press a NUMBER button. (This screen will only appear the very first time you plug in the player.)


Playback

- 1 Press the OPEN/CLOSE button.
The STANDBY indicator light goes out and the tray opens.
- 2 Place a disc gently into the tray with the disc's label facing up.
- 3 Press the PLAY/PAUSE button or OPEN/CLOSE button to close the disc tray.

RESUME function

When you stop disc play, the player remembers where you stopped, so when you press PLAY again, it will pick up where you left off (unless the disc is removed, the STOP button is pressed twice or the player is unplugged.).

NOTE

- If the player is left for 5 minutes in pause mode, it will stop.
- The power is automatically turned off after approximately 30 minutes have elapsed in the stop mode (auto power-off feature).
- If the player is left in the stop mode for more than one minute without any user interaction, a screen saver will be activated, and the TV screen will fade in and fade out repeatedly. Press PLAY button to resume normal play.
- This  icon indicates an invalid button press.

- 1 Stopping Playback
Press the STOP button during playback.
- 2 Removing Disc
Press the OPEN/CLOSE button.
- 3 Pausing Playback
Press the PLAY/PAUSE or STEP button on the remote during playback.
 - Screen stops, no sound.
 - To resume again, press PLAY/PAUSE button once again.
- 4 Step Motion Playback (Except CD)
Press the STEP button on the remote or turn JOG dial on the front of the DVD player during playback.
 - Each time the button is pressed, a new frame will appear.
 - No sound is heard during STEP mode.
 - Press PLAY/PAUSE to resume normal playback.

(You can only perform step motion playback in the forward direction.)
- 5 Slow Motion Playback (Except CD)
Press the FWD or REV SEARCH button on the remote or turn the SHUTTLE dial on the front of the DVD player during PAUSE or STEP mode.
 - By pressing the SEARCH button, you can select slow motion playback for 1/2, 1/4 or 1/8 of normal speed.
 - No sound is heard during slow mode.
 - Press PLAY/PAUSE to resume normal playback.
 - When playing a VCD, the reverse slow motion playback will not work.

Operating the Disc Changer

The DVD Changer holds 5 discs and provides full random play with fast disc changes.

Exchanging Discs

Exchange allows you to change up to 4 discs except the currently selected disc.


- 1 Press the EXCHANGE button on the front of the player when in the play mode. The tray opens with two slots available for you to load or change discs.
- 2 Press the DISC SKIP button on the remote or on the front of the player to turn the platter to the other two slots. Load or change the third and fourth discs.
- 3 Press the EXCHANGE, OPEN/CLOSE or the desired number's DISC SELECT button on the front of the player to close the disc tray.

- To change all the discs, first press the STOP button, then the OPEN/CLOSE and DISC SKIP buttons.

Using the DISC SKIP function

Use the Disc Skip function to change to another of the discs currently in the disc platter.

- 1 While in play or stop mode, press the DISC SKIP button. The platter turns clockwise to the next available disc.
 - 2 Or while in play or stop mode, press the desired number of the DISC SELECT buttons on the front of the unit to play back the disc in the desired number's slot.
- Empty disc slots are automatically skipped during disc skip.

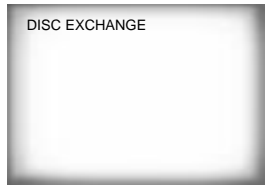

Using the Search & Skip Functions

During playback, you can search quickly through a chapter or track or use the skip function to jump to the next selection.

Searching through a Chapter or Track


- 1 Press the FWD or REV SEARCH button on the remote or turn the SHUTTLE dial on the front of the DVD player during PLAY mode.
- Press the REVERSE or FORWARD SEARCH button on the remote and press again to search at a faster speed(2X/4X/8X/16X/32X/normal speed, in order) on the DVD.
 - Press the REVERSE or FORWARD SEARCH button on the remote and press again to search at a faster speed(4X/8X/normal speed in order) on VCD and CD.
 - To return to normal speed playback, press the PLAY/PAUSE button.

Skipping Tracks

- 2 During playback, press the NEXT SKIP or BACK SKIP button.
- When playing a DVD, if you press the NEXT SKIP button, it moves to next chapter. If you press the BACK SKIP button, it moves to the beginning of the chapter. One more press makes it move to the beginning of the previous chapter.
 - When playing a VCD 2.0 in MENU OFF mode, a VCD 1.1 or a CD, if you press the NEXT SKIP button, it moves to next track. If you press the BACK SKIP button, it moves to the beginning of the track. One more press makes it move to the beginning of the previous track.
 - If a track exceeds 15 minutes when playing a VCD and you press the NEXT SKIP button, it moves forward 5 minutes. If you press the BACK SKIP button, it moves backward 5 minutes.
 - When playing a VCD 2.0 in the MENU MODE or Track View function, if you press the NEXT SKIP button, it moves to the next MENU or the next Track View display. If you press the BACK SKIP button, it moves to the previous MENU or the previous Track View display. (See page 23.)

NOTE

- When in search mode (4X/8X/16X/32X) on a DVD or high-speed playback on a VCD, no sound will be heard.
- When 2X SCAN AUDIO is set to ON in the SETUP MENU, no sound will be heard on discs which are recorded with LPCM, DTS or MPEG-2.
- Depending on the disc, audio may not be heard when a disc is in 2X playback mode.

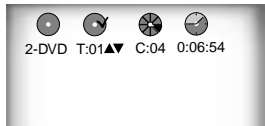

When Playing a DVD

1 During playback, press the DISPLAY button on the remote or on the front of DVD player.

- Current disc, title, chapter number and elapsed time will be displayed.
- Use the LEFT/RIGHT button to select a title or a chapter number. Use the UP/DOWN button or Number buttons to enter a different title or chapter number, then press the ENTER button.
- To enter the time from which you want to start, use the LEFT/RIGHT button to select, then use the Number buttons to enter the time. Then press the ENTER button.

2 Press the DISPLAY button twice.

- Current audio, subtitle and volume control will appear.
- To make the screen disappear, press the DISPLAY button again.

When Playing a CD/VCD

1 During playback, press the DISPLAY button on the remote or on the front of DVD player.

- Current track number, elapsed time and volume control will be displayed.
- Use the LEFT/RIGHT button to select a track. Use the UP/DOWN button or Number buttons to enter a different track number, then press the ENTER button.
- To enter the time from which you want to start, use the LEFT/RIGHT button to select, then use the Number buttons to enter the time. Press the ENTER button.


- To make the screen disappear, press the DISPLAY button again.

NOTE

- What is a Chapter?
Each Title on a DVD can be divided into chapters (similar to tracks on an audio CD).
- What is a Title?
A DVD may contain several different titles. For example, if a disc contains four different movies, each might be considered a title.

Repeat the current track, chapter, title, a chosen section (A-B), all of the disc (VCD/CD only), or all discs.

DVD

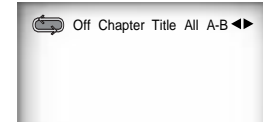

VCD/CD



When playing a DVD

- 1** Press the REPEAT button on the remote or on the front of the player. Repeat screen appears.
- 2** Select Chapter, Title, All discs or A-B using the LEFT/RIGHT button.
- 3** Press ENTER.
- 4** To return to normal playback press REPEAT again, then press the LEFT/RIGHT button to select Off and press ENTER.

When playing a VCD/CD

- 1** Press the REPEAT button on the remote or on the front of the player. Repeat screen appears.
- If icons appear on the screen, press the Menu button on your remote controller to set MENU OFF mode. Then, attempt the Repeat again.
- 2** Select Track, all of the Disc, All discs or A-B using the LEFT/RIGHT button.
- 3** Press ENTER.
- 4** To return to normal playback press REPEAT again, then press the LEFT/RIGHT button to select Off and press ENTER.

NOTE

- DVD repeats playback by chapter or title, CD and VCD repeat playback by disc or track.
- Depending on the disc, the Repeat function may not work.
- If the title or track is completed before marking the end (B), the end of title or track becomes B automatically.
- When in VCD 2.0 mode (MENU ON mode), this function does not work.


A-B Repeat

- A-B Repeat
- Press the REPEAT button. Select A-B on screen with the LEFT/RIGHT button. Or press the A-B button on the remote.
- Press ENTER at the point where you want the repeat play to start (A). The B is automatically highlighted.
- Press ENTER at the point where you want the repeat play to stop (B).
- The A-B Repeat that you set plays until you turn Repeat off.

Program Playback in a Specific Order

Program playback lets you set up a specific order for playback of titles, chapters or tracks on a disc only.

e.g To program chapters 5 and 7 in order on the 2nd Disc. (on DVD)

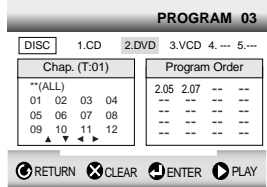

NOTE

- Depending on the disc, the Program Playback function may not work.
- To resume normal playback, press the CLEAR button.
- When you make a wrong selection during programming**
Press the CLEAR button to delete the last track (or chapter, or title) in the program order.

To start PROGRAM playback

- 1 Press the MODE button on the remote.
 - The message, "Reading disc information... Please wait" appears.
 - You can also use the PROGRAM button on the front of the player.
- 2 Use the LEFT/RIGHT button to select PROGRAM. Press the ENTER button.
- 3 Select disc 2 and press the ENTER button.
 - Press the Disk Skip button to select a disk number you want.
- 4 Use the LEFT/RIGHT or UP/DOWN button to select chapter 05 and press ENTER. Then select chapter 07 and press ENTER again.
 - Press the RETURN button to select the another disc. Repeat steps 3 and 4.
- 5 Press the PLAY/PAUSE button. The disc will be played back in programmed order.

To start RANDOM playback


- 1 Press the MODE button.
Use the LEFT/RIGHT button to select RANDOM and press the ENTER button.
- 2 Press the RANDOM button on the front of the player. The random information will appear. Select DISC, ALL DISCS or OFF using the LEFT/RIGHT button.
- 3 The disc will be played back in random order.
 - The RANDOM function doesn't work on a DVD disc.

Using the Disc View Function

Track View (VCD)

Displays the beginning view of each track and the track number.

- 1 During playback, press the TOP MENU button.
- 2 Press the UP/DOWN button to select TRACK VIEW. Press the ENTER button.
- 3 Select the desired view by pressing the UP/DOWN or LEFT/RIGHT buttons.
- 4 Press the ENTER button.

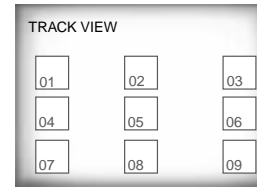


(example)

Index View (VCD)

Displays the equally divided 9 views of the current playing track.

- 1 During playback, press the TOP MENU button.
- 2 Press UP/DOWN button to select INDEX VIEW. Press the ENTER button.
- 3 Select the desired view by pressing UP/DOWN or LEFT/RIGHT buttons.
- 4 Press the ENTER button.

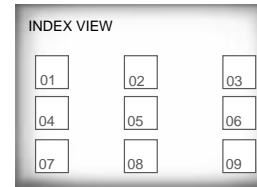

(example)

NOTE

- In stop mode on VCD, press the TOP MENU button and the TRACK VIEW will be displayed.
- When pressing the TOP MENU button with a DVD; the disc's TITLE MENU function comes up. A disc must have at least two titles for the TITLE MENU function to work.
- When pressing the TOP MENU button with a CD; the unit enters the INTRO mode. INTRO lets you listen to the beginning of each track for about 10 seconds.
- When in VCD 1.1 & 2.0 mode(MENU OFF mode), this function works.

Selecting the Audio Language

You can select a desired language quickly and easily with the AUDIO button.



Using the AUDIO Button

- 1 Press the AUDIO button.
- 2 Use the UP/DOWN button to select the desired language on a DVD.
- The audio and subtitle languages are represented by abbreviations.
- 3 Use the UP/DOWN button to select STEREO, R CHANNEL or L CHANNEL. (On VCD/CD)

 
 
Using the MENU Button

When playing a DVD

- 1 Press the MENU button.
- 2 Use the UP/DOWN button to select AUDIO information.
- 3 Press the ENTER button.
- 4 Use the UP/DOWN button to select 'ENGLISH'.
- 5 Press the ENTER button.

When playing a VCD

In disc version 2.0, the MENU button works as a conversion switch between MENU ON and MENU OFF mode. When playing a VCD 1.1 or CD, the MENU button will not work.



(example)

NOTE

- This function depends on what languages are encoded on the disc and may not work with all DVDs.
- A DVD disc can contain up to 8 audio languages.
- **How to have the same audio language come up whenever you play back a DVD;** Refer to "Setting Up the Language Features" on page 30.

Selecting the Subtitle Language

You can select a desired subtitle quickly and easily with the SUBTITLE button.



Using the SUBTITLE button

 
 
- 1 Press the SUBTITLE button.
- 2 Use the UP/DOWN button to select the desired subtitle language.
- 3 Use the LEFT/RIGHT button to determine whether or not the subtitle will be displayed.
- Initially, the subtitling will not appear on screen.
- The audio and subtitle languages are represented by abbreviations.

Using the MENU button

- 1 Press the MENU button.
- 2 Use the UP/DOWN button to select SUBTITLE information.
- 3 Press the ENTER button.
- 4 Use the UP/DOWN button to select the desired language.
- 5 Press the ENTER button.

When playing a VCD

In disc version 2.0, the MENU button works as a conversion switch between MENU ON and MENU OFF mode. When playing a VCD 1.1 or CD, the MENU button will not work.



(example)

NOTE

- This function depends on what languages are encoded on the disc and may not work with all DVDs.
- A DVD disc can contain up to 32 subtitle languages.
- **How to have the same subtitle language come up whenever you play back a DVD;** Refer to "Setting Up the Language Features" on page 30.

Changing the Camera Angle

When a DVD contains multiple angles of a particular scene, you can select the Angle function.



(example)

Using the ANGLE button

Check to see if an 'ANGLE ()' mark is present at the upper right hand corner of the screen.

- 1 When an 'ANGLE' mark is shown, press the ANGLE button.
- 2 Use the UP/DOWN button to select the desired screen angle.
- 3 To turn off the display, press the ANGLE button again.


Using the Master Volume Control Function

Press the DISPLAY button twice. Use the UP/DOWN button to select a suitable volume.

- Master Volume Control function lets you adjust the volume of the player's output. This is useful for matching the player's output level to other equipment in your system.
- Master Volume Control function on CD titles with DTS will not work under VOLUME : 96 level.

Using the Bookmark Function

The Bookmark function lets you select parts of a DVD or VCD (MENU OFF mode) so that you can quickly find the section at a later time.

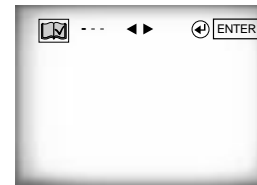

Using the Bookmark Function (DVD/VCD)

- 1 During playback, press the BOOKMARK button on the remote. A marker will be displayed.
- 2 Use the LEFT/RIGHT button to move to the desired bookmark icon.
- 3 When you reach the scene you want to mark, press the ENTER button. The icon will change to a number (1, 2, or 3).
- 4 Press the BOOKMARK button to turn off the display.

Recalling a Marked Scene

- 1 During playback, press the BOOKMARK button on the remote.
- 2 Use the LEFT/RIGHT button to select a marked scene.
- 3 Press the PLAY/PAUSE button to skip to the marked scene.


Clearing a Bookmark

- 1 During playback, press the BOOKMARK button on the remote.
- 2 Use the LEFT/RIGHT button to select the bookmark number you want to delete.
- 3 Press the CLEAR button to delete a bookmark number. Press the BOOKMARK button to turn off display.

NOTE

- Up to three scenes may be marked at the same time.
- When in VCD 2.0 mode (MENU ON mode), this function does not work.
- Depending on the disc, the Bookmark function may not work.

Using the Zoom & 3D Sound Functions

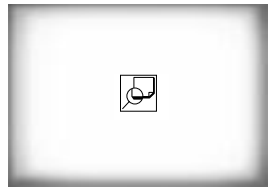


Using the Zoom Function (DVD/VCD)

- 1 During playback or pause mode, press the ZOOM button on the remote. The zoom icon will be displayed on screen.
- 2 Use the UP/DOWN or LEFT/RIGHT button to select the part of the screen you want to zoom.
- 3 Press the ENTER button.

- During DVD playback, press ENTER to zoom in 2X/4X/2X/NORMAL in order.
- During VCD playback, press ENTER to zoom in 2X/NORMAL in order.

Using the 3D Sound Function

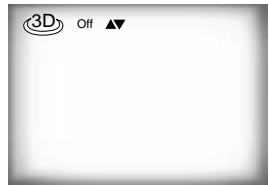

The simulated surround effect (SPATIALIZER N-2-2) depends on the disc contents. If you connect the unit to your stereo system, you can enhance sound quality and produce a greater surround effect.

This feature is useful when you are using the DVD player with a two channel stereo through the analog outputs.

(This function doesn't operate on DVDs recorded with LPCM or on DTS discs.)


- 1 During playback, press the 3D SOUND button. The 3D SOUND mark will be displayed on screen.
- 2 Press the UP/DOWN button to turn the 3D Sound feature on or off.

NOTE

- 3D Sound is possible only on discs recorded using DOLBY SURROUND or DOLBY DIGITAL. However, some of these discs do not contain rear channel sound signals.
- Depending on the disc, the Zoom and 3D Sound function may not work.

Using the Setup Menu

The Setup menu lets you customize your DVD player by allowing you to select various language preferences, set up a parental level, even adjust the player to the type of television screen you have.

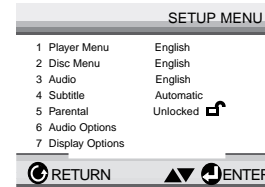

- 1 With no disc playing, press the SETUP button on the remote.
 - 1 **PLAYER MENU** : Setup of the Display Language (See page 30)
Use the Player preference menu to select the language for the player's on-screen displays.
 - 2 **DISC MENU** : Setup of the Menu Language (See page 30)
Use the Menu preference menu to select the language you want a DVD's disc menu to be displayed in.
 - 3 **AUDIO** : Setup of the Audio Language (See page 31)
Use the Audio preference menu to select the sound-track language.
 - 4 **SUBTITLE** : Setup of the Subtitle Language (See page 31)
Use the Subtitle preference menu to select the language the disc's subtitles are to be displayed in.
 - 5 **PARENTAL** : Setup of the Parental Level (See page 32)
Allows users to set the level necessary to prevent children from viewing unsuitable movies such as those with violence, adult subject matter, etc.
 - 6 **AUDIO OPTIONS** : Setup of the Audio Options (See page 33)
 - 7 **DISPLAY OPTIONS** : Setup of the Display Options (See page 34)
Use to select which type of screen you want to watch and several display options.
- 2 Use the UP/DOWN button on the remote to access the different features.
- 3 Press the ENTER button to access the sub features.

To make the setup screen disappear after setting up, press the SETUP button again.

NOTE

Depending on the disc, some Setup Menu selections may not work.

Setting Up the Language Features

If you set the player menu, disc menu, audio and subtitle language in advance, it will come up automatically every time you watch a movie.

e.g Setting up in ENGLISH.

SETUP MENU

- | | | |
|---|-----------------|-----------|
| 1 | Player Menu | English |
| 2 | Disc Menu | English |
| 3 | Audio | English |
| 4 | Subtitle | AUTOMATIC |
| 5 | Parental | UNLOCKED |
| 6 | Audio Options | |
| 7 | Display Options | |

RETURN ENTER

PLAYER MENU LANGUAGE

- | | |
|-----|------------|
| ▶ 1 | English |
| 2 | Français |
| 3 | Deutsch |
| 4 | Español |
| 5 | Italiano |
| 6 | Nederlands |

RETURN ENTER

e.g Setting up in ENGLISH.

DISC MENU LANGUAGE

- | | |
|-----|------------|
| ▶ 1 | English |
| 2 | Français |
| 3 | Deutsch |
| 4 | Español |
| 5 | Italiano |
| 6 | Nederlands |
| 7 | Others |

RETURN ENTER

Using the Player Menu

- 1 With no disc playing, press the SETUP button.
- 2 Use the UP/DOWN button to select the PLAYER MENU.
- 3 Press the ENTER button.
- 4 Use the UP/DOWN button to select 'ENGLISH'.
- 5 Press the ENTER button.

- ENGLISH is selected and the screen returns to SETUP MENU.
- To make the SETUP MENU disappear, press the RETURN button.

Using the Disc Menu Language

This function changes the language only for the text on the disc menu screens.

- 1 With no disc playing, press the SETUP button.
- 2 Use the UP/DOWN button to select DISC MENU.
- 3 Press the ENTER button.
- 4 Use the UP/DOWN button to select 'ENGLISH'.
 - Select "OTHERS" if the language you want is not listed.
- 5 Press the ENTER button.

- ENGLISH is selected and the screen returns to SETUP MENU.

Setting Up the Language Features

e.g Setting up in ENGLISH.

AUDIO LANGUAGE

- | | |
|-----|------------|
| ▶ 1 | English |
| 2 | Français |
| 3 | Deutsch |
| 4 | Español |
| 5 | Italiano |
| 6 | Nederlands |
| 7 | Original |
| 8 | Others |

RETURN ENTER

Using the Audio Language

- 1 With no disc playing, press the SETUP button.
- 2 Press the UP/DOWN button to move to AUDIO.
- 3 Press the ENTER button.
- 4 Press the UP/DOWN button to select 'ENGLISH'.
 - Select "ORIGINAL" if you want the default soundtrack language to be the original language the disc is recorded in.
 - Select "OTHERS" if the language you want is not listed.
- 5 Press the ENTER button.
 - ENGLISH is selected and the screen returns to SETUP MENU.

e.g Setting up in ENGLISH.

SUBTITLE LANGUAGE

- | | |
|-----|------------|
| ▶ 1 | Automatic |
| 2 | English |
| 3 | Français |
| 4 | Deutsch |
| 5 | Español |
| 6 | Italiano |
| 7 | Nederlands |
| 8 | Others |

RETURN ENTER

Using the Subtitle Language

- 1 With no disc playing, press the SETUP button.
- 2 Use the UP/DOWN button to select SUBTITLE.
- 3 Press the ENTER button.
- 4 Use the UP/DOWN button to select 'ENGLISH'.
 - Select "AUTOMATIC" if you want the subtitle language to be the same as the language selected as the audio preference.
 - Select "OTHERS" if the language you want is not listed. Some discs may not contain the language you select as your initial language; in that case the disc will use its original language setting.
- 5 Press the ENTER button.
 - ENGLISH is selected and the screen returns to SETUP MENU.

NOTE

- If the selected language is not recorded on the disc, the original pre-recorded language is selected.
- **How to make the SETUP MENU disappear or return to menu screen during set up;** Press RETURN button.

Setting Up the Parental Control

The Parental Control function works in conjunction with DVDs that have been assigned a rating - which helps you control the types of DVDs that your family watches. There are up to 8 rating levels on a disc.

PARENTAL CONTROL

1 Use Password ◀▶ No

RETURN ▲▼ ENTER

CREATE PASSWORD

Enter Password

RETURN PRESS 0-9

PARENTAL CONTROL

1 Use Password ◀▶ Yes
2 Rating Level 1
3 Change Password

RETURN ▲▼ ENTER

e.g. Setting up in LEVEL 6

RATING LEVEL

Level 8 Adult
Level 7
Level 6
Level 5
Level 4
Level 3
Level 2
Level 1 Kids Safe

RETURN ▲▼ ENTER

NOTE

- How to make the **SETUP MENU** disappear or return to menu screen during set up; Press RETURN button.
- If you have forgotten your password, see Forgot Password in the Troubleshooting Guide.

Setting Up the Audio Options

AUDIO OPTIONS

1 Digital Output	PCM
2 DTS	Off
3 Dynamic Compression	On
4 2X Scan Audio	Off

RETURN ▲▼

1 With no disc playing, press the SETUP button.

2 Use the UP/DOWN button to select AUDIO OPTIONS. Then press the ENTER button.

3 Use the UP/DOWN button to select the desired item. Then press the LEFT/RIGHT button.

1 DIGITAL OUTPUT

- 1 PCM : Converts to PCM(2CH)
48kHz/16Bit audio. Select PCM when using the Analog Audio Outputs.
- 2 BITSTREAM : Converts to Dolby Digital BITSTREAM (5.1CH).
Select BITSTREAM when using the Digital Audio Output.

NOTE : Be sure to select the correct Digital Output or no audio will be heard.

2 DTS

- 1 ON : Outputs DTS BITSTREAM via digital output only. Select DTS when connecting to a DTS DECODER.
- 2 OFF : Doesn't output digital signal.

3 DYNAMIC COMPRESSION

- 1 ON : To select dynamic compression.
- 2 OFF : To select the standard range.

4 2X SCAN AUDIO

- 1 ON : You can hear sound while searching at 2x speed.
- 2 OFF : Turns 2X audio off.
Though 2X SCAN AUDIO is ON in the SETUP MENU, no sound will be heard on discs which are recorded with LPCM, DTS or MPEG-2.

NOTE

- How to make the **SETUP MENU** disappear or return to menu screen during set up; Press RETURN button.

- Certain audio features of this product manufactured under a license from Desper Products, Inc. Spatializer® and circle-in-square device are trademarks owned by Desper Products, Inc.
- Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. ©1992-1997 Dolby Laboratories Inc. All rights reserved.
- "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

Setting Up the Display Options

DISPLAY OPTIONS	
1 Tv Aspect	Wide
2 Still Mode	Auto
3 Screen Messages	On
4 Front Display	Auto Dim
5 Black Level	Off

1 With no disc playing, press the SETUP button.

2 Use the UP/DOWN button to select DISPLAY OPTIONS. Then press the ENTER button.

3 Use the UP/DOWN button to select the desired item. Then press the LEFT/RIGHT button.

1 TV ASPECT

Depending on the type of television you have, you may want to adjust the screen setting (aspect ratio).

1 4:3 LETTER BOX :

Select when you want to see the total 16:9 ratio screen DVD supplies, even though you have a TV with a 4:3 ratio screen. Black bars will appear at the top and bottom of the screen.

2 4:3 PAN-SCAN :

Select this for conventional size TVs when you want to see the central portion of the 16:9 screen. (Extreme left and right side of movie picture will be cut off.)

3 16:9 WIDE :

You can view the full 16:9 picture on your widescreen TV.

2 STILL MODE

Prevent picture shaking in still mode and display small text clearer.

1 FIELD : Select this feature when the screen shakes in the AUTO mode.

2 FRAME : Select this feature when you want to see small letters more clearly in the AUTO mode.

3 AUTO : When selecting AUTO, FIELD/FRAME mode will be automatically converted.

3 SCREEN MESSAGES

Use to turn on-screen messages on or off.

4 FRONT DISPLAY

Adjust the brightness of the unit's front panel display.

1 BRIGHT : Makes the Front Panel Display bright.

2 DIM : Makes the Front Panel Display dim.

3 AUTO DIM : Makes the Front Panel Display dim automatically when playing a DVD.

5 BLACK LEVEL

Adjusts the brightness of the screen.

NOTE

- How to make the SETUP MENU disappear or return to menu screen during set up; Press RETURN button.

Controlling a TV with the Remote

The remote can also be set up to control most TVs. To program the remote, use the code that corresponds to your brand.



TV Codes	
CODE	BRAND
0	SAMSUNG D
1	SAMSUNG F, LG A, LOEWE, PHILIPS, FINLUX A, YOKO, LOEWE OPTA A, MITSUBISHI A, PHONOLA A, RADIOLA A, SCHNEIDER
2	SAMSUNG A
3	SAMSUNG B
4	SAMSUNG C
5	SAMSUNG E
6	TOSHIBA A
7	PANASONIC A
8	GRUNDIG A, BLAUPUNKT, SIEMENS
9	SHARP A
SETUP	HITACHI A
DISPLAY	SANYO A, AKAI, FISHER
OPEN/CLOSE	HITACH B, SABA A, THOMSON A, NORDMENDE A
AUDIO	THOMSON B, SABA B, TELEFUNKEN A, NORDMENDE B, BRANDT, FERGUSON, PIONEER A, TELEVIA, HITACH C
SUB TITLE	SONY A
DVD POWER	TOSHIBA B, SANYO B, SHARP B, SONY B, MITSUBISHI B
ANGLE	TOSHIBA C, GRUNDIG B, FINLUX B
TOP MENU	TOSHIBA D
MENU	TOSHIBA E
RETURN	PHILIPS A, PHONOLA B, RADIOLA B
REV SEARCH	TOSHIBA F, GRUNDIG C, CGE, IMPERIAL, MIVAR
REPEAT	SABA C, BANG&OLUFSEN, LOEWE OPTA B, BRIONVEGA, FINLUX C, FORMENTI, PHILIPS B, SINGER, SINUDYNE, METZ, WEGA, PHONOLA C, RADIOMARELLI
FWD SEARCH	NOKIA, PANASONIC B, SABA D, PIONEER B, REX, SELECO, SALORA
BACK SKIP	HITACHI D, NORDMENDE C, PANASONIC C, THOMSON C, SABA E, TELEFUNKEN B, CONTINENTAL EDISON
PLAY/PAUSE	PANASONIC D
NEXT SKIP	PANASONIC E
STOP	PANASONIC F
STEP	TELEFUNKEN C
CLEAR	MIVAL
MODE	LG B
A-B REPEAT	SHARP C
BOOKMARK	JVC

- 1 Turn on the TV
- 2 Point the DVD's remote at the TV.
- 3 While holding the TV POWER button down, enter the code for your brand.

e.g For Samsung D TVs

While holding down the TV button, enter 0.

- 4 If the TV turns off, setup is complete.

Enter other codes of the same brand if the first code does not work.


- 5 To operate the TV, use the "TV Function Buttons" described on page 13.

NOTE

The remote may not be able to control every model TV of the brands listed.

Troubleshooting Guide

Before requesting service (troubleshooting)

Problem	Action	Page
No operations can be performed with remote.	<ul style="list-style-type: none"> Check the batteries in the remote. May need replacing. Operate the remote control at a distance of no more than 20 feet. Remove batteries and hold down one or more buttons for several minutes to drain the microprocessor inside the remote to reset it. Reinstall batteries and try remote again. 	P4
Disc does not play.	<ul style="list-style-type: none"> Ensure that the disc is installed with the label side facing up. Check the region number of the DVD. This player cannot play CD-ROMs, DVD-ROMs, etc. Insert a DVD, a VIDEO-CD or a CD. 	P8
5.1 channel sound is not being reproduced.	<ul style="list-style-type: none"> 5.1 channel sound is reproduced only when the following conditions are met. : <ol style="list-style-type: none"> The DVD player is connected with the proper amplifier The disc is recorded with 5.1 channel sound. Check whether the disc being played has the "Dolby 5.1 ch" mark on the outside. Check if your audio system is connected and working properly. 	P14-15
The  icon appears on screen.	<ul style="list-style-type: none"> The features or action cannot be completed at this time because: <ol style="list-style-type: none"> The DVD's software restricts it. The DVD's software doesn't support the feature (e.g., angles). The feature is not available at the moment. You've requested a title or chapter number or search time that is out of range. 	P19-22 P25-29
Disc Menu doesn't appear.	<ul style="list-style-type: none"> Check if the disc has a Menu. 	P24-25
Playback mode differs from the Setup Menu selection.	<ul style="list-style-type: none"> Some of the functions selected in the Setup Menu may not work properly if the disc is not encoded with the corresponding function. 	P29-34
The screen ratio cannot be changed.	<ul style="list-style-type: none"> The Screen Ratio is fixed on your DVDs. 	P34
No audio.	<ul style="list-style-type: none"> Make sure you have selected the correct Digital Output in the Audio Options Menu. 	P33
Forgot password	<ul style="list-style-type: none"> Press Power On from a "Cold Start" with no disc in the unit. Press the STOP and PLAY buttons simultaneously on the front panel for three seconds. The Select Menu Language display will appear. Select the desired language button. Press the SETUP button on the remote control to select the Parental Mode. The Parental Mode is now unlocked as indicated on the display. Press the DOWN button to select Parental. You can now set your Rating Level and change your password to a new number. 	P32
If you experience other problems.	<ul style="list-style-type: none"> Go to the contents and find the section of the instruction book that contains the explanations regarding the current problem, and follow the procedure once again. If the problem still cannot be solved, please contact your nearest authorized service center. 	

Specifications

General	Power Requirements	AC 120 V, 60 Hz
	Power Consumption	20 W
	Weight	15.4 lbs
	Dimensions	W 16.9 in x D 16.1 in x H 4.3 in
Disc	Operating Temperature Range	+41°F to +95°F
	Operating Humidity Range	10 % to 75 %
	DVD (DIGITAL VERSATILE DISC)	Reading Speed : 11.45 ft/sec. Approx. Play Time (Single Sided, Single Layer Disc) : 135 min. Reading Speed : 3.9 to 4.6 ft/sec. Maximum Play Time : 74 min.
	CD : 5" (COMPACT DISC) CD : 3 1/2" (COMPACT DISC) VCD : 5"	Reading Speed : 3.9 to 4.6 ft/sec. Maximum Play Time : 20 min. Reading Speed : 3.9 to 4.6 ft/sec. Maximum Play Time : 74 min. (Video + Audio)
Video Output	Composite Video	2 channel : 1.0 Vp-p (75 Ω load) Y : 1.0 Vp-p (75 Ω load)
	Component Video	Pr : 0.70 Vp-p (75 Ω load) Pb : 0.70 Vp-p (75 Ω load) Luminance Signal : 1.0 Vp-p (75 Ω load)
	S-VIDEO	Chrominance Signal : 0.286 Vp-p (75 Ω load)
Audio Output	2 Channel	L(1/L), R(2/R) 48 kHz Sampling : 4 Hz to 22 kHz 96 kHz Sampling : 4 Hz to 44 kHz
	*Frequency Response	110 dB
	*S/N Ratio	100 dB
	*Dynamic Range	0.003 %
	*Total Harmonic Distortion	

*: Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.

Warranty (for USA users only)

LIMITED WARRANTY TO ORIGINAL PURCHASER

This SAMSUNG brand product, as supplied and distributed by SAMSUNG ELECTRONICS AMERICA, INC. (SAMSUNG) and delivered new, in the original carton to the original consumer purchaser, is warranted by SAMSUNG against manufacturing defects in materials and workmanship for the following limited warranty period:

One (1) Year Parts and Labor

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the United States, and does not include transportation, installation, removal or reinstallation. Warranty repairs must be performed by SAMSUNG's authorized service center. To receive warranty service, the original dated bill of sale must be presented upon request as proof of purchase to SAMSUNG or SAMSUNG's authorized service center. Transportation to and from the service center is the responsibility of the purchaser.

SAMSUNG will repair or replace this product, at our option and at no charge with new or reconditioned parts, if found to be defective during the limited warranty period specified above. The product must be returned during the warranty period with transportation charges prepaid to SAMSUNG's designated service center. Prior to returning any product for warranty service, the purchaser must contact SAMSUNG for problem determination and service procedures. SAMSUNG does not warrant uninterrupted or error-free operation of the product. All replaced parts and products become the property of SAMSUNG and must be returned to SAMSUNG. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, noncommercial use of this product and shall not apply to the following, including, but not limited to: damage which occurs in shipment; applications and uses for which this product was not intended; failures or problems which are caused by products or equipment not supplied by SAMSUNG; accidents, misuse, abuse, neglect, misapplication, fire, water, lightning or other acts of nature; incorrect electrical line voltage, fluctuations or surges; damage caused by improper or faulty installation; improper connection with any peripheral; product alteration or modification; improper or unauthorized repair; cosmetic damage or exterior finish; product with altered serial numbers; failure to follow operating instructions, customer adjustments, maintenance and environmental instructions that are covered and prescribed in the instruction book; use of non-SAMSUNG or unauthorized parts, supplies, accessories or equipment which damage this product or result in service problems; failures or problems due to incompatibility with other equipment.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG. SAMSUNG SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT,

REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY SAMSUNG NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF SAMSUNG. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To obtain warranty service, please contact SAMSUNG at:

SAMSUNG ELECTRONICS AMERICA, INC. - CONSUMER ELECTRONICS CUSTOMER SERVICE
1 SAMSUNG PLACE, LEDGEWOOD, NJ 07852
Tel: 973-691-6200, Fax: 973-691-6201
1-800-SAMSUNG (1-800-726-7864)
www.sosimple.com

Warranty (for Canada users only)

LIMITED WARRANTY TO ORIGINAL PURCHASER

Samsung Electronics Canada Inc.(SECA), warrants that this product is free from defective material and workmanship.

SECA further warrants that if this product falls to operate properly within the specified warranty period and the failure is due to improper workmanship or defective materials, SECA will repair or replace the product at its option.

All warranty repairs must be performed by a SECA Authorized Service Center. (The name and address of the location nearest you can be obtained by calling toll free: 1- 800- SAM-SUNG)

LABOR

One year (Carry- in)

PARTS

One year

On carry-in models, transportation to and from the service center is the customer's responsibility.

The original dated sales receipt must be retained by the customer and is the only acceptable proof of purchase. It must be presented to the authorized service center at the time service is requested.

EXCLUSIONS (WHAT IS NOT COVERED)

This warranty does not cover damage due to accident, fire, flood and/ or other acts of God; misuse, incorrect line voltage, improper installation, improper or unauthorized repairs, commercial use or damage that occurs in shipping. Exterior and interior finish, lamps, glass are not covered under this warranty. Customer adjustments which are explained in the instruction manual are not covered under the terms of this warranty. This warranty will automatically be voided for any unit found with a missing or altered serial number. This warranty is valid only on products purchased and used in Canada.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>