

SAMSUNG

SP42Q2HL

SP47Q2HL

SP52Q2HL

SP54T8HL

SP43Q5HL

SP47Q5HL

PROJECTION TELEVISION

→ **Owner's
Instructions**

Register your product at www.samsung.com/global/register

Download from Www.Somanuals.com. All Manuals Search And Download.

Important Warranty Information Regarding Television Format Viewing

Standard screen format televisions (4:3, the aspect ratio of the screen width to height) are primarily designed to view standard format full-motion video. The images displayed on them should primarily be in the standard 4:3 ratio format and constantly moving. Displaying stationary graphics and images on screen, such as the dark top and bottom letterbox bars (wide screen pictures), should be limited to no more than 15% of the total television viewing per week.

Wide screen format televisions (16:9, the aspect ratio of the screen width to height) are primarily designed to view wide screen format full-motion video. The images displayed on them should primarily be in the wide screen 16:9 ratio format, or expanded to fill the screen if your model offers this feature, and constantly moving. Displaying stationary graphics and images on screen, such as the dark side-bars on non-expanded standard format television video and programming, should be limited to no more than 15% of the total television viewing per week.

Additionally, viewing other stationary images and text such as stock market reports, video game displays, station logos, web sites or computer graphics and patterns, should be limited as described above for all televisions. ***Displaying any stationary images that exceed the above guidelines can cause uneven aging of picture tubes (CRTs) that leave subtle, but permanent burned-in ghost images in the television picture. To avoid this, vary the programming and images, and primarily display full screen moving images, not stationary patterns or dark bars.*** On television models that offer picture sizing features, use these controls to view the different formats as a full screen picture.

Be careful in the selection and duration of television formats used for viewing. Uneven CRT aging as a result of format selection and use, as well as other burned-in images, is not covered by your Samsung limited warranty.

Chapter 1: Your New Digital TV	5
List of Features	5
Accessories	5
Familiarizing Yourself with Your New TV	6
Control Buttons	6
Connection Jacks (Side or Front)	7
Connection Jacks (Rear)	8
Remote Control	9
 Chapter 2: Installation	 10
Connecting VHF and UHF Antennas	10
Antennas with 300-ohm Flat Twin Leads	10
Antennas with 75-ohm Round Leads	11
Separate VHF and UHF Antennas	11
Connecting Cable TV	12
Cable without a Cable Box	12
Cable with a Cable Box that Descrambles All Channels	12
Connecting to a Cable Box that Descrambles some Channels	13
Connecting a VCR	14
Connecting a Second VCR to Record from the TV	14
Connecting a DVD Player	15
Connecting to Y, P _B , P _R	15
Connecting to Regular Audio and Video Jacks	15
Connecting a Digital TV Set-Top Box	16
Connecting to Y, P _B , P _R	16
Connecting a Camcorder	16
Installing Batteries in the Remote Control	17
 Chapter 3: Operation	 18
Turning the TV On and Off	18
Plug & Play Feature	18
Viewing the Menus and On-Screen Displays	20
Viewing the Menus	20
Viewing the Display	20
Selecting a Menu Language	21
Adjusting the Screen Automatically (Self Focus)	22
Deactivating the Automatic Execution of the Self Focus	23
Removing the "Self Focus" Message from the Display	23
Adjusting Convergence Manually	24
Memorizing the Channels	26
Selecting the Video Signal Source	26
Storing Channels in Memory (Automatic Method)	27
Adding and Erasing Channels	28
Changing Channels	29
Using the Channel Buttons	29
Using the Number Buttons	29
Using the Previous Channel	29
Selecting Your Favorite Channels	30
To Store Your Favorite Channels	30
To View Your Favorite Channels	30
Labeling the Channels	31

Chapter 3: Operation (continued)	32
Picture Control	32
Customizing the Picture	32
Using Automatic Picture Settings	33
Sound Control.....	34
Adjusting the Volume.....	34
Using the MUTE Button.....	34
Customizing the Sound	34
Using Automatic Sound Settings	35
Setting the Clock.....	36
Viewing an External Signal Source	37
Setting the Signal Source	37
Assigning Names to External sources	38
 Chapter 4: Special Features	 39
Fine Tuning Channels	39
Changing the Screen Size (Wide Mode)	40
Changing the Screen Size (4:3 Mode)	41
Digital Noise Reduction	42
Selecting the Color Tone	43
Setting the Blue Screen Mode	44
Freezing the Picture	44
Choosing a Multi-Channel Sound (MTS) track	45
Auto Volume	46
Setting The On/Off Melody	46
BBE	47
Viewing Closed Caption Information	48
Setting the On/Off Timer.....	50
Setting the Sleep Timer	51
Customizing Your Remote Control	52
Setting Up Your Remote Control to Operate Your VCR (Cable box or DVD player).....	52
Remote Control Codes	53
 Chapter 5: Troubleshooting	 54
Identifying Problems	54
 Appendix	 55
Cleaning and Maintaining Your TV	55
Using Your TV in Another Country.....	55
Specifications	55

Chapter One

YOUR NEW TV

 
List of Features

Your TV was designed with the latest technology. This TV is a high-performance unit that includes the following special features:

- Easy-to-use remote control
- Easy-to-use on-screen menu system
- Automatic timer to turn the TV on and off
- Adjustable picture and sound settings that can be stored in the TV's memory
- Automatic channel tuning for up to 181 channels
- A special filter to reduce or eliminate reception problems
- Fine tuning control for the sharpest picture possible
- A built-in multi-channel sound decoder for stereo and bilingual listening
- Built-in, dual channel speakers
- A special sleep timer
- Component Video Input jacks to obtain a sharper image from external sources
- Adjusting the Screen Automatically (Self Focus)

Accessories


Once you have unpacked your TV, check to make sure that you have all the parts shown here. If any piece is missing or broken, call your dealer.

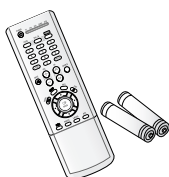

Remote Control/
AAA Batteries



 Holder-Caster
(SP52Q2HL/SP54T8HL)




Owner's Instructions/
Safety Guide Manual

Familiarizing Yourself with Your New TV

Control Buttons

You can control your TV's basic features, including the on-screen menu. To use the more advanced features, you must use the remote control.

 - The actual configuration on your TV may be different, depending on your model.

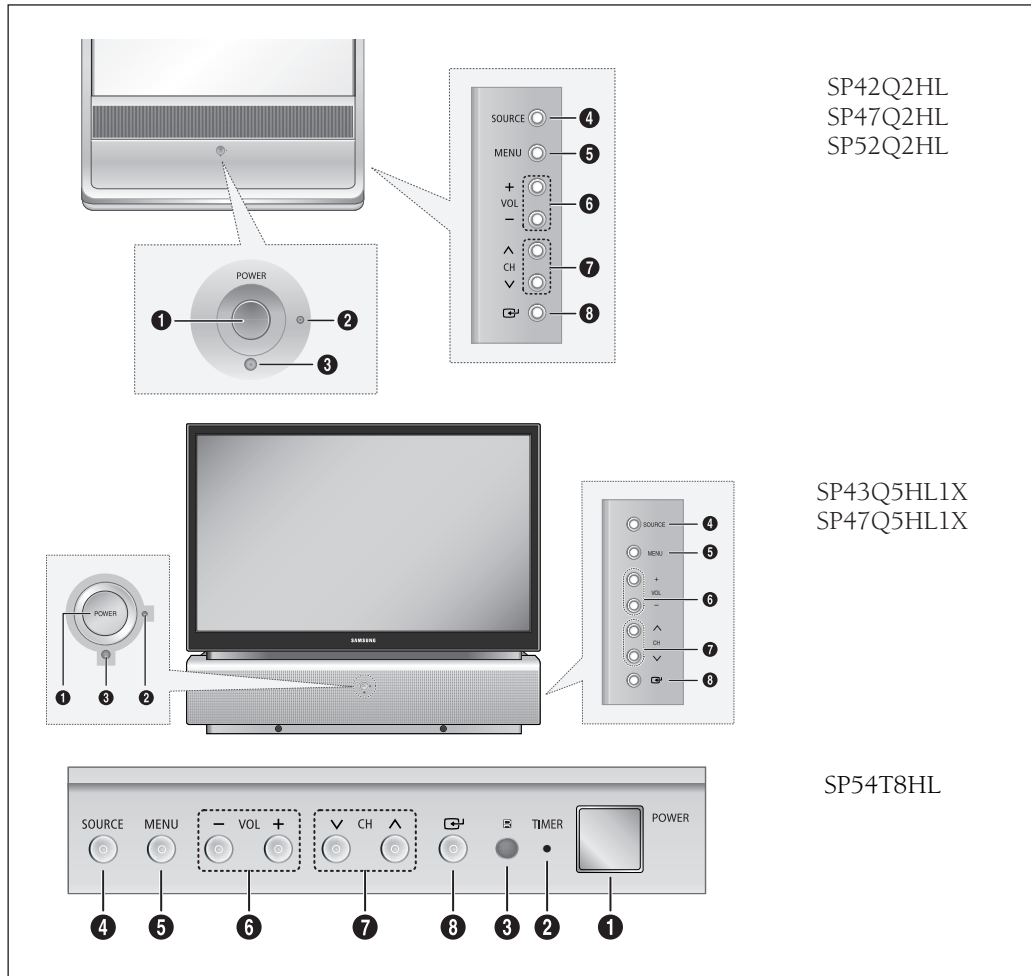

1 POWER

Press to turn the TV on and off.

2 Stand-By Indicator

Lights up when you turn the power off.

- Power Off ; Red
- Power On ; Off
- Timer On ; Green

3 Remote Control Sensor

Aim the remote control towards this spot on the TV.

4 SOURCE

Press to switch between viewing TV programs and signals from connected components.

5 MENU

Press to see an on-screen menu of your TV's features.

6 + VOL -

Press to lower or raise the volume and to select items when using the on-screen menu.

7 ^ CH v

 
Press to change channels and move between items on the on-screen menu.

8 (Enter)

While using the on-screen menus, press to activate (or change) a particular item.

Connection Jacks (Side or Front)


You can connect an A/V component that is used only occasionally, such as a camcorder or video game. For information on connecting equipment, see page 16.

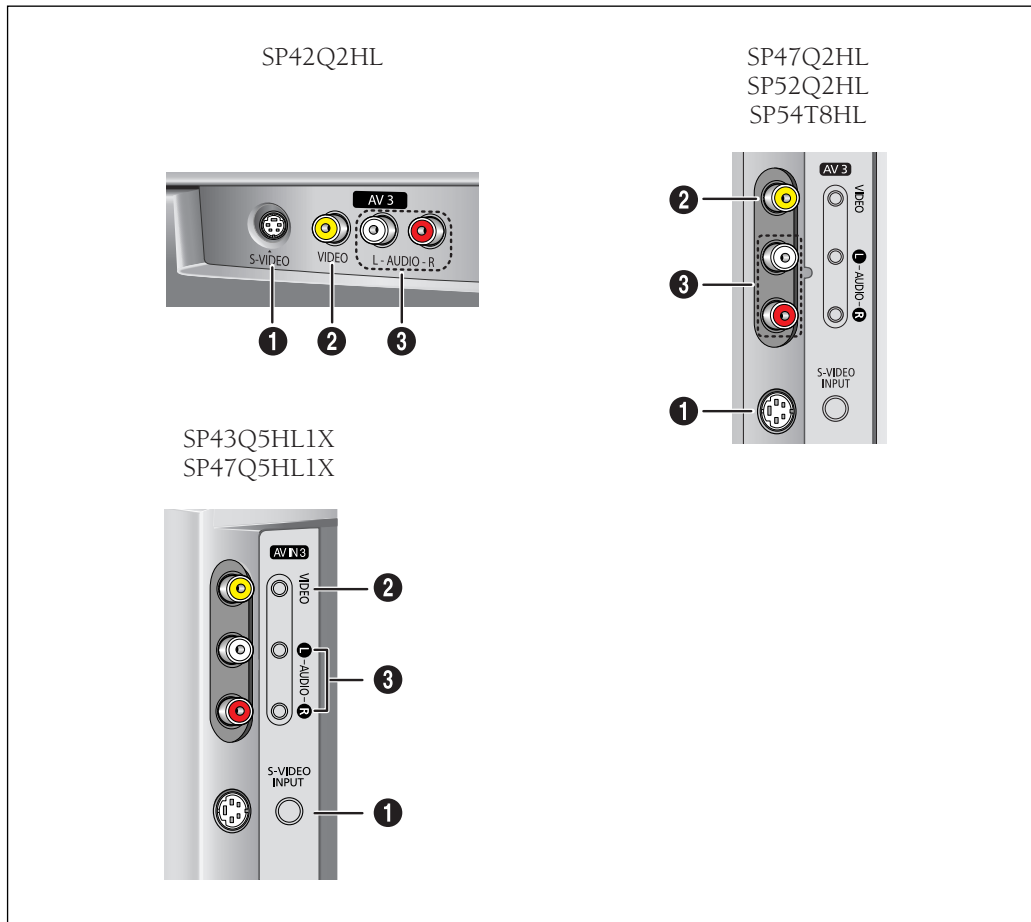

- 1 S-VIDEO Input**
Connect an S-Video signal from a camcorder or video game.
- 2 VIDEO Input**
Connect the video signal from a camcorder or video game.
- 3 AUDIO Input**
Connect the audio signals from a camcorder or video game.

Connection Jacks (Rear)

 Use the rear panel jacks to connect an A/V component that will be connected continuously, such as a VCR or a DVD player. For more information on connecting equipment, see pages 10~16.

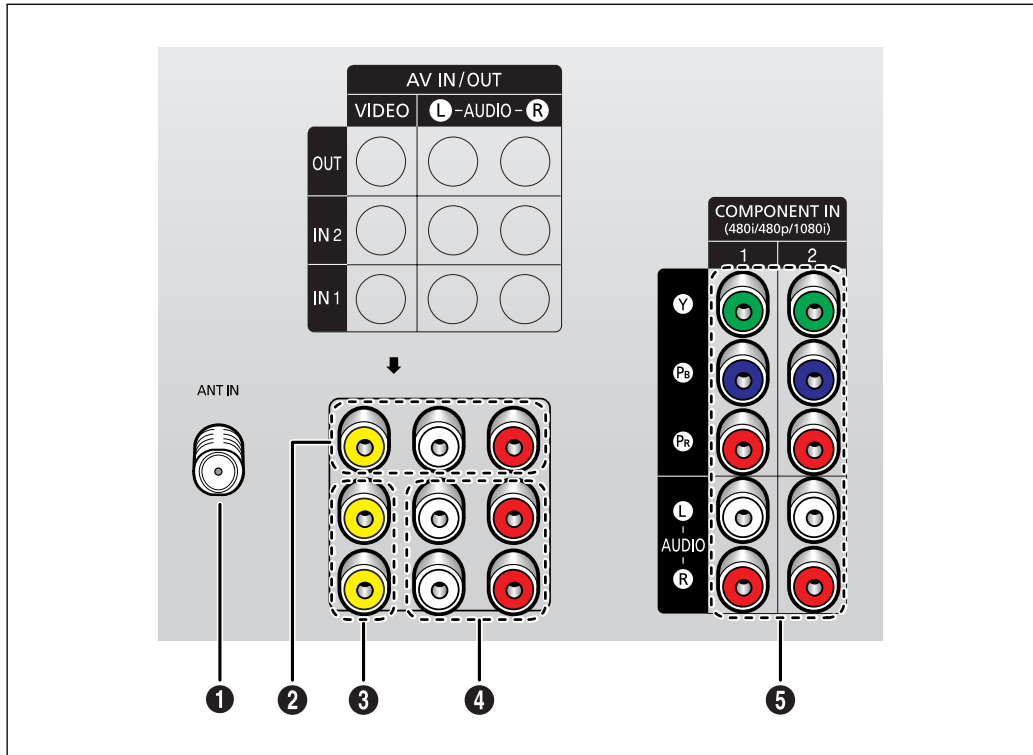

1 Antenna terminal

Connect to an antenna or a cable TV system.

2 Audio/Video Output jacks

Connect to the audio/video input jacks of a recording VCR.

3 Video Input jacks

Connect to the video output jacks of VCRs, DVD players and similar devices

4 Audio Input jacks

Connect to the audio output jacks of VCRs, DVD players and similar devices.

5 COMPONENT Input jacks (Y, Pb, Pr, AUDIO-L/R)

Connect to the audio and video outputs of DVD or DTV Set-Top Box. 480i/480p/1080i Y,Pb and Pr video signal outputs are available.

Remote Control

You can use the remote control up to about 23 feet from the TV. When using the remote control, always point it directly at the TV. You can also use your remote control to operate your VCR, DVD, Cable box, and some Samsung Set-top boxes. See pages 52~53 for details.

1 POWER

Turns the TV on and off.

2 P.SIZE

Press to change the picture size.

3 FAV. CH (Favorite Channel)

Press to switch between your favorite channels.

4 Number buttons

Press to select channels directly on the TV.

5 +100

Press to select channels over 100. For example, to select channel 121, press the "+100", then press the "2" and "1".

6 MUTE

Press to temporarily cut off the sound.

7 VOL +, VOL -

Press to increase or decrease the volume.

8 SLEEP

Press to select a preset time interval for automatic shut off.

9 MENU

Displays the main on-screen menu.

10 STILL (Main picture)

Press to stop the action during a particular scene. Press again to resume normal video. The still function doesn't operate in "Component1" or "Component2" mode.

11 P.MODE


Adjust the TV picture by selecting one of the preset factory settings (or select your personal, customized picture settings).

12 BBE

BBE is a built-in effect that adds clarity, punch and dynamics to the sound.

13 ADD/DEL

 Press to add or erase channels in the TV's memory. Use to memorize or erase the fine tuning after fine tuning channels.

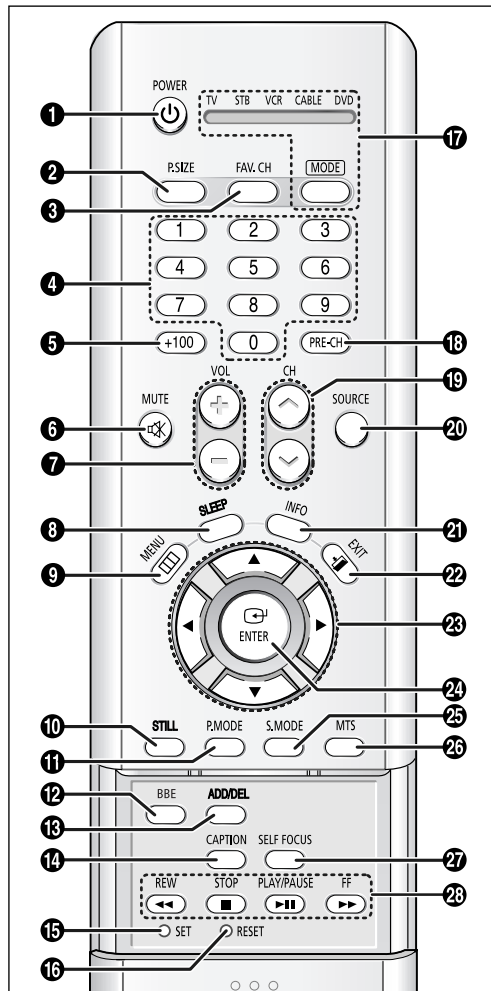

17 MODE

Selects a target device to be controlled by this remote control (i.e., TV, STB, VCR, CABLE or DVD).

18 PRE-CH

Tunes to the previous channel.

19 CH^, CHv

Press to change channels.

20 SOURCE

Each time the button is pressed, all the inputs connected to the external component jacks will be shown in regular sequence.

21 INFO

Press to display information on the TV screen.

22 EXIT

Press to exit the menu.

23 ◀/▶/▼/▲

Control the cursor in the menu.

24 ENTER

While using the on-screen menus, press ENTER to activate (or change) a particular item.

25 S.MODE

Adjust the TV sound by selecting one of the preset factory settings (or select your personal, customized sound settings).

26 MTS (Multichannel Television Sound)

Press to choose "Stereo", "Mono" or "SAP (Secondary Audio Program)".

27 SELF FOCUS

Press to adjust for the optimum picture set in the factory.

28 VCR/DVD Controls

Controls VCR/DVD functions: Rewind, Stop, Play/Pause, Fast Forward.

14 CAPTION

Press to view closed caption information.

15 SET

Used during set up of this remote control, so that it will work compatibly with other devices (some Samsung Set-top boxes, VCR, Cable box, DVD, etc.)

16 RESET

If your remote control is not functioning properly, take out the batteries and press the **RESET** button for about 2~3 seconds. Re-insert the batteries and try using the remote control again.

Chapter Two

INSTALLATION

Connecting VHF and UHF Antennas

If your antenna has a set of leads that look like this, see “Antennas with 300-ohm Flat Twin Leads,” below.



If your antenna has one lead that looks like this, see “Antennas with 75-ohm Round Leads,” on next page.



 
If you have two antennas, see “Separate VHF and UHF Antennas,” on next page.

Antennas with 300-ohm Flat Twin Leads

If you are using an off-air antenna (such as a roof antenna or “rabbit ears”) that has 300-ohm twin flat leads, follow the directions below.


1

Place the wires from the twin leads under the screws on the 300-75 ohm adapter (not supplied). Use a screwdriver to tighten the screws.

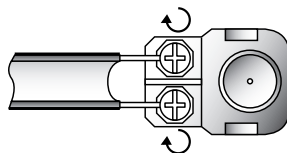

2

 
Plug the adapter into the “ANT IN” terminal on the rear panel.

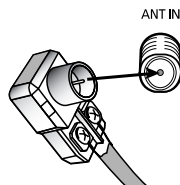

INSTALLATION

Antennas with 75-ohm Round Leads

 Plug the antenna lead into the "ANT IN" terminal on the rear panel.

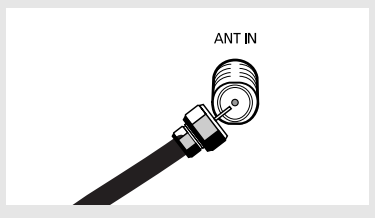


Separate VHF and UHF Antennas

If you have two separate antennas for your TV (one VHF and one UHF), you must combine the two antenna signals before connecting the antennas to the TV. This procedure requires an optional combiner-adaptor (available at most electronics shops).


1

 Connect both antenna leads to the combiner.

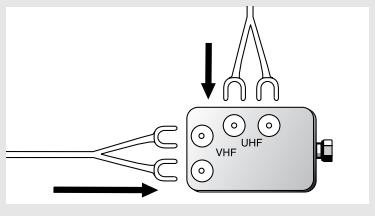

2

 Plug the combiner into the "ANT IN" terminal on the rear panel.

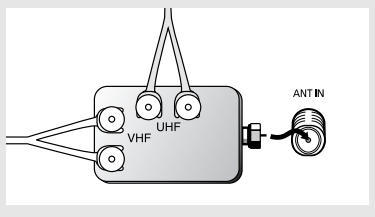


Connecting Cable TV

You can connect different cable systems to your TV, including cable without a cable box, and cable with a cable box that descrambles some or all channels.

Cable without a Cable Box

If you want to connect cable, and you do not need to use a cable box:

 
Plug the incoming cable into the "ANT IN" terminal on the rear panel.

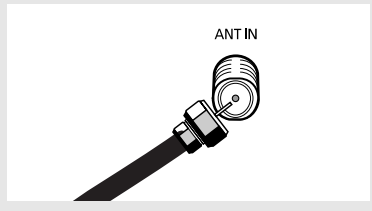

Cable with a Cable box that Descrambles All Channels

1

 
Find the cable that is connected to the ANTENNA OUT terminal on your cable box.

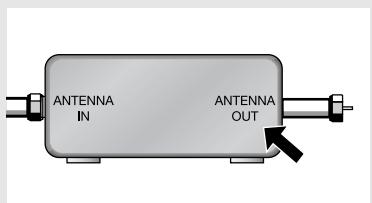

◀ This terminal might be labeled "ANT OUT", "VHF OUT", or simply "OUT".

2

 Connect the other end of this cable to the "ANT IN" terminal on the rear panel.

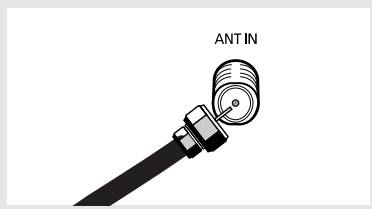


Connecting to a Cable Box that Descrambles Some Channels

If your cable box descrambles only some channels (such as premium channels), follow the instructions below. You will need a two-way splitter, an RF (A/B) switch, and four lengths of coaxial cable. (These items are available at most electronics stores.)

1

 
Find and disconnect the cable that is connected to the ANTENNA IN terminal on your cable box.



◀ This terminal might be labeled “ANT IN”, “VHF IN”, or simply “IN”.


2

 Connect this cable to a two-way splitter. Connect a coaxial cable between an OUTPUT terminal on the splitter and the IN terminal on the cable box.

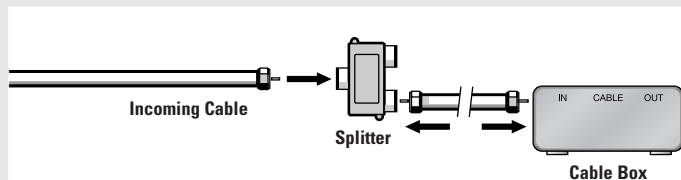


3

 Connect a coaxial cable between the ANTENNA OUT terminal on the cable box and the B-IN terminal on the A/B switch.

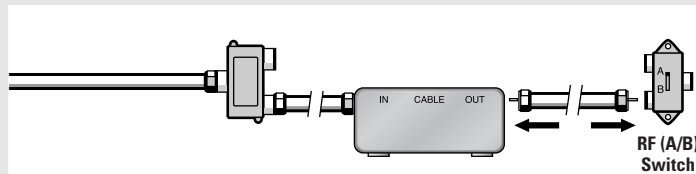


4

 Connect another cable between the other OUT terminal on the splitter and the A-IN terminal on the RF (A/B) switch.

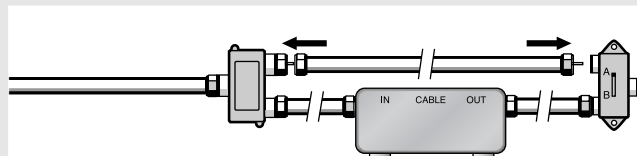

5

 Connect the last coaxial cable between the OUT terminal on the RF (A/B) switch and the “ANT IN” terminal on the rear panel.

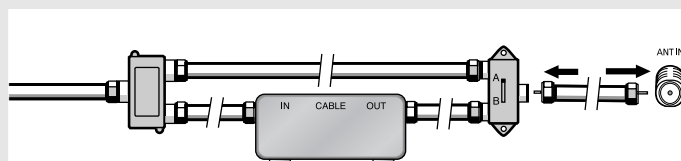

After you've made this connection, set the A/B switch to the “A” position for normal viewing. Set the A/B switch to the “B” position to view scrambled channels. (When you set the A/B switch to “B,” you will need to tune your TV to the cable box's output channel, which is usually channel 3 or 4.)

Connecting a VCR

These instructions assume that you have already connected your TV to an antenna or a cable TV system (according to the instructions on pages 10~13). Skip step **1** if you have not yet connected to an antenna or a cable system.

1

Connect a coaxial cable between the "ANT IN" terminal on the TV and the ANTENNA OUT terminal on the VCR.

A coaxial cable is usually included with a VCR. (If not, check your local electronics store).

2

 
Connect a set of audio cables between the "AV IN 1 (L, R)" (or "AV IN 2 (L, R)") jacks on the TV and AUDIO OUT jacks on the VCR.

If you have a mono VCR, connect L(mono) to VCR audio out using only one audio cable.

3

Connect a video cable between the "AV IN 1 (VIDEO)" (or "AV IN 2 (VIDEO)") jack on the TV and the VIDEO OUT jack on the VCR.

Follow the instructions in "Viewing a VCR or Camcorder Tape" to view your VCR tape.

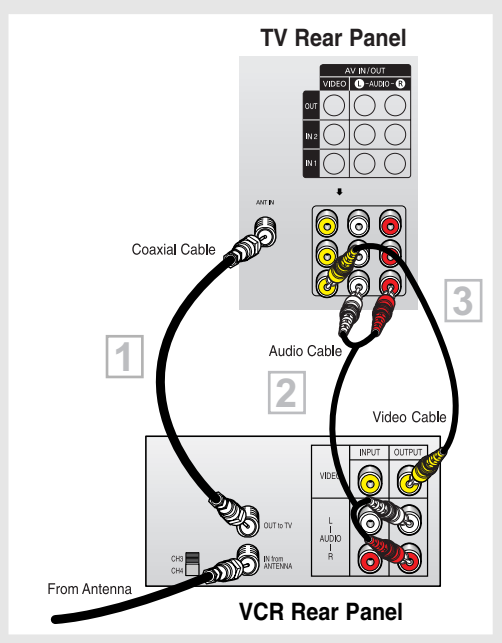

- Also, you can connect to "AV 3" on the side panel of TV.

Connecting a Second VCR to Record from the TV

Your TV can send out signals of its picture and sound to be recorded by a second VCR. To do this, connect your second VCR as follows:

1

 
Connect a set of audio cables between the "AV OUT (L, R)" jacks on the TV and the AUDIO IN jacks on the VCR.

(The VCR input jacks might be either on the front or rear of the VCR.)

2

Connect a video cable between the "AV OUT (VIDEO)" jack on the TV and the VIDEO IN jack on the VCR.

Refer to your VCR's instructions for more information about how to record using this kind of connection.

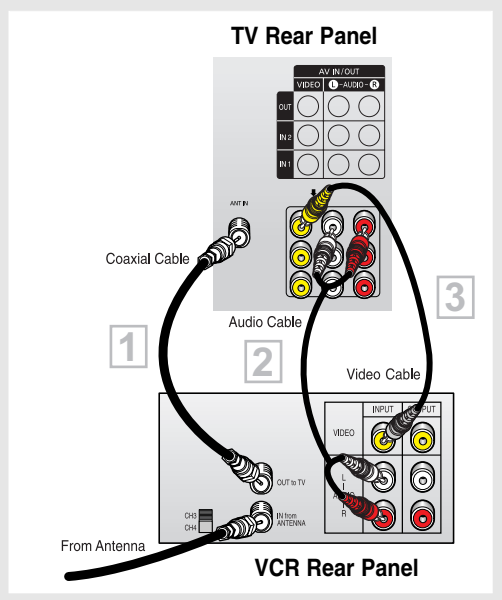

Connecting a DVD Player

The rear panel jacks on your TV make it easy to connect a DVD player to your TV.

Connecting to Y, P_B, P_R

1

 
Connect a set of audio cables between the "COMPONENT IN 1 (L, R)" (or "COMPONENT IN 2 (L, R)") jacks on the TV and the AUDIO OUT jacks on the DVD player.

2

Connect a set of video cables between the "COMPONENT IN 1 (Y, P_B, P_R)" (or "COMPONENT IN 2 (Y, P_B, P_R)") jacks on the TV and the VIDEO OUT (Y, P_B, P_R) jacks on the DVD player.

For an explanation of Component video, see your DVD player's owner's instruction.

TV Rear Panel

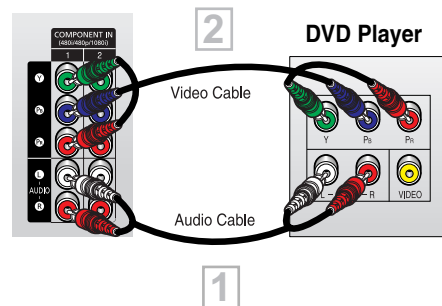

Connecting to Regular Audio and Video Jacks

 
1

Connect a set of audio cables between the "AV IN 1 (L, R)" (or "AV IN 2 (L, R)") jacks on the TV and the AUDIO OUT jacks on the DVD player.

2

Connect a video cable between the "AV IN 1 (VIDEO)" (or "AV IN 2 (VIDEO)") jack on the TV and the VIDEO OUT jack on the DVD player.

TV Rear Panel

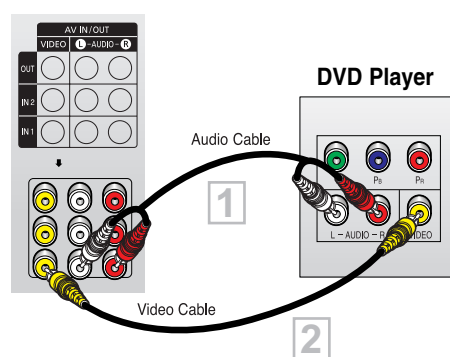

- Also, you can connect to "AV 3" on the side panel of TV.

Connecting a Digital TV Set-Top Box

The rear panel jacks on your TV make it easy to connect a Set-Top Box to your TV.

Connecting to Y, P_B, P_R

 
1

Connect a set of audio cables between the "COMPONENT IN 1 (L, R)" (or "COMPONENT IN 2 (L, R)") jacks on the TV and the AUDIO OUT jacks on the Set-Top Box.

2

Connect a set of video cables between the "COMPONENT IN 1 (Y, P_B, P_R)" (or "COMPONENT IN 2 (Y, P_B, P_R)") jacks on the TV and the VIDEO OUT (Y, P_B, P_R) jacks on the Set-Top Box.

For detailed information, refer to the Set-Top Box instruction manual.

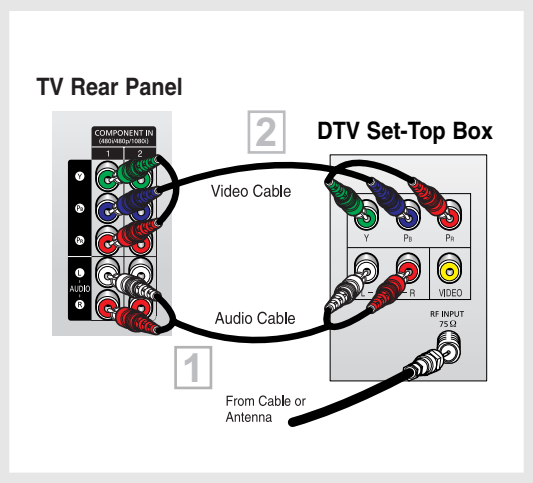

Connecting a Camcorder

The side panel jacks on your TV make it easy to connect a camcorder to your TV. They allow you to view the camcorder tapes without using a VCR. (Also see "Viewing an External Signal Source" on page 37.)

1

Locate the A/V output jacks on the camcorder. They are usually found on the side or rear of the camcorder.

 
2

Connect a set of audio cables between the "AV 3 (L, R)" jacks on the TV and the AUDIO OUT jacks on the camcorder. If you have mono camcorder, connect L(mono) to camcorder audio out using only one audio cable.

3

Connect a video cable between the "AV 3 (VIDEO)" (or "S-VIDEO") jack on the TV and the VIDEO OUT jacks on the camcorder.

The audio-video cables shown here are usually included with a Camcorder. (If not, check your local electronics store.) If your camcorder is stereo, you need to connect a set of two cables.

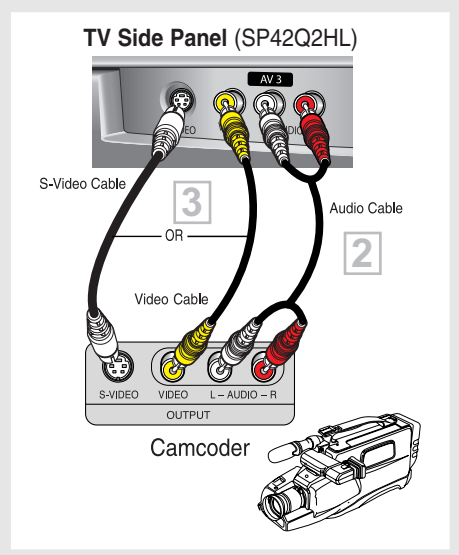


- This figure shows the Standard connector-jack panel. The actual configuration for your TV may be different.

Installing Batteries in the Remote Control


1

 Slide the back cover all the way out to open the battery compartment of the remote control.

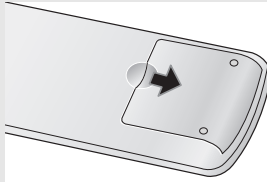

2

 
Install two AAA size batteries.

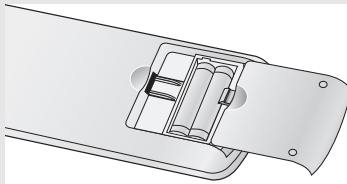

◀ Make sure to match the “+” and “-” ends of the batteries with the diagram inside the compartment.

3

 Replace the cover.

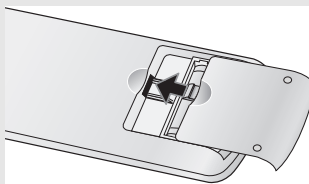

◀ Remove the batteries and store them in a cool, dry place if you won't be using the remote control for a long time. (Assuming typical TV usage, the batteries last for about one year.)

- The remote control can be used up to about 23 feet from the TV.

Chapter Three

OPERATION

Turning the TV On and Off

Press the **POWER** button on the remote control.
You can also use the **POWER** button on the front panel.

Plug & Play Feature

When the TV is initially powered On, basic customer settings proceed automatically and subsequently as below.

1

 
Press the **POWER** button on the remote control.
The "Start Plug & Play." is displayed.
Press the **ENTER** button to start.



◀ Plug & Play feature doesn't work when in the A/V mode.

2

The "Language" menu is displayed.
Press the **ENTER** button to select "Language".
Press the **▲** or **▼** button to select the appropriate language, then press the **ENTER** button.

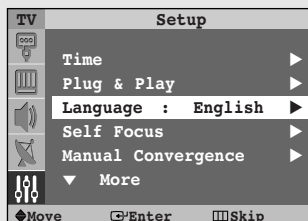

3

 
 
The "Air/CATV" menu is displayed.
Press the **ENTER** button to select "Air/CATV".
Press the **▲** or **▼** button to select the video signal source, then press the **ENTER** button.



4

The "Check antenna input" is displayed.
Make sure that the antenna is connected to the TV.


Press the **ENTER** button to start the auto program.
The "Auto Program" menu is displayed.
The TV begins memorizing all of the available stations.

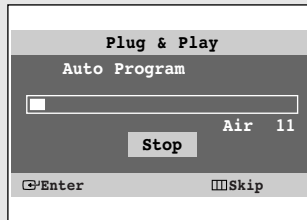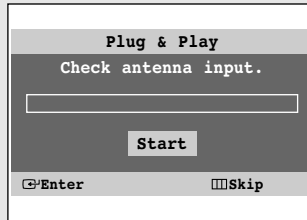

◀ For details, see page 27.

5

 When it has finished, the "Time" menu is displayed.
Set the clock.

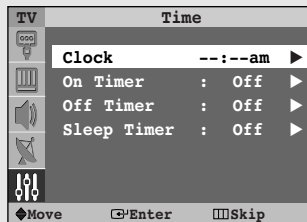

◀ For details, see page 36.

6

When you have finished, press the **MENU** button.
The message "Enjoy your watching." is displayed.



7

If you want to reset this feature:
Press the **MENU** button.
Press the **▲** or **▼** button to select "Setup", then press the **ENTER** button.
Press the **▲** or **▼** button to select "Plug & Play", then press the **ENTER** button.
The message "Start Plug & Play." is displayed.



Viewing the Menus and On-Screen Displays

Viewing the Menus

 
1

Press the **MENU** button.
The main menu is displayed.
There are five menu groups: "Input",
"Picture", "Sound", "Channel" and
"Setup".



2

Press the **▲** or **▼** button to move to
an item you want in the menu.
Press the **◀** or **▶** button to display,
change or use the selected items.
Press the **ENTER** button to enter
items in the menu.

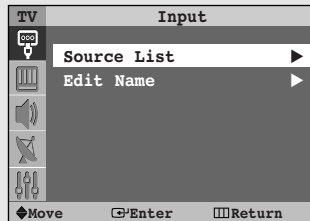


3

Press the **EXIT** button to exit.

◀ You can also use the **MENU**,
CH▲/▼, **VOL+/-** and
ENTER buttons on the
control panel of the TV to
make selections.

Viewing the Display

 Press the **INFO** button on the remote
control.
The TV displays the current channel,
the status of certain picture and
sound settings and the current time.

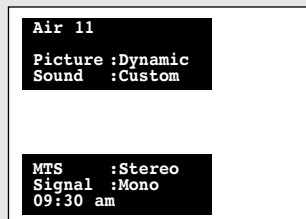

Selecting a Menu Language

1

Press the **MENU** button.
Press the **▲** or **▼** button to select "Setup", then press the **ENTER** button.



2

Press the **▲** or **▼** button to select "Language", then press the **ENTER** button.

Press the **▲** or **▼** button to select the appropriate language, then press the **ENTER** button.

Press the **EXIT** button to exit.



Adjusting the Screen Automatically (Self Focus)

The “Self Focus” feature automatically finds the optimum picture quality when blurring, overlapping colors or incorrect focus occurs. These conditions may be caused by moving your TV.

1

Press the **MENU** button.
Press the **▲** or **▼** button to select “Setup”, then press the **ENTER** button.

 


2

Press the **▲** or **▼** button to select “Self Focus”, then press the **ENTER** button.
The “Self Focus” is selected.

Press the **ENTER** button again.
The self focus process begins with the message “Self Focus” and horizontal bar is displayed.
When it is finished, all of things will disappear and the optimum picture quality can be enjoyed.

Press the **EXIT** button to exit.

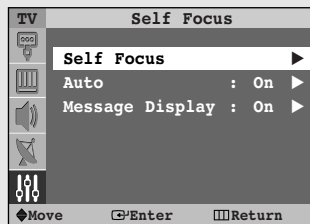

◀ During the process, minor distortions of the picture may occur. At this time, the colors may diffuse and a searching pattern will appear on the edges of the screen. This is a normal part of the adjustment.

Alternate method:

Simply press the **SELF FOCUS** button on the remote control to enjoy the optimum picture quality.



- Changing channels and any other signal changes will pause the self focus until a stable signal has returned. It resumes after the signal has been stabilized. This feature will not work without a signal.
- Ambient light that is too bright may affect the self focus. If this occurs, darken the environment and try again.

Deactivating the Automatic Execution of the Self Focus

The “Self Focus” feature starts on default. It will automatically begin 10 minutes after switching on the power and the appearance of the screen image. To set the optimum picture quality, the “Self Focus” will automatically begin again after another 30 minutes, as the screen image is then fully stabilized.

1

Press the **MENU** button.
Press the **▲** or **▼** button to select “Setup”, then press the **ENTER** button.

 


2

Press the **▲** or **▼** button to select “Self Focus”, then press the **ENTER** button.

Press the **▲** or **▼** button to select “Auto”, then press the **ENTER** button.

To turn off the automatic execution of the self focus feature, select “Off” by pressing the **▲** or **▼** button, then press the **ENTER** button.

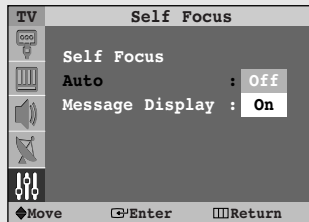


Removing the “Self Focus” Message from the Display

3

Press the **▲** or **▼** button to select “Message Display”, then press the **ENTER** button.

To remove the message “Self Focus” and horizontal bar on the screen during the self focus process, select “Off” by pressing the **▲** or **▼** button, then press the **ENTER** button.

 Press the **EXIT** button to exit.

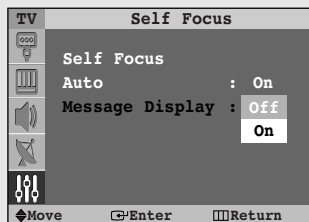

Adjusting Convergence Manually

If the color appears spread out or “smeared” on the screen, the convergence probably needs alignment. Be sure to use the remote control for the convergence adjustments.

First steps:

1

 
 
Press the **MENU** button.
Press the **▲** or **▼** button to select “Setup”, then press the **ENTER** button.



2

Press the **▲** or **▼** button to select “Manual Convergence”, press the **ENTER** button.


Press the **▲** or **▼** button to select “Red” or “Blue”.

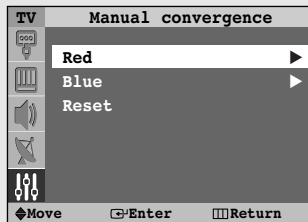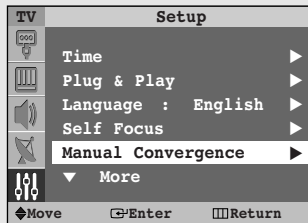

continued...


3

 Press the **ENTER** button.
 A crosshatch pattern will appear on the screen.
 Move the cursor to the position you want to adjust by pressing the **▲/▼/◀/▶** buttons, then press the **ENTER** button.
 Adjust the convergence by pressing the **▲/▼/◀/▶** buttons, then press the **ENTER** button.

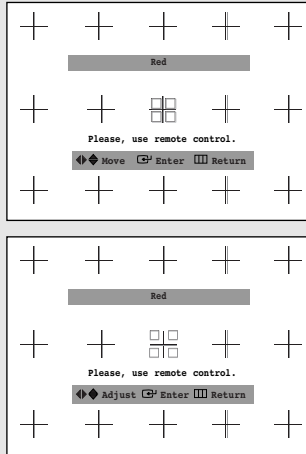


4

 If a horizontal line is visible, use the **▲** or **▼** button to move the line so that it is superimposed on the horizontal center-line (i.e., make a single horizontal line that is as white as possible.)

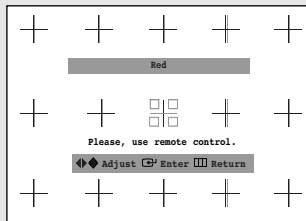

5

 
If a vertical red is visible, use the **◀** or **▶** button to move the line so that it is superimposed on the vertical-center line (i.e., make a single vertical line that is as white as possible.)

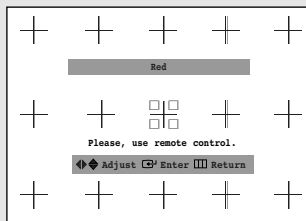

After the convergence is correctly adjusted, press the **MENU** button to exit.

6

 To return to the factory defaults, select "Reset" by pressing the **▲** or **▼** button, then press the **ENTER** button.
 The previously adjusted convergence will be reset to the factory defaults.

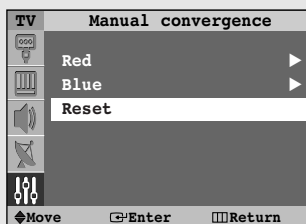

Memorizing the Channels

Your TV can memorize and store all of the available channels for both “off-air” (antenna) and cable channels. After the available channels are memorized, use the **CH** \wedge and **CH** \vee buttons to scan through the channels. This eliminates the need to change channels by entering the channel digits.

Selecting the Video Signal Source

Before your TV can begin memorizing the available channels, you must specify the type of signal source that is connected to the TV (i.e., an antenna or a cable system).

1

Press the **MENU** button.
Press the \blacktriangle or \blacktriangledown button to select “Channel”, then press the **ENTER** button.

 


2

Press the **ENTER** button to select “Air/CATV”.

Press the \blacktriangle or \blacktriangledown button to select “Air”, “STD”, “HRC” or “IRC”, then press the **ENTER** button.

Press the **EXIT** button to exit.

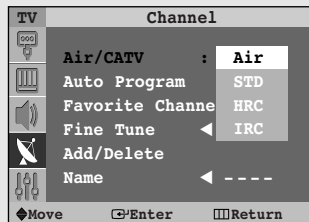

◀ If you are connected to an antenna, press the \blacktriangle or \blacktriangledown button to select “Air”.

◀ If you connected cable, press the \blacktriangle or \blacktriangledown button to select the type of cable system: “STD”, “HRC” or “IRC”.

 
- “STD”, “HRC” and “IRC” identify various types of cable TV systems. Contact your local cable company to identify the type of cable system that exists in your particular area. At this point the signal source has been selected. Proceed to “Storing Channels in Memory”.
- Subscription cable services require service-specific requirement for viewing.

Storing Channels in Memory (Automatic Method)

First, select the correct signal source (“Air”, “STD”, “HRC” or “IRC”) as described on the previous page.


1

Press the **MENU** button.
Press the **▲** or **▼** button to select “Channel”, then press the **ENTER** button.

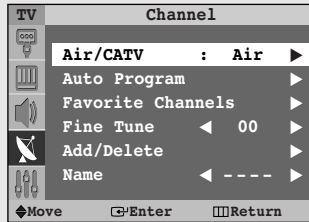

2

 
Press the **▲** or **▼** button to select “Auto Program”, then press the **ENTER** button.

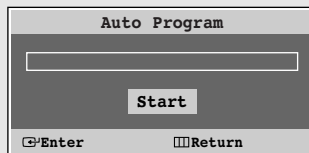

Press the **ENTER** button to start the auto program.

The TV begins memorizing all of the available stations.

 Press the **ENTER** button at any time to interrupt the memorization process.

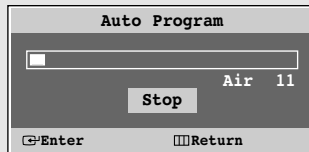


Press the **EXIT** button to exit.

Adding and Erasing Channels

To add channels that were not memorized (or to delete unwanted channels from memory):

1

 Press the **MENU** button.
Press the **▲** or **▼** button to select "Channel", then press the **ENTER** button.


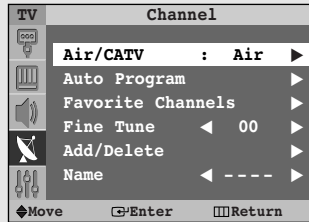


2

Press the **▲** or **▼** button to select "Add/Delete", then press the **ENTER** button.

Repeatedly pressing the **ENTER** button will alternate between add channel and delete channel. Press the **CH▲** or **CH▼** button (or number buttons) to switch to the appropriate channel, then repeat above.

  Press the **EXIT** button to exit.

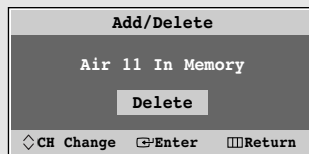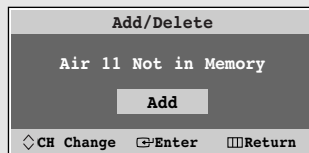

Alternate method:

Simply press the **ADD/DEL** button on the remote control to add channels that were not memorized or to delete unwanted channels from memory.



Changing Channels

Using the Channel Buttons

Press the **CH \wedge** or **CH \vee** button to change channel.

When you press the **CH \wedge** or **CH \vee** button, the TV changes channels in sequence. You will see all the channels that the TV has memorized. (The TV must have memorized at least three channels.) You will not see channels that were either erased or not memorized.

Using the Number Buttons

Use the number buttons to quickly tune to any channel.

Press the number buttons to go directly to a channel.
For example, to select channel "27", press the "2", then "7". The TV will change channels when you press the second number.

When you use the number buttons, you can directly select channels that were either erased or not memorized.

To select a channel over 100, press the **+100** button. (For channel "122", press the **+100** button, then "2", then "2".)

To change to single-digit channels (0–9) faster, press the "0" before the single digit. (For channel "4", press the "0", then "4".)

Using the Previous Channel

Press the **PRE-CH** button.
The TV changes to the last channel you were watching.



 
Selecting Your Favorite Channels

You can store your favorite channels for each available input source (such as TV and CATV). This allows you to quickly and easily find frequently watched channels by pressing the **FAV.CH** button on the remote control.

To Store Your Favorite Channels:

1

Press the **MENU** button.
Press the **▲** or **▼** button to select "Channel", then press the **ENTER** button.

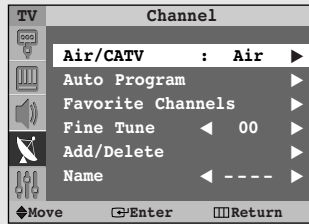


2

Press the **▲** or **▼** button to select "Favorite Channels", then press the **ENTER** button.

Press the **▲** or **▼** button to select a channel, then press the **ENTER** button.

Press the **ENTER** button again to deselect the selected channel.

 
Press the **EXIT** button to exit.

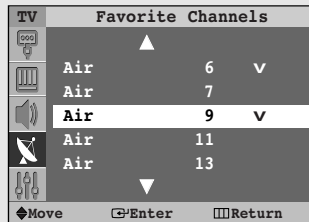

◀ Only memorized channels can be set as Favorite channels.

To View Your Favorite Channels:

 Press the **FAV.CH** button repeatedly to jump from one favorite channel to another.

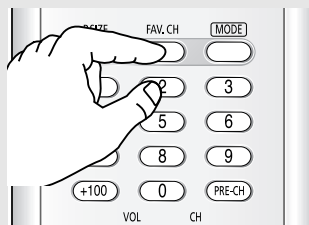

Labeling the Channels

 
Use this feature to assign an easy-to-remember label to any channel (i.e., “CBS”, “ESPN”, “PBS2”, CNN1”, etc.) A label consists of five fields, where each field is a letter, a number or a blank. When the **INFO** button is pressed, the channel label will appear next to the channel number.

1

Press the **CH \wedge** or **CH \vee** button to tune to the channel that will be labeled.

2

Press the **MENU** button.
Press the **▲** or **▼** button to select “Channel”, then press the **ENTER** button.

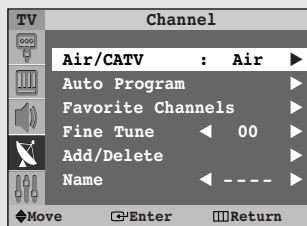


3

Press the **▲** or **▼** button to select “Name”.

Press the **◀** or **▶** button to select a field.

Press the **▲** or **▼** button to select a letter, a number or a blank. (Results in this sequence: A...Z, *, blank, 0...9, -).

 Press the **EXIT** button to exit.

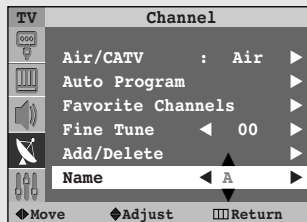

◀ If you add or delete the TV channel, the labeled channels list will also be added or deleted.

 
Picture Control

You can use the on-screen menus to change the “Contrast”, “Brightness”, “Sharpness”, “Color” and “Tint” according to personal preference. (Alternatively, you can use one of the automatic settings. See next page.)

Customizing the Picture


1

Press the **MENU** button.
Press the **▲** or **▼** button to select “Picture”, then press the **ENTER** button.

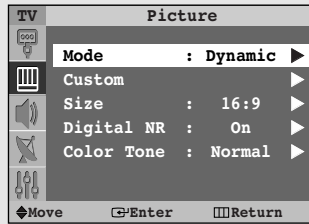

2

 Press the **▲** or **▼** button to select “Custom”, then press the **ENTER** button.

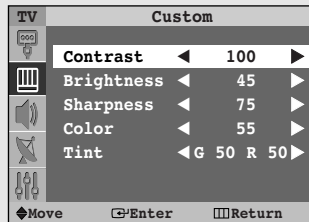


3

Press the **▲** or **▼** button to select a particular item, then press the **ENTER** button.

Press the **◀** or **▶** button to increase or decrease the value of a particular item.

 Press the **EXIT** button to exit.

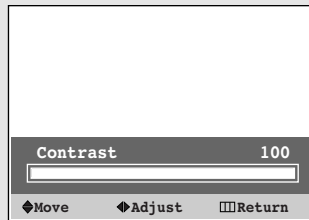


Using Automatic Picture Settings

Your TV has automatic picture settings (“Dynamic”, “Standard” and “Movie”) that are preset at the factory. You can activate either “Dynamic”, “Standard” or “Movie” by pressing the **P.MODE** button (or by making a selection from the menu). Or, you can select “Custom” which automatically recalls your personalized picture settings.

1

 Press the **MENU** button.
Press the **▲** or **▼** button to select “Picture”, then press the **ENTER** button.

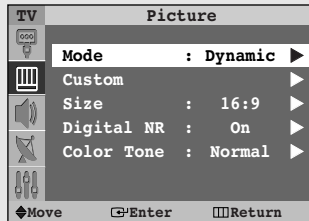


2

Press the **ENTER** button to select “Mode”.


Press the **▲** or **▼** button to select a particular item, then press the **ENTER** button.

 Press the **EXIT** button to exit.

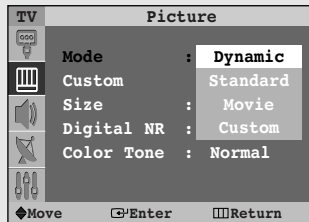

Alternate method:

 Press the **P.MODE** button on the remote control repeatedly to select one of the standard picture settings.

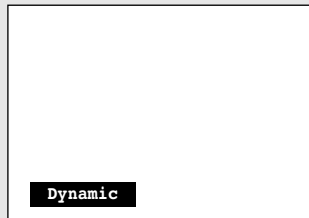

- Choose **Dynamic** for viewing the TV during the day or when there is a bright light in the room.
- Choose **Standard** for the standard factory settings.
- Choose **Movie** when viewing a movie.
- Choose **Custom** if you want to adjust the settings according to personal preference (see previous page).

Sound Control

Adjusting the Volume

Press the **VOL +** or **VOL -** buttons to increase or decrease the volume.

Using the MUTE Button

At any time, you can temporarily cut off the sound by using the **MUTE** button.

1

Press the **MUTE** button on the remote control.
The message "Mute" is displayed and the sound cuts off.



2

 
To turn mute off press the **MUTE** button again or, press either the **VOL-** or **VOL+** button.

Customizing the Sound

The sound settings can be adjusted to suit your personal preference. (Alternatively, you can use one of the automatic settings. See next page.)

1

Press the **MENU** button.
Press the **▲** or **▼** button to select "Sound", then press the **ENTER** button.

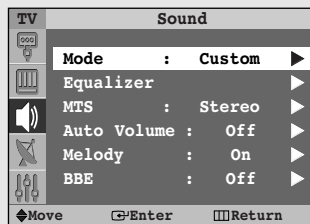


2

Press the **▲** or **▼** button to select "Equalizer", then press the **ENTER** button.

Press the **◀** or **▶** button to select a particular item to be changed.

Press the **▲** or **▼** button to increase or decrease the value of a particular item.

 Press the **EXIT** button to exit.

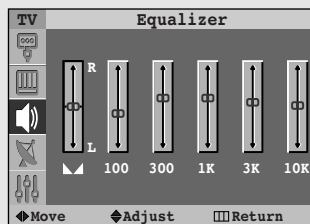


◀ "Equalizer" is not available when the "BBE" function is activated ("On").

Using Automatic Sound Settings

Your TV has automatic sound settings (“Standard”, “Music”, “Movie” and “Speech”) that are preset at the factory. You can activate these sound settings by pressing the **S.MODE** button (or by making a selection from the menu), or you can select “Custom”, which automatically recalls your personalized sound settings.

1

 Press the **MENU** button.
Press the **▲** or **▼** button to select “Sound”, then press the **ENTER** button.

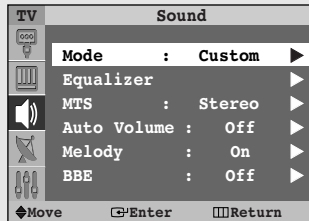


2

Press the **ENTER** button to select “Mode”.

Press the **▲** or **▼** button to select a particular item, then press the **ENTER** button.

 Press the **EXIT** button to exit.

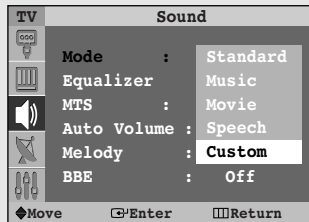

Alternate method:

Press the **S.MODE** button on the remote control repeatedly to select one of the standard sound settings.



- Choose **Standard** for the standard factory settings.
- Choose **Music** when watching music videos or concerts.
- Choose **Movie** when watching movies.
- Choose **Speech** when watching a show that is mostly dialogue (i.e., news).
- Choose **Custom** to recall your personalized settings.

Setting the Clock

Setting the clock is necessary in order to use the various timer features of the TV. Also, you can check the time while watching the TV. (Just press the **INFO** button.)

 
1

Press the **MENU** button.
Press the **▲** or **▼** button to select "Setup", then press the **ENTER** button.



2

Press the **ENTER** button to select "Time".

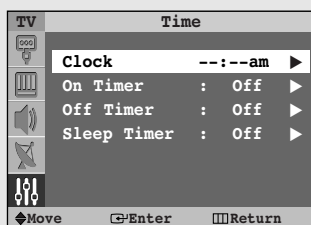


3

Press the **ENTER** button to select "Clock".

Press the **◀** or **▶** button to move to "Hour", "Minute" or "am".
Set the clock you want by pressing the **▲** or **▼** button, then press the **ENTER** button.

 Press the **EXIT** button to exit.

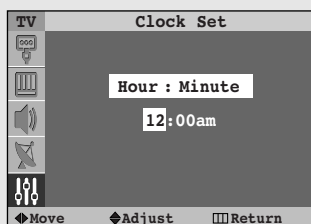

◀ The current time will appear every time you press the **INFO** button.

◀ You can set the hour and minute directly by pressing the number buttons on the remote control.

 
Viewing an External Signal Source

Use the remote control to switch between viewing signals from connected equipment, such as VCR, DVD, Set-Top box and the TV source (broadcast or cable).

Setting the Signal Source

1

Press the **MENU** button.
Press the **ENTER** button to select "Input".

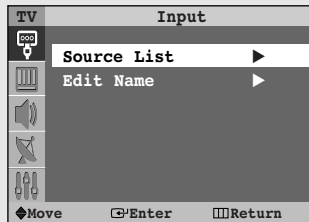


2

Press the **ENTER** button to select "Source List".

Press the **▲** or **▼** button to select a signal source, then press the **ENTER** button.

 
Press the **EXIT** button to exit.

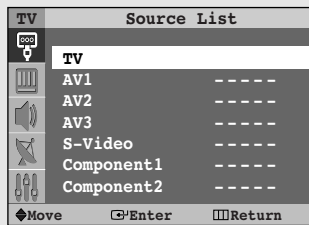

◀ When you connect equipment to the TV, you can choose between the following sets of jacks : "AV3", "S-Video" on the TV's side panel or "AV1", "AV2", "Component1" or "Component2" on the TV's rear panel.

Alternate method:

 Press the **SOURCE** button on the remote control repeatedly to select an external signal source.

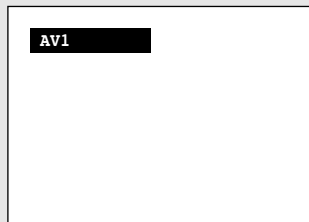


Assigning Names to External Sources

This feature enables you to name the input source you have connected.


1

 Press the **MENU** button.
Press the **ENTER** button to select "Input".

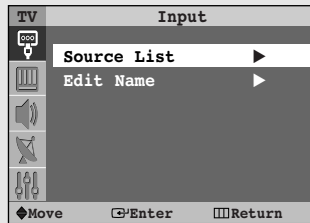


2

 Press the **▲** or **▼** button to select "Edit Name", then press the **ENTER** button.

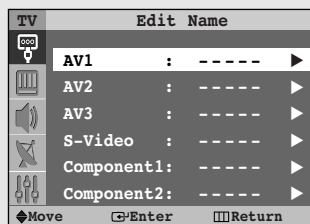

3

 Press the **▲** or **▼** button to select a signal source, then press the **ENTER** button.
Press the **▲** or **▼** button to select an external device, then press the **ENTER** button.

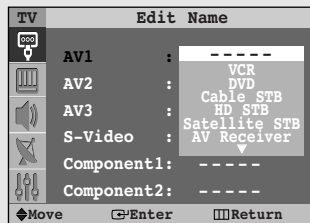

Press the **EXIT** button to exit.

◀ The device names available are listed.

- VCR
- DVD
- Cable STB
- HD STB
- Satellite STB
- AV Receiver
- DVD Receiver
- Game
- Camcorder
- DVD Combo
- DHR (DVD HDD Recorder)
- PC

Chapter Four

SPECIAL FEATURES

Fine Tuning Channels

The Fine Tuning function lets you manually adjust the TV's tuner if you have difficulty tuning channels.

1

Press the **MENU** button.
Press the **▲** or **▼** button to select "Channel", then press the **ENTER** button.



2

Press the **▲** or **▼** button to select "Fine Tune".

 
Press the **◀** or **▶** button to adjust the fine tuning.

To store the fine tuning setting in the TV's memory, press the **▲** button.

The symbol "*" is displayed.

To reset the fine tuning to "00", press the **▼** button.


Press the **EXIT** button to exit.

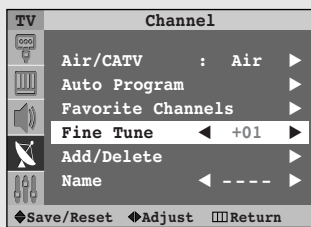

Changing the Screen Size (Wide Model)

1

 Press the **MENU** button.
Press the **▲** or **▼** button to select "Picture", then press the **ENTER** button.

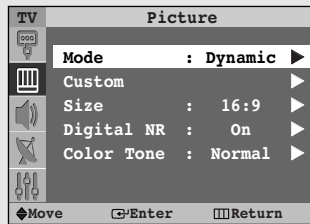


2

Press the **▲** or **▼** button to select "Size", then press the **ENTER** button.

Press the **▲** or **▼** button to select the screen format you want.

 Press the **EXIT** button to exit.

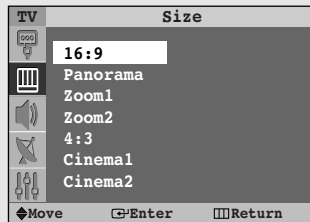


◀ In the "Zoom 1" and "Zoom 2" mode, lifting is available by pressing the **▲** or **▼** button.

◀ Captions or subtitles might be interrupted in the "Cinema1" and "Cinema2" modes.

Alternate method:


Press the **P.SIZE** button on the remote control repeatedly to select one of the screen format you want.

 Viewing with a 4:3 signal (When a 4:3 signal is received)

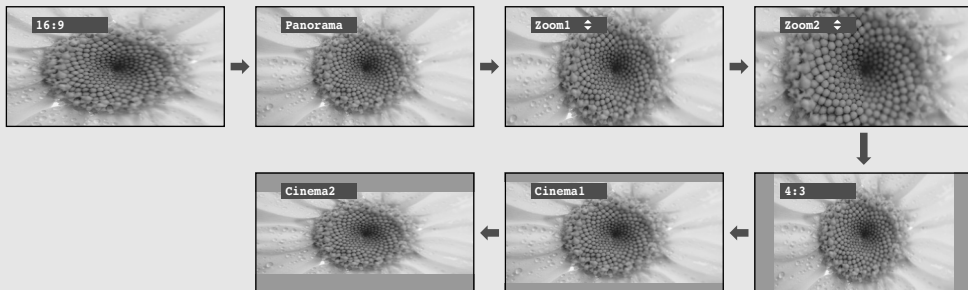

Viewing with a 16:9 signal (When a 16:9 signal is received)


The illustrations below show the change of picture while viewing a DVD title (480i only).

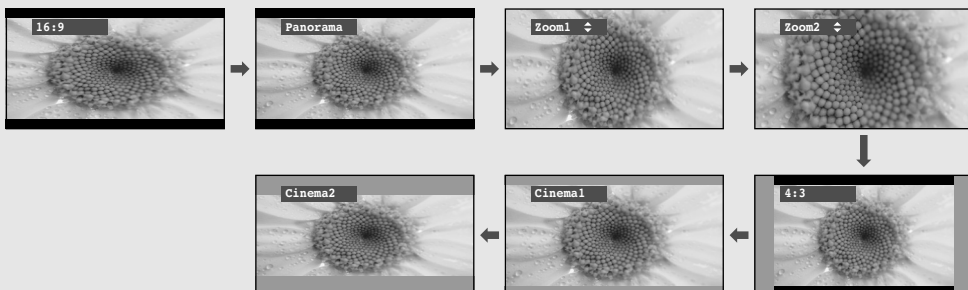 

Changing the Screen Size (4:3 Model)

1

 Press the **MENU** button.
Press the **▲** or **▼** button to select "Picture", then press the **ENTER** button.

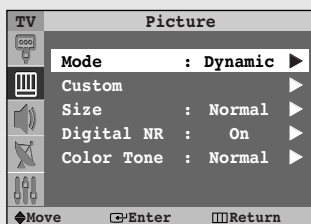


2

Press the **▲** or **▼** button to select "Size", then press the **ENTER** button.

Press the **▲** or **▼** button to select the screen format you want.

 Press the **EXIT** button to exit.

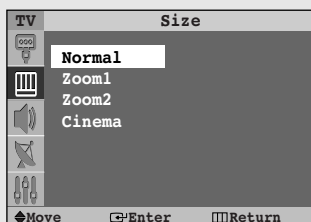

◀ In the "Zoom 1" and "Zoom 2" mode, lifting is available by pressing the **▲** or **▼** button.

◀ Captions or subtitles might be interrupted in the "Cinema" modes.

Alternate method:

Press the **P.SIZE** button on the remote control repeatedly to select one of the screen format you want.

Viewing with a 4:3 signal (When a 4:3 signal is received)



Viewing with a 16:9 signal (When a 16:9 signal is received)

The illustrations below show the change of picture while viewing a DVD title (480i only).

 


Digital Noise Reduction

If the broadcast signal received by your TV is weak, you can activate this feature to help reduce any static and ghosting that may appear on the screen.


1

Press the **MENU** button.
Press the **▲** or **▼** button to select "Picture", then press the **ENTER** button.

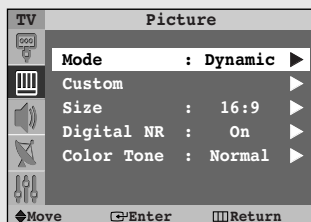

2

 Press the **▲** or **▼** button to select "Digital NR", then press the **ENTER** button.
Press the **▲** or **▼** button to select "Off" or "On", then press the **ENTER** button.

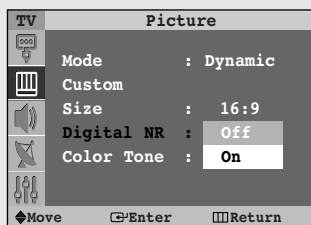


Press the **EXIT** button to exit.

Selecting the Color Tone

1

 Press the **MENU** button.
Press the **▲** or **▼** button to select "Picture", then press the **ENTER** button.

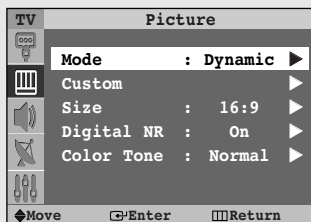


2

Press the **▲** or **▼** button to select "Color Tone", then press the **ENTER** button.

Press the **◀** or **▶** button to increase or decrease the value of the color tone ("Warm 10~1", "Normal", and "Cool 1~10").

 Press the **EXIT** button to exit.

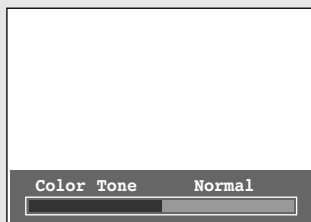

Setting the Blue Screen Mode

If no signal is being received or the signal is very weak, a blue screen automatically replaces the noisy picture background. If you wish to continue viewing the poor picture, you must set the "Blue Screen" mode to "Off".

 
1

Press the **MENU** button.
Press the **▲** or **▼** button to select "Setup", then press the **ENTER** button.



2

Press the **▲** or **▼** button to select "Blue Screen", then press the **ENTER** button.
Press the **▲** or **▼** button to select "Off" or "On", then press the **ENTER** button.

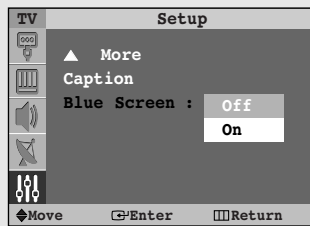


Press the **EXIT** button to exit.

Freezing the Picture

Press the **STILL** button to freeze a moving picture.
(Normal sound will still be heard.)

 Press again to cancel.

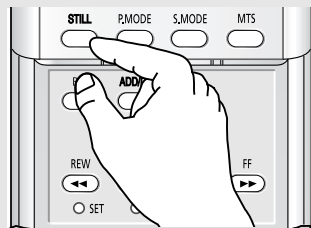


◀ The still function doesn't operate in "Component1" or "Component2" mode.

Choosing a Multi-Channel Sound (MTS) track

Depending on the particular program being broadcast, you can listen to “Mono”, “Stereo” or “SAP (Secondary Audio Program)”. “SAP” audio is usually a foreign-language translation. Sometimes “SAP” has unrelated information like news or weather.


1

 Press the **MENU** button.
Press the **▲** or **▼** button to select “Sound”, then press the **ENTER** button.

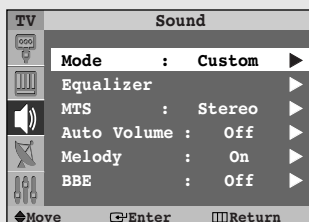

2

 Press the **▲** or **▼** button to select “MTS”, then press the **ENTER** button.
Press the **▲** or **▼** button to select a setting you want, then press the **ENTER** button.

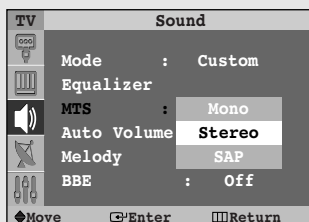

Press the **EXIT** button to exit.

Alternate method:

Press the **MTS** button on the remote control repeatedly to select one of the settings.



 
- Choose **Mono** for channels that are broadcasting in mono, or if you are having difficulty receiving a stereo signal.
- Choose **Stereo** for channels that are broadcasting in stereo.
- Choose **SAP** to listen to the Separate Audio Program, which is usually a foreign-language translation.

Auto Volume

Each broadcasting station has its own signal conditions, and it is inconvenient to adjust the volume every time the channel is changed. "Auto Volume" automatically adjusts the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.

1


Press the **MENU** button.
Press the **▲** or **▼** button to select "Sound", then press the **ENTER** button.

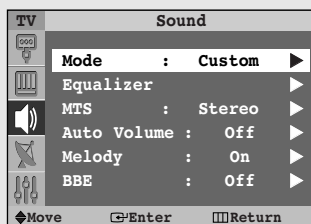

2

Press the **▲** or **▼** button to select "Auto Volume", then press the **ENTER** button.
Press the **▲** or **▼** button to select "Off" or "On", then press the **ENTER** button.

 Press the **EXIT** button to exit.

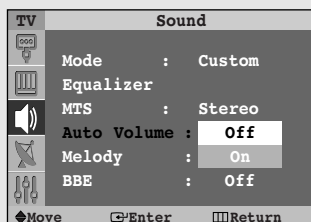


Setting the On/Off Melody

A melody sound can be set to come on when the TV is powered On or Off.

1

 
Press the **MENU** button.
Press the **▲** or **▼** button to select "Sound", then press the **ENTER** button.

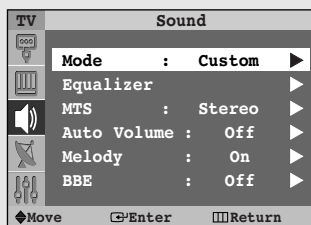

2

Press the **▲** or **▼** button to select "Melody", then press the **ENTER** button.
Press the **▲** or **▼** button to select "Off" or "On", then press the **ENTER** button.

 Press the **EXIT** button to exit.

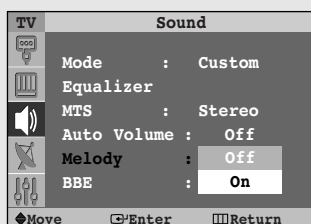


BBE

BBE is a built-in effect that adds clarity, punch and dynamics to the sound.

1

 
Press the **MENU** button.
Press the **▲** or **▼** button to select "Sound", then press the **ENTER** button.

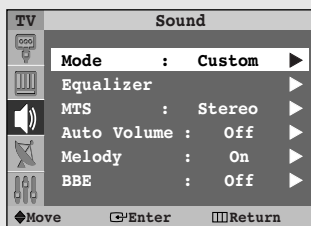

2

Press the **▲** or **▼** button to select "BBE", then press the **ENTER** button.
Press the **▲** or **▼** button to select "Off" or "On", then press the **ENTER** button.

 Press the **EXIT** button to exit.

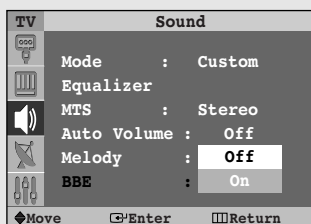

◀ "BBE" is only available when sound mode is set to "Custom".

Alternate method:

Press the **BBE** button on the remote control repeatedly to select "On" or "Off".



Viewing Closed Caption Information

Your TV decodes and displays the closed captions information that is broadcast along with some television shows. These captions are usually subtitles for the hearing impaired or translations into other languages. All VCRs record the closed caption signal from television programs, so pre-recorded video tapes can also deliver closed-caption information. Check for the closed caption symbol (**CC**) on the tape's package or your TV program-schedule.

1

 
Press the **MENU** button.
Press the **▲** or **▼** button to select "Setup", then press the **ENTER** button.



2


Press the **▲** or **▼** button to select "Caption", then press the **ENTER** button.

Press the **ENTER** button to select "Caption".
Press the **▲** or **▼** button to select "On", then press the **ENTER** button.

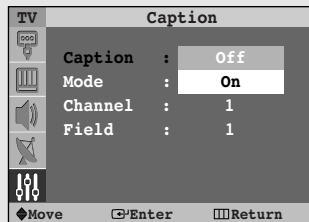

Alternate method:

 
Press the **CAPTION** button on the remote control to select "Off" or "On".

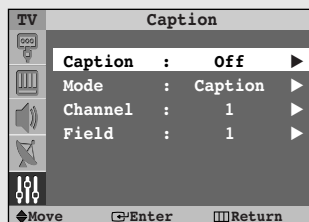

3

Press the **▲** or **▼** button to select "Mode", then press the **ENTER** button.

 Press the **▲** or **▼** button to select "Text" or "Caption", then press the **ENTER** button.

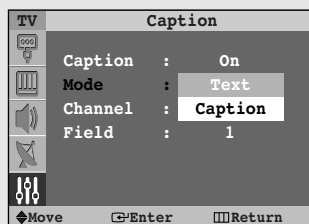


- ◀ In "Caption" mode, caption appears at the bottom of the screen, and they usually cover only a small portion of the picture.
- ◀ In "Text" mode, information unrelated to the program, such as news or weather, is displayed. Text often covers a large portion of the screen.

4

Press the ▲ or ▼ button to select "Channel", then press the **ENTER** button.

 Press the ▲ or ▼ button to select "2" or "1", then press the **ENTER** button.

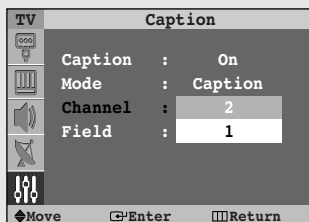


◀ Depending on the particular broadcast, it might be necessary to make changes to "Channel" and "Field".

◀ Different channels and fields display different information: "Field 2" carries additional information that supplements the information in "Field 1". (For example, "Channel 1" may have subtitles in English, while "Channel 2" has subtitles in Spanish.)

5

Press the ▲ or ▼ button to select "Field", then press the **ENTER** button.

 Press the ▲ or ▼ button to select "2" or "1", then press the **ENTER** button.

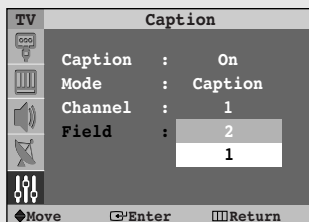


- Misspellings and unusual characters sometimes occur during closed caption transmissions, especially those of live events. There may be a small delay before captions appear when you change channels. These are not malfunctions of the TV.

Setting the On/Off Timer


1

 Press the **MENU** button.
Press the **▲** or **▼** button to select "Setup", then press the **ENTER** button.

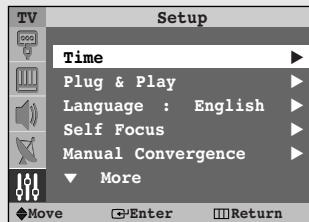

2

 Press the **ENTER** button to select "Time".
Press the **▲** or **▼** button to select "On Timer", then press the **ENTER** button.
Press the **▲** or **▼** button to adjust "Hour", then press the **▶** button to move to the next step.
Set other items using the same method as above.
When finished, press the **MENU** button to return.

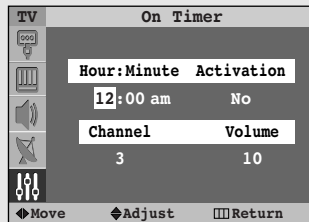


◀ The current time will appear every time you press the **INFO** button.

◀ You can set the hour and minute directly by pressing the number buttons on the remote control.

3

 Press the **▲** or **▼** button to select "Off Timer", then press the **ENTER** button.
Press the **▲** or **▼** button to adjust "Hour", then press the **▶** button to move to the next step.
Set other items using the same method as above.

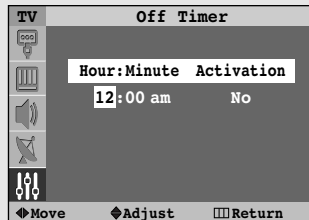

Press the **EXIT** button to exit.

◀ **Auto Power Off**
When you set the timer "On", the television will eventually turn off, if no controls are operated for 3 hours after the TV was turned on by timer. This function is only available in timer "On" mode and prevents overheating or leakages, which may occur if a TV is on for too long (on holiday, for example).

Setting the Sleep Timer

The sleep timer automatically shuts off the TV after a preset time (from 30 to 180 minutes).

 
1

Press the **MENU** button.
Press the **▲** or **▼** button to select "Setup", then press the **ENTER** button.



2

Press the **ENTER** button to select "Time".
Press the **▲** or **▼** button to select "Sleep Timer", then press the **ENTER** button.
Press the **▲** or **▼** button to select the preset time you want, then press the **ENTER** button.

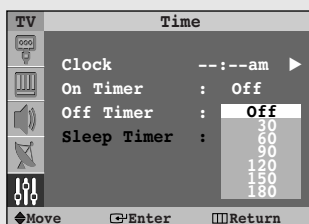

Press the **EXIT** button to exit.

Alternate method:

Press the **SLEEP** button on the remote control repeatedly until the appropriate time interval appears (any of the preset values from "30" to "180" minutes).

Sleep Timer Off

Customizing Your Remote Control

Your TV comes equipped with a universal remote control. In addition to controlling the TV, the universal remote control can also operate a VCR, Cable box, DVD, and some Samsung Set-top boxes (even if your VCR, Cable box and DVD are made by manufacturers other than Samsung).

Setting Up Your Remote Control to Operate Your VCR (Cable box or DVD player)

1

Turn off your VCR (Cable box or DVD player).

2

Press the **MODE** button to switch the remote control to the **VCR (CABLE or DVD)** mode.

◀ The remote control has five modes: **TV**, **STB**, **VCR**, **CABLE** and **DVD**.

3

On your Samsung remote control, press the **SET** button.

4

Enter 3 digits of the VCR (Cable box or DVD player) code listed on next page for your brand of VCR (Cable box or DVD player).

◀ Make sure you enter 3 digits of the code, even if the first digit is a "0". (If more than one code listed, try the first one.)

5

Press the **POWER** button on the remote control. Your VCR (Cable box or DVD player) should turn on. If your VCR (Cable box or DVD player) turns on, your remote control is now set correctly.

◀ If your VCR (Cable box or DVD player) does not turn on, repeat steps 2, 3, and 4, but try one of the other codes listed for the brand of your particular VCR (Cable box or DVD player).

6

Once your remote control is set up, press the **MODE** button any time you want to use the remote to operate your VCR (Cable box or DVD player).

- When your remote is in the **TV** mode, the VCR (or DVD player) control buttons (**REW**, **STOP**, **PLAY/PAUSE** and **FF**) will still operate your VCR (or DVD player).
- When your remote control is in the **STB**, **VCR**, **CABLE** or **DVD** mode, the volume buttons still control your TV's volume.

SPECIAL FEATURES

Remote Control Codes

VCR Codes

Admiral	015,088	Hitachi	014,024,044,045	Quasar	017,053
Aiwa	024	Instant Replay	017	Radio Shack	011,015,017,018,021,024,028,036,052,062
Akai	026,031,032	JC Penny	011,014,016,017,023,025,039,044,060,062	RCA	009,014,016,017,037,044,046,063,078
Audio Dynamics	022,025	JCL	011,017,023,025,039,055	Realistic	011,015,017,018,021,024,028,036,052,062
Bell & Howell	011	Kenwood	011,023,025,039,055	Samsung	000,016,022,031,041,051
Broksonic	019	KLH	082	Sansui	025
Candle	016,018,022,054,055,061	LG(Goldstar)	001,002,007,018,023,055,069	Sanyo	011,021
Canon	017,062	Lloyd	024	Scott	022,050,058,077
Citizen	016,018,022,054,055,061	Logik	040	Sears	011,014,018,021,027,028,044,052,057
Colorlyme	023	Magnavox	017,038,062,065	Sharp	015,036,048,054
Craig	016,021	Marantz	011,017,023,025,038,039,055,070	Shintom	026,035,040,064
Curtis Mathes	009,016,017,023,024,055,062,073,076	MTC	016,024	Signature	024
Daewoo	003,004,005,006,007,008,022,054,085	Multitech	016,024,040,041	Sony	026,035,047
DB	023,025	NEC	011,023,025,039,055,070,073	Sylvania	017,024,038,062,065
Dimensia	009	Optimus	015	Symphonic	024
Dynatech	024	Panasonic	017,062,084,086	Tandy	011,024
Electrohome	036	Pentax	014,044	Tatung	039
Emerson	017,018,019,022,024,029,032,036,043,050,051,056,058,066,071,074,076,077,079	Pentax Research+	055	Teac	024,039,078
Fisher	011,021,027,028,052,057,067	Philco	017,038,062,065	Technics	017
Funai	024	Philips	017,038	Teknika	017,018,024,030
General Electric	009,016,017,041,062	Pioneer	014,025,042,059	TMK	076
Go Video	016	Portland	053,054,061	Toshiba	014,022,028,057,058
Harman Kardon	023	PROSCAN	009	Toshiko	018
		Quartz	011	Television	016,018

Cable Box Codes

Anvision	015,016	Magnavox	015,016,027,029,034,036,037,040,041,048,049	Signature	054
Cable Star	015,016	Nawoo	001	Sprucer	035
DaeHan	005	NSC	017	Starcom	054
DeaRyung	003	Oak	024,046	Stargate2000	066
DongKuk	004	Osk Sigma	024	Sylvania	019,067
Eagle	015,016	Panasonic	011,035,047,069	TaePyungYang	002
Eastern International	020	Philips	015,016,027,029,034,036,037,040,041,048,049	Texscan	019,067
General Instrument	054	Pioneer	026,028,052	Tocom	025,029,057,058,063
GI	012,013,023,031,032,033,038,044,075,076,077	Randtek	015,016	Unika	039,040,049
Hamlin	011,012,020,021,042,056	RCA	008,035,074	Universal	059,060
Hitachi	045,051,054	Regal	011,020,021	Viewstar	015,016,027,029,034,036,037,040,041,048,049
Jerrald	012,013,023,031,032,033,038,044,054,070,073	Regency	010,041	Warner Amex	052
LG(Goldstar)	006	Saewoo	007	Zenith	022,050,065,069
Macom	045,051	Samsung	000,011,030,052,071,072		

DVD Codes

Curtis Mathes	009	Philips	007	Sharp	005
JVC	003	PROSCAN	008	Sony	004
LG(Goldstar)	001	RCA	008	Toshiba	002
Panasonic	006	Samsung	000		

Chapter Five

TROUBLESHOOTING

If the TV seems to have a problem, first try this list of possible problems and solutions. If none of these troubleshooting tips apply, then call your nearest service center.

Identifying Problems

Problem	Possible Solution
Poor picture.	Try another channel. Adjust the antenna. Check all wire connections.
Poor sound quality.	Try another channel. Adjust the antenna. Make sure the MUTE button is off.
No picture or sound.	Try another channel. Press the SOURCE button. Make sure the TV is plugged in. Check the antenna connections.
No color, wrong colors or tints.	Make sure the program is broadcast in color. Adjust the picture settings.
Picture rolls vertically.	Adjust the antenna. Check all wire connections. If you are using a VCR, check the tracking.
The TV operates erratically.	Unplug the TV for 30 seconds, then try operating it again.
Your remote control does not operate your TV.	Press the MODE button to put your remote control in the TV mode. Make sure the remote has batteries.
The TV won't turn on.	Make sure the wall outlet is working. Make sure the remote has batteries.
The visual qualities of digital channels vary.	The visual qualities of digital channels may vary depending on the original production method (analog or digital). → Classification by the information displayed when switching channels. → If the original production method is digital: High visual quality program. → If the original production method is analog: The digital program displayed on the screen is originally an analog program which has been converted. The visual quality is of an SD grade visual quality.
Although the TV caption shows HD, the visual quality is not satisfactory.	The HD caption that appears when switching channels or when pressing the Information button on the remote control means the selected channel is simply a digital channel. If the broadcasting station converts an analog signal into digital and transmits the signal, the visual quality may not be perfect. (Applied to Set Top Box built-in model only.)

Cleaning and Maintaining Your TV

With proper care, your TV unit will give you many years of service. Please follow these guidelines to get the maximum performance from your TV.

Placement

- Do not place the TV near extremely hot, cold, humid or dusty places.
- Do not place the TV near appliances with electric motors that create magnetic fields, such as vacuum cleaners.
- Keep the ventilation openings clear; do not place the TV on a soft surface, such as cloth or paper.
- Place the TV in a vertical position only.

Liquids

- Do not handle liquids near or on the TV. Liquids that spill into it can cause serious damage.

Cabinet

- Never open the cabinet or touch the parts inside.
- Wipe your TV with a clean, dry cloth. Never use water, cleaning fluids, wax, or chemicals.
- Do not put heavy objects on top of the cabinet.

Temperature

- If your TV is suddenly moved from a cold to a warm place, unplug the power cord, and allow at least two hours for moisture that may have formed inside the unit to dry completely.

Using Your TV in Another Country

If you plan to take your TV with you to a foreign country, please be aware of the different television systems that are in use around the world. A TV designed for one system may not work properly with another system due to differences in the TV channel frequencies.

Specifications

Model	Voltage	Frequency of Operation	Power Consumption	Dimension (W x D x H)	Weight
SP42Q2HL	AC 100-240V	60Hz	240 watts	1004 x 500 x 967 mm 39.5 x 19.7 x 38.1 inches	40.4 Kg / 89.1 lbs
SP47Q2HL	AC 100-240V	60Hz	240 watts	1126 x 621 x 984 mm 44.3 x 24.4 x 38.7 inches	49.0 Kg / 108.0 lbs
SP52Q2HL	AC 100-240V	60Hz	240 watts	1226 x 598 x 1276 mm 48.3 x 23.5 x 50.2 inches	56.3 Kg / 124.1 lbs
SP54T8HL	AC 100-240V	60Hz	240 watts	1525 x 635 x 1162 mm 60.0 x 25.0 x 45.7 inches	76.0 Kg / 167.5 lbs
SP43Q5HL	AC 100-240V	60Hz	240 watts	1035 x 510 x 888 mm 40.7 x 20.0 x 34.9 inches	36.4 Kg / 80.2 lbs
SP47Q5HL	AC 100-240V	60Hz	240 watts	1120 x 555 x 939 mm 44.0 x 21.8 x 36.9 inches	39.5 Kg / 87.0 lbs



Contact SAMSUNG WORLD-WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Country	Customer Care Center ☎	Web Site
ARGENTINE	0800-333-3733	www.samsung.com/ar
BRAZIL	0800-124-421	www.samsung.com/br
CHILE	800-726-7864 (SAMSUNG)	www.samsung.com/cl
COSTA RICA	0-800-507-7267	www.samsung.com/latin
ECUADOR	1-800-10-7267	www.samsung.com/latin
EL SALVADOR	800-6225	www.samsung.com/latin
GUATEMALA	1-800-299-0013	www.samsung.com/latin
JAMAICA	1-800-234-7267	www.samsung.com/latin
MEXICO	01-800-SAMSUNG (7267864)	www.samsung.com/mx
PANAMA	800-7267	www.samsung.com/latin
PUERTO RICO	1-800-682-3180	www.samsung.com/latin
REP. DOMINICA	1-800-751-2676	www.samsung.com/latin
TRINIDAD & TOBAGO	1-800-7267-864	www.samsung.com/latin
VENEZUELA	1-800-100-5303	www.samsung.com/latin

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>