

Infrared Remote Control

(ENG)

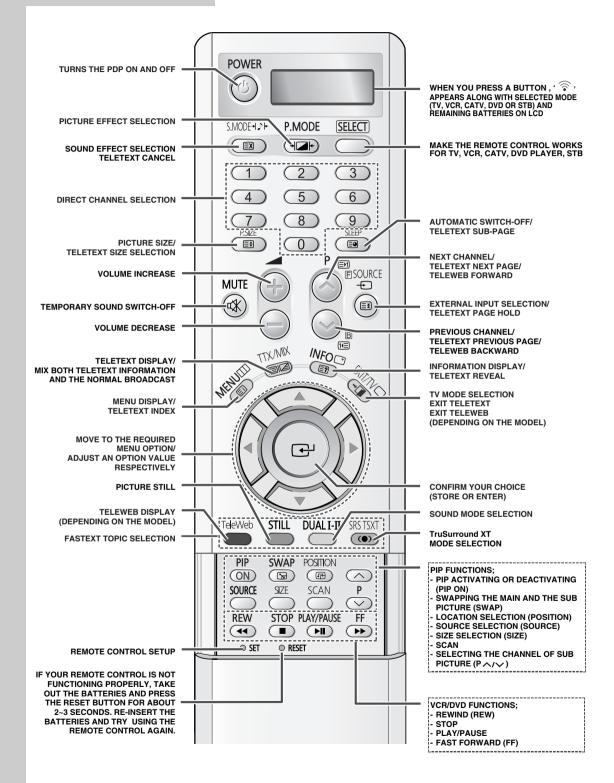

The performance of the remote control may be affected by bright light.

Connecting to the External Devices

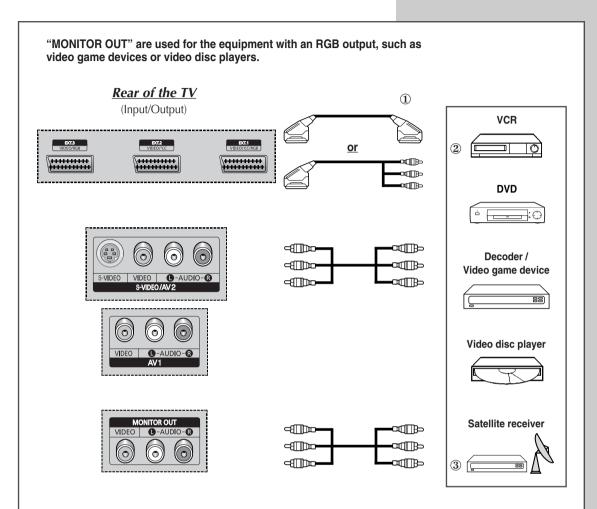

① This end can be fitted with:


- ♦ A SCART connector
- Three RCA connectors (VIDEO + AUDIO-L/R)
- If you have a second VCR and wish to copy cassettes tape, connect the source VCR to "EXT.1(EXT.2, EXT.3, AV1 or AV2)" and the target VCR to "MONITOR OUT" so that you can redirect the signal from "EXT.1(EXT.2, EXT.3, AV1 or AV2)" to "MONITOR OUT".
- When you wish to record a programme, connect the receiver to "EXT.1(EXT.2, EXT.3, AV1 or AV2)" and the VCR to "MONITOR OUT" so that you can redirect the signal from "EXT.1(EXT.2, EXT.3, AV1 or AV2)" to "MONITOR OUT".

Connector	Input				Output
	Video	Audio (L/R)	S-Video	RGB	Video + Audio (L/R)
EXT.1	~	v	~	~	Only TV output is available.
EXT.2	~	v	~		Output you can choose.
EXT.3	~	v		v	Output you can choose.

Input/Output Specification


Download from Www.Somanuals.com. All Manuals Search And Download.

Connecting to the S-Video Input

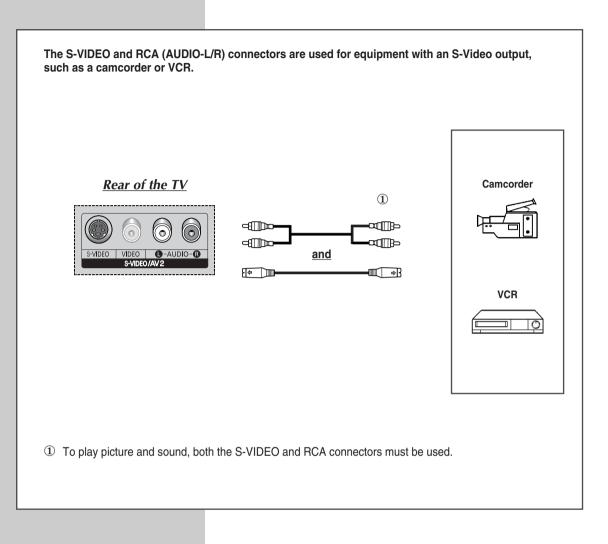


Whenever you connect an audio or video system to your television, ensure that <u>all</u> elements are switched <u>off</u>. Refer to the documentation supplied with your equipment for detailed connection instructions and associated safety precautions.

Connecting to the DVI Input

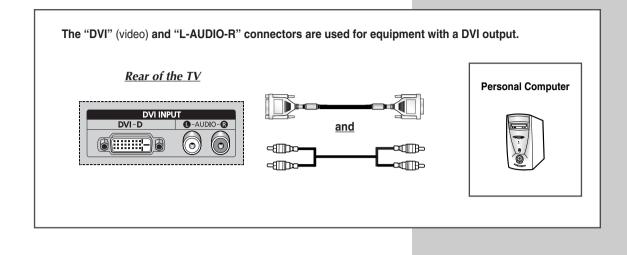


Connecting to the PC Input

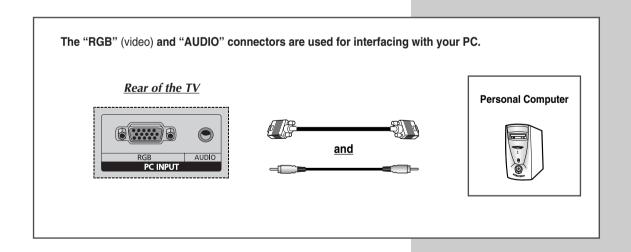


ENG

Connecting to the Component Input

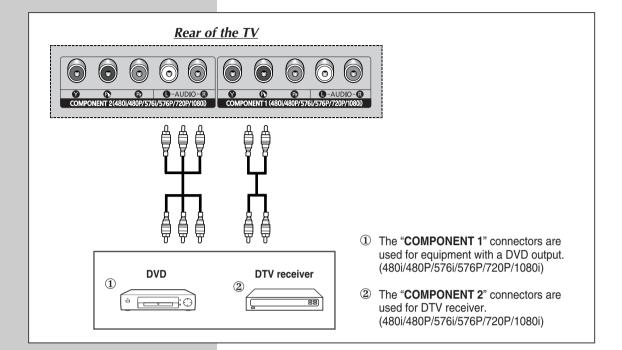

Connecting and Using the Home Theater System

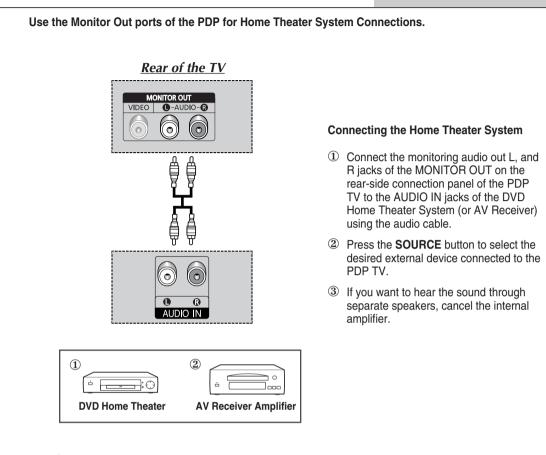

- Refer to corresponding user's manual from the manufacturer for wiring the speakers to the DVD Home Theater System (or AV Receiver).
 - Disable the PDP TV internal speaker to enjoy the rich sound through the speakers of your Home Theater System.
 - In this case, enjoy the sound from the Home Theater System while the PDP TV does not produce the audio.

To Display the DVD Home Theater

- ① Turn the PDP on and press the SOURCE button to select the Ext.1 (or Ext.2, Ext.3).
- ② Be sure to connect the video cable properly if desired external input (Ext.1, Ext.2, or Ext.3) cannot be selected.
- ③ Play the DVD after activating the DVD Home Theater System.
- ④ Use the volume control of the Home Theater System while watching the PDP using the DVD Home Theater, where the PDP TV does not produce the audio.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com