


SAMSUNG

Operating Instructions

VACUUM CLEANER

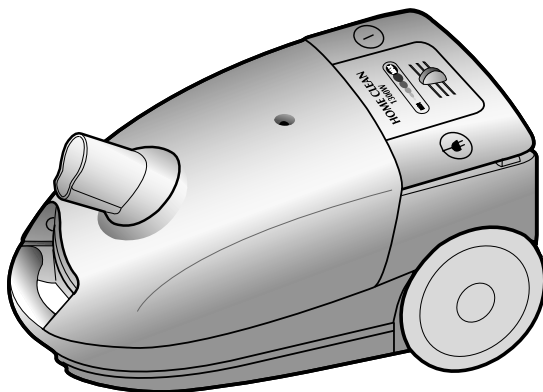

※ Before operating this unit, please read the instructions carefully

IMPORTANT SAFEGUARDS


- ▶ This appliance must be connected to the same main voltage as shown on the rating plate.
- ▶ This vacuum cleaner is not suitable for removing liquids of any kinds.
- ▶ Carpets treated with a liquid cleaner must be allowed to dry before being cleaned with the unit.
- ▶ Never operate the vacuum cleaner without a dust bag.
- ▶ If a dust bag is not inserted, the cover cannot be closed, please do not close forcibly.
- ▶ Keep children away from the electrical appliance. It must not be used on people or animals.
- ▶ Never use your appliance to vacuum matches, glowing embers, or cigarette-ends, Avoid vacuuming hard, pointed objects, since they may damage the appliance or dust bag.
- ▶ If your vacuum cleaner has a fault, please contact your electrical retailer or an authorized service agent.
- ▶ If the main cable is defective, the complete cable winder must be replaced by a service agent.

Protecting the environment

- ▶ When you have unpacked the unit, do not simply throw the packing into the household waste.
- ▶ Take them to the appropriate collecting points for recycling.

NOTE : The packing is retained in case you should need to transport your vacuum cleaner or return to service at some point in the future.



IDENTIFICATIONS PARTS

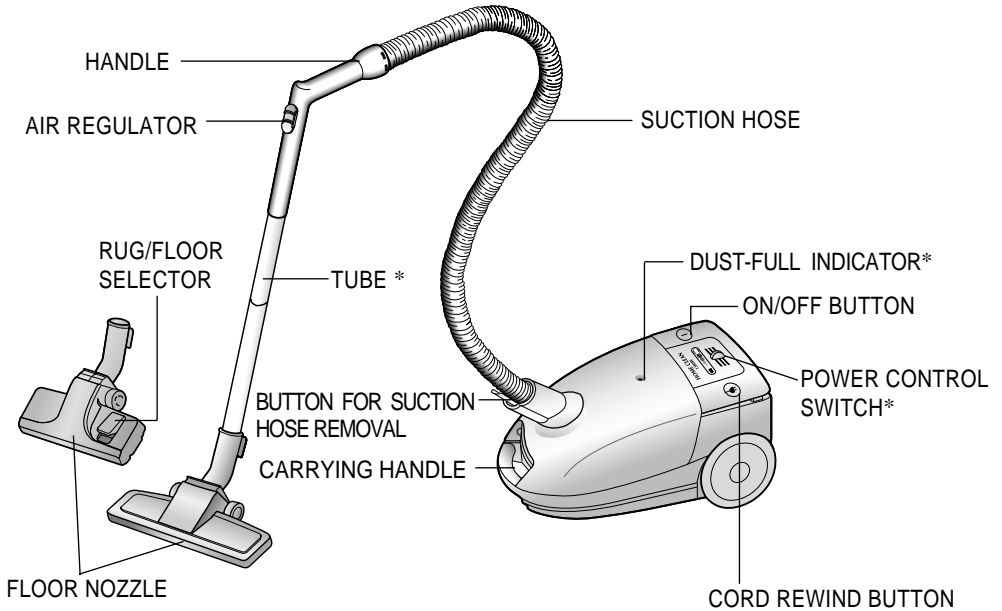



► Features marked with * may vary according to model.

ASSEMBLING THE VACUUM-CLEANER READY FOR USE

- 1) Connect the suction hose to the suction tube.
- 2) Connect the suction tubes together

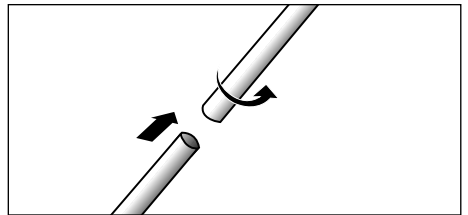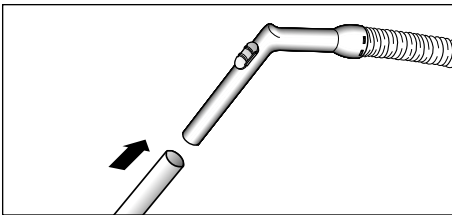

- 3) Connect the nozzle to the suction tube.
- 4) Connect the hose clammer to the body of the cleaner.

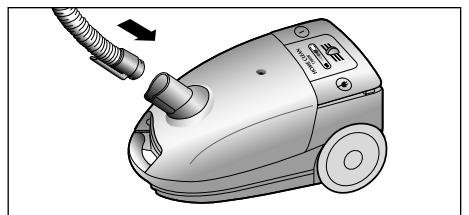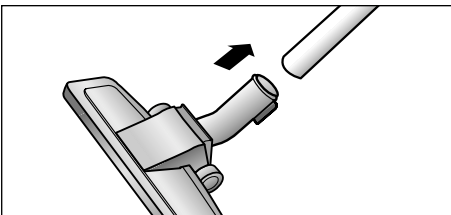


POWER CORD

1) PULLING OUT

The power cord is long enough to be drawn out for convenience.

2) REWINDING


Upon finishing cleaning disconnect the plug from the electrical outlet and just press the cord rewind button lightly with your toe.

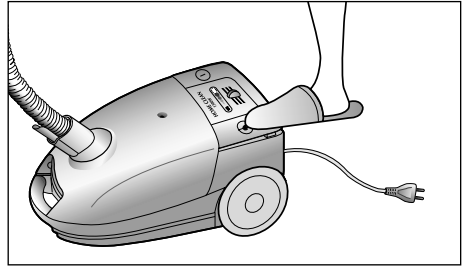

NOTE : When removing the power cord from the electrical outlet, grasp the plug, not the cord.

ON / OFF SWITCH

With the cord plugged into an electrical outlet, start or stop the vacuum cleaner by pushing lightly on the switch downward with your toe.

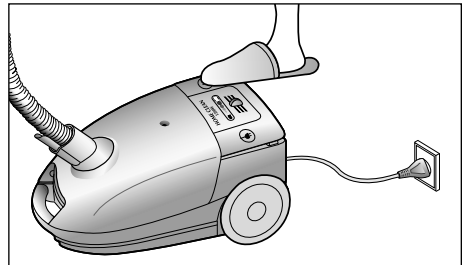

POWER CONTROL(ONLY VARIABLE CONTROL TYPE)

The vacuuming power can be adjusted to suit any situation with the electrical power control.

MIN = For delicate fabrics, e.g.net curtains.

MAX = For hard floors and heavily solid carpets.





DUST-FULL INDICATOR

If the "Dust-Full" indicator switch changes to "RED" while you are cleaning, the dust bag requires replacement.

NOTE : If the "Dust-Full indicator continues to display "RED" even after changing the dust bag turn the cleaner off and check whether the hose, tube or nozzle is clogged.

RUG/FLOOR SELETOR

Before use make sure that the position of button is in right position for the type of surface to be cleaned.

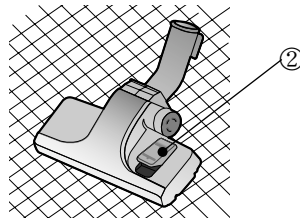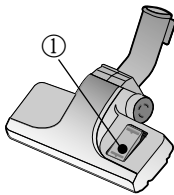


Push the side ① when cleaning the capets.


Push the side ② when cleaning the floor, tile,mat,etc.

USING THE ACCESSORIES


The accessories are stored at the rear side of the cleaner.

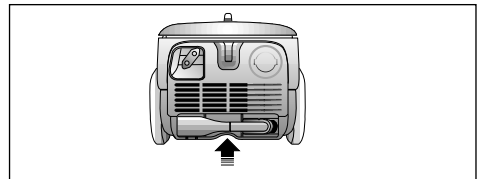

 - Dusting brush for furniture, shelves, books, etc.



 
- Crevice tool for radiators, crevice, corners, between cushions.



Located on the right rear side of the cleaner.


- 1) Disconnect the hose clamber from the body of the cleaner.
- 2) Connect the hose clamber to the blow hole.

USING THE BLOWER

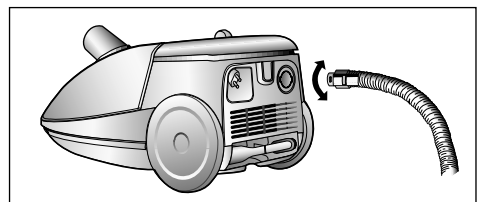


PARK POSITION

Located on the top rear side of the vacuum cleaner, there is a support for a convenient park position during pauses when using the nozzle.

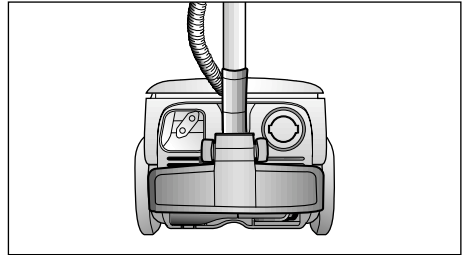


TRANSPORTING AND STORING THE VACUUM CLEANER

For easy storage and transportation, this vacuum cleaner has a clip system built on the body, which will keep the tube, hose and nozzle in a vertical position.

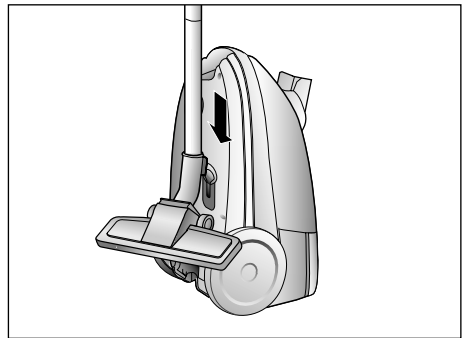


REPLACING THE DUST BAG


- 1) To open the cover of the dust bag compartment press the clamber forward located at the front of the dust cover.

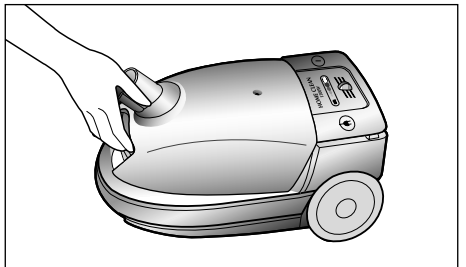

- 2) remove the dust bag from the cleaner.

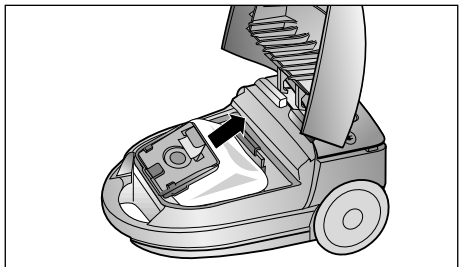


- 3) After removing the used dust bag, insert the cardboard bag collar of the new dust bag into the suction inlet to the full.

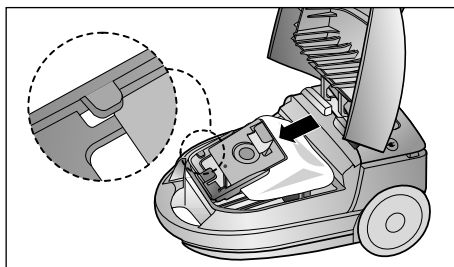

- 4) Press the dust cover down gently until the clamper relocks.

FOR CLOTH FILTER BAG

Use only a designated cloth filter bag:
After using, if the cloth filter bag is full of dust, clean the cloth filter bag and use it again.

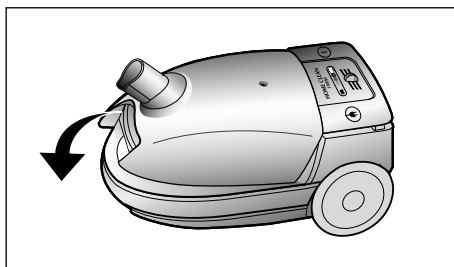

TROUBLE SHOOTING

PROBLEM	CAUSE	REMEDY
Motor does not start	No voltage	Check cable, plug and socket.
Suction force is gradually decreasing	Filter, nozzle, suction hose or tube is blocked.	Remove the object.
Cord does not rewind fully	Check that the cord is not twisted or wound unevenly	Pull the cord out 2~3m & push down the cord, rewind button.

This Vacuum cleaner is approved the following
EMC Directive : 89/336/EEC, 92/31EEC and 93/68/EEC
EN 61000-3-2 : 1995, EN 55014 : 1993 and EN 55104 : 1995
Low Voltage Safety Directive : 73/23/EEC and 93/68/EEC
IEC 335-1, IEC 335-2-2, EN 60335-1 and EN 60335-2-2

DJ68-40014A REV(0.3)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>