

**SANYO**

 
COMPACT  
**disc**  
DIGITAL AUDIO

---

# ECD-T1540

SIRIUS SATELLITE RADIO OPERATING MANUAL

---

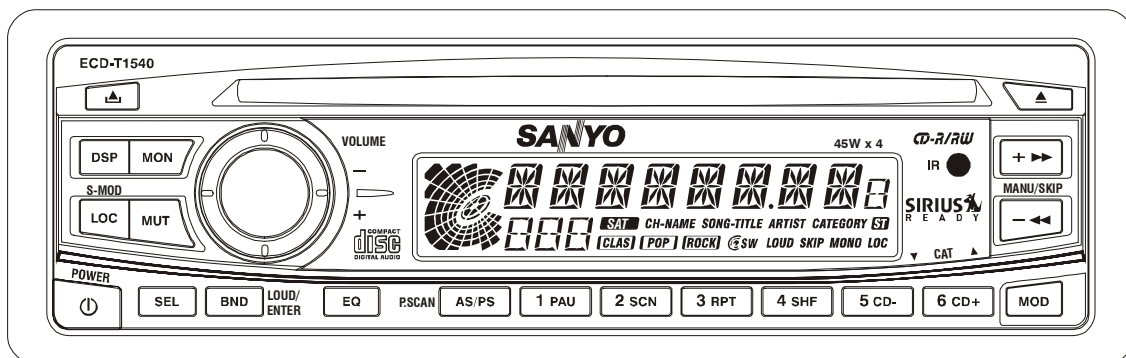


- Full Panel Detachable
- High Power FM/AM Stereo Receiver
- Compact Disc Player
- ISO Mounting with Removable Trim Ring
- Sirius Function
- Remote Control Ready
- CD-R/RW Compatibility

*(English)*

**SIRIUS OPERATION..... 2~3**
 
# SIRIUS OPERATION

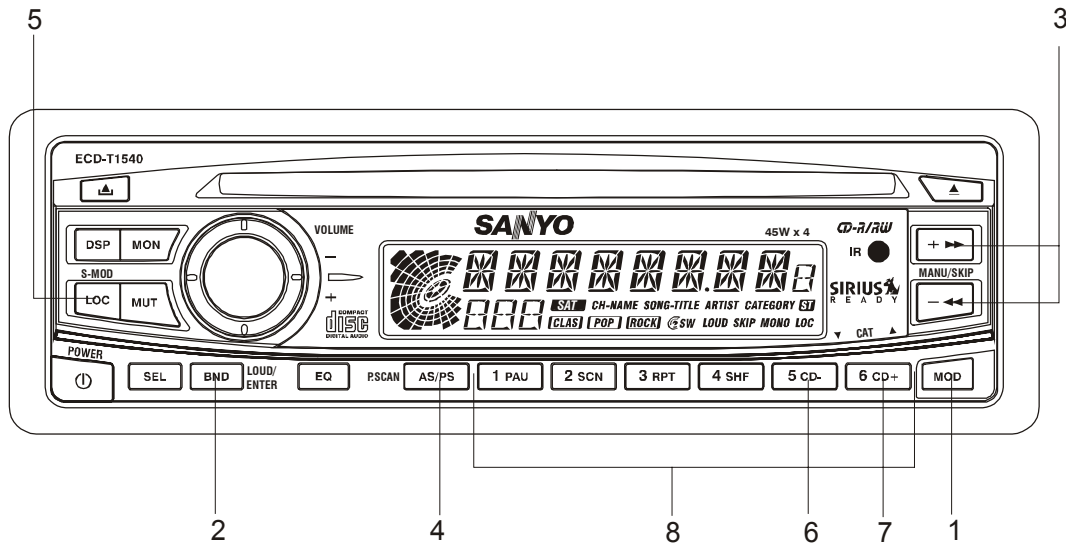


## SWITCHING TO SIRIUS MODE.....(1)

Press **MOD** button (1) to select Sirius mode.

## SELECTING USER-PRESET CHANNEL.....(2)

At Sirius mode, the Sirius user-preset channel group (3 groups) is toggled cyclically through the group by quickly pressing the **BND/LOUD/ENTER** button (2).

 The channel will change in the following order:



## SELECTING CHANNEL UP/DOWN.....(3)

Press the **MANU/SKIP** +▶▶ or -◀◀ button (3) to select the channel up or down.

## SEARCHING STATION.....(4)

When the **AS/PS/P.SCAN** button (4) is pressed, the channel searches for each user preset station from SR1 to SR2 to SR3.

When an available channel is detected, the station will be held at that preset number and play for 5 seconds. After that, it will mute and search for another available station

 
## STORING PRESET STATIONS .....(8)

The preset buttons (8) can be used to store 6 stations for convenient access to your favorite stations.

- Programming stations .....
  1. Select the desired station you want to store in memory.
  2. Press and hold one of the preset buttons (8) for more than 2 seconds until the corresponding preset button number appears. Repeat steps 1. and 2. to program additional stations.
- Quick tuning ..... Press one of the six preset buttons 8 shortly to select a preset station directly.

## SIRIUS MODE SELECTION .....(5)

Press **LOC/S-MOD** button (5) to switch Category mode, Skip mode or normal. It is used as the selection of each:



When Category mode or Skip mode is engaged, the “CATEGORY” or “SKIP” function is turned on in the display. When Category mode or Skip mode is released, the “CATEGORY” or “SKIP” function is turned off. When Direct mode is engaged, “DIRECT” of alphanumeric display is turned on.

### Select Category and TUNE UP/DOWN within selected Category

Use **CAT▲** button (7) or **▼ CAT** button (6) to select desire Category and press **BND/LOUD/ENTER** button (2).

In Category mode, stations can be tuned within the same category.

- When the user wishes to search by Category, press **LOC/S-MOD** button (5) can be pressed until it goes into Category search mode.
- Press **CAT▲** button (7) or **▼ CAT** button (6) up and down to get to the desired category.
- To change channels, press **LOC/S-MOD** button (5) again to Normal mode, and then press **MANU/SKIP +▶▶** or **-◀◀** button (3) to select the channel up or down.

### The operation of skip channel function

In Skip mode, pressing **LOC/S-MOD** button (5) for more than 3 seconds sets the SKIP channel mode. Details for set or release skip channel is as follows.

Use **MANU/SKIP +▶▶** or **-◀◀** button (3) to be switched to SKIP channel set or release mode sequentially.

- Press **BND/LOUD/ENTER** button (2) to select skip or release the following channel. (If the channel was skipped, the “SKIP” icon will be displayed.
- Press **LOC/S-MOD** button (5) for more than 3 seconds again to return to basic mode automatically after 10 seconds.

#### Note:

In skip mode, use **MANU/SKIP +▶▶** or **-◀◀** button (3) to show skipped channels.

### How to direct tune

1. In direct mode, display shows DIRECT and “000” channel number. (Hundred Digit flashing on/off)
2. Use **MANU/SKIP +▶▶** or **-◀◀** button (3) to select hundred digit.
3. Press **LOC/S-MOD** button (5) again to confirm entry of the hundred digit and the 10s digit is flashing on/off.
4. Use **MANU/SKIP +▶▶** or **-◀◀** button (3) to select 10s digit.
5. Press **LOC/S-MOD** button (5) again to confirm entry of the 10s digit and the 1s digit is flashing on/off.
6. Press **LOC/S-MOD** button (5) again to confirm entry of the 1s digit.
7. Press **BND/LOUD/ENTER** button (2) to direct tune.



21605 Plummer Street  
Chatsworth, CA91311  
ECD-T1540. Issue Number 1.

Printed in Hong Kong

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>