



One Sprint. Many Solutions.™

User's Guide

**PCS Vision Ready Link Phone
RL2500**

SANYO

Table of Contents

Welcome to Sprint	i
Introduction	ii
Section 1: Getting Started	1
1A. Setting Up Service	2
Getting Started With PCS Service	3
Setting Up Your Voicemail	4
Getting Help	4
Section 2: Understanding Your PCS Phone	6
2A. Your PCS Phone: The Basics	7
Front View of Phone	8
Key Functions	8
Viewing the Display Screen	10
Features of Your PCS Vision Ready Link Phone RL2500	11
Turning Your Phone ON and OFF	12
Using Your Phone's Battery	13
Displaying Your Phone Number	15
Making and Answering Calls	15
Making Calls	15
Answering Calls	16
Using the Speakerphone	18
Changing Ringer Volume	19
Adjusting Volume During a Conversation	19
Muting a Call	19
Missed Call Notification for Voice Calls	20
Calling Emergency Numbers	20
Dialing Options	21
In-Call Options	22
End-of-Call Options	23
Saving a Phone Number	23
Finding a Phone Number	24
Dialing and Saving Phone Numbers With Pauses	24
Abbreviated Dialing	25
Dialing From the Contacts Directory	25

Using Speed Dialing	26
Using PCS Ready Link	27
Preparing Your Phone for PCS Ready Link Service	27
Setting PCS Ready Link Mode	27
Ready Link Call Alerts	28
Displaying the PCS Ready Link List	28
Selecting Contact Lists	28
Making a PCS Ready Link Call (1-to-1 Call)	29
Making a PCS Ready Link Call (Group Call)	30
Making a PCS Ready Link Call by Entering a Number	31
Receiving a PCS Ready Link Call (1-to-1 Call)	31
Receiving a PCS Ready Link Call (Group Call)	32
Missed Call Notification for PCS Ready Link Calls	32
Redialing a PCS Ready Link Call	33
PCS Ready Link Options	33
Copying an Entry to Your Personal List or Personal Group List	34
Saving a PCS Ready Link Number	35
Finding an Entry in the PCS Ready Link List	36
Adding a New Contact to Your Personal List	36
Adding a New Group to Your Personal Group List	37
Editing a Contact in Your Personal List	38
Editing a Group in Your Personal Group List	38
Erasing an Entry in Your Personal List or Personal Group List	39
Erasing a PCS Ready Link List	40
Setting Speed Dialing for PCS Ready Link Entries	41
2B. Controlling Your Phone's Settings	42
Sound Settings	43
Ringer Types	43
Selecting a Tone Length	45
Setting a Start-up/Power-off Tone	46
Using Voice Prompt	46
Adjusting the Phone's Volume Settings	47
Alert Notification	48
Silence All	49
Display Settings	50

Changing the Text Greeting	50
Changing the Backlight Time Length	50
Changing the Display Screen	51
Changing the Display for Incoming Calls	52
Changing the Display for Area Name	52
Changing the Display for Standby Mode	53
Changing the Screen Saver	54
Changing the Display for My Buddy	54
Changing the LED Indicator Color	55
Changing the Phone's Main Menu Style	55
Changing the Theme Color	55
Changing the Font Size	56
Location Settings	56
Airplane Mode	57
TTY Use With PCS Service From Sprint	57
Phone Setup Options	59
Shortcut	59
Auto Answer Mode	59
Setting the Open/Close Flip Option	60
Setting Any Key Answer	61
Setting the Side Key Guard	61
Setting Speed Dialing	62
Setting Abbreviated Dialing	63
Headset Mode	63
Sleep Mode	64
Setting Message Notification	64
Changing the Menu Language	64
2C. Setting Your Phone's Security	65
Accessing the Security Menu	66
Locking Your Phone	66
Unlocking Your Phone	67
Changing the Lock Code	67
Calling in Lock Mode	67
Restricting Calls	67
Using Special Numbers	68

Erasing the Contacts Directory	69
Erasing the Downloads	69
Resetting Your Phone	69
Resetting and Locking Your Phone through SMS	70
Security Features for PCS Vision™	71
Signing In and Out of PCS Vision Services	71
2D. Controlling Your Roaming Experience	72
Understanding Roaming	73
Setting Your Phone's Roam Mode	75
Controlling Roaming Charges Using Call Guard	76
2E. Navigating Through Menus	77
Menu Navigation	78
Menu Structure	78
Viewing the Menus	79
2F. Managing Call History	81
Viewing History	82
Call History Options	82
Making a Call From Call History	83
Saving a Phone Number From Call History	83
Prepending a Phone Number From Call History	84
Erasing Call History	84
2G. Using the Contacts Directory	85
Contacts List Entry Options	86
Entering Text	87
Selecting a Character Input Mode	87
Entering Characters Using T9 Text Input	87
Adding a Word to the T9 Database	88
Entering Characters by Tapping the Keypad	89
Entering Numbers, Symbols, Canned Suffixes, and Smileys	90
Adding a New Contacts Entry	91
Finding Contacts List Entries	92
Adding a Phone Number or Address to a Contacts Entry	94
Editing a Contacts Entry	94
Selecting a Ringer/Image Type for an Entry	95
Secret Contacts List Entries	96

Dialing PCS Services	96
2H. Personal Organizer	97
Managing the Scheduler	98
Adding an Event to the Scheduler	99
Event Alerts	100
Event Alert Menu	100
Viewing the Event List	100
Editing an Event	101
Adding a Call Alarm to the Scheduler	101
Call Alarm Alerts	102
Call Alarm Menu	102
Editing a Call Alarm	103
Erasing a Day's Events or Call Alarms	103
Viewing a Future/Past Day's Scheduled Events	103
Adding To Do Items	104
Viewing To Do List	104
Editing To Do Items	104
Adding a To Do Item to the Schedule	105
Deleting Items From the To Do List	105
Viewing Memory in Your Scheduler	106
Purging All Events, Call Alarms, and To Do List Items	106
Personal Information Management	107
Displaying Your User Address	107
Getting to Know Icon Indication	107
Displaying the Version Information	107
Using Your Phone's Tools	108
Using the Calculator	108
Using the World Clock	108
Downloading Files Through PCS Vision	109
Confirming the Downloaded Data	112
Viewing the Downloaded Data Size	117
2I. Using Your Phone's Voice Services	119
Using Voice-Activated Dialing	120
Programming a Voice Dial Tag to Your Phone	120
Reviewing Voice Dial Tags	121

Erasing All Voice Dial Tags	121
Recording Voice Memos	122
Reviewing Voice Memos	123
Erasing Voice Memos	124
Setting Up Screen Call	125
Activating Screen Call	125
Selecting an Announcement for Screen Call	126
Recording Your Name for a Pre-Recorded Announcement	126
Recording a Custom Announcement	127
Reviewing an Announcement	127
Erasing an Announcement	127

Section 3: Using PCS Service Features128

3A. PCS Service Features: The Basics129

Using Voicemail	130
Setting Up Your Voicemail	130
Voicemail Notification	130
New Voicemail Message Alerts	130
Retrieving Your Voicemail Messages	131
Voicemail Options	132
Clearing the Message Icon	134
Voicemail Menu Key	135
Using Caller ID	136
Responding to Call Waiting	136
Making a Three-Way Call	137
Using Call Forwarding	138

3B. PCS Vision™139

Getting Started With PCS Vision	140
Your User Name	140
Launching a PCS Vision Connection	141
Net Guard	142
PCS Vision Connection Status and Indicators	142
Navigating the Web	143
Messaging	145
Message Types	145
Messages	145

New Messages	145
Message Storage	145
Displaying Messages	146
Changing the Displaying Font Size of a Message	146
Message Options	147
Extracting Phone Numbers From a Message	147
Prepending a Phone Number From a Message	148
Extracting Email Addresses From a Message	149
Extracting URLs From a Message	149
Creating Folders for Messages	150
Adding a Folder for Messages	151
Moving a Message Into Another Folder	151
Editing Folders	152
Erasing a Folder	152
Erasing All Messages	153
Signing Up for Updates	153
PCS Mail	154
Using PCS Mail	154
Accessing PCS Mail Messages	154
Composing PCS Mail Messages	154
PCS Short Mail	155
Using PCS Short Mail	155
Email	157
Accessing Email	157
Instant Messaging	158
Accessing Instant Messaging	158
Chat	159
Downloading Games, Ringers, and Screen Savers	160
Games	162
Ringers	164
Screen Savers	166
Web	168
Using the Browser Menu	169
PCS Business Connection™ Personal Edition	172
PCS Vision FAQs	173

3C. PCS Voice Command™	174
Getting Started With PCS Voice Command	175
Creating Your Own Address Book	175
Making a Call With PCS Voice Command	176
Section 4: Safety Guidelines and Warranty Information ...	177
4A. Safety	178
Getting the Most Out of Your Reception	179
Maintaining Safe Use of and Access to Your Phone	180
Caring for the Battery	183
Acknowledging Special Precautions and the FCC Notice	184
Owner's Record	186
User's Guide Proprietary Notice	186
4B. Manufacturer's Warranty	187
Manufacturer's Warranty	188
Index	191

Welcome to Sprint

Sprint built the largest all-digital, all-PCS nationwide network with advanced multimedia services, reaching more than 230 million people for clarity you can see and hear. We built our network to give you what we believe you really want from a wireless phone: clear sound, private conversations, and time-saving features.

But with Sprint, you can do something even more far-reaching: simplify your life. Our advanced technology is designed to grow with your communications needs, so that one day you'll be able to rely entirely on your PCS Phone to stay connected.

This guide will familiarize you with our technology and your new PCS Vision Ready Link Phone through simple, easy-to-follow instructions. If you have already reviewed the Start Here Guide, which was packaged with your new phone, then you're ready to explore the advanced features outlined in this guide.

If you have not read your Start Here Guide, go to Section One - Getting Started. This section provides all the information you need to quickly activate your phone, set up your voicemail, and much more. It also contains information on how to contact Sprint if you have any questions about your service, wish to check your account balance, or want to purchase additional products or services.

Thank you for choosing Sprint.

Introduction

This User's Guide introduces you to PCS Service and all the features of your new phone. It's divided into four sections:

- ▶ **Section 1:** Getting Started
- ▶ **Section 2:** Understanding Your Phone
- ▶ **Section 3:** Using PCS Service Features
- ▶ **Section 4:** Safety and Warranty Information

Throughout the guide, you'll find tips that highlight special shortcuts and timely reminders to help you make the most of your new phone and service. The Table of Contents and Index will help you locate specific information quickly.

You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, simply turn to that page. Follow the instructions in that section, and you'll be ready to use your phone in no time.

Tip: You can print this guide to keep on hand or to view it online. If you're viewing it online, simply click on a topic in the Table of Contents or Index or on any page reference. The PDF will automatically display the appropriate page.

Getting Started

Setting Up Service

In This Section

- ▶ **Getting Started With PCS Service**
 - ▶ **Setting Up Voicemail**
 - ▶ **Getting Help**
-

This section walks you through setting up service for your PCS Phone, unlocking your phone, setting up your voicemail, and contacting Sprint for assistance with your PCS Service.

Getting Started With PCS Service


Determine if Your Phone is Already Activated

If you received your phone in the mail or purchased it at a Sprint Store, it probably has already been activated. All you need to do is unlock your phone.

If your phone is not activated, please refer to the Start Here Guide included with your phone.

Unlocking Your Phone

Follow these steps to unlock your phone:

1. Press  to turn the phone on.
2. Select **Unlock** (left softkey).

Note: To select a softkey, press the softkey button directly below the softkey text, which appears at the bottom left and bottom right of your phone's display screen. Softkey actions change according to the screen you're viewing and will not appear if there is no corresponding action available.

3. Enter your four-digit lock code. For security purposes, the code is not visible as you type.

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or PCS Phone Number or try 0000. If none of these work, call PCS Customer Solutions at 1-888-211-4PCS (4727).



Activating Your Phone

To activate your phone, follow the directions in the Start Here Guide included with your phone.

Setting Up Your Voicemail

All unanswered calls to your PCS Phone are automatically transferred to voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your voicemail and personal greeting as soon as your PCS Phone is activated.

To set up voicemail:

1. Press and hold .
2. Follow the system prompts to create your passcode, record your greeting, record your name announcement, and choose whether to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding , bypassing the need for you to enter your passcode).

Note: The voicemail setup process may vary in certain Affiliate areas.

For more information about using your voicemail, see “Using Voicemail” on page 130.

Getting Help

Visit Our Website

Stop by www.sprintpcs.com and sign on to get up-to-date information on PCS Services, options and more.

You can also:

- ▶ Review coverage maps
- ▶ Learn how to use voicemail
- ▶ Access your account information
- ▶ Purchase accessories
- ▶ Add additional options to your service plan
- ▶ Check out frequently asked questions
- ▶ And more

Reaching PCS Customer Solutions

You can reach PCS Customer Solutions by:

- ▶ Dialing **✖ 2 TALK** on your PCS Phone
- ▶ Signing on to your account at www.sprintpcs.com
- ▶ Calling us toll-free at 1-888-211-4727 (Consumer customers), 1-877-CLEARPY (253-2779) (Clear Pay customers), or 1-888-788-4727 (Business customers)
- ▶ Writing to us at PCS Customer Solutions, P.O. Box 8077, London, KY 40742

Receiving Automated Invoicing Information

For your convenience, your phone gives you access to invoicing information on your PCS Account. This information includes balance due, payment received, invoicing cycle, and the number of minutes used since your last invoicing cycle. (Normal airtime usage will apply.)

To access this information:

- Press **✖ 4 TALK**.

Note: This service may not be available in all Affiliate markets.

PCS Directory Assistance

PCS Directory Assistance provides a variety of services, including residential, business, and government listings; assistance with local or long-distance calls; movie listings; hotel, restaurant, shopping, and major local event information. There is a per-call charge and you will be billed for airtime.

- Press **4 1 1 TALK**.

PCS Operator Services

PCS Operator Services can provide assistance in placing collect calls or calls billed to a local telephone calling card or third party.

- Press **0 TALK**.

For more information or to see the latest in products and services, visit us online at www.sprintpcs.com.

Note: PCS Operator Services may not be available in all Affiliate markets.

Understanding Your PCS Phone

Your PCS Phone: The Basics

In This Section





 
- ▶ **Front View of Phone**
 - ▶ **Viewing the Display Screen**
 - ▶ **Features of Your Phone**
 - ▶ **Turning Your Phone ON and OFF**
 - ▶ **Using Your Phone's Battery**
 - ▶ **Displaying Your Phone Number**
 - ▶ **Making and Answering Calls**
 - ▶ **Using PCS Ready Link**
-

Your PCS Phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. This section will guide you through the basic functions and calling features of your phone.

Front View of Phone








 

 






 













Key Functions

- 1. Antenna:** Fully extend the antenna for the best reception.
- 2. Ready Link Button:** Press to access the PCS Ready Link List (see “Using PCS Ready Link” on page 27).
- 3. Side Volume Key:** Lets you adjust the receiver volume during a call or ringer volume in standby mode.
- 4. Headset Jack:** Insert the plug of a headset (sold separately) for hands-free phone use.
- 5. LED Indicator:** Shows your phone’s connection status at a glance and can be set to display a wide variety of colors.
- 6. Speaker:** Allows you hands-free conversation while in speakerphone mode. Lets you hear the different ringers and sounds. You can mute the ringer when receiving incoming calls by pressing , , , , or .
- 7. Sub LCD:** Lets you monitor the phone’s status and see who’s calling without opening the phone.

8. **Earpiece:** Lets you hear the caller's voice.
9. **Main LCD (display):** Displays the phone's main menu, features, modes, etc.
10. **Softkey (left):** Lets you select the menu corresponding to the bottom left line on the Main LCD.
11. **Navigation Key:** Lets you navigate quickly and easily through the menu options. You can access menu shortcuts by pressing ► =Contacts, ◀ =My Shortcut, ▲ =Messaging, and ▼ =Downloads.
12. **MENU/OK:** Lets you access the phone's menus and select menu options.
13. **Web:** Lets you launch the browser.
14. **TALK:** Lets you place or receive calls, answer Call Waiting, or use Three-Way Calling and Voice Dial.
15. **Microphone:** To speak into or record your voice.
16. **Accessories Connector:** Connects accessories such as Travel Charger (included) or Desktop Charger (sold separately).
17. **Standard Charger Jack:** Connects the Sprint Standardized Charger (sold separately). Please visit your local Sprint Store for this and other accessories.
18. **Keypad:** Lets you enter numbers, letters, and characters, and navigate within menus. Press and hold keys 2-9 for speed dialing.
19. **SPEAKER Key:** Lets you place or receive calls in speakerphone mode. You can also use it to activate Voice Dial and Memo recording.
20. **END/POWER:** Lets you turn the phone On/Off, end a call, or return to standby mode.
21. **BACK:** Lets you clear characters or display Time/Date while the phone is in use.
22. **Side Call Key:** Lets you place or receive calls without opening the phone.
23. **Softkey (right):** Lets you select the menu corresponding to the bottom right line on the Main LCD.

Viewing the Display Screen

 This list identifies the symbols you'll see on your display screen.

- ▶  shows your current signal strength. The more lines you have, the stronger your signal.
- ▶  means your phone cannot find a signal.
- ▶  tells you a call is in progress.
- ▶  indicates your PCS Vision/PCS Ready Link access is dormant.
- ▶  indicates your PCS Vision/PCS Ready Link access is enabled.
- ▶  indicates your PCS Vision/PCS Ready Link access is disabled.
- ▶  indicates you have new text messages waiting.
- ▶  indicates you have new voicemail messages waiting. Press and hold  to call your voicemail box.
- ▶  indicates you have text messages and voicemail messages waiting.
- ▶  indicates you are "roaming" off the Sprint Nationwide PCS Network.
- ▶  indicates the PCS Ready Link Service is enabled.
- ▶  indicates the PCS Ready Link Service is disabled.
- ▶  shows the level of your battery charge. The more black you see, the more power you have left. It displays  while charging.
- ▶  indicates you have menus to scroll (in four directions).
- ▶  indicates the vibrate feature is set to On.
- ▶  indicates volume level 4 and vibrate feature is set to On.
- ▶  indicates the voice call ringer setting is Off.
- ▶  indicates all the sound settings are Off.
- ▶  indicates the Location Service of your phone is enabled.
- ▶  indicates the Location Service of your phone is disabled.
- ▶  indicates you have a new caller's message.
- ▶  indicates the Screen Call Auto setting is On.
- ▶  indicates you have new downloaded data.
- ▶  indicates your phone is in TTY mode.
- ▶  indicates Headset mode is set to Ready Link and headset is connected.
- ▶  indicates the speakerphone mode is set to On.

Tip: Display indicators let you know when you're off the Sprint Nationwide PCS Network and whether you're operating in digital or analog mode.

Features of Your PCS Vision Ready Link Phone RL2500


Congratulations on the purchase of your PCS Vision Ready Link Phone RL2500. This phone is easy-to-use and reliable. It also offers many significant features and service options:

- ▶ Dual-band/tri-mode capability provides access to other PCS Digital and Analog Networks where Sprint has implemented roaming agreements (page 73).
- ▶ PCS Ready Link allows you to connect with your friends, family, and co-workers with just one push of a button. You can make 1-to-1 or 1-to-many calls instantly, like a two-way radio. This feature provides a range of solutions to meet your communications needs (page 27).
- ▶ PCS Vision™ provides access to the wireless Internet in digital mode (page 139).
- ▶ PCS Mail and PCS Short Mail provide quick and convenient text messaging capabilities (page 154).
- ▶ PCS Voice Command™ lets you dial phone numbers by speaking someone's name or the digits in their phone number (page 174).
- ▶ Downloadable ringers, screen savers (images), games, and more allow you to turn down time into fun time and to personalize your phone (page 160).
- ▶ The built-in scheduler lets you schedule alerts to remind you of important events (page 98).
- ▶ Speed Dialing lets you call the phone number stored in the Contacts directory by one touch dialing (page 26).
- ▶ The Contacts directory can store up to 300 names, 500 phone numbers, 300 Email addresses, and 300 Web addresses. Each entry can contain up to 7 phone numbers, 1 email address, 1 Web address, a ringer, and an image (Section 2G).
- ▶ Wide 2.1 inch display screen plus external display.
- ▶ The Side Call Key lets you place or receive calls without opening the phone.
- ▶ The Sub LCD allows you to monitor the phone's status and to see who's calling without opening the phone.
- ▶ The Flip options allow you to answer an incoming call by opening the flip or end a call by closing the flip.

Turning Your Phone ON and OFF

Turning Your Phone On

- Press  to turn your phone on.

Note: When you turn on your phone for the first time, you will be asked to activate PCS Ready Link service. Press  or **OK** (left softkey) to use PCS Ready Link service.

Once your phone is On, it displays “Looking for service...” which indicates that your phone is searching for a signal. When your phone finds a signal, it automatically enters standby mode – the phone’s idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for PCS Service by pressing any key (when your phone is turned On).

Tip: The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.

Turning Your Phone Off

- Press  for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

Using Your Phone's Battery

Battery Capacity

Your PCS Phone is equipped with a Lithium Ion (LiIon) battery. It allows you to recharge your battery before it is fully drained. The battery provides approximately 3.25 hours of continuous digital talk time (1.4 hours in analog) or approximately 90 hours of continuous digital standby time (14 hours in analog).

When the battery reaches 5% of its capacity, the battery icon blinks. When there are approximately five minutes of talk time left, the phone sounds an audible alert and then powers down.


Note: Long backlight settings, searching for service, vibrate mode, PCS Ready Link mode, and browser use affect the battery's talk and standby times.

Tip: Be sure to watch your phone's battery level indicator and charge the battery before it runs out of power.

Installing the Battery

Your PCS Phone comes with a LiIon battery. Follow these steps to install it:


1. Place the battery into the space beneath the antenna with the metal contacts at the bottom, facing downward.
2. Gently press down until it's in place and the battery release latch snaps.

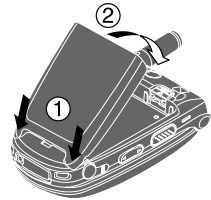

Removing the Battery


To remove your battery, follow these easy steps:

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Push the battery release latch up and hold the battery.
3. Pull the battery up and out at a 45-degree angle.

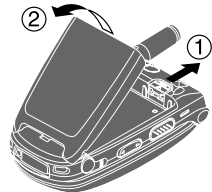

Charging the Battery

Your PCS Phone comes with a rechargeable battery. You should charge the battery as soon as possible so you can begin using your phone.





Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you will lose all the information you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon  blinks and the phone sounds a warning tone.

Always use a Sprint-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

Warning! Using the wrong battery charger could cause damage to your phone and void the warranty.

Using the Travel Charger

To use the travel charger provided with your phone:

1. Plug the travel charger into a wall outlet.
2. Plug the other end of the travel charger into the bottom of your phone (with the battery installed).
 - **Charging when your phone is turned on:**
The battery icon  appears on the display while charging. The battery icon turns to  when charging is complete.
 - **Charging when your phone is turned off:**
The battery icon  appears, and the message "BATTERY CHARGING-Power Off-" is shown on the display while charging. When the battery is completely discharged, you may wait for several minutes until the message is shown on the display. The battery icon turns to , and the message changes to "CHARGING COMPLETE-Power Off-" when charging is complete.

It takes approximately 3.5 hours to fully recharge a completely rundown battery. With the Sprint-approved LiIon battery, you can recharge the battery before it becomes completely run down.

Displaying Your Phone Number

Just in case you forget your phone number, your PCS Phone can remind you.

To display your phone number:

1. Press **MENU OK** to access the main menu.
2. Select **Contacts** and press **MENU OK**.
3. Select **My Phone#** and press **MENU OK**.

Note: To access the phone's main menu, press **MENU OK** from standby mode. Menu items may be selected by highlighting them with the Navigation key and pressing **MENU OK**.

Making and Answering Calls

Making Calls

Your PCS Phone offers many different ways to make calls, including PCS Voice Command™ (page 174), Speed Dialing (page 26), and using Call History (page 81).


With the Flip Open:

1. Make sure your phone is on.
2. Enter a phone number. (If you make a mistake while dialing, press **BACK** to erase one digit at a time. Press and hold **BACK** to erase the entire number.)
3. Press **TALK** or **SPEAKER**. (To make a call when you are roaming and Call Guard is enabled, see "Call Guard" on page 76.)
4. When you're finished, press **END / Ⓞ**.

 
 
Tip: To redial your last outgoing call, press **TALK** or **SPEAKER** twice.

Tip: When making calls off the Sprint Nationwide PCS Network, always dial using 11 digits (1 + area code + phone number).

Important: To maximize performance when using your PCS Phone, extend the antenna before a call and do not touch the antenna during a call (see page 180).

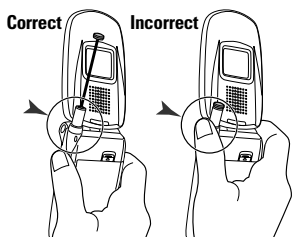



With the Flip Closed:

1. Make sure your phone is on.
2. Press and hold the Side Call key () on the right side of the phone.
3. You will see a message on the Sub LCD. Follow the system prompts. (The call will be made in speakerphone mode, unless you have a headset attached to the phone.)
 - **Redial** to redial the last number you called.
 - **Voice Dial** to use the Voice Dial function (see “Using Voice-Activated Dialing” on page 120).
4. When you're finished, press and hold .


Note: To use a Voice Dial, you must have stored entries for Voice Dial (see “Programming a Voice Dial Tag to Your Phone” on page 120).

Answering Calls

With the Flip Open:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press  or  to answer an incoming call. (Depending on your phone's settings, you may also answer incoming calls by pressing any digit.)

With the Flip Closed:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
 2. When your phone rings or vibrates, press and hold the Side Call key () on the right side of the phone. (The Call will be answered in speakerphone mode.)
- or -
- Open the phone to use the earpiece.

Note: If the setting for Open Flip is not set to "Answer Call", opening the phone will not answer the call. (See "Setting the Open/Close Flip Option" on page 60.)

Your PCS Phone notifies you of incoming calls in the following ways:

- ▶ The phone rings or vibrates.
- ▶ The LED flashes.
- ▶ The backlight illuminates.
- ▶ The screen displays an incoming call message.
- ▶ If available, the phone number of the caller is displayed.
- ▶ If the phone number is in your Contacts list, the Contact entry's name is displayed.

The following options are also displayed by pressing .

To select an option, highlight it and press .

- ▶ **Call Guard** to answer the call when you are roaming mode. See "Call Guard" on page 76.
- ▶ **Answer** to answer the call.
- ▶ **Answer:Speaker** to answer the call in speakerphone mode.
- ▶ **Don't Answer** to hang up the incoming call and return to Web while you are in the Web operation. (This feature appears when PCS Vision access is dormant.)
- ▶ **Screen Call** to answer the call by using a pre-recorded announcement. (This feature appears when you are in a PCS Service area or digital roaming area.) See page 125.
- ▶ **Quiet Ringer** to mute the ringer. (This feature appears when the ringer is set.)
- ▶ **Exit** to exit the options.

Tip: Your PCS Phone offers different ways to answer calls. See page 59 for Auto Answer, and see page 61 for Any Key Answer.

Answering a Roam Call With Call Guard Enabled

To answer a call when you are roaming and Call Guard is enabled:

1. Press **TALK** or **SPEAKER**.
2. The following message will appear: "Roaming rate applies. Please Press [1] to accept." Press **1** to answer the call.

Note: If your phone is off, in an active PCS Vision Connection, or on a PCS Ready Link call, incoming calls go to voicemail.

Ending a Call

To disconnect a call when you are finished:

With the Flip Open:

- Close the phone or press **END (ⓧ)**.

With the Flip Closed:

- Press and hold **ⓧ**.

Note: If the setting for Close Flip is not set to "end call", closing the phone will not end the call. (See "Setting the Open/Close Flip Option" on page 60.)

Tip: Time/Date is displayed when you press **BACK** while the phone is in use.

Using the Speakerphone

The speakerphone feature lets you hear audio through the speaker and talk without holding the phone. When the speakerphone is activated, use the volume control keys on the side of the phone to adjust the volume.

To turn the speakerphone on during a call:

- Press **SPEAKER**.
- or -
- Press **MENU OK**, highlight **Speaker On**, and press **MENU OK**.

To turn the speakerphone off during a call:

- Press **SPEAKER**.
- or -
- Press **MENU OK**, highlight **Speaker Off**, and press **MENU OK**.

Changing Ringer Volume

To change the ringer volume, adjust the Side Volume key when the phone is in standby mode.

Note: To change the ringer volume from the main menu, see “Adjusting the Phone’s Volume Settings” on page 47.

Adjusting Volume During a Conversation

Whether you need to hear more or less of a conversation, adjust the Side Volume key or ▲/▼ on the Navigation key during a call.

Muting a Call

There are times when it’s necessary to mute a call so that your caller does not hear you or certain background noise.

With the Flip Open:

To use this function during a call:

- Press **MENU OK**, highlight **Mute**, and press **MENU OK**. (When the phone is muted, “Mute” appears on the display.)

To unmute a call:

- Press **MENU OK**, highlight **Unmute**, and press **MENU OK**.

With the Flip Closed:

To use this function during a call:

- Simply press **•||** (side of the phone).

To unmute a call:

- Press **•||** once again during a call.

Missed Call Notification for Voice Calls

When an incoming voice call is not answered, the Missed Call notification is displayed on your screen.

To call the last Missed Voice Call:

- Simply press **TALK** or **SPEAKER**.

To display the Missed Voice Call Log:

- Press **View** (left softkey).

To call the entry, highlight the entry you want to call, and press **TALK** or **SPEAKER**.

Note: If the phone is locked, you need to press **Unlock** (left softkey), then enter the lock code and press **View** (left softkey).

Calling Emergency Numbers

You can place calls to 911 (dial **9** **1** **1** and press **TALK**) even if your phone is locked or your account is restricted. Once you dial the numbers, your phone will enter Emergency mode.

To select an option, press **MENU OK**, highlight it, and press **MENU OK**.


Options:

- ▶ **My Phone#** to display your phone number.
- ▶ **Speaker On** to activate speakerphone mode. (If you are in speakerphone mode, the option will appear as **Speaker Off** to deactivate.)
- ▶ **Unlock Phone** to unlock your phone (appears if the phone is locked).



Once you press **END /O**, your phone is still in Emergency mode. To exit, follow these instructions:

1. Press **END /O**.
2. Press **MENU OK** to display the options.
3. Highlight **Exit Emergency** and press **MENU OK**.
 - **Call 911** to call 911.
 - **Call 911:Speaker** to call 911 in speakerphone mode.
 - **My Phone#** to display your phone number.
 - **Exit Emergency** to exit Emergency mode.

Dialing Options

Dialing options are displayed when you press  after entering numbers in the phone's standby mode.

To select an option, highlight it and press .

- ▶ **Call** to dial the phone number.
- ▶ **Call:Speaker On** to dial the phone number in speakerphone mode.
- ▶ **Save Phone#** to save the phone number in your Contacts list. (See “Saving a Phone Number” on page 23.)
- ▶  **Hard Pause** to insert a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 24.)
- ▶  **2-Sec. Pause** to insert a 2-second pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 24.)
- ▶ **Hyphen** to insert a hyphen manually where you like, however, they are mainly for show.

Tip: To speed dial a phone number, press and hold appropriate speed dial key locations 2-9. See page 62 to set this feature.

This option appears when you enter four digits and press .

- ▶ **Abbrev. Dial** to dial the phone number in your Contacts list that ends with the four digits you enter. (See “Abbreviated Dialing” on page 25.)

This option appears when you enter four or more digits and press .

- ▶ **Find** to display Contacts list entries that end with the digits you enter. (See “Finding a Phone Number” on page 24.)

In-Call Options

During a call, your phone displays menu options when you press .

To select an option, highlight it and press .

- ▶ **Flash** to answer an incoming Call Waiting call or to connect a third party during Three-Way Calling.
- ▶ **Mute or Unmute**
Select **Mute** to mute your phone's microphone. Select **Unmute** to reactivate the microphone.
- ▶ **Speaker On or Speaker Off** to route the phone's audio through the speaker. You can adjust the speakerphone volume using the Side Volume key.

Warning! Due to higher volume levels, do not place the phone near your ear during speakerphone use.

- ▶ **Three-Way Call** to call a third party.
- ▶ **Call History** to access the Call History menu. (See "Managing Call History" on page 81.)
- ▶ **Contacts** to access the Contacts menu. (See "Using the Contacts Directory" on page 85.)
- ▶ **Messaging** to access the Messaging menu. (See "Messaging" on page 145.)
- ▶ **Settings** to access the Settings menu. (See "Controlling Your Phone's Settings" on page 42.)
- ▶ **Tools/Extras** to access the Tools/Extras menu. (See Calendar menu instructions on page 98.)
- ▶ **Voice Services** to access the Voice Services menu. (See page 119.)
- ▶ **Phone Info** to access the Phone Info menu. (See page 107.)

Note: The Flash menu appears for Call Waiting and Three-Way Call. The Mute menu does not appear during a 911 call. The Three-Way Call Menu does not appear in a Roaming area.

End-of-Call Options

To display the following options, press **MENU OK** within 10 seconds after disconnecting a call.

To select an option, highlight it and press **MENU OK**.

- ▶ **Call Again** to dial the phone number.
- ▶ **Call:Speaker On** to dial the phone number in speakerphone mode.
- ▶ **Save Phone#** to save the phone number in your Contacts list. **Go to Phone Book** appears when the number is already in your Contacts list. (See “Saving a Phone Number” on this page.)

Note: The End-of-Call options are not displayed for calls identified as No ID or Restricted.

Saving a Phone Number

Your PCS Phone can store a total of 500 phone numbers in 300 Contacts entries. Each entry can store up to seven phone numbers and the entry’s name can contain 16 characters. Your phone automatically sorts the Contacts entries alphabetically.

To save a number from standby mode:

1. Enter a phone number.
2. Press **MENU OK**.
3. Highlight **Save Phone#** and press **MENU OK**.
4. Select a label by highlighting **Home, Work, Mobile, Pager, Data, Fax, or No Label** and press **MENU OK**.
5. Enter a name and press **MENU OK**.

If you have already stored entries in the Contacts list, you are prompted to select the following entry modes:

- **New Name** to enter a name directly.
- **From Ph. Book** to select a name from the Phone Book.

6. Press **Save** (left softkey).

After you have saved the number, the new Contacts entry is displayed. (See “Contacts List Entry Options” on page 86.)

Finding a Phone Number

You can search Contacts entries for phone numbers that contain a specific string of numbers.

To find a phone number:

1. Enter four or more digits and press **MENU OK**. The more numbers you enter, the more specific the search becomes.
2. Highlight **Find** and press **MENU OK**.
3. The Contacts list entries that end with the digits you entered appear.
4. Highlight your desired entry.
 - Press **MENU OK** to display the entry details.
 - Press **TALK** or **SPEAKER** to dial.

Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers. If you select a hard pause, the next set of numbers are sent when you press **TALK**. If you select a 2-second pause, your phone automatically sends the next set of numbers after two seconds.

Note: You can have multiple pauses in a phone number and combine 2-second and hard pauses.

To dial or save phone numbers with pauses:

1. Enter the phone number and press **MENU OK**.
2. Highlight either **Hard Pause** or **2-Sec. Pause** and press **MENU OK**. (Hard pause is displayed as a “H” and 2-second pause as a “T”.)
3. Enter additional numbers.
4. To dial the number, press **TALK** or **SPEAKER**.
– or –
To save the number in your Contacts list, press **MENU OK**, highlight **Save Phone#**, and press **MENU OK**.

When dialing a number with a hard pause, press **TALK** to send the next set of numbers.

Abbreviated Dialing

When you enter four digits of a phone number, the screen displays “Abbrev. Dial.” Your phone dials the phone number in your Contacts list that ends with the four digits you entered.

To make a call using Abbreviated Dialing:

1. Enter the last four digits of a Contacts entry’s phone number.
2. Press **MENU OK** to display the dialing options.
3. Highlight **Abbrev. Dial** and press **MENU OK**, **TALK**, or **SPEAKER**.

Note: If there are more than two matched numbers in your Contacts list, the number that comes first alphabetically will be dialed. If there is no matched number, your phone dials the number you set for abbreviated dial with the last 4-digits you entered. See page 63 to set this feature.

Dialing From the Contacts Directory

To dial directly from a Contacts entry:

1. Press **MENU OK** to access the main menu.
2. Select **Contacts** and press **MENU OK**.
3. Select **Find/Add Entry** and press **MENU OK**.

Shortcut: Press **▶** on the Navigation key to list entries.

4. Use your Navigation key to scroll through the Contacts list, highlight your desired entry, and press **MENU OK**.
5. Highlight the number you want to call.
6. Press **Options** (right softkey) for the menu options.
7. Highlight **Call** or **Call:Speaker On** and press **MENU OK** to make a call.

Tip: You can also make a call by pressing **TALK**, **SPEAKER**, or **Call** (left softkey) during step 5 above.

Note: The icons next to each entry represent the Contacts label. The icon with triangle means you have another number to choose. Use **◀/▶** on the Navigation key to locate an appropriate label icon for the entry.



Using Speed Dialing

With this feature, you can dial your favorite entries using one key press for locations 2-9 (see page 62 for setting Speed Dialing).

To use speed dial for voice calls:

- From standby mode, press and hold the appropriate key for approximately two seconds.

- or -

- From standby mode, press the appropriate key and press  or .


The display confirms that the number has been dialed when it shows “Connecting...”.

To use speed dial for PCS Ready Link calls:

- From standby mode, press the appropriate key and press and hold . (See page 41 for setting Speed Dialing for PCS Ready Link Entries.)


The display confirms that the number has been dialed when it shows “R-Link calling...”.

Using PCS Ready Link

PCS Ready Link allows you to connect with your friends, family and co-workers with just one push of a button. You can make 1-to-1 or 1-to-many calls instantly like a two-way radio. This feature provides a range of solutions to meet your communications needs. You can make and receive PCS Ready Link calls when your phone displays .

Preparing Your Phone for PCS Ready Link Service





The first time you use your PCS Vision Ready Link Phone, your phone must identify itself and make itself available to the Ready Link network.

1. When you turn on your PCS Phone for the first time, you will be prompted to activate Ready Link service. Press **OK** (left softkey) to activate. (You will see “**Preparing Ready Link service... Please wait.**”)
2. Press **R-Link** (left softkey) or the Ready Link button on the side of your phone (). (The PCS Ready Link Help message will appear.)
3. Press **Yes** (left softkey) to read a brief introduction to PCS Ready Link, and press **Next** (left softkey) to continue through the tutorial.

Your phone is now ready to make and receive PCS Ready Link calls.

Setting PCS Ready Link Mode

To change the current mode, follow these steps:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Ready Link** and press .
4. Select **Enable** and press . (The default setting is Enable.)
Enable: Lets you make or receive PCS Ready Link calls any time your phone is not in use.
Disable: Disables your phone’s PCS Ready Link service; you will not be able to make or receive PCS Ready Link calls or access your Ready Link contacts.

Note: Your PCS Vision Phone is pre-set to enable PCS Ready Link mode. If you do not subscribe to PCS Ready Link service, please disable your phone’s PCS Ready Link mode.


Ready Link Call Alerts

There are several ways your PCS Phone alerts you during PCS Ready Link calls.


When you make or receive a PCS Ready Link call:

- ▶ The phone beeps.
- ▶ The backlight illuminates.
- ▶ The screen displays a PCS Ready Link call message.
- ▶ The other party's PCS Ready Link number and name (if available) are displayed.
- ▶ The screen displays who has the floor at the bottom of the screen.


The status of a PCS Ready Link call:

- ▶ The Green LED On indicates you have the floor and may speak.
- ▶ The Red LED On indicates another contact has the floor.
- ▶ The LED Off indicates the floor is open. (You can take the floor and speak by pressing and holding )

Displaying the PCS Ready Link List

- From standby mode, press **R-Link** (left softkey) or the Ready Link button on the side of your phone () to access the PCS Ready Link List.

Selecting Contact Lists

When your phone displays a PCS Ready Link List, the left softkey is labeled "Go to". To switch to another contact list, press **Go to** (left softkey), highlight your desired list and press .

- **Company List/Co. Groups** contain company-provided contacts (up to 200 entries). Your company list can only be created and modified by an authorized administrator on the PCS Ready Link server. You cannot add, edit, or delete Company List items, but you can copy entries to your Personal List/Per. Groups. If you are not part of a broader company subscription to this service, the Company Lists will be blank.
- **Personal List/Per. Groups** contain your personal Ready Link contact names and numbers, separately or in groups. You can create and edit your own Personal List. Your phone can store a total of 200 entries (you may include up to five contacts per group).
- **Outgoing Calls** shows the last 10 different PCS Ready Link calls you placed.






- **Incoming Calls** shows the last 10 different PCS Ready Link calls you accepted.
- **Missed Calls** shows the last 10 PCS Ready Link calls you missed.


Tip: You can also select **Enter R-Link#** from “Go to” menu options to enter a PCS Ready Link number directly. See page 31 for details.


Making a PCS Ready Link Call (1-to-1 Call)


You can place a 1-to-1 PCS Ready Link call by entering a PCS Ready Link number (see “Making a PCS Ready Link Call by Entering a Number” on page 31) or by selecting a recipient from the PCS Ready Link List.


To place a PCS Ready Link call by selecting a recipient:

1. Press **R-Link** (left softkey) or press  to access the PCS Ready Link List.
2. Press **Go to** (left softkey), highlight the list from which you want to make a call (**Company List**, **Personal List**, **Outgoing Calls**, **Incoming Calls**, or **Missed Calls**), and press .
3. Highlight the contact you want to call, and press and hold  to place the call and take the floor. (You will see **R-Link calling...** and **Connecting...** followed by “**You have floor.**” You can now begin speaking.)
- or -
Press and release  to place the call. (The call will connect something about “your contact’s phone will alert him of an incoming Ready Link call” as described above, but “**Floor is open.**” will appear on the screen and either you or your contact may press and hold  to take the floor and speak.)

Note: When you press and hold  to talk, wait for the tone before you speak.

Note: During a PCS Ready Link call, the “**floor**” is the right to speak. When you see “**Floor is open.**,” the first person to press the Ready Link button () can speak (while holding the button). Only the person who has the floor can speak. The phone beeps if you press the Ready Link button when another contact has the floor.

4. Continue holding  as you speak. When you are finished speaking, release the Ready Link button to allow other contacts to speak. (When the other party takes the floor, you will see the speaker’s name and phone number and the text “**has floor.**”)

5. When you are finished, press .






Note: When neither party has the floor during a PCS Ready Link call, “**Floor is open.**” appears on the display. If no one takes the floor for 20 seconds, the PCS Ready Link call ends automatically.



Tip: If you press  or  during step 3 on the previous page, you can make a standard voice call.

Making a PCS Ready Link Call (Group Call)







You can make a PCS Ready Link call to all members in a Group entry in your PCS Ready Link List. You can communicate with up to five members at a time.

To place a PCS Ready Link Group Call:

1. Press **R-Link** (left softkey) or press  to access the PCS Ready Link List.
2. Press **Go to** (left softkey), highlight the list from which you want to make a Group call (**Co. Groups** or **Per. Groups**), and press .
3. Highlight the group you want to call, and press and hold  to place the call and take the floor. (You will see **R-Link calling...** and **Connecting...** followed by “**You have floor.**” Continue with the PCS Ready Link call as described on the previous page.)
 - To display the group members details, press , highlight your desired group member, then press **View** (left softkey) during step 3 above.
 - If one of the group members takes the floor, you will see the member’s name and PCS Ready Link number on the display (if applicable). The phone beeps if you press the Ready Link button when another contact has the floor.
4. When the call is finished, press .


Tip: You can also make a 1-to-1 call by selecting a group member from the Group list. From step 3 above, press , select your desired group member, and press and hold .

Making a PCS Ready Link Call by Entering a Number

1. From standby mode, enter the PCS Ready Link number you want to dial.
 2. Press  to place the PCS Ready Link call. Continue holding  to take the floor and speak.
 - The contact's name appears if there is a matched number in your PCS Ready Link List.
 3. Continue with the PCS Ready Link call, pressing and holding  to speak and releasing it to allow others to reply.
 4. When the call is finished, press .
- or -
1. Press **R-Link** (left softkey) or press  to access the PCS Ready Link List.
 2. Press **Go to** (left softkey), highlight **Enter R-Link#** and press .
 3. Enter the PCS Ready Link number you want to dial.
 4. Follow steps 2-4 above.


Note: PCS Ready Link numbers must contain 10 digits (area code + phone number) or 11 digits beginning with 1. Your PCS Ready Link number is the same as your PCS Phone number.

Receiving a PCS Ready Link Call (1-to-1 Call)

1. Make sure your phone's PCS Ready Link mode is enabled (see "Setting PCS Ready Link Mode" on page 27).
2. When you receive a PCS Ready Link call from a contact, "R-Link Call," the contact's name, and the PCS Ready Link number appear on the display. (You do not need to take any action to answer the call.) The caller may choose to alert you and simply talk. If so, you will see "**Floor is open.**" and can then press and hold  to reply/answer.
3. If the person placing the call has kept the floor (held the Ready Link button), you will see the contact name and PCS Ready Link number along with "**has floor.**", and you will hear the caller speaking.

4. When the caller finishes speaking and releases the Ready Link button, you will see “**Floor is open.**” on the display screen. Press and hold  to take the floor and reply to the caller. (You will see “**You have floor.**” and hear a tone confirming that you may speak.)
5. When the conversation is finished, press .


Receiving a PCS Ready Link Call (Group Call)

1. When you receive a PCS Ready Link call from one of the group members, “Group Call,” the group member’s name, and the PCS Ready Link number appear on the display (if applicable).
2. Continue with the PCS Ready Link call as described on the previous page.
3. When the conversation is finished, press .


Missed Call Notification for PCS Ready Link Calls




When an incoming PCS Ready Link Call is not answered, the Missed Call Notification is displayed on your screen.

To call the last Missed PCS Ready Link Call:

- Simply press and hold . (Continue with the PCS Ready Link call as described previously.)

To display the Missed Ready Link Call Log:




- Press **View** (left softkey). To call the entry, highlight the entry you want to call, and press and hold . (Continue with the PCS Ready Link call as described previously.)



Note: When you display Missed Calls entries, you will see the  icon next to the name. The  icon will remain until you make/receive a PCS Ready Link call to/from the entry. The  icon appears next to the new missed call entry.

Redialing a PCS Ready Link Call


You can redial the last PCS Ready Link call that you dialed or received (whichever was more recent).

To redial a PCS Ready Link call:

1. From the PCS Ready Link List, highlight **Redial** and press and hold .
 - You will see **R-Link redialing...** and **Connecting...** followed by the text “**You have floor.**”
2. Speak after the beep (keep pressing down  while you are speaking). After speaking, release the button to allow others to reply.
3. When you are finished, press .

Note: You can change the volume and the speaker setting while a PCS Ready Link call is activated. **Volume:** Adjust the voice volume by using the Side Volume keys or ▲/▼ on the Navigation key except when you are pressing and holding . This doesn't affect tone and beep volume. **Speaker:** Switch the speaker On or Off by pressing .

PCS Ready Link Options

When you use PCS Ready Link, several user options are available by pressing **Options** (right softkey). To select an option, highlight it and press .

- ▶ **Edit** to edit a PCS Ready Link number and/or name. See page 38 for details. (Personal List/Per. Groups only.)
- ▶ **Erase** to erase a contact. **Erase Group** appears when you highlight a group list (except Company List/Co. Groups).
- ▶ **New Contact** to add a new contact. **New Group** appears when you highlight a group list. See pages 36-37 for details. (Personal List/Per. Groups only.)
- ▶ **Erase R-Link List** to erase the PCS Ready Link List. See page 40 for details. (Except Company List/Co. Groups.)
- ▶ **Copy** to copy a contact to Personal List. **Copy Group** appears when you highlight a group. (This option doesn't appear if the entry is already in Personal List or when you select Personal List/Per. Groups.)

- ▶ **Settings** to change the current settings.
 - **Default View** to select the default PCS Ready Link List when PCS Ready Link is launched. You can select from Company List, Co. Groups, Personal List, or Per. Groups. (The default setting is Company List.)
 - **Loudspeaker** to set the speakerphone On or Off when PCS Ready Link call is activated. The default setting is On. (If the phone's ringer volume is set Vibrate, Ringer Off or Silence All, the speakerphone turns Off. Press **SPEAKER** to turn the speakerphone mode On.)
- ▶ **Help** to see the PCS Ready Link instruction.

Note: When you use additional accessories, the volume is fixed as follows.
Speaker/Car Kit: Level 3. **Earpiece/Headset:** Level 2.

Copying an Entry to Your Personal List or Personal Group List

You can copy an entry to your Personal List/Per. Groups. If the selected entry is already stored in the Personal List/Per. Groups, the “copy” option does not appear.

To copy an entry from the last PCS Ready Link call:

1. From the PCS Ready Link List, highlight **Redial** and press **MENU OK**.
2. Press **Copy** (right softkey).
3. Press **Yes** (left softkey) to complete copying.

To copy an entry from the PCS Ready Link List:

1. Press **R-Link** (left softkey) or press **|||||** to access the PCS Ready Link List.
2. Press **Go to** (left softkey), highlight the list from which you want to copy a contact (**Company List, Co.Groups, Outgoing Calls, Incoming Calls, or Missed Calls**), and press **MENU OK**.
3. Highlight the entry you want to copy (or scroll to highlight the **Redial** entry at the top of your screen) and press **Options** (right softkey).
4. Highlight **Copy** and press **MENU OK**.
 - **Copy Group** appears when you highlight a group during step 3 above.
5. Press **Yes** (left softkey) to copy and save the entry to your Personal List or Personal Group List.

To copy an entry from the Company List:

1. Press **MENU OK** to access the main menu.
2. Select **Contacts** and press **MENU OK**.
3. Select **Find/Add Entry** and press **MENU OK**.
4. Press **Go to** (left softkey), highlight **Company List** and press **MENU OK**.
5. Highlight a contact you want to copy and press **Options** (right softkey). To select an option, highlight it and press **MENU OK**.
 - **Copy to Personal** to copy the entry to Personal List.
 - **Copy to Ph. Book** to copy the entry to your Phone Book.
6. Press **Yes** (left softkey) to complete copying.

To copy an entry from the Company Group List:

1. From step 4 above, highlight **Co. Groups** and press **MENU OK**.
2. Highlight a group you want to copy and press **Options** (right softkey). To select an option, highlight it and press **MENU OK**.
 - **Copy to Personal** to copy the entry to Personal Group List.
 - **Exit** to exit the options.
3. Press **Yes** (left softkey) to complete copying.

Note: Your Company List/Co.Groups can only be set up and edited by an authorized administrator on the PCS Ready Link server. You cannot add or edit contacts/groups to your Company List/Co.Groups.

Saving a PCS Ready Link Number

When you have finished a PCS Ready Link call, you will see the caller's name, PCS Ready Link number, and the text "R-Link call ended." on the display. You can save a PCS Ready Link number from the ending display to your Personal List/Per. Groups.

Follow these steps:




1. From the ending display, press **Save** (right softkey).
2. Press **Yes** (left softkey).
 - If the entry has no name, you are prompted to enter a name.

Note: If the number is already stored in the Personal List or Per. Group, the "Save" softkey does not appear.

Finding an Entry in the PCS Ready Link List

You can find your desired entry by entering a few letters.




To find a PCS Ready Link entry:

1. Press **R-Link** (left softkey) or press  to access the PCS Ready Link List.
2. Press **Go to** (left softkey), highlight your desired list (**Company List, Co. Groups, Personal List, or Per. Groups**), and press .
3. Enter the first letter or the first few letters of the name.
(See page 87 for the entering method.)
 - The display shows the list beginning with the letter(s) you entered.
4. Scroll through the list and press  to select your desired entry.

Adding a New Contact to Your Personal List




You can store a total of 200 entries in the Personal List/Per. Groups.

To add a new PCS Ready Link contact:

1. Press **R-Link** (left softkey) or press  to access the PCS Ready Link List.
2. Press **Go to** (left softkey), highlight **Personal List**, and press .
3. Highlight **<New Contact>** and press .

- or -

Highlight an entry and press **Options** (right softkey). Then highlight **New Contact** and press .








- If the Personal List is full or if you are not authorized to edit the Personal List, you will see a warning message on the display.
4. Enter a name for the new contact and press . (This is the name you will see when calling or receiving a call from the contact.)
5. Highlight the **R-Link Number** field and press . Enter the contact's PCS Ready Link number and press .
6. Press **Save** (left softkey) to save the new contact to your Personal List.

Tip: You are not allowed to use the following symbols during step 4: ":", "@", ",", "/", "*", ")", and "(".

Adding a New Group to Your Personal Group List

You can add new groups to the Personal Group List. Each group can include up to five members. You can enter a group member directly, or select the member from the Company List or Personal List.

To add a new PCS Ready Link group entry:



1. Press **R-Link** (left softkey) or press  to access the PCS Ready Link List.
2. Press **Go to** (left softkey), highlight **Per. Groups**, and press .
3. Highlight **<New Group>** and press .
- or -
Highlight an entry and press **Options** (right softkey). Then highlight **New Group** and press .
4. Enter a Group Name, press , and press **Next** (left softkey).
5. To add contacts to the group, press **Add** (right softkey).
6. Highlight one item from the following and press :
 - **New** to add a new contact. See page 36 for details.
 - **from Company** to add a contact from your Company List.
 - **from Personal** to add a contact from your Personal List.
7. Scroll to select the contacts you want to add and press  or **Pick** (right softkey) to include the entries.
8. Press **Done** (left softkey) when you are finished selecting contacts, then press **Update** (left softkey) to update your Personal Group List with the new group entry.

Note: The  icon next to the group name indicates a group.

Editing a Contact in Your Personal List

1. Follow steps 1-2 in “Adding a New Contact to Your Personal List” on page 36.
2. Highlight the entry you want to edit and press **Options** (right softkey).

Options:

- **Edit** to edit your desired contact.
 - **Erase** to erase your desired contact.
 - **New Contact** to add a new contact.
 - **Erase R-Link List** to erase the PCS Ready Link List. See page 40 for details.
 - **Settings** to set Default View and Loudspeaker. See page 34 for details.
 - **Help** to view the PCS Ready Link instruction page.
3. Highlight **Edit** and press .
 4. Highlight the field you want to edit (**Name** or **R-Link Number**), and press .
 5. Edit the entry, press **OK** (left softkey), and press **Save** (left softkey) to save your changes.



Editing a Group in Your Personal Group List

To edit a group name:

1. Follow steps 1-2 in “Adding a New Group to Your Personal Group List” on page 37.
2. Highlight the group entry you want to edit and press **Options** (right softkey).



Options:

- **Edit** to edit your desired group.
- **Erase Group** to erase your desired group.
- **New Group** to add a new group.
- **Erase R-Link List** to erase the PCS Ready Link List. See page 40 for details.
- **Settings** to set Default View and Loudspeaker. See page 34 for details.
- **Help** to view the PCS Ready Link instruction page.

3. Highlight **Edit** and press .
4. Edit the group name and press  or **OK** (left softkey).
 - If you don't need to edit the group name, press **Next** (left softkey) during step 4 above and skip step 5.
5. Press **Save** (left softkey) to save your changes.
6. To edit a group contact, highlight the contact you want to edit and press **Options** (right softkey).




Options:

- **Edit** to edit a group member's name and phone number.
- **Erase** to erase the group member.
- **Add New** to add a new group member in the Personal Group List.
- **Add (Company)** to add a new group member from the Company List.
- **Add (Personal)** to add a new group member from the Personal List.
- **Details** to display a group member's information.

7. Highlight **Edit** and press .
8. Highlight the field you want to edit (**Name** or **R-Link Number**), and press .
9. Edit the entry, press **OK** (left softkey), and press **Save** (left softkey) to save your changes.
10. Press **Update** (left softkey) to update your Personal Group List.

Erasing an Entry in Your Personal List or Personal Group List

To erase a contact or a group:

1. From the PCS Ready Link List, press **Go to** (left softkey), highlight **Personal List** or **Per. Groups** and press .
2. Highlight the entry you want to erase and press **Options** (right softkey).
3. Highlight **Erase** and press .
 - **Erase Group** appears when you select Per.Groups.
4. Select **Yes** and press .

To erase a group contact:

1. From the PCS Ready Link List, press **Go to** (left softkey), highlight **Per. Groups** and press **MENU OK**.
2. Highlight your desired group and press **MENU OK** to display the group contacts.
3. Highlight the contact you want to erase and press **Options** (right softkey).
4. Highlight **Erase** and press **MENU OK**.
5. Select **Yes** and press **MENU OK**.
6. Press **Update** (left softkey) to update your Personal Group List.

Erasing a PCS Ready Link List

You can erase all entries saved in PCS Ready Link Lists (except Company List/Co. Groups).

To erase a PCS Ready Link List:

1. From the PCS Ready Link List, press **Options** (right softkey).
2. Highlight **Erase R-Link List** and press **MENU OK**.
3. Enter your 4-digit lock code.
4. Highlight your desired option and press **MENU OK**.

Options:

- **Outgoing Calls** to erase all outgoing PCS Ready Link calls.
 - **Incoming Calls** to erase all incoming PCS Ready Link calls.
 - **Missed Calls** to erase all missed PCS Ready Link calls.
 - **All Calls** to erase all PCS Ready Link call history, including redial.
 - **All Personal Ent** to erase all entries in Personal List and Personal Groups.
5. Select **Yes** and press **MENU OK**.

Tip: Redial number will not be erased if it is an outgoing call, incoming call, or missed call.

Setting Speed Dialing for PCS Ready Link Entries

1. Press **MENU OK** to access the main menu.
2. Select **Contacts** and press **MENU OK**.
3. Select **Speed Dial #s** and press **MENU OK**.
4. Highlight an unassigned number and press **MENU OK**.
 - When you highlight an assigned number and press **MENU OK**, you'll be asked whether you want to overwrite the assigned number. Select **Yes** or **No**, or you can also select **Unassign** to cancel the stored speed dial.
5. Press **Go to** (left softkey), highlight the list from which you want to set a speed dial (**Company List**, **Co. Groups**, **Personal List**, or **Per. Groups**), and press **MENU OK**.
6. Select the contact and press **MENU OK**.

- or -

Select the group and press **MENU OK**, select an option, and press **MENU OK**.

- **Assign** to assign selected group as a speed dial.
- **Details** to display the group details. You can select the entry from the group list.

To use Speed Dial for PCS Ready Link Entry:

- From standby mode, press the appropriate key and press and hold **|||||**.

Controlling Your Phone's Settings

In This Section

- ▶ **Sound Settings**
 - ▶ **Display Settings**
 - ▶ **Location Settings**
 - ▶ **Airplane Mode**
 - ▶ **TTY Access**
 - ▶ **Phone Setup Options**
-

This section describes how you can change your phone's settings to best suit your needs. Take a few moments to review these options and add or adjust the settings that are right for you.

Reminder: To access the phone's main menu, press  from standby mode. Menu items may be selected by highlighting them with the Navigation key and pressing .

Sound Settings

Ringer Types








Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contacts entries, types of calls, and types of messages.

- ▶ **Preprogrammed Ringers** include a variety of standard ringer types and familiar music.
- ▶ **Vibrating Ringer** alerts you to calls or messages without disturbing others.
- ▶ **Downloaded Ringers** can be downloaded right to your phone. (See “Downloading Games, Ringers, and Screen Savers” on page 160 and “Ringers” on page 164.)

Selecting Ringer Types for Voice Calls

Your PCS Phone provides a variety of ringer options which allow you to customize your ringer and volume settings.

To select a ringer type for voice calls so you recognize when a certain type of call is coming in by the ringer:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Sounds** and press .
4. Select **Ringer Type** and press .
5. Select **Voice Calls** and press .
6. Select the menu under **With Caller ID, No Caller ID, or Roaming** and press .
7. Select your desired ringer type and press 
 - **Ringer & Voice** to notify you with Ringer & Voice for voice call.
 - **Get New** to start up the browser so you can select an item to download (see page 110).

Selecting Ringer Types for Voicemail

To select a ringer type for voicemail:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Sounds** and press **MENU OK**.
4. Select **Ringer Type** and press **MENU OK**.
5. Select **Voicemail** and press **MENU OK**.
6. Select the menu under **Voicemail** and press **MENU OK**.
7. Select your desired ringer type and press **MENU OK**.
 - **Voice Ringer** to notify you with Voice for voicemail.
 - **Get New** to start up the browser so you can select an item to download (see page 110).

Selecting Ringer Types for Messages

To select a ringer type for messages:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Sounds** and press **MENU OK**.
4. Select **Ringer Type** and press **MENU OK**.
5. Select **Messaging** and press **MENU OK**.
6. Select the menu under **Messaging** and press **MENU OK**.
7. Select your desired ringer type and press **MENU OK**.
 - **Voice Ringer** to notify you with Voice for Messages.
 - **Get New** to start up the browser so you can select an item to download (see page 110).

Selecting Ringer Types for Calendar

To select a ringer types for calendar:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Sounds** and press **MENU OK**.
4. Select **Ringer Type** and press **MENU OK**.
5. Select **Calendar** and press **MENU OK**.
6. Select the menu under **Calendar** and press **MENU OK**.
7. Select your desired type and press **MENU OK**.
 - **Voice Ringer** to notify you with Voice for calendar events.
 - **Get New** to start up the browser so you can select an item to download (see page 110).

Selecting a Tone Length

Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.

To select a tone length:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Sounds** and press **MENU OK**.
4. Select **Others** and press **MENU OK**.
5. Select the menu under **Tone Length** and press **MENU OK**.
6. Select **Short** or **Long** and press **MENU OK**.

Setting a Start-up/Power-off Tone

1. Follow steps 1-4 in “Selecting a Tone Length.”
2. Select the menu under **Start-up Tone** or **Power-off Tone** and press **MENU OK**.
3. Select your desired option and press **MENU OK**.
 - **Get New** to start up the browser so you can select an item to download (see page 111).

Tip: You can set the volume of Start-up Tone and Power-off Tone. See page 47 for instructions.

Using Voice Prompt

This feature allows you to hear voice prompts at Voice Memo, Screen Call setting, Voice Dial, etc. (default setting is On).

To deactivate this feature:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Sounds** and press **MENU OK**.
4. Select **Others** and press **MENU OK**.
5. Select the menu under **Voice Prompt** and press **MENU OK**.
6. Select **Off** and press **MENU OK**.

Tip: When ringer volume is set to “Silence All,” voice prompts cannot be heard.

Adjusting the Phone's Volume Settings

To adjust the Ringer/Key volume:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Sounds** and press **MENU OK**.
4. Select **Ringer/Key Vol.** and press **MENU OK**.
5. Select the item you wish to change and press **MENU OK**.
 - **Ringer Volume** to adjust Ringer tone volume.
 - **Start-up/Pw-off** to adjust Start-up/Power-off tone volume.
 - **Key Beep** to adjust Key Beep tone volume.
6. Adjust a volume level by using ▲/▼ on the Navigation key and press **MENU OK**.
 - **Ringer Off** to set the Voice Call ringer volume to off. (Only appears in Ringer Volume Setting.)
 - **Silence All** to set all the ringer volume to off. (Only appears in Ringer Volume Setting.) See "Silence All" on page 49.

To adjust the Earpiece or Speaker volume:

1. Follow steps 1-3 above.
2. Select **Receiver Vol.** and press **MENU OK**.
3. Select either **Earpiece** or **Speaker** and press **MENU OK**.
 - When you talk in speakerphone mode, select **Speaker** during step 3 above.
4. Adjust a volume level by using ▲/▼ on the Navigation key and press **MENU OK**.






Tip: You can adjust the ringer volume in standby mode by using the Side Volume key, and adjust earpiece volume during a call by using ▲/▼ on the Navigation key or Side Volume key.

Alert Notification

Your phone comes with several different options to keep you aware of what's going on by sounding the alert or ringer.

- ▶ **Service** sets an alert On or Off for network services parameter changes.
- ▶ **Voicemail** sets an alert to notify you of voice messages.
- ▶ **Messaging** sets an alert to notify you of text messages.
- ▶ **Minute Beep** sets a minute reminder that beeps ten seconds before the end of each minute during a call.
- ▶ **Signal Fade** sets an alert to notify you when your phone loses a signal during a call.

To set the alerts:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Sounds** and press .
4. Select **Alerts** and press .
5. Select your desired option and press .
6. If you selected **Service**, **Minute Beep**, or **Signal Fade**, select **On** or **Off**. If you selected **Voicemail** or **Messaging**, select **Once**, **Repeat Alert**, or **Off**.

Tip: Repeat Alert sounds every two minutes for twenty minutes.

Silence All

There may be times when you need to silence your phone entirely. The phone's Silence All option allows you to mute all sounds without turning your phone off.

To activate Silence All:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Sounds** and press **MENU OK**.
4. Select **Ringer/Key Vol.** and press **MENU OK**.
5. Select the menu under **Ringer Volume** and press **MENU OK**.
6. Press **▼** on the Navigation key until **Silence All** appears on the display and press **MENU OK**.
 - To deactivate this feature, select a desired volume level during step 6.

Tip: When Ringer Volume is set as Silence All, other items are changed to Off and cannot be highlighted by cursor.

Shortcut: Press and hold the Side Volume key down to activate Silence All. To restore sound, press the Side Volume key up and highlight a volume level.

Display Settings

Changing the Text Greeting

The text greeting can be up to 15 characters and is displayed on your phone's screen in standby mode. You may choose to display a custom greeting or you may display your PCS User name on the phone's screen (the default setting).

To display or change your custom greeting:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Display** and press **MENU OK**.
4. Select **Greeting** and press **MENU OK**.
5. Select **Custom** and press **MENU OK**.
 - You can customize the greeting by entering a personalized greeting.
6. Press **MENU OK**.

To display your PCS User name as your greeting:

1. Follow steps 1-4 above.
2. Select **Username** and press **MENU OK**.
 - When you are in PCS Ready Link mode, "Ready Link" appears on the display instead of User name.

Changing the Backlight Time Length

The backlight setting lets you select how long the display screen and keypad are backlit after any key press is made.

To change the Main LCD or Sub LCD backlight setting:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Display** and press **MENU OK**.
4. Select **Backlight** and press **MENU OK**.
5. Select **Main LCD** or **Sub LCD** and press **MENU OK**.

6. Select **Always On**, **Always Off**, or your defined time length and press **MENU OK**.

- **Always Off** always turns the backlight off.
- **Always On** keeps the backlight on indefinitely.

Note: **Always On** setting returns to the previous setting the next time you turn on the phone.

To change the keypad backlight setting:

1. Select **Key** during the previous step 5, and press **MENU OK**.
2. Select **Always Off** or your defined time length and press **MENU OK**.

Note: Long backlight settings affect the battery's talk and standby times.

Changing the Display Screen

Your new PCS Phone offers animation for what you see on the display screen during in standby mode, Outgoing Calls, or Service Search.

To change the animation:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Display** and press **MENU OK**.
4. Select **Animation** and press **MENU OK**.
5. Select **Standby**, **Outgoing Calls**, or **Service Search**, and press **MENU OK**.
6. Select the menu under the item and press **MENU OK**.
7. Select your desired option and press **MENU OK**.
 - Press **Preview** (right softkey) to see a sample display.
 - For standby, you will also set the animation starting time. Select the option under **after** and press **MENU OK**, then highlight your desired setting time and press **MENU OK**.
 - **Preset** to uses the pre-programmed animation.
 - **Get New** to start up the browser so you can select an item to download (see page 111).
 - To deactivate this feature, select **Off** during step 7 above.

Changing the Display for Incoming Calls

You can set the color or downloaded image (screen saver) to be shown on the Incoming Calls display.

Follow these steps:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Display** and press **MENU OK**.
4. Select **Incoming Calls** and press **MENU OK**.
5. Select the menu under **Incoming Calls** and press **MENU OK**.
6. Select your desired color or downloaded image (screen saver) and press **MENU OK**.
 - **Get New** to start up the browser so you can select an item to download (see page 111).
 - If you select the downloaded image (screen saver) data during step 6 above, press **Preview** (right softkey) to see an example display.

Changing the Display for Area Name

This feature enables you to show the area of the phone number you are calling to or called by when the number is not registered in your Contacts list.

Follow these steps:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Display** and press **MENU OK**.
4. Select **Match AreaCode** and press **MENU OK**.
5. Select **On** or **Off** and press **MENU OK**.
 - This feature is available only when the phone number is 10 digits, or 11 digits beginning with 1 and matches an area code.
 - The area name will not be displayed for numbers in your Contacts list or for incoming calls when the Animation Ringer is assigned.

Changing the Display for Standby Mode

This feature enables you to select a variety of items to display in standby mode.

Follow these steps:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Display** and press **MENU OK**.
4. Select **Standby Display** and press **MENU OK**.
5. Select your desired item and press **MENU OK**.
 - **Screen Saver** selects the screen saver to display.
 - **Calendar** displays the Calendar.
 - **Digital Clock** displays the local time in Digital view.
 - **Analog Clock** displays the local time in Analog view.
 - **World Clock** displays the time of the selected country along with the local time. You can scroll the World Clock list by pressing **◀/▶** on the Navigation key. Select **Summer** (left softkey) or **Standard** (right softkey) for changing between summer and standard time if applicable. (The “☀” icon indicates the summer time.)

Tip: You can also display the World Clock from Tools/Extras menu. See “Using the World Clock” on page 108.

- **Default** sets this feature to default.

6. Following each system prompt or when confirming the preview display, press **MENU OK** to save the setting.

Tip: In an area without service, Screen Saver, Calendar, Digital Clock, Analog Clock, or World Clock cannot be shown on the standby display.

Changing the Screen Saver

Your new PCS Phone offers you the option of displaying a screen saver while in standby mode.

To assign a screen saver:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Display** and press **MENU OK**.
4. Select **Standby Display** and press **MENU OK**.
5. Select **Screen Saver** and press **MENU OK**.
6. Select the menu under **Screen Saver** and press **MENU OK**.
7. Select your desired screen saver, and press **MENU OK**.
 - **Get New** to start up the browser so you can select an item to download (see page 111).
 - Press **Preview** (right softkey) during step 7 above to see an example display.
8. Press **Save** (left softkey) to save the screen saver.

Tip: In an area without service, Screen Saver, Calendar, Time (Large), or World Clock cannot be shown on the standby display.

Changing the Display for My Buddy

This feature enables you to see a funny animation for 30 seconds on the Main LCD by opening the flip.

Follow these steps:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Display** and press **MENU OK**.
4. Select **My Buddy** and press **MENU OK**.
5. Select **On** or **Off** and press **MENU OK**.
 - Press **Preview** (right softkey) during step 5 above to see a display preview. Press the right softkey to switch between Main/Sub LCD's display preview.
 - Press **Info** (left softkey) to see My Buddy Information.

Changing the LED Indicator Color

To change the phone's LED Indicator color:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Display** and press **MENU OK**.
4. Select **LED** and press **MENU OK**.
5. Select **During Call, Incoming Calls, Voicemail, Messaging, or Calendar** and press **MENU OK**.
 - **Incoming Calls** allows you to select the menu from **With Caller ID, No Caller ID, or Roaming**. To select your desired menu, highlight it and press **MENU OK**.
6. Select your desired color patterns and press **MENU OK**.
 - To deactivate this feature, select **Off** during step 6 above.

Changing the Phone's Main Menu Style

To select the display's main menu style:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Display** and press **MENU OK**.
4. Select **Main Menu** and press **MENU OK**.
5. Select either **Graphic** or **Text** and press **MENU OK**.

Changing the Theme Color

To change the display's color scheme:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Display** and press **MENU OK**.
4. Select **Color** and press **MENU OK**.
5. Select **Main LCD** or **Sub LCD** and press **MENU OK**.
6. Select your desired color scheme and press **MENU OK**.

Changing the Font Size

You can change the font size settings for the message notification and the browser.

To change the font size:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Display** and press **MENU OK**.
4. Select **Font Size** and press **MENU OK**.
5. Select either **Message** or **Browser** and press **MENU OK**.
6. Select your desired font size.
 - Press **Preview** (right softkey) to display a font size example.
7. Press **MENU OK** to set the selected font.

Tip: From the font example display, select your desired font displays by pressing **◀/▶** on the Navigation key.

Location Settings



Your PCS Phone is equipped with a Location feature for use in connection with location-based services that may be available in the future.

The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

Note: Even if the Location feature is enabled, no service may use your location without your expressed permission.

To enable your phone's Location feature:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Location** and press **MENU OK**.
4. Press **MENU OK** or **OK** (left softkey) or wait a few seconds until the message scrolls down completely.
5. Select **On** and press **MENU OK**.
 - To deactivate this feature, select **Off** during step 5 above.

When the Location feature is on, your phone's standby screen will display the  icon. When Location is turned off, the  icon will display.

Airplane Mode

When your phone is in Airplane Mode, it cannot send or receive any calls (except for 911 dialing) or access online information. You may still use the phone's other features, such as Games, Voice Memos, Calendar, etc., while you are in Airplane Mode.

To set your phone to Airplane Mode:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Others** and press **MENU OK**.
4. Select **Airplane Mode** and press **MENU OK**.
5. You will see a message on the display. Press **MENU OK** or **OK** (left softkey) to continue.
 - Press **Cancel** (right softkey) to return to previous menu.
6. Select **On** and press **MENU OK**.
 - To deactivate this feature, select **Off** during step 6.

While in Airplane Mode, your phone's standby screen will display "Phone Off."



TTY Use With PCS Service From Sprint


A TTY (also known as a TDD or Text Telephone), is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

When establishing your PCS Service, please call PCS Customer Solutions via the state Telecommunications Relay Service (TRS) by first dialing **7 1 1 TALK**. Then provide the state TRS with this number: 866-727-4889.

To turn TTY Mode On or Off:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Others** and press **MENU OK**.
4. Select **TTY** and press **MENU OK**.
5. You will see a message on the display. Press **OK** (left softkey) to continue.
6. Select **Enable** or **Disable** and press **MENU OK**.

Note: When you connect TTY devices, your phone will display  in TTY mode.

Note: If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.

IMPORTANT NOTICE: 911 Emergency Calling

Sprint recommends that TTY users make Emergency calls by other means including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs) rendering some communications unintelligible. The problem encountered appears related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and PSAP community are currently working to resolve this.

Phone Setup Options

Shortcut

Your phone offers you the option of assigning a shortcut key to a favorite or often-used function. Pressing ◀ on the Navigation key in standby mode will launch your user-defined shortcut.

To assign your shortcut key:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Others** and press **MENU OK**.
4. Select **My Shortcut** and press **MENU OK**.
5. Select the menu under **My Shortcut** and press **MENU OK**.
6. Select your desired menu option and press **MENU OK**.
 - Press **Info** (right softkey) during step 5 above to see an information screen.

Auto Answer Mode

Auto Answer mode allows you to answer calls when your phone is connected to an optional hands-free car kit and headset (sold separately).

To activate this feature:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Others** and press **MENU OK**.
4. Select **Auto Answer** and press **MENU OK**.
5. Select **Car Kit/Headset** or **Speaker Phone** and press **MENU OK**.
6. Select either **5 Seconds** or **15 Seconds** and press **MENU OK**.
 - To deactivate this feature, select **Off** during step 6 above.

Setting the Open/Close Flip Option

This feature enables you to answer an incoming call by opening the flip or to end a call by closing the flip.

To activate the Open Flip feature:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Others** and press **MENU OK**.
4. Select **Open/Close Flip** and press **MENU OK**.
5. Select **Open** and press **MENU OK**.
6. Select **Answer Call** and press **MENU OK**.
 - To deactivate this feature, select **No Action** during step 6.

Note: This feature does not apply for Roaming Calls with Call Guard On.






To activate the Close Flip feature:

1. Follow steps 1-4 above.
2. Select **Close** and press **MENU OK**.
3. You will see a message on the display. Press **OK** (left softkey) to continue.
4. Select **End Call** and press **MENU OK**.






Note: This feature does not apply when you are using the speakerphone, a headset, or a car kit.

Note: If you select **Mute** during step 4 above, closing the flip enables speakerphone mode. To deactivate speakerphone mode, simply open the flip to use the earpiece.

Setting Any Key Answer

This feature allows you to answer incoming calls by pressing any key (except , , , , , or the Navigation key).






To activate this feature:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Others** and press .
4. Select **Any Key Answer** and press .
5. Select **On** and press .
 - To deactivate this feature, select **Off** during step 5 above.

Setting the Side Key Guard

This feature enables you to lock your side keys (Ready Link button, Side Volume key, and Side Call key) while the flip is closed.

To activate this feature:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Others** and press .
4. Select **Side Key Guard** and press .
5. Select **On** and press .
 - **Key Guard** appears on the Sub LCD when you press any side key while the flip is closed.
 - To deactivate this feature, select **Off** during step 5 above.

Note: This feature does not apply when the flip is open.

Setting Speed Dialing

With this feature you can dial Contacts Directory entries with one key press for locations 2-9. Save your memory locations 2-9 for speed dialing your most commonly used phone numbers. Speed Dial numbers must be stored in your Contacts to use this feature.

To set Speed Dial:

1. Press **MENU OK** to access the main menu.
 2. Select **Contacts** and press **MENU OK**.
 3. Select **Speed Dial #s** and press **MENU OK**.
 4. To select a corresponding speed dial number from 2-9, highlight an unassigned number and press **MENU OK**.
 5. Select the entry from the list and press **MENU OK**.
 6. Select the phone number you want to set as a speed dial and press **MENU OK**.
- or -
1. Press **▶** on the Navigation key.
 2. Highlight your desired entry by scrolling through the Contacts list and press **MENU OK**.
 3. Highlight the phone number you want to set as a speed dial and press **Options** (right softkey).
 4. Highlight **Set Speed Dial** and press **MENU OK**.
 5. Highlight an unassigned number and press **MENU OK**.
 - When you highlight an assigned number and press **MENU OK**, you'll be asked whether you want to overwrite the assigned number. Select **Yes** to overwrite or **No** to cancel.

To cancel the stored speed dial number:

1. Press **MENU OK** to access the main menu.
2. Select **Contacts** and press **MENU OK**.
3. Select **Speed Dial #s** and press **MENU OK**.
4. Highlight the stored speed dial number you want to cancel and press **MENU OK**.
5. Highlight **Unassign** and press **MENU OK**.

To use Speed Dial:

- From standby mode, just press and hold the appropriate key.

Setting Abbreviated Dialing

Abbreviated Dialing is another form of speed dialing. It allows you to dial a number from your Contacts entries by entering just the last four digits of the number. If the digits you enter do not match any stored Contacts entry, you can automatically prepend an area code and prefix using the following steps.

To activate this feature:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Others** and press **MENU OK**.
4. Select **Abbrev. Dial** and press **MENU OK**.
5. Select **Enable** and press **MENU OK**.
6. Enter a six-digit number and press **MENU OK** or **OK** (left softkey).
 - To deactivate this feature, highlight **Disable** during step 5 above.

Tip: If you enter fewer than 6 digits, the display shows a warning message. See page 25 for using this feature.

Headset Mode

This feature allows you hands-free phone use. Set the headset mode to Voice Call or Ready Link and press the Turbo Button on the headset to activate useful functions.

To set headset mode:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Others** and press **MENU OK**.
4. Select **Headset Mode** and press **MENU OK**.
5. Select **Voice Call** or **Ready Link** and press **MENU OK**.
 - Press **Info** (right softkey) during step 5 above to see the Headset Mode information.
 - To deactivate this feature, select **Off** during step 5 above.

With the headset:

- ▶ **Voice Call:** Press the Turbo Button to activate Voice dial. Press twice to redial the last call. Press and hold the button to record a Voice Memo.
- ▶ **Ready Link:** Press and hold the Turbo Button to redial the last PCS Ready Link call.

Sleep Mode

This feature helps conserve your battery power by restricting the display.

To set sleep mode:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Display** and press **MENU OK**.
4. Select **Sleep Mode** and press **MENU OK**.
5. Select **Main LCD** or **Sub LCD** and press **MENU OK**.
6. Select your desired option, and press **MENU OK**.
 - To deactivate this feature, highlight **Off** during step 6 above.

Setting Message Notification

You can see message notifications when you receive a text message or Voicemail while you are in PCS Vision applications or browser mode.

To set message notification:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Messaging** and press **MENU OK**.
4. Check the box next to **Games/Apps** or **Browser** and press **Save** (left softkey).
 - Press **Info** (right softkey) during step 4 above to see the Messages information.

Changing the Menu Language

When you first turn your phone on, the menus are displayed in English.

To change the menu language to Spanish:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Others** and press **MENU OK**.
4. Select **Language** and press **MENU OK**.
5. Select **Español** and press **MENU OK**.

Setting Your Phone's Security

In This Section

- ▶ **Accessing the Security Menu**
 - ▶ **Locking Your Phone**
 - ▶ **Unlocking Your Phone**
 - ▶ **Changing the Lock Code**
 - ▶ **Calling in Lock Mode**
 - ▶ **Restricting Calls**
 - ▶ **Using Special Numbers**
 - ▶ **Erasing the Contacts Directory**
 - ▶ **Erasing the Downloads**
 - ▶ **Resetting Your Phone**
 - ▶ **Resetting and Locking Your Phone through SMS**
 - ▶ **Security Features for PCS Vision™**
-

By using the security settings on your PCS Phone, you receive peace of mind without sacrificing flexibility. With several options available, you can customize your phone to meet your personal needs.

Accessing the Security Menu

You must enter your lock code to view the Security menu.

To access the Security menu:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Security** and press **MENU OK**.
4. Enter your lock code.

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or PCS Phone Number or try 0000. If none of these work, call PCS Customer Solutions at 1-888-211-4PCS (4727).

Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911, PCS Customer Solutions, or special numbers.

To lock your phone:

1. From the Security Menu display (see "Accessing the Security Menu"), select **Lock Phone** and press **MENU OK**.
2. Select **Lock Now** or **On Power-up** and press **MENU OK**.
3. Depending on your preference, highlight either **Full Lock** or **Except Incom.Calls** and press **MENU OK**.
 - **Full Lock:** No phone calls can be made, except for Emergency number, **X** **2** (PCS Customer Solutions), or Special numbers. No phone calls can be received except for Special numbers.
 - **Except Incom.Calls:** No phone calls can be made, except for Emergency number, **X** **2** (PCS Customer Solutions), or Special numbers, but all incoming calls can be received.

Tip: If you want to cancel the "On Power-up" setting before turning the phone off, select **Unlocked** during step 2 above.

Unlocking Your Phone

To unlock your phone:

1. Press **Unlock** (left softkey).
2. Enter your lock code.

Changing the Lock Code

To change your lock code:

1. From the Security Menu display (see “Accessing the Security Menu” on page 66), select **Others** and press **MENU OK**.
2. Select **Change Lock** and press **MENU OK**.
3. Enter a new lock code, (“1234” for example) under **New Code**.
4. Reenter the new code under **Reenter Code**.

Calling in Lock Mode

You can place calls to 911, PCS Customer Solutions, and to your special numbers when in lock mode.

To place an outgoing call in lock mode:

- To call an Emergency number, special number, or PCS Customer Solutions, enter the phone number and press **TALK**.

Restricting Calls

You can restrict the phone numbers your phone dials or receives. (The Restrict Calls setting does not apply to 911 or PCS Customer Solutions.)

To restrict calls:

1. From the Security Menu display (see “Accessing the Security Menu” on page 66), select **Others** and press **MENU OK**.
2. Select **Limit Use** and press **MENU OK**.
3. Select **Outgoing Calls** or **Incoming Calls** and press **MENU OK**.

4. Highlight your desired option, and press **MENU OK**.

Options:

- **Allow All** Calls are not restricted; you can make or receive all calls.
- **PhoneBook Only** Only Contacts entries, Voicemail or special numbers (see below on this page) are available to make or receive calls.
- **Special #s Only** Only three special numbers are available to make or receive calls.

Note: Restricted incoming calls are forwarded to voicemail.

Using Special Numbers

You can save three special numbers in addition to your Contacts entries (the same number may be in both directories). You can make and receive calls from special numbers even when your phone is locked.

To add or replace a special number:

1. From the Security Menu display (see “Accessing the Security Menu” on page 66), select **Others** and press **MENU OK**.
2. Select **Special #s** and press **MENU OK**.
3. Select the box under an entry number and press **MENU OK**.
4. Enter your desired phone number and press **MENU OK**.

- or -

Press **Options** (right softkey), select **From Ph. Book** or **Voicemail**, and press **MENU OK**.

To insert pauses into a number:

1. From step 4 above, enter the phone number and press **Options** (right softkey) for the options.
2. Highlight **Hard Pause**, **2-Sec. Pause**, or **Hyphen** and press **MENU OK**.
3. Finish entering the rest of the numbers and press **MENU OK**.

Note: There are no Speed Dial options associated with special numbers.

Erasing the Contacts Directory

To erase all the names and phone numbers in your Contacts Directory:

1. From the Security Menu display (see “Accessing the Security Menu” on page 66), select **Erase Ph. Book** and press **MENU OK**.
2. If you're sure you want to erase your Contacts, highlight **Yes** and press **MENU OK**.

Erasing the Downloads

To erase all data downloaded from the Web:

1. From the Security Menu display (see “Accessing the Security Menu” on page 66), select **EraseDownload** and press **MENU OK**.
2. If you're sure you want to erase all data downloaded from the Web, select **Yes** and press **MENU OK**.
 - If you have assigned downloaded data, the function returns to its default setting.

Resetting Your Phone

Resetting the phone restores all the factory defaults, including the ringer types and display settings. The Contacts list, Call History, Scheduler, and Messaging are not affected.

To reset your phone:

1. From the Security Menu display (see “Accessing the Security Menu” on page 66), select **Reset Phone** and press **MENU OK**.
2. If you're sure you want to reset your phone, select **Yes** and press **MENU OK**.

Resetting and Locking Your Phone through SMS

When your phone is lost or stolen, you can erase your important personal information (such as Contacts entries, call history, and messages) and lock your phone by sending a special formatted SMS message to your phone.

From your computer, sign on to www.sprintpcs.com and send a message to your phone (input your 10-digit PCS Phone Number followed by “@messaging.sprintpcs.com.”) in the following format:

\\RESET **<Passcode>** RESET

<Passcode> - your defined passcode.

Default Passcode is 11-digit ESN (Electronic Serial Number) which is written on the package or phone itself.

The locked phone will display the following message:

“If found, please call PCS Customer Solutions 1-888-211-4727.”

To activate this feature, the following presetting is required:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Security** and press **MENU OK**.
4. Enter your lock code.
5. Select **Others** and press **MENU OK**.
6. Select **Found Me** and press **MENU OK**.
7. Select **Reset/Lock** and press **MENU OK**.
8. Select **Enable** and press **MENU OK**.

To unlock a phone that has been locked through SMS, bring the phone to a Sprint Store.

Changing the Passcode

To change the passcode for the special formatted SMS messages:

1. Follow steps 1-6 above.
2. Select **Chg Passcode** and press **MENU OK**.
3. Enter new passcode in the box under **New Passcode** (11 digits).
4. Reenter the new passcode in the box under **Reenter Code**.

Security Features for PCS VisionSM

Signing In and Out of PCS Vision Services

You can sign out of PCS Vision services without turning off your phone; however you will not have access to all PCS Vision services, including Web and messaging. Signing out will avoid any charges associated with PCS Vision services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may sign in again at any time.

To sign out of PCS Vision services:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **PCS Vision** and press **MENU OK**.
4. Select **Disable Vision** and press **MENU OK**.
5. A message will appear. Press **Disable** (right softkey) to confirm that you want to sign out.

To sign in to PCS Vision services:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **PCS Vision** and press **MENU OK**.
4. Select **Enable Vision** and press **MENU OK**.

Note: To sign in and out of PCS Vision Services, you need to disable PCS Ready Link mode (see "Setting PCS Ready Link Mode" on page 27).

Controlling Your Roaming Experience

In This Section

- ▶ **Understanding Roaming**
 - ▶ **Setting Your Phone's Roam Mode**
 - ▶ **Controlling Roaming Charges Using Call Guard**
-



Roaming is the ability to make or receive calls when you're off the Sprint Nationwide PCS Network. Your new dual-band/tri-mode PCS Phone works anywhere on the Sprint Nationwide PCS Network and allows you to roam on other networks where we've implemented roaming agreements with other carriers.

This section explains how roaming works as well as special features that let you manage your roaming experience.

Understanding Roaming

Recognizing Icons on the Display Screen

Your phone's display screen always lets you know when you're off the Sprint Nationwide PCS Network and whether your phone is operating in analog or digital mode. The following chart indicates what you'll see depending on where you're using your phone.

Main LCD/Sub LCD	Roaming Indicator	Analog Indicator
Sprint Nationwide PCS Network		
Other Digital Networks		
Analog Networks		

Tip: Remember, when you are using your phone off the Sprint Nationwide PCS Network, always dial numbers using 11 digits (1 + area code + number).

Note: You will pay a higher per-minute rate for roaming calls.

Roaming on Other Digital Networks

When you're roaming on digital networks, your call quality and security will be similar to the quality you receive when making calls on the Sprint Nationwide PCS Network. You may not be able to access certain features, such as PCS Vision.

Note: PCS Ready Link Service is not available in roaming areas.

Roaming on Analog Networks

When you roam on analog networks, you will experience a similar quality provided by other analog carriers today. Although some features, such as PCS Vision and PCS Voice Command, will be unavailable, you can still make and receive calls and access voicemail. You may experience the following differences:

- ▶ You are more likely to experience static, cross-talk, fade-out, and dropped calls.
- ▶ Some features which are standard on the Sprint Nationwide PCS Network, such as call waiting, PCS Vision, PCS Ready Link, and direct international dialing, are unavailable.
- ▶ Though callers can leave voicemail messages while you are roaming, you may not receive notification until you return to the Sprint Nationwide PCS Network. While roaming, you can periodically check your voicemail for new messages by dialing 1+area code+your PCS Phone Number. Press **✖** when you hear your greeting and enter your passcode at the prompt.
- ▶ There are security and privacy risks (eavesdropping and cloning) that exist with conventional analog services today.
- ▶ Your battery needs recharging sooner when you use your phone for analog roaming.

Note: If you're on a call when you leave the Sprint Nationwide PCS Network and enter an area where roaming is available (whether digital or analog), your call is dropped. If your call is dropped in an area where you think PCS Service is available, turn your phone off and on again to reconnect to the Sprint Nationwide PCS Network.

Note: When using your phone in analog mode, the handset may feel warm. This behavior is normal for analog operation.

Setting Your Phone's Roam Mode

Your PCS Phone allows you to control your ability to roam. By using the **Roaming** menu option, you can determine which signals your phone accepts.

Set Mode

Choose from three different settings on your dual-band/tri-mode phone to control your roaming experience.

To set your phone's roam mode:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Roaming** and press **MENU OK**.
4. Select **Set Mode** and press **MENU OK**.
5. Select an option from the followings and press **MENU OK**.
 - **Sprint** This setting allows you to access the Sprint Nationwide PCS Network only and prevents roaming on other networks.
 - **Automatic** This setting seeks PCS Service. When PCS Service is unavailable, the phone searches for an alternate system.
 - **Analog** This setting forces the phone to seek an analog roaming system. The previous setting (Sprint or Automatic) is restored the next time the phone is turned on.

Controlling Roaming Charges Using Call Guard

In addition to the roaming icon, Call Guard alerts you when roaming charges apply. This feature makes it easy to manage your roaming charges by reminding you when you make or receive roaming calls. It also requires you to take an additional step before placing or answering a roaming call. This additional step is not required when you make or receive calls while on the Sprint Nationwide PCS Network.

To turn Call Guard on or off:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Roaming** and press **MENU OK**.
4. Select **Call Guard** and press **MENU OK**.
5. Select **On** or **Off** and press **MENU OK**.

Note: Voice Dialing and Speed Dialing are not available when you are roaming with Call Guard enabled.

To place roaming calls with Call Guard on:

- Press any key to erase the pop-up message, press **MENU OK**, highlight **Roam Call**, or **Roam:Speaker On**, and press **MENU OK**.
- or -
- 1. From standby mode, dial 1 + area code + the seven-digit number. (You can also initiate a call from the Contacts directory, Call History, or Messaging.)
- 2. Press **TALK** or **SPEAKER** (or press **MENU OK** and highlight **Call** or **Call:Speaker On**) and press **MENU OK**.
- 3. Press **1** to proceed while the pop-up message is displayed.

To answer incoming roaming calls with Call Guard on:

- Press **MENU OK**, highlight **Answer** or **Answer:Speaker**, and press **MENU OK**.
- or -
- 1. Press **TALK** or **SPEAKER**.
- 2. Press **1** to proceed while the pop-up message is displayed.

Remember, if the Call Guard feature is set to On, you need to take extra steps to make and receive roaming calls, even if you have selected the Analog setting (see page 75).

Navigating Through Menus

In This Section

- ▶ **Menu Navigation**
 - ▶ **Menu Structure**
 - ▶ **Viewing the Menus**
-

This section is a road map to using your PCS Phone. Every function and feature can be accessed through an onscreen menu. Take a few moments to learn your way around and you'll find your phone easier to use.


Menu Navigation

The Navigation key on your PCS Phone allows you to scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.




To navigate through a menu, simply press ▲/▼ on the Navigation key.

Menu Structure

Selecting Menu Items

As you navigate through the menu, menu options are highlighted. Select any option by highlighting it and pressing .

For example, if you want to view your last incoming call:

1. Press  to access the main menu.
2. Select **Call History** and press . (It may already be highlighted.)
3. Press ▼ on the Navigation key to highlight **Incoming Calls** and press . If you have received any calls, they are displayed on the screen.

Backing Up Within a Menu

To go to the previous menu:

- Press .

To return to standby mode:

- Press .

Shortcuts

◀ on the Navigation key is a shortcut to the My Shortcut menu. (See page 59 for setting.)

▶ on the Navigation key is a shortcut to the Contacts.

▲ on the Navigation key is a shortcut to the Messaging menu.

▼ on the Navigation key is a shortcut to the Downloads menu.

Viewing the Menus

Menu Diagram

The following list outlines your phone's menu structure.

1. Call History

1. Outgoing Calls
2. Incoming Calls
3. Missed Calls
4. Erase History

2. Contacts

1. Find/Add Entry
2. Speed Dial #s
3. My Phone#
4. Services

3. Messaging

1. Short Mail
2. PCS Mail
3. Notifications
4. Voicemail

4. Web

5. Downloads

1. Games
2. Ringers
3. Screen Savers
4. Applications
5. Dynamic 1-10 (If applicable)
6. Others

6. Settings

1. Sounds
2. Display
3. PCS Vision
4. Ready Link
5. Location
6. Roaming
7. Messaging
8. Security
9. Others

7. Tools/Extras

1. Calendar
2. Calculator
3. World Clock
4. PC Sync

8. Voice Services

1. Voice Memo
2. Screen Call
3. Voice Dial

9. Phone Info

1. Phone# User ID
2. Help
3. Version

Managing Call History

In This Section

- ▶ **Viewing History**
 - ▶ **Call History Options**
 - ▶ **Making a Call From Call History**
 - ▶ **Saving a Phone Number From Call History**
 - ▶ **Prepending a Phone Number From Call History**
 - ▶ **Erasing Call History**
-

The Call History keeps track of incoming calls, calls made from your PCS Phone, and missed calls. This section guides you through accessing and making the most of your Call History.

Viewing History

You'll find the Call History feature very helpful. It is a list of the last 20 phone numbers (or Contacts entries) for each call you placed, accepted, or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Contacts entry name (if the phone number is in your Contacts list). Duplicate calls (same number and type of call) may only appear once on the list.

To view a Call History list:

1. Press **MENU OK** to access the main menu.
2. Select **Call History** and press **MENU OK**.
3. Select **Outgoing Calls**, **Incoming Calls**, or **Missed Calls** and press **MENU OK**.

Call History Options

For additional information and options on a particular call, highlight a Call History entry and press **Options** (right softkey).

This feature gives you the option of selecting:

- ▶ **Call** to dial the phone number.
- ▶ **Call:Speaker On** to dial the phone number in speakerphone mode.
- ▶ **Save Phone#** to save the phone number (if applicable). If the caller's phone number is already saved in your Contacts list, **Go to Phone Book** appears. (See "Saving a Phone Number From Call History" on page 83.)
- ▶ **Prepend** to add numbers to the beginning of the phone number. (See "Prepending a Phone Number From Call History" on page 84.)
- ▶ **Copy to Personal** to copy the phone number to Personal List.
- ▶ **Erase** to erase the entry.

Note: The "Copy to Personal" option is displayed when meet all of the following conditions. PCS Ready Link mode is set to Enable; the phone number is 10 digits or 11 digits beginning with 1; the phone number does not match any stored entry in Personal List; the phone is not in use.

Making a Call From Call History

To place a call from Call History:

1. Press **MENU OK** to access the main menu.
2. Select **Call History** and press **MENU OK**.
3. Select **Outgoing Calls**, **Incoming Calls** or **Missed Calls**.
4. Press **MENU OK**.
5. Highlight the entry you want to call by scrolling through the list.
6. Press **TALK** or **SPEAKER**.
- or -
Press **Options** (right softkey), highlight **Call**, or **Call:Speaker On**, and press **MENU OK**.

Note: You cannot make calls from Call History to entries identified as No ID or Restricted.

Saving a Phone Number From Call History

Your PCS Phone can store up to 300 Contacts entries. Contacts entries can store up to a total of 500 phone numbers and each entry's name can contain sixteen characters.

To save a phone number from Call History:

1. Highlight the call history entry you want to save.
2. Press **Options** (right softkey) to display the options.
3. Highlight **Save Phone#** and press **MENU OK**.
4. Highlight the appropriate label (Home, Work, Mobile, Pager, Data, Fax, or No Label) and press **MENU OK**.
5. Enter a name and press **MENU OK**.
If you have already stored entries in the Contacts list, you are prompted to select the following entry mode.
 - **New Name** to enter a name directly.
 - **From Ph. Book** to select a name from the Phone Book.
6. Press **Save** (left softkey).

Note: You cannot save phone numbers already in your Contacts list or from calls identified as No ID or Restricted. If the selected entry has already been stored in the Contacts list, **Go to Phone Book** appears during step 3 above.

Prepending a Phone Number From Call History

If you need to make a call from Call History and you happen to be outside your local area code, you can add the appropriate prefix by following these steps:

1. Highlight a call history entry and press **Options** (right softkey).
2. Highlight **Prepend** and press **MENU OK**.
3. Enter the digits you want to add to the number.
4. Press **TALK** or **SPEAKER** to make a call.

To select another option, press **MENU OK**, highlight it, and press **MENU OK**.

- **Call** to dial the phone number.
- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **Save Phone#** to store the phone number in your Contacts directory.
- **[H]Hard Pause** to insert a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 24.)
- **[T]2-Sec. Pause** to insert a 2-second pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 24.)

Erasing Call History

To erase individual Call History entries, see “Call History Options” on page 82.

To erase Call History:

1. Press **MENU OK** to access the main menu.
2. Select **Call History** and press **MENU OK**.
3. Select **Erase History** and press **MENU OK**.
4. Select **Outgoing Calls**, **Incoming Calls**, **Missed Calls**, or **All Calls** and press **MENU OK**.
5. Select **Voice Call Log** or **Ready Link Log** and press **MENU OK**.
 - **Voice Call Log** to erase Call History for Voice Calls.
 - **Ready Link Log** to erase Call History for PCS Ready Link Calls.
6. Select **Yes** and press **MENU OK**.


Using the Contacts Directory

In This Section

- ▶ **Contacts List Entry Options**
 - ▶ **Entering Text**
 - ▶ **Adding a New Contacts Entry**
 - ▶ **Finding Contacts List Entries**
 - ▶ **Adding a Phone Number or Address to a Contacts Entry**
 - ▶ **Editing a Contacts Entry**
 - ▶ **Selecting a Ringer/Image Type for an Entry**
 - ▶ **Secret Contacts List Entries**
 - ▶ **Dialing PCS Services**
-

Now you know the basics that make it easier to stay in touch with people and information. This section helps you make the most of your contacts and time when you are trying to connect with the important people in your life.

Contacts List Entry Options

To access a Contacts entry's options, display the Contacts list, highlight an entry and press , then select a phone number and press **Options** (right softkey). (See "Finding Contacts List Entries" on page 92.)



To select an option, highlight it and press .

- ▶ **Edit** to edit the selected entry.
- ▶ **Call** to dial the selected number.
- ▶ **Call:Speaker On** to dial the phone number in speakerphone mode.
- ▶ **Call Alarm** to set a call alarm for the entry. (See page 101 for call alarm.)
- ▶ **Set Speed Dial** to assign speed dial numbers to your favorite entries. (See page 62 for Speed Dialing.)
- ▶ **Set Voice Dial** to set a voice dial for the entry. (See page 120 for Voice Dial.)
- ▶ **Prepend** to alter a phone number by adding numbers. (See page 84 for prepending.)
- ▶ **Copy to Personal** to copy the phone number to Personal List.

Note: The "Copy to Personal" option is displayed when meet all of the following conditions. PCS Ready Link mode is set to Enable; the phone number is 10 digits or 11 digits beginning with 1; the phone number does not match any stored entry in Personal List; the phone is not in use.

Tip: You can view the next entry by pressing ▶ on the Navigation key or view the previous entry by pressing ◀ on the Navigation key.

To erase the selected entry from the Contacts list.


1. Press ▶ on the Navigation key to display the Contacts list.
2. Highlight the contact you want to erase and press **Options** (right softkey).
3. Highlight **Erase Contact** and press .
4. Select **Yes** and press .

Entering Text

Selecting a Character Input Mode



Your PCS Phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding a Contacts entry).



To change the character input mode:

1. When you display a screen where you can enter text, press the right softkey button.
2. Select a character input mode, highlight it, and press .
 - **T9Word** to enter characters using T9 Text Input (see below on this page).
 - **Alphabet** to enter characters by tapping the keypad (see page 89).
 - **SYMBOL** to enter symbols (see page 90).
 - **NUMBER** to enter numbers (see page 90).
 - **CANNED SUFFIX** to enter canned suffixes (see page 90).
 - **SMILEYS** to enter smile pictures (see page 91).

Entering Characters Using T9 Text Input

T9 Text Input lets you enter text in your PCS Phone by pressing keys just once per letter. (To select the **T9Word** mode when entering text, see “Selecting a Character Input Mode” on this page.)


T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.) If the word you want does not display after you have entered all the letters, press  to scroll through additional word selections (if applicable). To accept a word and insert a space, press .

If you make a mistake, press  to erase a single character. Press and hold  to delete an entire entry.

Adding a Word to the T9 Database

If a word you want to enter does not display as an option when you are using T9 Text Input, you can add it to the database.

To add a word to the T9 Text Input database:

1. Select the **Alphabet** input mode. (See “Selecting a Character Input Mode” on page 87.)
2. Enter the word using multi-tap text entry. (See “Entering Characters by Tapping the Keypad” on page 89.)
3. Press the right softkey, highlight **T9Word**, and press . (The word will appear as an option the next time you scroll through options during T9 Text Input.)

For more information about T9 Text Input, visit the Tegic Website at www.T9.com.

Entering Characters by Tapping the Keypad

To enter characters by tapping the keypad, select the **Alphabet** mode (see “Selecting a Character Input Mode” on page 87). Press the corresponding key until the desired character appears. By default, the first letter of a word is capitalized and following letters are lowercase.

Characters scroll in the following order:

Key	English Sequence	
	Upper Case	Lower Case
1	., @ 1 ? ! * # /	
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w x y z 9
Next 0	0	
Space #	Space	
Shift ✕	Unshifted One-character- shifted Caps Lock	

In Spanish mode, characters scroll in the following order.

Key	Spanish Sequence	
	Upper Case	Lower Case
1	., @ 1 ¿ ? ¡ ! * # /	
2	A Á B C 2	a á b c 2
3	D E É F 3	d e é f 3
4	G H I Í 4	g h i í 4
5	J K L 5	j k l 5
6	M N Ñ O Ó 6	m n ñ o ó 6
7	P Q R S 7	p q r s 7
8	T U Ú Û V 8	t u ú ù v 8
9	W X Y Z 9	w x y z 9
Next 0	0	
Space #	Space	
Shift ✕	Unshifted One-character- shifted Caps Lock	

(See page 64 for changing to Spanish language mode.)

After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Tip: The beginning of the word after the space is changed to upper/lower case depending on the entry field. You can change the shift by pressing **Shift ✕**.

Entering Numbers, Symbols, Canned Suffixes, and Smileys

Entering NUMBERS

To enter numbers:

1. In a text entry field, press right softkey.
2. Highlight **NUMBER** and press **MENU OK**.
3. Press the corresponding numeric key to enter the number.

Shortcut: Press and hold the corresponding numeric key to enter the number directly in alphabet mode or T9 mode.

Entering SYMBOLS

To enter symbols:

1. In a text entry field, press right softkey.
2. Highlight **SYMBOL** and press **MENU OK**.
3. Highlight the line that includes your desired symbol.
4. Press the corresponding key (1-8) with each symbol.
- or -
Highlight your desired symbol by using the Navigation key and press **MENU OK**.

Entering CANNED SUFFIXES

The Canned Suffix menu is a preprogrammed list of common prefixes, suffixes, and punctuation strings (for example, “www”, “.com”, and “//”), designed to make text entry easier and more efficient.

To enter canned suffixes:

1. In a text entry field, press the right softkey.
2. Highlight **CANNED SUFFIX** and press **MENU OK**.
3. Highlight your desired suffix by using the Navigation key and press **MENU OK**.

Entering SMILEYS

To enter smile pictures (“emoticons”):




1. In a text entry field, press the right softkey.
 2. Highlight **SMILEYS** and press **MENU OK**.
 3. Highlight the line that includes your desired smiley.
 4. Press the corresponding key (1-4) with each smiley.
- or -
Highlight your desired smiley by using the Navigation key and press **MENU OK**.
- This feature does not apply in PCS Ready Link mode.

Adding a New Contacts Entry

Your PCS Phone can store up to 300 Contacts entries. Contacts entries can store up to a total of 500 phone numbers and the entry’s name can contain sixteen characters.

To add a new entry:

1. Press **MENU OK** to access the main menu.
2. Select **Contacts** and press **MENU OK**.
3. Select **Find/Add Entry** and press **MENU OK**.
 - Press **▶** on the Navigation key for the shortcut (steps 1 through 3).
4. Highlight **<New Contact>** and press **MENU OK**.
5. Enter a name and press **MENU OK**.
6. Select a label field and press **MENU OK**.
 - **Name** to enter a new entry’s name.
 - **Home** to enter a new entry’s home number.
 - **Work** to enter a new entry’s work number.
 - **Mobile** to enter a new entry’s mobile number.
 - **Pager** to enter a new entry’s pager number.
 - **Data** to enter a new entry’s number for data.
 - **Fax** to enter a new entry’s fax number.
 - **No Label** to enter a new entry’s phone number.
 - **Email** to enter a new entry’s email address.

- **Web** to enter a new entry's Web address.
 - **Ringer** to assign a ringer type to the entry. (See "Selecting a Ringer/Image Type for an Entry" on page 95.)
 - **Image** to assign an image type to the entry. (See "Selecting a Ringer/Image Type for an Entry" on page 95.)
7. Enter the number or address and press .
 8. Press **Save** (left softkey).
- or -
1. Press  on the Navigation key to display the Contacts list.
 2. Press **Options** (right softkey).
 3. Highlight **Add New Contact** and press .
 4. Follow steps 5-8 above.





Finding Contacts List Entries

There are several ways to display your Contacts list entries. Follow the steps outlined in the sections below to display entries from the Contacts menu.


Finding Entries

You can review all the entries stored in your Contacts list or find an entry quickly by following these simple steps:


To find Contacts list entries:

1. Press  to access the main menu.
2. Select **Contacts** and press .
3. Select **Find/Add Entry** and press .
 - Press  on the Navigation key for the shortcut (steps 1 through 3).
4. Use your Navigation key to scroll through the Contacts list.

- or -

Enter the first letter of the name or part of the name. (The display shows the entry beginning with the letter entered.)
5. Press  to display the entry's detail.




To find PCS Ready Link List entries:

1. From standby mode, press ► on the Navigation key to display your Contacts list.
2. Press **Go to** (left softkey). Highlight your desired list and press 
 - **Phone Book** to display the Phone Book.
 - **Company List** to display the Company List.
 - **Co. Groups** to display the Company Group List.
 - **Personal List** to display the Personal List.
 - **Per. Groups** to display the Personal Group List.
3. Scroll through the list to select your desired entry.

Note: The **Go to** (left softkey) does not appear when PCS Ready Link mode is set to Disable (see “Setting PCS Ready Link Mode” on page 27).





Finding Speed Dial Numbers

To find phone numbers you have stored in speed dial locations:

1. Press  to access the main menu.
2. Select **Contacts** and press .
3. Select **Speed Dial #s** and press .
4. The Speed Dial numbers list appears.

Finding Voice Dial Numbers

To find phone numbers you have stored in Voice Dial:

1. Press  to access the main menu.
2. Select **Voice Services** and press .
3. Select **Voice Dial** and press .
4. Select **Review** or **Rev:Speaker** and press .
5. The Voice Dial number's list appears.

Adding a Phone Number or Address to a Contacts Entry

To add a phone number or address to an entry:

1. Press **MENU OK** to access the main menu.
2. Select **Contacts** and press **MENU OK**.
3. Select **Find/Add Entry** and press **MENU OK**.
 - Press **▶** on the Navigation key for the shortcut (steps 1 through 3).
4. Highlight the entry to which you wish to add phone numbers or email/Web addresses and press **MENU OK**.
5. Highlight a phone number, press **Options** (right softkey), highlight **Edit**, and press **MENU OK**.
– or –
Highlight an email address or Web address, and press **Edit** (right softkey).
6. Highlight the label field you want to add and press **MENU OK**.
7. Enter the number or address and press **MENU OK**.
8. Press **Save** (left softkey).

Editing a Contacts Entry

To make changes to an entry:


1. Press **▶** on the Navigation key.
2. Highlight the entry you wish to edit and press **MENU OK**.
3. Highlight a phone number, press **Options** (right softkey), highlight **Edit**, and press **MENU OK**.
– or –
Highlight an email address or Web address and press **Edit** (right softkey).
4. Select the label field you want to edit and press **MENU OK**.
5. Edit the entry by using your keypad and press **MENU OK**.
6. Press **Save** (left softkey) to save your changes.

Tip: You can also store the phone number in the Pager, Data, and Fax Category.

Selecting a Ringer/Image Type for an Entry

You can assign a ringer/image type to a Contacts entry so you can identify the caller by the ringer or image type. (See “Ringer Types” on page 43.)

To select a ringer/image type for an entry:

1. Press **▶** on the Navigation key.
2. Select the entry for which you want to set the incoming ringer or image and press **MENU OK**.
3. Highlight a phone number and press **Options** (right softkey), highlight **Edit**, and press **MENU OK**.
- or -
Highlight an Email address or Web address, and press **Edit** (right softkey).
4. Select the menu under **Ringer** or **Image** by scrolling up or down and press **MENU OK**.
5. Highlight your desired ringer type or image and press **MENU OK**.
 - **Ringer & Voice** to notify you with Ringer and Voice. (Ringer only.)
 - **Vibrate** to notify you by vibrating. (Ringer only.)
 - **Get New** to start up the browser and you can select an item to download.
 - **Normal** to use the current With Caller ID or Roaming setting for Ringer (see page 43) or to use the current Incoming Calls setting for Image (see page 52).
 - **None** to turn the ringer/image setting off.
6. Press **Save** (left softkey).
 - To confirm the ringer, highlight **Ringer** and press **Play** (right softkey).
 - To see a display preview, press **Preview** (right softkey) during step 5 above. Then press **Sub LCD** (right softkey) to see the Sub LCD preview. (You may also check the image through the external display.)
 - If you set an animation ringer (indicated with  icon) and an image, your PCS Phone plays the ringer (audio) of the animation ringer and displays the image you selected.
 - You need to have downloaded data to set image.

Secret Contacts List Entries

You can hide an entry's phone number(s) and require your lock code to edit the entry by making it secret. The entry name is still displayed, but the entry's phone numbers are replaced by "(SECRET)".

To make an entry secret:

1. Press **▶** on the Navigation key.
2. Scroll to the Contacts entry you want to tag Secret.
3. Press **Options** (right softkey) to display the menu options.
4. Highlight **Set Secret** and press **MENU OK**.
5. Enter the 4-digit lock code.
6. Select **On** and press **MENU OK**.
 - To make an entry public, select **Off** during step 6 above.

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or PCS Phone Number or try 0000. If none of these work, call PCS Customer Solutions at 1-888-211-4PCS (4727).

Dialing PCS Services

You must be in digital mode to access PCS Services.

To dial a service:

1. Press **MENU OK** to access the main menu.
2. Select **Contacts** and press **MENU OK**.
3. Select **Services** and press **MENU OK**.
4. Select **Cust Solutions**, **Dir Assistance**, **Account Info**, **Sprint Oper**, or **VoiceCommand** and press **MENU OK**.
5. Press **TALK** or **SPEAKER**.
- or -
Press **MENU OK**, highlight **Call**, or **Call:Speaker On**, and press **MENU OK**.

Personal Organizer

In This Section

- ▶ **Managing the Scheduler**
 - ▶ **Adding an Event to the Scheduler**
 - ▶ **Adding a Call Alarm to the Scheduler**
 - ▶ **Adding To Do Items**
 - ▶ **Purging All Events, Call Alarms, and To Do List Items**
 - ▶ **Personal Information Management**
 - ▶ **Using Your Phone's Tools**
 - ▶ **Downloading Files Through PCS Vision**
-

Your PCS Phone is equipped with several personal information management features that help you manage your busy lifestyle. These features turn your phone into a time management planner that helps you keep up with your contacts, schedules, and commitments. It takes productivity to a whole new level.

Managing the Scheduler

Calendar

Use the Calendar to remind you of events or important calls you need to make. You can schedule up to 100 events, 15 Call Alarms, and 20 To-Do Items.

Setting the Time/Date

In a no-service area or in an analog service area, it's necessary to set the actual time and date to use the Calendar function. Set the current Time/Date by using numeric keys and/or the Navigation key (◀/▶: move cursor, ▲/▼: change value). To display the time setting mode, press **MENU OK** and select **Tools/Extras**, then select **Calendar** and press **MENU OK**.

You can set any time from 12:00 AM, Jan 1, 2000 to 11:59 PM, Dec 31, 2099.

Setting Holidays

You can set your personal holidays by displaying the date in red on the Calendar display. The default holidays displayed in red are Sundays and National holidays.

Note: You can set holidays from Jan 1,2000 to Dec 31,2020.

To set personal holidays:

1. Press **MENU OK** to access the main menu.
2. Select **Tools/Extras** and press **MENU OK**.
3. Select **Calendar** and press **MENU OK**.
4. Highlight the day you want to set to the holiday by using the Navigation key (◀: previous day, ▶: next day, ▲: previous week, ▼: next week).
5. Press **Options** (right softkey), highlight **Holiday**, and press **MENU OK**.
6. Highlight **Set Date** or **Set Weekly** from the options and press **MENU OK**.

Options:

- **Set Date** sets the selected date to the holiday.
 - **Set Weekly** sets the weekly holidays.
 - **Reset Date** resets the holiday setting for the selected date.
 - **Reset Weekly** resets the weekly holiday setting.
 - **Reset All** resets all the holiday settings and returns to the default settings.
7. If you selected **Set Weekly**, **Reset Weekly**, or **Reset All**, you'll be prompted to select **Yes** or **No**.

Tip: The current day is framed by a rectangle.

Adding an Event to the Scheduler

Your Scheduler helps organize your time and reminds you of important events (up to 100 events).

To add an event:

1. Press **MENU OK** to access the main menu.
2. Select **Tools/Extras** and press **MENU OK**.
3. Select **Calendar** and press **MENU OK**.
4. Select the day you want to add an event to by using the Navigation key and press **MENU OK**.
5. Press **Options** (right softkey) to display the options.
6. Select **Add Event** and press **MENU OK**.
7. Select **Schedule** and press **MENU OK**.
8. Enter the description and press **MENU OK** or press **MENU OK** without entering the description.
9. Select the menu under the following options and press **MENU OK**.
 - **Description** to enter a description of your event (up to 14 characters).
 - **From** to schedule the start time.
 - **To** to schedule the end time.
 - **Location** to edit the location of your event (up to 14 characters).
 - **Alarm** to select your desired ringer.
 - **Alarm Time** to edit the alarm time (number of hours or minutes before the event starts). Default alarm time is 10 minutes before.
 - **Repeat** to repeat the event. Select **None**, **Daily**, **Weekly**, **Monthly**, or **Yearly**.
10. Press **Save** (left softkey) to schedule the event.

Tip: The date you have scheduled events is for indicated by "►".

Tip: Press ▲/▼ on the Navigation key to scroll by week through the Scheduler calendar and the Side Volume key to scroll by month.

Event Alerts

There are several ways your PCS Phone alerts you of scheduled events:

- ▶ By playing the alert tone (depending on the Alert and Ringer Volume setting).
- ▶ By blinking the LED.
- ▶ By displaying the event's description on the Main LCD when the flip is open.
- ▶ By displaying the event's description on the Sub LCD when the flip is closed.
- ▶ By lighting the LCD backlight (depending on the backlight setting).

Event Alert Menu

When your phone is turned on and you have an event alarm scheduled, your phone alerts you and displays the event summary.

To respond to an event alert:

1. Press **MENU OK** or **View** (left softkey) to silence the alarm and see the event details.
2. Highlight the unchecked event and press **MENU OK** to see the event details or press **Options** (right softkey) for the following options. To select an option, highlight it and press **MENU OK**.
 - **Snooze** to repeat the alarm in ten minutes.
 - **Exit** to exit the options.

Note: If you press **Exit** (left softkey) during step 2 above, you are prompted to erase the unchecked event. Select **Yes** to erase or **No** to cancel.

Viewing the Event List

To view your Event list:

1. Press **MENU OK** to access the main menu.
2. Select **Tools/Extras** and press **MENU OK**.
3. Select **Calendar** and press **MENU OK**.
4. Select the date for which you set events and press **MENU OK**.

Editing an Event

To edit an event's details:

1. From the Event list display, highlight an event and press **MENU OK**.
(The event details appear.)
2. Select the box under each item you want to edit and press **MENU OK**.
3. Enter or select a new setting and press **MENU OK**.
4. Press **Save** (left softkey).

Adding a Call Alarm to the Scheduler

Set the number you want to call. Call alarm notifies you when you need to make a call. You can set up to 15 call alarms.

To add a call alarm to the Scheduler:

1. Press **MENU OK** to access the main menu.
2. Select **Tools/Extras** and press **MENU OK**.
3. Select **Calendar** and press **MENU OK**.
4. Select the day you want to add a Call Alarm to by using the Navigation key and press **MENU OK**.
5. From the event list display, press **Options** (right softkey) to display the options.
6. Select **Add Event** and press **MENU OK**.
7. Select **Call Alarm** and press **MENU OK**.
8. Enter the phone number directly or press **Options** (right softkey) for options.
 - **From Ph. Book** to select the desired number from your Phone Book.
 - **Voicemail** to select the number for voicemail access.
9. Select the box under the following items and press **MENU OK**.
 - **Time/Date** to edit the start time/date.
 - **Alarm** to select the ringer alarm.
 - **Repeat** to repeat the Call Alarm. Select **None**, **Daily**, **Weekly**, **Monthly**, or **Yearly**.
10. Press **Save** (left softkey).

Tip: You can also add a call alarm from the Contacts menu (see "Contacts List Entry Options" on page 86).

Call Alarm Alerts

There are several ways your PCS Phone alerts you of a scheduled call alarm:

- ▶ By playing the alert tone (depending on the Alert and Ringer Volume setting).
- ▶ By blinking the LED.
- ▶ By displaying the Call Alarm Notification on the Main LCD when the flip is open.
- ▶ By displaying the Call Alarm Notification on the Sub LCD when the flip is closed.
- ▶ By lighting the LCD backlight (depending on the backlight setting).

Call Alarm Menu

When your phone is turned on and you have scheduled a call alarm, your phone alerts you and displays the name or phone number you wish to call.

To respond to a call alarm:

1. Press **MENU OK** or **View** (left softkey) to silence the alarm and see the call alarm details.
2. Highlight the unchecked event and press **MENU OK** to see the call alarm details, or press **Options** (right softkey) for the following options (to select an option, highlight it and press **MENU OK**):
 - **Call** to dial the scheduled phone number.
 - **Call:Speaker On** to dial the scheduled phone number in speakerphone mode.
 - **Snooze** to repeat the alarm in ten minutes.
 - **Save Phone#** to save the scheduled phone number in your Contacts list. **Go to Phone Book** appears when the number is already in your Contacts list. (See “Saving a Phone Number” on page 23.)

Note: If you press **Exit** (left softkey) during step 2 above, you are prompted to erase the unchecked event. Select **Yes** to erase or **No** to cancel.

Editing a Call Alarm

To edit a Call Alarm:

1. From the Event list display (see page 100), highlight a call alarm and press **MENU OK**. (The call alarm details appear.)
2. Select the box you want to edit, and press **MENU OK**.
3. Enter or select a new setting and press **MENU OK**.
4. Press **Save** (left softkey).

Erasing a Day's Events or Call Alarms

To erase a scheduled day's events or call alarms:

1. From the Event list display (see page 100), highlight an event or a call alarm and press **Options** (right softkey).
2. Highlight **Erase Event** and press **MENU OK**.
3. Select **Yes** and press **MENU OK**.

Viewing a Future/Past Day's Scheduled Events




 
To view a future/past day's scheduled events:

1. From the Event list display (see page 100), press **Options** (right softkey).
2. Highlight **Go To Date** and press **MENU OK**.
3. Enter the date by using numeric keys and the Navigation key and press **MENU OK** or **OK** (left softkey).
4. Press **MENU OK** once again to view the day's Event list.

Adding To Do Items



Your phone can store and manage up to 20 To Do items.

To add an entry to your To Do List:

1. From the Event list display (see page 100), press **Options** (right softkey).
2. Highlight **To Do List** and press .
3. Press **Options** (right softkey).
4. Highlight **Add Item** and press .
5. Enter the description and press  (up to 14 characters).
6. Select the menu under **Priority** and press  to edit the To Do's priority. You can select from **Normal**, **!Urgent**, or **√Done**.
7. Press **Save** (left softkey).




Viewing To Do List

To view your To Do List:

1. From the Event list display (see page 100), press **Options** (right softkey).
2. Highlight **To Do List** and press .
 - To see the details of each To Do item, select an item and press .

Editing To Do Items

To edit a To Do item:

1. From the To Do List display, highlight the item you want to edit and press .
2. Highlight the box you want to edit and press .
3. Edit the description or change the priority, and press .
4. Press **Save** (left softkey).

Adding a To Do Item to the Schedule

To add your To Do item to the schedule:

1. From the To Do List display, highlight the item you want to add to the schedule and press **Options** (right softkey).
2. Highlight **Add To Schedule** and press **MENU OK**.
3. Enter the description using your keypad and press **MENU OK**. (See “Adding an Event to the Scheduler” on page 99.)
4. Press **Save** (left softkey).
 - **Add To Schedule** to extract the item from the To Do list and make it a scheduled event.

Deleting Items From the To Do List

1. From the To Do List display (see page 104), highlight the item you want to erase and press **Options** (right softkey).
2. Highlight **Erase Item**, **Erase Selection**, or **Erase All** and press **MENU OK**.
 - **Erase Item** erases an item from the To Do List.
 - **Erase Selection** erases the selected To Do items at one time. Press **MENU OK** to check the box next to To Do item and press **Erase** (left softkey) to erase. To check all boxes, press **Options** (right softkey) and highlight **Check All** and press **MENU OK**.
 - **Erase All** erases all To Do items.
3. Highlight **Yes** and press **MENU OK**.

Viewing Memory in Your Scheduler

To view available memory space and options:

1. From the Event list display (see page 100), press **Options** (right softkey).
2. Highlight **View Memory** and press **MENU OK**.
3. Highlight **Schedule**, **Call Alarm**, or **To Do List** and press **MENU OK**.

For further options:

4. Press **Options** (right softkey).
5. Highlight an option and press **MENU OK**.

Options:

- **Erase Old** deletes the old events or call alarms.
- **Erase Selection** deletes the To Do item you selected. (See “Deleting Items From the To Do List ” on page 105).
- **Erase Done** deletes the To Do items that are done.
- **Erase All** deletes all events, call alarms, or To Do items.

6. Select **Yes** or **No** and press **MENU OK**.

Purging All Events, Call Alarms, and To Do List Items

To delete all scheduled events, call alarms, and To Do List items:

1. From the Event list display (see page 100), press **Options** (right softkey).
2. Highlight **Erase Memory** and press **MENU OK**.
3. Highlight one item from the Options and press **MENU OK**.

Options:

- **Erase Old** deletes the old events, call alarms, and To Do items that are done.
- **Erase All** deletes all events, call alarms, and To Do items.

4. Select **Yes** or **No** and press **MENU OK**.

Personal Information Management

Displaying Your User Address

To display the phone's current user address:

1. Press **MENU OK** to access the main menu.
2. Select **Phone Info** and press **MENU OK**.
3. Select **Phone# UserID** and press **MENU OK**.
 - If you sign out, <PCS Vision Disabled> appears on the display.

Getting to Know Icon Indication

To view explanation of icons that appear on the display.

1. Press **MENU OK** to access the main menu.
2. Select **Phone Info** and press **MENU OK**.
3. Select **Help** and press **MENU OK**.
4. Select the item for which you want to see the explanation and press **MENU OK**. (The icon's explanation appears and scrolls down automatically.)
5. Press **Done** (left softkey) or **END /O** to end.
 - Use **▲/▼** on the Navigation key to scroll through the message manually.

Displaying the Version Information

To display the version number of the software, hardware, PRL (Preferred Roaming List), PRI (Product Release Instructions), etc., installed on your PCS Phone:

1. Press **MENU OK** to access the main menu.
2. Select **Phone Info** and press **MENU OK**.
3. Select **Version** and press **MENU OK**.

Using Your Phone's Tools

In addition to features designed to help make you more efficient and organized, your new PCS Phone also offers additional tools to enhance your productivity.

Using the Calculator

Your phone comes with a built-in calculator function.

To use the calculator:

1. Press **MENU** to access the main menu.
2. Select **Tools/Extras** and press **MENU**.
3. Select **Calculator** and press **MENU**.
4. Enter numbers using your keypad. Press left softkey to insert a decimal point.
5. Press the appropriate Navigation key for an arithmetic option (▲ for addition, ▼ for subtraction, ◀ for multiplication, ▶ for division).
6. Enter numbers and press **MENU** for the result.
 - To clear the numbers, press **CLR** (right softkey).
 - To end calculation, press **END / ⓧ**.

Using the World Clock

This feature is available only in digital service areas.

To set the World Clock display:

1. Press **MENU** to access the main menu.
2. Select **Tools/Extras** and press **MENU**.
3. Select **World Clock** and press **MENU**.
4. The World Clock display appears.
 - Press ◀/▶ on the Navigation key to change countries.

Press **Summer** (left softkey) or **Standard** (right softkey) to select between Daylight Savings and standard time if applicable. ("☀" is shown in Daylight Savings mode.)

Downloading Files Through PCS Vision

Your PCS Phone allows you to download images (screen savers), ringers, games, etc. from a PCS Vision connection. It is also possible to download from certain menus (Contacts list, Ringer Setting, or Display Setting).

To download a file from the Web:

1. Press **MENU OK** to access the main menu.
2. Select **Downloads** and press **MENU OK**.
3. Select your desired data folder and press **MENU OK**.
4. Select **Get New** and press **MENU OK**.
5. Select your desired image or ringer file and follow the system prompts.
6. Press the left softkey to start downloading.
7. Wait for the download to complete.
8. Press **END /O** to end or press the left or right softkey for further operation.
 - **Left softkey** assigns the downloaded data.
 - **Right softkey** returns to the Download page and you can continue to download.

To download a file from a Contacts list entry:

1. Press **MENU OK** to access the main menu.
2. Select **Contacts** and press **MENU OK**.
3. Select **Find/Add Entry** and press **MENU OK**.
4. Select the entry for which you want to set the downloaded ringer or image and press **MENU OK**.
5. Highlight a phone number and press **Options** (right softkey). Then highlight **Edit** and press **MENU OK**.
- or -
Highlight an email address or Web address, then press **Edit** (right softkey).
6. Select the menu under **Ringer** or **Image** and press **MENU OK**.
7. Highlight **Get New** and press **MENU OK**. (The browser launches and displays the Download page.)

8. Select your desired image or ringer file and follow the system prompts.
9. Press the left softkey to start downloading.
10. Wait for the download to complete.
11. Press **END / Ⓞ** to end or press the left or right softkey for further operation.
 - **Left softkey** assigns the downloaded data. (See “To confirm the downloaded ringers folder” on page 112 or “To confirm the downloaded images (screen savers) folder” on page 113.)
 - **Right softkey** returns to the Download page and you can continue to download.

To download a ringer file from the Ringer Setting Menu (Ringer Type and Start-up/Power-off Tone):

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Sounds** and press **MENU OK**.
4. Select **Ringer Type** and press **MENU OK**.
5. Select one item from **Voice Calls**, **Voice mail**, **Messaging**, or **Calendar**, and press **MENU OK**. The following item needs an extra step:
 - **Voice Calls** select the menu under **With Caller ID**, **No Caller ID**, or **Roaming**.
6. Select the menu under each item and press **MENU OK**.
7. Select **Get New** and press **MENU OK**. (The browser launches and displays the Download page.)
8. Select your desired ringer file and follow the system prompts.
9. Press the left softkey to start downloading.
10. Wait for the download to complete.
11. Press **END / Ⓞ** to end or press the left or right softkey for further operation.
 - **Left softkey** assigns the downloaded data. (See “To confirm the downloaded ringers folder” on page 112.)
 - **Right softkey** returns to the Download page and you can continue to download.

If you want to download a ringer file from the Start-up/Power-off Tone menu:

1. Select **Others** during the previous step 4 and press **MENU OK**.
2. Select the menu under **Start-up Tone** or **Power-off Tone** and press **MENU OK**.
3. Follow the previous steps 7 to 11.

To download an image file from the Display Setting Menu (Animation, Incoming Calls, and Screen Saver):

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Display** and press **MENU OK**.
4. Select **Animation** or **Incoming Calls** and press **MENU OK**.

The following item needs an extra step:

- **Animation** requires you to select the menu under **Standby, Outgoing Calls, or Service Search**.

5. Select the menu under each item and press **MENU OK**.
6. Select **Get New** and press **MENU OK**. (The browser launches and displays the Download page.)
7. Select your desired image file and follow the system prompts.
8. Press the left softkey to start downloading.
9. Wait for the download to complete.
10. Press **END /O** to end or press the left or right softkey for further operation.
 - **Left softkey** assigns the downloaded data. (See “To confirm the downloaded images (screen savers) folder” on page 113.)
 - **Right softkey** returns to the Download page and you can continue to download.

To download an image file from Screen Saver menu.

1. Select **Standby Display** during step 4 above and press **MENU OK**.
2. Select **Screen Saver** and press **MENU OK**.
3. Select the menu under **Screen Saver** and press **MENU OK**.
4. Follow the previous steps 6 to 10.

Confirming the Downloaded Data

The downloaded data will be classified as games, ringers, images (screen savers), or applications automatically. However, if data has a different category as above, they are classified as Dynamic. If data doesn't belong to any of the above, it is classified as Others. You can also confirm the downloaded data by pressing the left softkey immediately after you finish downloading (see "Options" below).

To confirm the downloaded games folder:

1. Press **MENU OK** to access the main menu.
2. Select **Downloads** and press **MENU OK**.
3. Select **Games** and press **MENU OK**.
4. Select the downloaded game you want to confirm and press **MENU OK**.
5. Select **Run** from the options and press **MENU OK**.

Options:

- **Run** to play the downloaded game.
- **Settings** to set the Network Access availability.
- **Options** to select the options of the downloaded data.
 - Properties** shows the downloaded data property.
 - Online Info** shows the downloaded data online information.
 - Shop** allows you to continue downloading.
 - Logo/Trademark** displays the logo and description.
 - Erase** erases the selected downloaded data.
- **Exit** to return to the downloaded data list display.

To confirm the downloaded ringers folder:

1. Press **MENU OK** to access the main menu.
2. Select **Downloads** and press **MENU OK**.
3. Select **Ringers** and press **MENU OK**.
4. Select the downloaded ringer you want to confirm and press **MENU OK**.
5. Select **Play** from the options and press **MENU OK**.

Options:

- **Play** to play the downloaded ringer.
- **Assign** to assign the downloaded data to the Ringer Type, Start-up/Power-off Tone, or Contacts list.
- **Options** to select the options of the downloaded data.
 - Properties** shows the downloaded data property.
 - Online Info** shows the downloaded data online information.
 - Shop** allows you to continue downloading.
 - Erase** erases the selected downloaded data.
- **Exit** to return to the downloaded data list display.

To confirm the downloaded images (screen savers) folder:

1. Press **MENU OK** to access the main menu.
2. Select **Downloads** and press **MENU OK**.
3. Select **Screen Savers** and press **MENU OK**.
4. Select the downloaded image you want to confirm and press **MENU OK**.
5. Select **View** from the options and press **MENU OK**.

Options:

- **View** to display the downloaded image.
- **Assign** to assign the downloaded data to the Incoming Calls, Screen Saver, or Contacts list entry, etc.
- **Options** to select the options of the downloaded data.
 - Properties** shows the downloaded data property.
 - Online Info** shows the downloaded data online information.
 - Shop** allows you to continue downloading.
 - Erase** erases the selected downloaded data.
- **Exit** to return to the downloaded data list display.

Note: Depending on the data, you can select where to assign your downloaded files: Image data can be assigned to **Incoming Calls, Screen Saver, or Phone Book**. Animation data can be assigned to **Standby, Outgoing Calls, or Service Search**.

To confirm the downloaded applications folder:

1. Press **MENU OK** to access the main menu.
2. Select **Downloads** and press **MENU OK**.
3. Select **Applications** and press **MENU OK**.
4. Select the downloaded application you want to confirm and press **MENU OK**.
5. Select **Run** from the options and press **MENU OK**.

Options:

- **Run** to play the downloaded application.
- **Settings** to set the Network Access availability.
- **Options** to select the options of the downloaded data.
 - Properties** shows the downloaded data property.
 - Online Info** shows the downloaded data online information.
 - Shop** allows you to continue downloading.
 - Logo/Trademark** displays the logo and description.
 - Erase** erases the selected downloaded data.
- **Exit** to return to the downloaded data list display.

To confirm the downloaded Dynamic folder:

The downloaded data in the Dynamic folder are varied (options subject to change).






1. Press **MENU OK** to access the main menu.
2. Select **Downloads** and press **MENU OK**.
3. Select **Dynamic-(1 to 10)** and press **MENU OK**.
4. Select the downloaded data you want to confirm and press **MENU OK**.
5. Select **Open** from the options and press **MENU OK**.

Options:

- **Open** to play the downloaded content.
- **Options** to select the options of the downloaded data.
 - Properties** shows the downloaded data property.
 - Online Info** shows the downloaded data online information.
 - Shop** allows you to continue downloading.
 - Logo/Trademark** displays the logo and description.
 - Erase** erases the selected downloaded data.
- **Exit** to return to the downloaded data list display.

To confirm the downloaded Others folder:













 
The downloaded data in the Others folder are varied.

1. Press  to access the main menu.
2. Select **Downloads** and press .
3. Select **Others** and press .
4. Select the downloaded data you want to confirm and press .
5. Select **Open** from the options and press .

Options:

- **Open** to play the downloaded content.
- **Options** to select the options of the downloaded data.
 - Properties** shows the downloaded data property.
 - Online Info** shows the downloaded data online information.
 - Shop** allows you to continue downloading.
 - Logo/Trademark** displays the logo and description.
 - Erase** erases the selected downloaded data.
- **Exit** to return to the downloaded data list display.





Icon Indication

Type	Item	Icon (appears at the left side of the downloaded data)
From Web	Ringers (~64KB)	+  (New Data)  (Assigned Data)
	Voice (~64KB)	+  (New Data)  (Assigned Data)
	Screen Savers/Images (~64KB)	+  (New Data)  (Assigned Data)
	Animation (~64KB)	+  (New Data)  (Assigned Data)
	Animation Ringer (~64KB)	+  (New Data)  (Assigned Data)
	Game (~100KB)	+  (New Data)
	Application (~100KB)	+  (New Data)
	Unknown type (~64KB)	+  (New Data)
		Note: Download icon subject to change

Sorting the Downloaded Data

The downloaded files are stored in alphabetical order.

To sort the downloaded data:

1. Press  to access the main menu.
2. Select **Downloads** and press .
3. Select one of each folder that includes the downloaded data you want to sort.
4. Press .
5. Press **Options** (right softkey).
6. Highlight **Sorting** from the options and press .

Options:

- **Sorting** to sort the downloaded data in alphabetical (Name) or memory size (Size) order.
- **Icon/Size** to show the downloaded data list with memory size.
- **Erase All** to erase all downloaded files you selected during step 3. (Downloaded data that has already been assigned cannot be erased.)

7. Highlight **Size** and press .

Viewing the Downloaded Data Size

This feature allows you to confirm each downloaded item size and the remaining download capacity.

To view the data size:

1. Press **MENU OK** to access the main menu.
2. Select **Downloads** and press **MENU OK**.
3. Select one of each folder that includes the downloaded data you want to confirm and press **MENU OK**.
4. Press **Options** (right softkey).
5. Highlight **Icon/Size** and press **MENU OK**. (Data size is displayed at the left of the downloaded data name.)
 - To return the display to the icon indication, repeat step 4 and 5 above.

Viewing Available Memory Space for Downloading

This feature allows you to confirm how much memory is left and may be used for downloading.

To view the available memory space:

1. Press **MENU OK** to access the main menu.
2. Select **Downloads** and press **MENU OK**.
3. Press **Options** (right softkey).
4. Highlight **View Memory** and press **MENU OK**. (Used and Free memory size are displayed.)

Erasing Old Downloaded Data

If you try to download new data when the downloaded data's memory is full, the warning message appears and you will be prompted to erase some old downloaded data.

To erase old downloaded data to make room for new downloads:

1. When the warning message appears, press **Erase** (left softkey) to make space for new download data. (Press right softkey to cancel the download.)
2. Select one of each folder that includes the data you want to erase and press **MENU OK**.
3. Select the data you want to erase and press **Erase** (left softkey).
4. Select **Yes** and press **MENU OK**. (You can continue to download the new file.)

Using Your Phone's Voice Services

In This Section

- ▶ **Using Voice-Activated Dialing**
 - ▶ **Recording Voice Memos**
 - ▶ **Setting Up Screen Call**
-

This section explains the features associated with your phone's Voice Services. The easy-to-follow instructions explain how to use voice-activated dialing, how to record and manage voice memos, and how to use the Screen Call function.

Using Voice-Activated Dialing

In addition to PCS Voice CommandSM (see page 174), you can use a Voice Dial tag to automatically dial a phone number in your Contacts directory. Your phone can store up to 30 Voice Dial tags.

To use a Voice Dial tag to call a phone number:

With the Flip Open:

1. Press **TALK** or **SPEAKER** briefly.
2. Follow the voice prompts and recite the entry's Voice Dial tag into your phone's microphone.

With the Flip Closed:

1. Press and hold **END CALL**.
2. Follow the voice prompts and recite the entry's Voice Dial tag.

Note: To use the Voice Dial function, you must have stored entries for Voice Dial (see "Programming a Voice Dial Tag to Your Phone" on this page).

Programming a Voice Dial Tag to Your Phone

To program a voice dial tag:

1. Press **MENU OK** to access the main menu.
2. Select **Voice Services** and press **MENU OK**.
3. Select **Voice Dial** and press **MENU OK**.
4. Select **Program** and press **MENU OK**.
5. The phone will prompt you to say the name you want to program. Wait for the beep and then say the name.
6. Respond to the prompt by repeating the name after the beep.
7. Enter or highlight the entry (name) in the Contacts list and press **MENU OK**.
8. Select the desired phone number and press **MENU OK**. (The Display shows "Voice Dial Recorded".)

Note: Record Voice Dial tags in a quiet environment and without the aid of an accessory (for example, a headset or hands-free car kit).

Reviewing Voice Dial Tags

To review your stored voice dial tags:

1. Press **MENU OK** to access the main menu.
2. Select **Voice Services** and press **MENU OK**.
3. Select **Voice Dial** and press **MENU OK**.
4. Select **Review** or **Rev:Speaker** and press **MENU OK**.
5. Select the desired entry and press **MENU OK**.
- or -
Select the desired entry and press **Options** (right softkey).
To select an option, highlight it and press **MENU OK**.

Options:

- **Play** to play the recorded voice dial tag.
- **Speaker On** to play the recorded voice dial tag in speakerphone mode. (If you are in speakerphone mode, the option will appear as **Speaker Off** to deactivate.)
- **Erase** to erase the voice dial tag. Select **Yes** to erase and **No** to cancel.

Erasing All Voice Dial Tags

To erase all voice dial tags:

1. Press **MENU OK** to access the main menu.
2. Select **Voice Services** and press **MENU OK**.
3. Select **Voice Dial** and press **MENU OK**.
4. Select **Erase All** and press **MENU OK**.
5. Select **Yes** and press **MENU OK**.

Recording Voice Memos

To record a memo in standby mode:

1. Press **MENU OK** to access the main menu.
2. Select **Voice Services** and press **MENU OK**.
3. Select **Voice Memo** and press **MENU OK**.
4. Select **Record** and press **MENU OK**.

Shortcut: In standby mode, press and hold **Memo** (right softkey).

5. Start recording after the beep.

To end the recording of your memo:

- Press **MENU OK**, **BACK** or **END /O**.

Tip: Recording terminates automatically after 18 seconds.

Tip: To record in speakerphone mode, press and hold **SPEAKER** in standby mode.

To record a conversation during a phone call:

1. During a call, press **MENU OK** to see the options.
2. Select **Voice Services** and press **MENU OK**.
3. Select **Voice Memo** and press **MENU OK**.
4. Select **Record** and press **MENU OK**.
5. Start recording after the beep.

To end the recording of your conversation:

- Wait for 18 seconds or press **MENU OK** or **BACK** while recording.
- or -
Press **END /O** and disconnect the call while recording.

It also stops recording when the other party hangs up the call.

- Recording Memo is disabled while the phone is in use in an analog service area.
- When the recording capacity is full, highlight an old memo and press **Erase** (left softkey) to make room for new memos.

Note: Your phone can store up to 12 memos and the total available recording time is 72 seconds (maximum of 18 seconds per memo).

Tip: Voice Memos are stored with the date and time stamp in reverse chronological order, except when recorded in a no-service area.

Reviewing Voice Memos

To play the voice memos you have recorded:

1. Press **MENU OK** to access the main menu.
2. Select **Voice Services** and press **MENU OK**.
3. Select **Voice Memo** and press **MENU OK**.
4. Select **Play** or **Play:Speaker** and press **MENU OK**.
5. Select one memo from the list and press **MENU OK**.
- or -
Highlight **All** if you want to play all memos continuously, and press **MENU OK**.
6. Press **MENU OK** to stop playing.
 - Press **Slow** (left softkey) or **Fast** (right softkey) to change the playing speed.
 - To play the newer/older memo, press ◀/▶ on the Navigation key.

Tip: To set the speakerphone mode on or off, press **Options** (right softkey), highlight **Speaker On/Off** and press **MENU OK** during step 5 above.

Erasing Voice Memos

To erase individual memos:

1. Press **MENU OK** to access the main menu.
2. Select **Voice Services** and press **MENU OK**.
3. Select **Voice Memo** and press **MENU OK**.
4. Select **Play** or **Play:Speaker** and press **MENU OK**.
5. Display the memo list, highlight the memo you want to erase and press **Options** (right softkey).
6. Select **Erase** and press **MENU OK**.
7. Select **Yes** and press **MENU OK**.

To erase all voice memos:

1. Follow steps 1-5 above.
 2. Select **Erase All** and press **MENU OK**.
 3. Select **Yes** and press **MENU OK**.
- or -
1. Press **MENU OK** to access the main menu.
 2. Select **Voice Services** and press **MENU OK**.
 3. Select **Voice Memo** and press **MENU OK**.
 4. Select **Erase All** and press **MENU OK**.
 5. Select **Yes** and press **MENU OK**.

Setting Up Screen Call


This feature enables you to screen incoming calls by using recorded announcements, either one that comes pre-recorded on your phone or one that you record. You can also record the caller's message into the Voice Memo list. To listen to the message, see "Reviewing Voice Memos" on page 123.


Activating Screen Call

To start Screen Call when you have incoming calls:

1. Press **MENU OK** to display the options.
2. Highlight **Screen Call** and press **MENU OK**.

To set Auto Screen Call:

1. Press **MENU OK** to access the main menu.
2. Select **Voice Services** and press **MENU OK**.
3. Select **Screen Call** and press **MENU OK**.
4. Select **Auto** and press **MENU OK**.
5. Select **On** and press **MENU OK**.
6. Set the answering time by using numeric keys or ▲/▼ on the Navigation key.
7. Press **MENU OK** or **OK** (left softkey). (The  icon is displayed on the standby display.)

Tip: If a new caller's message is waiting,  appears on the display. The memos recorded while activating "Screen Call" are shown with "√" or "!" icon in the list ("√": once played, "!": not played yet).

Tip: While the caller's is recording: Pressing **END / ⓧ** stops recording and disconnects the call. Pressing **TALK** answers a call.

Selecting an Announcement for Screen Call

To select a Screen Call announcement:

1. Press **MENU OK** to access the main menu.
2. Select **Voice Services** and press **MENU OK**.
3. Select **Screen Call** and press **MENU OK**.
4. Select **Announcement** and press **MENU OK**.
5. Depending on your preference, highlight **Pre-Recorded** or **Custom** and press **MENU OK**.

Recording Your Name for a Pre-Recorded Announcement

You can use a pre-recorded announcement with or without your name. If you record your name, your phone uses your name to announce that you are not available to answer the call.

To record your name to attach to a pre-recorded Screen Call announcement:

1. Press **MENU OK** to access the main menu.
2. Select **Voice Services** and press **MENU OK**.
3. Select **Screen Call** and press **MENU OK**.
4. Select **Announcement** and press **MENU OK**.
5. Select **Pre-Recorded** and press **Edit** (right softkey).
6. Select **Record Name** and press **MENU OK**.
 - When your name has already been recorded, select **Yes** or **No** to overwrite the existing recording.
7. Press **MENU OK** to start the first recording.
8. After the first recording, press **MENU OK** again to start the second recording.
9. Press **MENU OK** to stop recording.

Tip: Recording terminates automatically after 12 seconds.

Recording a Custom Announcement

To record a custom Screen Call announcement:

1. Follow steps 1-4 on the previous page.
2. Select **Custom** and press **Edit** (right softkey).
3. Highlight **Record** and press **MENU OK**.
 - When an announcement has already been recorded, select **Yes** or **No** to overwrite the existing recording.
4. Press **MENU OK** to start the first recording.
5. After the first recording, press **MENU OK** again to start the second recording.
6. Press **MENU OK** to stop recording.

Tip: Recording terminates automatically after 12 seconds.

Reviewing an Announcement

To review your Screen Call announcement:

1. Press **MENU OK** to access the main menu.
2. Select **Voice Services** and press **MENU OK**.
3. Select **Screen Call** and press **MENU OK**.
4. Select **Announcement** and press **MENU OK**.
5. Select **Pre-Recorded** or **Custom** and press **Edit** (right softkey).
6. Highlight **Play** or **Play:Speaker** and press **MENU OK**.

Erasing an Announcement

To erase a Screen Call announcement:

1. Follow steps 1-5 above.
2. Select **Erase Name** to erase your name for Pre-Recorded Announcements and press **MENU OK**.
– or –
Select **Erase** to erase your message for a Custom Announcement and press **MENU OK**.
3. Select **Yes** and press **MENU OK**.

Using PCS Service Features

PCS Service Features: The Basics

In This Section

- ▶ **Using Voicemail**
 - ▶ **Using Caller ID**
 - ▶ **Responding to Call Waiting**
 - ▶ **Making a Three-Way Call**
 - ▶ **Using Call Forwarding**
-


Now that you've mastered your phone's fundamentals, it's time to explore the calling features that enhance your PCS Service.

Using Voicemail

Setting Up Your Voicemail

All unanswered calls to your PCS Phone are automatically transferred to voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your PCS Voicemail and personal greeting as soon as your PCS Phone is activated.



To set up voicemail:

1. Press and hold .
2. Follow the system prompts to create your passcode, record your greeting, record your name announcement, and choose whether to activate One-Touch Message Access (a feature that lets you press one key to access messages and bypasses the need for you to enter your passcode).



Note: The voicemail setup process may vary in certain Affiliate areas.


VoiceMail Notification

There are several ways your PCS Phone alerts you to new voicemail messages:

- ▶ By displaying a message on the screen.
- ▶ By sounding the assigned ringer type.
- ▶ By the LED blinking.
- ▶ By displaying  at the top of your screen for voicemail messages or  for Text Messages.

New Voicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your voicemail. To call your voicemail, press and hold . To display your Missed Log, press  or **OK** (left softkey).

Important: When you are roaming off the Sprint Nationwide PCS Network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your PCS Phone Number. When your voicemail answers, press  and enter your passcode. You will be charged roaming rates when accessing voicemail while roaming off the Sprint Nationwide PCS Network.

Note: Your phone accepts messages even when it is turned off. However, you are only notified of new messages when your phone is turned on and you are in a PCS Service Area.





Retrieving Your Voicemail Messages

You can review your messages directly from your PCS Phone or from any other touch-tone phone. To dial from your PCS Phone, you can either speed dial your voicemail or use the menu keys.

Using One-Touch Message Access


- Press and hold . Follow the system prompts.


Using the Menu Keys on Your PCS Phone to Access Your Messages

1. Press  to access the main menu.
2. Select **Messaging** and press .
3. Select **Voicemail** and press .
4. Select **Call Voicemail** and press .

Note: You are charged for airtime minutes when you are accessing your voicemail from your PCS Phone.









Using a Phone Other Than Your PCS Phone to Access Messages

1. Dial your PCS Phone Number.
2. When your voicemail answers, press .
3. Enter your passcode.

Tip: When you call into voicemail, you first hear the header information (date, time, and sender information) for the message. To skip directly to the message, press  during the header.

Voicemail Button Guide

Here's a quick guide to your keypad functions while listening to voicemail messages. For further details and menu options, see "Voicemail Menu Key" on page 135.

		
Date/Time	Send Reply	Advance
		
Replay	Rewind	Forward
		
Erase	Call Back	Save
		
Cancel	Help	Skip

Vicemail Options

Your PCS Phone offers several options for organizing and accessing your voicemail.

Using Expert Mode

Using the Expert Mode setting for your personal voicemail box helps you navigate through the voicemail system more quickly by shortening the voice prompts you hear at each level.

To turn Expert Mode on or off:

1. Press and hold **☒ 1** to access your voicemail. If your voicemail box contains any new or saved messages, press **✕** to access the main voicemail menu.
2. Following the system prompts, press **3** to change your Personal Options.
3. Press **4** for Expert Mode.
4. Press **1** to turn Expert Mode on or off.

Setting Up Group Distribution Lists

You can create up to 20 separate group lists, each with up to 20 customers.

To set up and maintain group distribution lists:

1. Press and hold **☒ 1** to access your voicemail. If your voicemail box contains any new or saved messages, press **✕** to access the main voicemail menu.
2. Following the system prompts, press **3** to change your Personal Options.
3. Press **2** for Administrative Options.
4. Press **5** for Group Distribution Lists.
5. Follow the voice prompts to create, edit, rename, or delete group lists.

PCS Callback

To return a call after listening to a message without disconnecting from voicemail.

1. After listening to a message, press **8**.
2. Once the call is complete, you're returned to the voicemail main menu.

Voicemail-to-Voicemail Message

To record and send a voice message to other PCS Voicemail users:

1. From the main voicemail menu, press **2** to send a message.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record and send your voice message.

Voicemail-to-Voicemail Message Reply

To reply to a voice message received from any other PCS Voicemail user:

1. After listening to a voice message, press **2**.
2. Follow the voice prompts to record and send your reply.

Voicemail-to-Voicemail Message Forwarding

To forward a voice message, except those marked “Private,” to other PCS Voicemail users:

1. After listening to a message, press **6**.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record your introduction and forward the voice message.

Voicemail-to-Voicemail Receipt Request

To receive confirmation that your voice message has been listened to when you send, forward, or reply to other PCS users:

1. After you have recorded a message, press **1** to indicate you are satisfied with the message you recorded.
2. Press **4** to mark receipt requested.
3. Press **1** to send your voicemail message.

Continue Recording

- Before pressing **1** to indicate you are satisfied with the message you recorded, press **4** to continue recording.

Extended Absence Greeting

When your phone is turned off or you are off the Sprint Nationwide PCS Network for an extended period, this greeting can be played instead of your normal personal greeting.

To record an extended absence greeting:

1. From the main voicemail menu, press **3** for Personal Options.
2. Press **3** for Greetings.
3. Press **3** to record an Extended Absence Greeting.

Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice and text messages.

To clear the icon from the display screen:

1. Press **MENU OK** to access the main menu.
2. Select **Messaging** and press **MENU OK**.
3. Select **Voicemail** and press **MENU OK**.
4. Select **Clear Count** and press **MENU OK**.
5. Select **Yes** and press **MENU OK**.

Vicemail Menu Key

- 1** Listen
 - 1** Envelope Information
 - 2** Reply
 - 3** Advance 8 Seconds
 - 4** Replay
 - 5** Rewind
 - 6** Forward Message
 - 7** Erase
 - 8** Callback
 - 9** Save
 - 0** Options

- 2** Send a Message

- 3** Personal Options
 - 1** Notification Options
 - 1** Phone Notification
 - 2** Numeric Paging to a PCS Phone
 - ✕** Return to Personal Options Menu
 - 2** Administrative Options
 - 1** Skip Passcode
 - 2** Autoplay
 - 3** Message Date & Time On/Off
 - 4** Change Passcode
 - 5** Group Distribution List
 - ✕** Return to Personal Options Menu
 - 3** Greetings
 - 1** Personal Greetings
 - 2** Name Announcement
 - 3** Extended Absence Greeting
 - ✕** Return to Personal Options Menu
 - 4** Expert Mode On/Off

- 8** Place a Call

- ✕** Disconnect

Using Caller ID

Caller ID lets people know who's calling by displaying the number of the person calling.

To block your phone number from being displayed for a specific outgoing call:

1. Press **✖ 6 7**.
2. Enter the number you want to call.
3. Press **TALK**.

To permanently block your number, call PCS Customer Solutions.

Responding to Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if available).

To respond to an incoming call while you're on a call:

- Press **TALK** (or press **MENU OK**, highlight **Flash** and press **MENU OK**). (This puts the first caller on hold and answers the second call.)

To switch back to the first caller:

- Press **TALK** (or press **MENU OK**, highlight **Flash** and press **MENU OK**) again.

Tip: For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing **✖ 7 0** before placing your call. Call Waiting is automatically reactivated once you end the call.

Making a Three-Way Call

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

To make a three-way call:

1. Enter a number you wish to call and press **TALK** or **SPEAKER**.
2. Once you have established the connection, press **TALK** (or press **MENU OK**, highlight **Three-Way Call** and press **MENU OK**). This puts the first caller on hold and dials the second number.
3. Dial the second number you wish to call and press **TALK** (or press **MENU OK**, highlight **Call** or **Call:Speaker On** and press **MENU OK**).
4. When you're connected to the second party, press **TALK** again (or press **MENU OK**, highlight **Flash** and press **MENU OK**) to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

Tip: You can also begin a Three-Way Call by displaying a phone number stored in your Contacts list, Call History, or Messaging. To call the third party, press **MENU OK** during step 3 above.

Note: Call Waiting and Three-Way Calling may not be available while roaming off the Sprint Nationwide PCS Network.

Using Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when Call Forwarding is activated.

To activate Call Forwarding:

1. Press **✖ 7 2**.
2. Enter the area code and phone number to which your future calls should be forwarded.
3. Press **TALK**. You will hear a tone to confirm the activation of Call Forwarding.

To deactivate Call Forwarding:

1. Press **✖ 7 2 0**.
2. Press **TALK**. You will hear a tone to confirm the deactivation.

Note: You are charged a higher rate for calls you have forwarded.

Note: PCS Ready Link calls cannot be forwarded. If Call Forwarding is activated, incoming PCS Ready Link calls will not be completed.

PCS VisionSM

In This Section

- ▶ **Getting Started**
 - ▶ **Messaging**
 - ▶ **Games**
 - ▶ **Ringers**
 - ▶ **Screen Savers**
 - ▶ **Web**
 - ▶ **PCS Business ConnectionSM**
 - ▶ **PCS Vision FAQs**
-

PCS VisionSM brings you clarity you can see and hear with advanced multimedia services. These features, including PCS Mail and PCS Short Mail, chat, games, downloadable ringers, screen savers, Web access, and PCS Business ConnectionSM, are easy to learn and use. The rich, colorful graphic experience is visually comparable to your home or office computer. Clearly, it's a whole new way to look at wireless.

Getting Started With PCS Vision

With your PCS Vision Phone and PCS Service, you are ready to start enjoying the advantages of PCS Vision. This section will help you learn the basics of using your PCS Vision services, including managing your User Name, launching a Vision connection, and navigating the Web with your PCS Vision Phone.

Your User Name

When you buy a PCS Vision Phone and sign up for service, you're automatically assigned a PCS Vision User Name. When you use PCS Vision services, your User Name is submitted to identify you to the Sprint Nationwide PCS Network. The User Name is also useful as an address for PCS Mail, as a way to personalize Web services, and as an online virtual identity.

A User Name is typically based on the customer's name and a number, followed by "@sprintpcs.com." For example, the third John Smith to sign up for PCS Vision services might have jsmith003@sprintpcs.com as his User Name. If you want a particular User Name, you can visit www.sprintpcs.com and get the name you want – as long as nobody else has it.

Note: If you already have a PCS Mail User Name, that will automatically become your PCS Vision User Name.

Your User Name will be automatically programmed into your PCS Phone. You don't have to enter it.


Finding Your User Name

If you aren't sure what your PCS Vision User Name is, you can easily find it online or on your PCS Phone:



- ▶ **At www.sprintpcs.com.** Sign on to your account using your PCS Phone Number and password. Your User Name appears in the top banner, next to your phone number.
- ▶ **On your PCS Phone.** When you are signed in, your User Name should appear on your phone's display screen in standby mode. You can also find it under the **Phone Info** option in your phone's main menu.

Launching a PCS Vision Connection

To launch a PCS Vision connection:

- From standby mode, press .

- or -

1. Press  to access the main menu.
2. Select **Web** and press . Your PCS Vision connection will launch and the PCS Vision Home page will display.

The PCS Vision Home Page



Note: If Net Guard is enabled and displayed (see below), press **OK** (left softkey) to continue and launch the Web.






While connecting, the following will appear on the screen:

Connecting... Please wait.

Net Guard

When you first connect to the Web, the Net Guard will appear to confirm that you want to connect. This feature helps you avoid accidental connections. You can disable the Net Guard in the future by selecting **Always Auto-Connect** when the Net Guard is displayed.




To change your Net Guard settings:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **PCS Vision** and press .
4. Select **Net Guard** and press .
5. Select **On** or **Off** and press 
 - **On** to activate the Net Guard.
 - **Off** to deactivate the Net Guard.

Note: When enabled, the Net Guard appears only once per session. The Net Guard does not appear if the phone is merely re-connecting due to a time-out.

PCS Vision Connection Status and Indicators

Your phone's display lets you know the current status of your PCS Vision connection through indicators which appear at the top of the screen. The following symbols are used:

-  Your PCS Vision connection is active (data is being transferred). Incoming voice calls go directly to voicemail; outgoing voice calls can be made, but the PCS Vision connection will be dormant.
-  Your PCS Vision connection is dormant (no data is being sent or received). Though not currently active, when dormant the phone can restart an active connection quickly; voice calls can be made and received.
-  Your phone is not currently able to access PCS Vision service features.

If no indicator appears, your phone does not have a current PCS Vision connection. To launch a connection, see "Launching a PCS Vision Connection" on page 141.


Navigating the Web

Navigating through menus and Websites during a PCS Vision session is easy once you've learned a few basics. Here are some tips for getting around:

Softkeys

During a PCS Vision session, the bottom line of your phone's display contains one or more softkeys. These keys are shortcut controls for navigating around the Web, and they correspond to the softkey buttons directly below the phone's display screen. Depending on which Websites you visit, the labels on the softkeys may change to indicate their function.

To use softkeys, simply press the desired softkey button. If an additional pop-up menu appears when you press the softkey button, select the menu items using your keypad (if they're numbered) or by highlighting the option and pressing **MENU OK**.

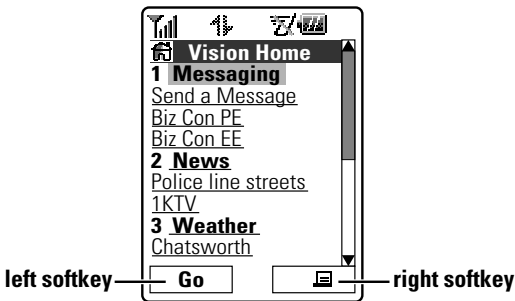

Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some Websites.

- Press ▲/▼ on the Navigation key to scroll line by line or press the volume buttons on the side of the phone to scroll one page at a time.

Selecting

Once you've learned how to use softkeys and scroll, you can start navigating Websites.


- ▶ Select onscreen items by using the Navigation key to highlight the desired item, then press the desired softkey button (or press )

You'll find that the left softkey is used primarily for selecting items. This softkey is often labeled "Go."



- ▶ If the items on a page are numbered, you can use your keypad (number keys) to select an item.

Links allow you to jump to different Web pages, select special functions, or even place phone calls.

- ▶ Select links by highlighting the link and then selecting the appropriate softkey.

Tip: The tenth item in a numbered list may be selected by pressing the  key on your phone's keypad, even though the number 0 doesn't appear on the screen.

Going Back

- To go back one page, press the  key on your phone. (Note that the  key is also used for deleting text (like a BACKSPACE key) when you are entering text.)

Going Home

- To return to the PCS Vision Home page from any other Web page, press the right softkey, then highlight **Home** and press **OK** (left softkey).



Messaging

Now you can send and receive email and text messages and participate in Web-based chatrooms right from your PCS Phone. Messaging allows you to stay connected to friends, family, and co-workers 24 hours a day with always-on text capabilities anywhere on the Sprint Nationwide PCS Network.

Message Types

There are many types of text messaging available on your phone. (PCS Voicemail provides voicemail-to-mailbox messaging. For information on using your phone's voicemail feature, see "Using Voicemail" on page 130.)

Messages

These appear on your screen as **Notifications** and include numeric messages (pages), Messages, Updates, and Mail.

New Messages

When you receive a new Message, your phone will alert you. Press **View** (left softkey) to display the message details.

- ▶ Press **Call** (left softkey) to dial the phone number.
- ▶ Press **Go** (left softkey) to go to the Website.
- ▶ Press **Cancel** (right softkey) to return to the message folder list.

Message Storage






Your PCS Phone can store up to 200 Messages. When the message memory is 90% full, a warning message prompts you to erase messages to obtain additional memory space.

Note: Unread messages will not be automatically deleted when Messages capacity has been reached. If your phone has 200 messages, any new text messages will be returned.





Displaying Messages

To display a Message from the message notification alert, see “New Messages” on page 145.

To display a Message from the main menu:

1. Press  to access the main menu.
2. Select **Messaging** and press .
3. Select **Notifications** and press . (The folder list appears.)
4. Select **Unfiled** or your defined folder and press .
5. Highlight the header of the message you want to see and press .

An icon appears at the left side of each header of the message. The icons are as follows:

-  New message
-  New Urgent message
-  Read message
-  Read Urgent message

If the sender’s information has already been stored in the Contacts list, the corresponding name or phone number appears as the header of the message. If nothing has been stored, the phone number or text that was included in the message appears as a header of the message.

To read other messages:

- ▶ Press ◀ on the Navigation key to read the previous message.
- ▶ Press ▶ on the Navigation key to read the next message.

Changing the Displaying Font Size of a Message

After you display a Message, press  to display message options.

To adjust the displaying font size:

1. Scroll to highlight **Font Size** and press .
2. Highlight your desired font size and press .

Message Options

After you display a Message, press **MENU OK** to display message options. To select an option, highlight it and press **MENU OK**.

- ▶ **Call Back** to dial the phone number of the sender (if applicable).
- ▶ **Call:Speaker On** to dial the phone number of the sender in speakerphone mode (if applicable).
- ▶ **Save Phone#** to save the sender's phone number if it is not already in your Contacts list (if applicable). If the sender's phone number has already been stored in the any Contacts entry, **Go to Phone Book** appears instead of **Save Phone#**.
- ▶ **Prepend** to add numbers to the beginning of the phone number (if applicable). (See "Prepending a Phone Number From a Message" on page 148.)
- ▶ **Extract Info** to extract phone numbers, email, or Web addresses (if there are numbers or addresses contained in the text message). (See below on this page and page 149.)
- ▶ **Erase** to erase the message.
- ▶ **Add Folder** to add a folder. (See "Adding a Folder for Messages" on page 151.)
- ▶ **Move Message** to move the message into another folder. (See "Moving a Message Into Another Folder" on page 151.)
- ▶ **Font Size** to adjust the font size depending on your preference. (See "Changing the Displaying Font Size of a Message" on page 146.)

Note: If the incoming message does not have a call back number, "Call Back," "Call:Speaker On," "Go to Phone Book/Save Phone#," and "Prepend" are not shown.

Extracting Phone Numbers From a Message

After you display a Message, press **MENU OK** to display message options.

To extract a phone number contained in the message:

1. Highlight **Extract Info** and press **MENU OK**.
2. Highlight **Phone#** and press **MENU OK**. All the phone numbers contained in the message are displayed. (If there are no phone numbers to extract from the message, the numbers are not displayed.)

3. Highlight the number you wish to extract.
4. Press **MENU OK** to display the options.
5. To select an option, highlight it and press **MENU OK**.
 - **Call** to dial the phone number.
 - **Call:Speaker On** to dial the phone number in speakerphone mode.
 - **Save Phone#** to save the phone number if it is not already in your Contacts list. If the phone number has already been stored in a Contacts entry, **Go to Phone Book** appears instead of **Save Phone#**.
 - **Display Phone#** to display the phone number.
 - **Prepend** to add numbers to the beginning of the phone number.

Note: Press and hold **MENU OK** during step 4 above to start a PCS Ready Link call if the extracted number is 10 digits (or 11 digits beginning with 1).

Prepending a Phone Number From a Message





After you display a Message, press **MENU OK** to display message options.

To prepend an area code to an extracted number if you happen to be outside your local area code and need to add a prefix:

1. Highlight **Prepend** and press **MENU OK**.
2. Enter the digits or pauses (see below) you want to add to the number. If you want to save the number, press **MENU OK** and select the **Save Phone#** option. If not, the changes only apply to the current call.
3. To select an option, highlight it and press **MENU OK**.
 - **Call** to dial the phone number.
 - **Call:Speaker On** to dial the phone number in speakerphone mode.
 - **Save Phone#** to store the phone number in your Contacts Directory.
 - **[H]Hard Pause** to insert a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 24.)
 - **[T]2-Sec. Pause** to insert a 2-second pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 24.)





Extracting Email Addresses From a Message

To extract an email address contained in a message:

1. When the Message options are displayed, highlight **Extract Info** and press .
2. Highlight **Email Address** and press  to display all the email addresses contained in the message. (If there are no appropriate email addresses to extract from the message, no addresses are displayed.)
3. Highlight the address you wish to extract.
4. Press  to display the options.
5. To select an option, highlight it and press .
 - **Send PCS Mail** to send email.
 - **Display Address** to display the email address.
 - **Save Address** to save the email address if it is not already in your Contacts list. If the email address has already been stored in a Contacts entry, **Go to Phone Book** appears instead of **Save Address**.

Extracting URLs From a Message

To extract a Website address contained in a message:

1. When the Message options are displayed, highlight **Extract Info** and press .
2. Highlight **Web Address** and press  to display all the Web addresses contained in the message. (If there are no appropriate Web addresses to extract from the message, no addresses are displayed.)
3. Highlight the URL you wish to extract.
4. Press  to display the options.
5. To select an option, highlight it and press .
 - **Visit Site** to visit the Website (if applicable).
 - **Display Address** to display the Web address.
 - **Save Address** to save the Web address if it is not already in your Contacts list. If the Web address has already been stored in a Contacts entry, **Go to Phone Book** appears instead of **Save Address**.

Creating Folders for Messages

You can create up to ten folders to store your Messages. When 10 user defined folders exist, the “Create Folder” option will not appear.

To create a message folder:

1. Press **MENU OK** to access the main menu.
2. Select **Messaging** and press **MENU OK**.
3. Select **Notifications** and press **MENU OK**.
4. Press **Options** (right softkey).
5. Select **Create Folder** and press **MENU OK**.
6. Enter a folder name from 3 to 13 letters and press **MENU OK** or **OK** (left softkey).
 - Pressing **Save** (left softkey) allows you to save the folder name.
7. If you want the message to be filed into the folder automatically, select the menu under **Auto Filing** and press **MENU OK**.
8. Select **On** and press **MENU OK**.
9. Select the box under **Keyword** by scrolling down and press **MENU OK**.
10. Enter a keyword from 3 to 14 letters and press **MENU OK** or **OK** (left softkey).
11. Press **Save** (left softkey).

To set an optional feature to the added folder:

1. During step 9 above, scroll down to select other menu options. Highlight the menu under each item and press **MENU OK**.
 - **Notify** to enable or disable notification display for the messages matching the defined folder.
 - **Envelope Icon** to enable or disable the envelope icon display for messages matching the defined folder.
2. After selecting each setting, press **Save** (left softkey).

Note: To deactivate Auto Filing feature, select **Off** during step 8 above.

Adding a Folder for Messages

When the message contains any word of 3 to 14 letters, you can classify the message to your defined folder. If 10 user defined folders exist, the “Add Folder” menu disappears.

To add a message folder:

1. After you display a message, press **MENU OK** to display message options.
2. Highlight **Add Folder** by scrolling and press **MENU OK**.
3. Enter a folder name from 3 to 13 letters and press **MENU OK** or **OK** (left softkey).
4. Select the box under **Keyword** by scrolling down and press **MENU OK**.
5. Enter a keyword and press **MENU OK**.
- or -
Go to **KeywordMatch** and press **MENU OK**. Select a keyword from the Keyword Match list.
6. Press **Save** (left softkey).

If you want to set an optional feature to the added folder:

1. During step 4 above, scroll down to select other menu options. Highlight the menu under each item and press **MENU OK**.
 - **Notify** to enable or disable notification display for the messages matching the defined folder.
 - **Envelope Icon** to enable or disable the envelope icon display for messages matching the defined folder.
2. After selecting each setting, press **Save** (left softkey).

Moving a Message Into Another Folder

To move a message into another folder:

1. After you display a message, press **MENU OK** to display the message options.
2. Highlight **Move Message** by scrolling and press **MENU OK**.
3. Highlight your desired folder and press **MENU OK**. (You must have at least one defined folder to move a message.)

Editing Folders

To edit a folder:

1. From the folder list display, highlight any folder except for **Unfiled**.
2. Press **Options** (right softkey).
3. Highlight **Edit Folder** and press **MENU OK**.
4. Select the box under your desired option to edit and press **MENU OK**.
 - **Folder Name** to edit the folder name.
 - **Auto Filing** to set auto filing to on or off.
 - **Keyword** to change the folder's keyword. Incoming messages are automatically filtered into the folder if they contain the Keyword you enter.
 - **Notify** to change the notification setting to on or off.
 - **Envelope Icon** to change the icon setting to on or off.
5. Enter or select new folder name/setting.
6. Press **MENU OK** or **OK** (left softkey).
7. Press **Save** (left softkey).

Erasing a Folder

To erase a message folder:

1. From the folder list display, highlight the folder you want to erase.
2. Press **Options** (right softkey).
3. Highlight **Erase Folder** and press **MENU OK**.
4. Select **Yes** and press **MENU OK**.

Note: When you erase a folder, the messages within the folder are also erased. If the folder contains a new (unread) message, you are prompted to select **Erase** or **Don't Erase**.

Erasing All Messages

To erase all messages:

1. From the folder list display, press **Options** (right softkey) to display the menu options.
2. Highlight **Erase All Msgs** and press **MENU OK**.
3. Highlight **In This Folder** or **In All Folders** and press **MENU OK**.
4. Select **Yes** and press **MENU OK**.

Note: If a folder contains a new (unread) message, you are prompted to select **Erase** or **Don't Erase**.

To erase all Messages you have already read:

1. From the folder list display, press **Options** (right softkey) to display the menu options.
2. Highlight **Erase Old Msgs** and press **MENU OK**.
3. Highlight **In This Folder** or **In All Folders** and press **MENU OK**.
4. Select **Yes** and press **MENU OK**.

Note: To erase an individual message, see "Message Options" on page 147.

Signing Up for Updates

With Updates, you can have news and information sent directly to your PCS Phone at the times you choose.

To select the information you want to send to your PCS Phone:

1. From your computer, sign on to the Internet.
2. Go to the site from which you want to receive information. A few of the sites you can visit are America Online®, Yahoo!®, MSN®, and eBay®. (The location where you request updates within each site will vary.)
3. Where indicated on the site, input your 10-digit PCS Phone Number followed by "@messaging.sprintpcs.com." For example: 5551234567@messaging.sprintpcs.com.

Upon completing the registration process, you should begin receiving updates on your PCS Phone as requested.

PCS Mail

Using PCS Mail

With PCS Mail, you can set up an account at no additional charge and perform many of the typical email functions from your PCS Phone that you can from your personal computer.

You can manage your PCS Mail account from your PCS Phone or from your personal computer at www.sprintpcs.com. You can also access other select email providers from the Web through your PCS Mail.

Accessing PCS Mail Messages

To access PCS Mail messages:

1. Press **MENU OK** to access the main menu.
2. Select **Messaging** and press **MENU OK**.
3. Select **PCS Mail** and press **MENU OK**. (If you're a first-time user, your phone will prompt you to set up your PCS Mail account by establishing a User Name and password.)
4. To view your messages, select **Inbox** and press **OK** (left softkey).
5. Scroll to select the message you wish to read and press the left softkey.
6. Once you've read a message, use the quick actions at the end of each message (**Reply**, **Reply All**, **Forward**, **Erase**, **Add to Folder**, or **Main**.)

Composing PCS Mail Messages

To compose a PCS Mail message:

1. From the PCS Mail menu (see steps 1-3 above), select **Compose**.
2. Scroll to select the address box and enter the address of the person to whom you're sending a message and press the left softkey.
3. Scroll to select the message box and enter the subject and your message.
4. Select **Send** when your message is ready to be delivered.

PCS Short Mail

Using PCS Short Mail

With PCS Short Mail, you can use a person's wireless phone number to send instant text messages from your PCS Vision Phone to their messaging-ready phone – and they can send messages to you. When you receive a new message, you'll automatically be notified with a one-way text message.

In addition, PCS Short Mail includes a variety of pre-set messages, such as “I'm running late, I'm on my way,” that make composing messages fast and easy. You can also customize your own pre-set messages (up to 100 characters) from your PCS Phone or at www.sprintpcs.com.

To send a PCS Short Mail message:

1. Press **MENU OK** to access the main menu.
2. Select **Messaging** and press **MENU OK**.
3. Select **Short Mail** and press **MENU OK**. (The browser will launch and go to the Short Mail page.)
4. Select **Compose** and press the left softkey.
5. Select **To**, enter the wireless phone number of the person to whom you wish to send a message (you can also scroll down to select an existing recipient), and select **Add**.

Note: You must use the right softkey to select the **NUMBER** character input mode to enter the recipient's phone number.

6. Select **OK** (or add additional recipients and select **OK**).
7. Compose a message or use the pre-set messages or icons.
 - To type a message, highlight the **Message** box and use your keypad to type a message. Use the right softkey to select a character input mode.
 - To use a pre-set message or “emoticon,” highlight **Insert** and select **Pre-set Msgs** or **Icons**. Select **Go**, then select the message or emoticon you'd like to insert and select **OK**.
8. Review your message and select **Send** (left softkey).

To read a PCS Short Mail message:

1. When you receive a short mail, you will see a message notification on your display screen. Select **View** (left softkey).
2. You will then see “New Short Mail. Select ‘Go’ to read it.” Select **Go** (left softkey). The browser will launch.
3. Scroll to the new short mail message and press left softkey. Unread short mail messages will be marked with an asterisk (*).

Note: The last four digits from the PCS Phone Number of the person who sent you a short mail message appear before the message text. If the sender is on your short list, the nickname will appear instead of the number.

To reply to a PCS Short Mail message:

1. While the message is open, select **Reply**.
2. Compose your reply or use the pre-set messages or icons.
 - To type a reply, highlight the **Message** box and use your keypad to type a message. Use the right softkey to select a character input mode.
 - To use a pre-set message or “emoticon,” highlight **Insert** and select **Pre-set Msgs** or **Icons**. Select **Go**, then select the message or emoticon you’d like to insert and select **OK**.
3. Review your reply and select **Send** (left softkey).

To add and/or edit Pre-Set Messages:

1. Press **MENU OK** to access the main menu.
2. Select **Messaging** and press **MENU OK**.
3. Select **Short Mail** and press **MENU OK**.
4. Select **Settings** and press left softkey.
5. Select **Pre-set Messages** and press left softkey.
6. From the Pre-set Messages menu, select **(Add New)** or select the message you wish to edit.
7. Enter your new message or changes and select **Save** (left softkey).

Note: You may also add or edit Pre-Set Messages in the “Manage My Account” area at www.sprintpcs.com.

Email

With PCS Vision, you can use popular email services such as AOL® Mail, Yahoo!® Mail, and Earthlink® to keep in touch even while you're on the go.

Accessing Email

To access email providers from your PCS Vision Phone:

1. From the PCS Vision Home page, select **Messaging**.
2. Select **Email**.
3. Select an email provider, such as **AOL Mail**, **Yahoo! Mail**, or **Earthlink**.
4. Use your keypad to enter the required sign in information for the selected provider, such as user name, email address, and/or password, and select **Sign In**. (Your mailbox for the selected provider will display.)

Note: The information required for sign in will vary depending on the email provider you are accessing.

5. Follow the onscreen instructions to read, reply to, compose, send, and manage your email account.

Instant Messaging

PCS Vision also provides you with access to popular instant messaging (IM) clients, including AOL® Instant Messenger™, Yahoo!® Messenger, MSN® Messenger, and Hallmark Hiya™ greetings.

Accessing Instant Messaging

To access instant messaging clients from your PCS Phone:

1. From the PCS Vision Home page, select **Messaging**.
2. Select **Instant Messaging**.
3. Select an email provider, such as **AOL Instant Messenger** or **Yahoo! Messenger**.
4. Use your keypad to enter the required sign in information for the selected provider, such as user name and/or password, and select **Sign In**. (Your IM screen for the selected provider will display.)

Note: The information required for sign in will vary depending on the instant messaging provider you are accessing.

5. Follow the onscreen instructions to read, reply to, compose, send, and manage your IM account.

Chat

PCS Vision gives you the ability to join wireless chatrooms from your PCS Phone. Send text messages and icons to chatroom participants or launch a one-on-one (private) chatroom.

To access a chatroom from the browser:

1. Press **MENU** to access the main menu.
2. Highlight **Web** and press **MENU**.
3. Select **Messaging**.
4. Select **CHAT**.
5. Select **Enter**. You will see a disclaimer for Wireless Chat. Select **I Agree** to enter the Chat menu.
6. Select a chatroom from the menu (for example, "Friends" or "Singles").
7. Use your keypad to enter a nickname and select **Enter**. Once in the chatroom, you may scroll through the postings to read messages from other chatroom participants.

Note: To avoid inadvertent data usage charges, you should log out of chatrooms when you are ready to exit.

To post a message:

1. Select **Add text**.
2. Enter your message.
3. Select **Send**.

To set up a private chatroom:

1. During an active chat session, select **1->1**.
2. Select a chatter with whom you'd like to launch a private chatroom.

To exit a chatroom:

- Select **Leave Room**.

Downloading Games, Ringers, and Screen Savers

With PCS Vision and your new PCS Vision Phone, you have access to a dynamic variety of Premium Service content such as downloadable Games, Ringers, Screen Saver, and Applications. While each type of download involves a different file type, the basic method for accessing and downloading files is the same.

Accessing the Download Menus

To access the PCS Vision download menus:

1. Press **MENU OK** to access the main menu.
2. Select **Downloads** and press **MENU OK**.
3. Select the type of file you wish to download (**Games, Ringers, Screen Savers, Applications, Others**) and press **MENU OK**.
4. Select **Get New** and press **MENU OK**. (The browser will launch and take you to the corresponding download menu.)

To access the PCS Vision download menus from the Web browser:

- From the home page, select **Games, Ringers, or Screen Savers** to go to the corresponding download menu. (For more information on navigating the Web, see “Navigating the Web” on page 143.)

Selecting an Item to Download

From the download menus, items available for download may be searched in a number of ways:

- ▶ **Featured** displays a rotating selection of featured items.
- ▶ **Browse Category** allows you to narrow your search to a general category, such as Movie/TV Themes for Ringers or College Logos for Screen Savers. (There may be several pages of available content in a list. Select **Next 9** to view additional items.)
- ▶ **Search** allows you to use your keypad to enter search criteria to locate an item. You may enter an entire word or title or perform a partial-word search (for example, entering “goo” returns “Good Ol’ Boy,” “The Good, the Bad, and the Ugly,” and “Goofy - Club”).

Downloading an Item

Once you've decided on an item to download, highlight it and press **MENU/OK** or select **OK** (left softkey). You will see a summary page for the item including its title, the vendor, the download detail, the file size, and the cost. Links allow you to view the **License Details** page, which outlines the price, license type, and length of license for the download, and the **Terms of Use** page, which details the Premium Services Terms of Use and your responsibility for payment.

To download a selected item:

1. From the information page, select **Buy** (or **Get It** in the case of a free item). If you have not previously purchased an item, you will be prompted to create your purchasing profile.
2. You will see a **Confirmation** screen confirming your purchase and informing you that the charge will be added to your next PCS Invoice. You will also be informed that the downloaded item has been stored in **My Content Manager**.
3. Select **Download** to initiate the download of the item. (You will see a series of browser screens, ending with the **Download** screen, which lists the item name, vendor, version, size, and type.)
4. Press **Next** (right softkey) to download the item.
5. You will see another series of screens detailing the download initiation, progress (in kilobytes), and saving process. When the **Completed** screen appears, the item has been successfully downloaded to your phone.
 - Select **Use** (left softkey) to assign the downloaded item (or to play, in the case of a game).
 - or -
 - Select **Shop** (right softkey) to look for other items to download.
 - or -
 - Press **END/ⓧ** to quit the browser and return to standby mode.



Games

You can play a variety of entertaining and graphically-rich games on your PCS Phone. New games are easy to download and play.

Tip: For complete instructions on downloading, see “Downloading Games, Ringers, and Screen Savers” on page 160.

Downloading Games

To download games:

1. Press **MENU OK** to access the main menu.
2. Select **Downloads** and press **MENU OK**.
3. Select **Games** and press **MENU OK**.
4. Select **Get New** and press **MENU OK**. The browser will launch and take you to the Games download menu.
5. Use your Navigation key to highlight and select a game you wish to download. (For more information on navigating the Web, see “Navigating the Web” on page 143.)
6. From the item information page, select **Buy**. If you have not previously purchased an item, you will be prompted to create your purchasing profile.
7. A confirmation page will notify you that the Game has been purchased and is stored in **My Content Manager**. To download the game, select **Download**.
8. From the Download screen, press **Next** (right softkey) to download the game. When the Completed screen appears, the game has been successfully downloaded to your phone.

Playing Games

To play a downloaded game on your PCS Phone:

1. Press **MENU** **OK** to access the main menu.
2. Select **Downloads** and press **MENU** **OK**.
3. Select **Games** and press **MENU** **OK**.
4. Select the game you wish to play.
5. If applicable, a prompt will display the days remaining on the game license and ask if you want to continue. Select **Yes**.
6. Follow the onscreen instructions to play the game. When you are finished, select **Exit** (or **Quit**) or press **END** **(X)**.
7. A prompt will display: "Resume the Application?" Select **Yes** to continue playing or **No** to exit.



Ringers

Tip: For complete instructions on downloading, see “Downloading Games, Ringers, and Screen Savers” on page 160.

Downloading Ringers

To download an available ringer to your phone:

1. Press **MENU OK** to access the main menu.
2. Select **Downloads** and press **MENU OK**.
3. Select **Ringers** and press **MENU OK**.
4. Select **Get New** and press **MENU OK**. The browser will launch and take you to the Ringers download menu.
5. Use your Navigation key to highlight and select a ringer you wish to download. (For more information on navigating the Web, see “Navigating the Web” on page 143.)
6. From the item information page, select **Buy**. If you have not previously purchased an item, you will be prompted to create your purchasing profile.
7. A confirmation page will notify you that the ringer has been purchased and is stored in **My Content Manager**. To download the ringer, select **Download**.
8. From the Download screen, press **Next** (right softkey) to download the ringer. When the Completed screen appears, the ringer has been successfully downloaded to your phone.

Note: You may store total of 640 KB downloaded data on your phone. Additional downloads will be stored in My Content Manager.

Assigning Downloaded Ringers

Downloaded ringers may be assigned directly from the Downloads menu and are also available through the Settings menu.

To assign a downloaded ringer through the Settings menu, see “Selecting Ringer Types for Voice Calls” on page 43, “Selecting Ringer Types for Voicemail” on page 44, “Selecting Ringer Types for Messages” on page 44, “Selecting Ringer Types for Calendar” on page 45, “Setting a Start-up/Power-off Tone” on page 46 or “Selecting a Ringer/Image Type for an Entry” on page 95.

To assign a downloaded ringer from the Downloads menu:

1. Press **MENU OK** to access the main menu.
2. Highlight **Downloads** and press **MENU OK**.
3. Highlight **Ringers** and press **MENU OK**.
4. Highlight the downloaded data you want to confirm and press **MENU OK**.
5. Highlight **Assign** and press **MENU OK**.
6. Highlight one of **Voice Calls**, **Voicemail**, **Messaging**, **Calendar**, **Start-up Tone**, **Power-off Tone** or **Phone Book**, and press **MENU OK**. The following two items need an extra step:
 - **Voice Calls** requires you to highlight **With Caller ID** or **No caller ID**, and press **MENU OK**.
 - **Phone Book** requires you to highlight the entry you want to assign and press **MENU OK**.

(A message appears confirming that the ringer has been assigned.)

Note: You may assign a ringer to more than one type of call.

Purchasing Ringers

You can purchase ringers directly from your phone by following the instructions on page 161 or through www.sprintpcs.com.

Note: My Content Manager saves items for up to 90 days. Once an item has been downloaded to your phone, you may keep the file for as long as you like.



Screen Savers

Tip: For complete instructions on downloading, see “Downloading Games, Ringers, and Screen Savers” on page 160.

Downloading Screen Savers

To download an available Screen Saver to your phone:

1. Press **MENU OK** to access the main menu.
2. Select **Downloads** and press **MENU OK**.
3. Select **Screen Savers** and press **MENU OK**.
4. Select **Get New** and press **MENU OK**. The browser will launch and take you to the Screen Savers download menu.
5. Use your Navigation key to highlight and select a Screen Saver you wish to download. (For more information on navigating the Web, see “Navigating the Web” on page 143.)
6. From the item information page, select **Buy**. If you have not previously purchased an item, you will be prompted to create your purchasing profile.
7. A confirmation page will notify you that the Screen Saver has been purchased and is stored in **My Content Manager**. To download the Screen Saver, select **Download**.
8. From the Download screen, press **Next** (right softkey) to download the Screen Saver. When the Completed screen appears, the Screen Saver has been successfully downloaded to your phone.

Note: You may store total of 640 KB downloaded data on your phone, depending on the file sizes. Additional downloads will be stored in My Content Manager.

Assigning Downloaded Screen Savers (Images)

Downloaded Screen Savers may be assigned directly from the Downloads menu and are also available through the Settings menu.

To assign a downloaded Screen Saver through the Settings menu, see “Changing the Display Screen” on page 51, “Changing the Display for Incoming Calls” on page 52, “Changing the Screen Saver” on page 54 or “Selecting a Ringer/Image Type for an Entry” on page 95.

To assign a downloaded Screen Saver from the Downloads menu:

1. Press **MENU OK** to access the main menu.
2. Select **Downloads** and press **MENU OK**.
3. Select **Screen Savers** and press **MENU OK**.
4. Select the downloaded data you want to confirm and press **MENU OK**.
5. Select **Assign** and press **MENU OK**.
6. Select one of **Incoming Calls**, **Screen Saver**, or **Phone Book** and press **MENU OK**.

The following item needs an extra step:

- **Phone Book** requires you to highlight your desired entry and press **MENU OK**.

(A message appears confirming that the image has been assigned.)

Note: Depending on the data, you can select where to assign downloaded images: Image data can be assigned to Incoming Calls, Screen Saver, or Phone Book. Animation data can be assigned to Standby, Outgoing Calls, or Service Search.

Note: You may assign a Screen Saver to more than one task.

Purchasing Screen Savers

You can purchase Screen Savers directly from your phone by following the instructions on page 161, or through www.sprintpcs.com.

Note: My Content Manager saves items for up to 90 days. Once an item has been downloaded to your phone, you may keep the file for as long as you like.



Web

With Web on your PCS Vision Phone, you can browse full-color graphic versions – not just text versions – of your favorite Websites, making it easier than ever to stay informed while on the go.

Check sports scores, trade stocks, and shop on your PCS Phone anywhere within the Sprint Nationwide PCS Network.

In addition to the features already covered in this section, the PCS Vision Home page offers always-on access to these colorful, graphically rich Web categories. Many sites are available under more than one menu – choose the one that's most convenient for you.

- ▶ **News.** Get up-to-the-minute news regarding finance, business, sports, and entertainment at sites like CNN to Go, Bloomberg, USA Today, and Forbes.
- ▶ **Weather.** Access The Weather Channel to get current weather conditions and forecasts.
- ▶ **Entertainment.** Get the latest buzz on your favorite stars as well as movie and music reviews at Websites like E! Online, Pocket BoxOffice™, and TastNtalk.
- ▶ **Sports.** Enjoy current news, statistics, and sports scores, as well as updates of events in progress at ESPN.com and other sports sites.
- ▶ **Finance.** Use Websites like Bloomberg, Fidelity, and Forbes to get stock quotes, make trades, and check your bank account online.
- ▶ **Travel.** Access flight information and make dining arrangements from travel Websites like Saber and Fodors.
- ▶ **Shopping.** Browse or purchase from popular shopping Websites like Amazon.com or Edmunds.
- ▶ **Tools.** Use tools like Switchboard to access yellow pages, white pages – even reverse phone number look-up or use Google to search for other Websites or images.
- ▶ **Business Links.** Access your PCS Business Connection Personal or Enterprise Edition along with links to many business-related sites.
- ▶ **My Account.** Check minutes and PCS Vision usage, view your current invoice, or make a payment.
- ▶ **Google Search.** Launch a Google search in one of three classes: PCS Web, Images, or Internet.

Using the Browser Menu






Navigating the Web from your phone using the PCS Vision Home page is easy once you get the hang of it. For details on how to navigate the Web, select menu items, and more, see “Navigating the Web” on page 143.

Although the PCS Vision Home page offers a broad and convenient array of sites and services for you to browse, not all sites are represented, and certain functionality, such as going directly to Websites and creating bookmarks is not available. For these and other functions, you will need to use the browser menu. The browser menu is a pop-up menu which offers additional functionality to expand your use of the Web on your PCS Phone.

Opening the Browser Menu

The browser menu may be opened anytime you have an active Vision session from any page you are viewing.

To open the browser menu:

1. From standby mode, press .
2. Press the right softkey or .
- or -
1. Press  to access the main menu.
2. Highlight **Web** and press .
3. Press the right softkey or .


Options available under the browser menu include:

- ▶ **Home** returns the browser to the PCS Vision Home page.
- ▶ **Forward** allows you to go forward to the pages you have visited.
- ▶ **Mark this page** allows you to create new bookmarks.
- ▶ **View Bookmarks** allows you to view and access bookmarked sites.
- ▶ **Search** launches a Google search.
- ▶ **Show URL** displays the URL (Website address) of the site you're currently viewing.
- ▶ **Go to URL...** allows you to navigate directly to a Website by entering its URL (Website address).
- ▶ **History** displays the page you visited.
- ▶ **Refresh this page** reloads the current Web page.
- ▶ **More...** displays the additional menu options. (Restart Browser, About Browser, and Preferences.)

Creating a Bookmark

Bookmarks allow you to store the address of your favorite Websites for easy access at a later time.

To create a bookmark:


1. Display the Web page you want to mark.
2. Press the right softkey to go to the browser menu.
3. Select **Mark this page** and press the left softkey or .

Note: Bookmarking a page does not store the page contents, just its address.

Note: Some pages cannot be bookmarked. Whether a particular Web page may be marked is controlled by its creator.

Accessing a Bookmark

To access a bookmark:

1. Launch the Web and press the right softkey.
2. Select **Browser Menu** and press the left softkey.
3. Select **View Bookmarks** and press the left softkey.
4. Highlight the bookmark you'd like to access and press the left softkey or  to go to the Website.
 - You may skip step 2 depending on the page you select.

Editing a Bookmark

To edit a bookmark:

1. Launch the Web and press the right softkey.
2. Select **View Bookmarks** and press the left softkey.
3. Select the bookmark you wish to edit and press the right softkey.
4. Select **Edit Address** or **Edit Title** and press the left softkey.
5. Press the right softkey, use your keypad to edit the address or title and press the left softkey.
6. To save the bookmark, press the left softkey.

Deleting a Bookmark

To delete a bookmark:

1. Access the **View Bookmarks** menu as outlined in steps 1-2 on the previous page.
2. Highlight the bookmark you wish to erase and press the right softkey.
3. Select **Delete** and press the left softkey.
4. Press the right softkey.

If you want to delete all bookmarks, select **Delete All** during step 3 above.

Going to a Specific Website

To go to a particular Website by entering a URL (Website address):

1. Launch the Web and press the right softkey.
2. Select **Go to URL** and press the left softkey.
3. Select **Address** and press the left softkey.
4. Press the right softkey, use your keypad to enter the URL of the Website you wish to go to, and press the left softkey.
5. Press the left softkey to go to the Website.

Note: Not all Websites are viewable on your phone.

Reloading a Web Page

To reload (refresh) a Web page:

1. Press the right softkey during a PCS Vision connection.
2. Select **Browser Menu** and press the left softkey.
3. Select **Refresh this page** and press the left softkey.
 - You may skip step 2 depending on the page you select.

Restarting the Web Browser

If the Web browser appears to be malfunctioning or stops responding, you can usually fix the problem by simply restarting the browser.

1. Press the right softkey during an active PCS Vision connection.
2. Select **Browser Menu** and press the left softkey.
3. Select **More...** and press the left softkey.
4. Select **Restart Browser** and press the left softkey.
 - You may skip step 2 depending on the page you select.



PCS Business ConnectionSM Personal Edition

PCS Business ConnectionSM Personal Edition gives you secure, real-time mobile access to your Microsoft® Outlook® or Lotus Notes® company email, calendar, business directory, and personal contacts. You'll have the features and functions of your Microsoft Outlook and Lotus Notes so you can view, create, reply to, and delete email; schedule appointments; and look up phone numbers in real time, anywhere on the Sprint Nationwide PCS Network.

PCS Business Connection Personal Edition delivers the following features:

- ▶ **Business email access.** Read, reply to, forward, delete, and compose your company email.
- ▶ **Company directory and contacts.** Search, view, call, and email contacts from your company's directory. Do all this and add/edit your personal contacts.
- ▶ **Work calendar.** Accept and decline meetings, view daily summaries and details, and navigate to various dates.
- ▶ **Files/information on your PC.** Browse folders, download, and view documents from any device using a PC browser or Pocket Internet Explorer.

PCS Business Connection Personal Edition requires no hardware or software installation on your company's network. Just install the PCS Business Connection Personal Edition software on your work PC. This allows data to be securely retrieved in real-time by your wireless device when connected to the Sprint Nationwide PCS Network. There is a monthly charge for PCS Business Connection and usage charges will also apply.

When your work PC isn't on, you can share connections with your co-workers so that you always have access to your email, calendar, and contacts. Your data remains secure behind the corporate firewall and any changes you make on your wireless device are instantly updated on your company server without the need to synchronize.

Additional PCS Business Connection solutions are available for your company. For more details, visit businessconnection.sprintpcs.com.

Note: See your PCS Service Plan for PCS Business Connection billing details.

PCS Vision FAQs


How will I know when my phone is ready for PCS Vision service?

Your User Name (for example, bsmith001@sprintpcs.com) will display on your phone's screen.

How do I sign-in for the first time?

You are automatically signed in to access PCS Vision services when you turn on your phone.



How do I know when my phone is connected to PCS Vision services?

Your phone automatically connects when PCS Vision service is used or an incoming message arrives. Your phone will also display the  icon. (Connecting takes about 10-12 seconds.)

Can I make calls and use PCS Vision services at the same time?

You cannot use voice and PCS Vision services simultaneously. If you receive a call while PCS Vision service is active, the call will be forwarded to voicemail. You can place an outgoing call anytime, but it will interrupt any in-progress PCS Vision session.

When is my data connection active?

Your connection is active when data is being transferred. Outgoing calls are allowed; incoming calls go directly to voicemail. When active, the  (Sending) or  (Receiving) indicator flashes on your phone's display screen.

When is my data connection dormant?

If no data is received for 10 seconds, the connection goes dormant. When the connection is dormant, voice calls are allowed. (The connection may become active again quickly.) If no data is received for an extended period of time, the connection will terminate.

Can I sign out of data services?

You can sign out without turning off your phone, however you will not be able to browse the Web or use other PCS Vision services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may sign in again at any time. To sign out, go to **Settings > PCS Vision > Disable Vision** in your phone's menu.

PCS Voice CommandSM

In This Section

- ▶ **Getting Started With PCS Voice CommandSM**
 - ▶ **Creating Your Own Address Book**
 - ▶ **Making a Call With PCS Voice Command**
-



With Sprint, the first wireless provider to offer innovative PCS Voice Command technology, reaching your friends, family, and co-workers has never been easier – especially when you're on the go. Your voice does it all with PCS Voice Command.

Getting Started With PCS Voice Command

With PCS Voice Command:

- ▶ You can store all your contacts' phone numbers, so you can simply say the name of the person you want to call.
- ▶ There's no need to punch in a lot of numbers, memorize voicemail passwords, or try to dial while you're driving.
- ▶ You can call anyone in your address book - even if you don't remember their phone number.



It's Easy to Get Started

- Just dial   from your PCS Phone to activate the service and listen to brief instructions directly from your phone. There is a monthly charge for PCS Voice Command.

Creating Your Own Address Book



You can program up to 500 names into your personal address book, with each name having up to five phone numbers. That's 2,500 phone numbers - and with the advanced technology of PCS Voice Command - you can have instant access to all of them.

There are four ways to update your address book:

- ▶ **Use Voice Recordings.** Simply dial   and say, "Add name." You will then be asked to say the name and number you want to add to your personal address book. Your address book can store up to 20 voice recorded names at once.
- ▶ **On the Web.** Go to www.talk.sprintpcs.com and receive a fully functional Web-based address book to create and update your contacts.
- ▶ **Use an Existing Address Book.** Automatically merge address books from desktop software applications with Sprint Sync™ Services for no additional charge. Simply click on the "Click to synchronize" button within your PCS Voice Command personal address book at www.talk.sprintpcs.com.
- ▶ **Call Directory Assistance.** If you don't have a computer or Internet access handy, you can have PCS Directory Assistance look up phone numbers for you and automatically add them to your address book. Just say "Call operator" and we'll add two names and numbers to your address book for our standard directory assistance charge.

Making a Call With PCS Voice Command

To place a call with PCS Voice Command:

1. Once you've signed up for PCS Voice Command and created your address book, all you do is press  . You'll hear a tone followed by the prompt "Ready."
2. After the "Ready" prompt, simply say, in a natural voice, "Call" and the name of the person or the number you'd like to call. For example, you can say, "Call Jane Smith at work," "Call John Baker on the mobile phone," "Call 555-1234," or "Call Bob Miller."
3. Your request will be repeated and you will be asked to verify. Say "Yes" to call the number or person. Say "No" if you wish to cancel.
4. The number will automatically be dialed. Keep in mind that PCS Voice Command recognizes not only your voice, but any voice, so that others can experience the same convenience if they use your phone.

For more helpful hints on PCS Voice Command, including a list of recognized commands and an interactive tutorial, visit www.talk.sprintpcs.com.

Note: PCS Voice Command is not available while roaming off the Sprint Nationwide PCS Network.

Safety Guidelines and Warranty Information

Safety

In This Section

- ▶ **Getting the Most Out of Your Reception**
 - ▶ **Maintaining Safe Use of and Access to Your Phone**
 - ▶ **Caring for the Battery**
 - ▶ **Acknowledging Special Precautions and the FCC Notice**
 - ▶ **Owner's Record**
 - ▶ **User's Guide Proprietary Notice**
-

Part of getting the most out of your PCS Phone is learning how the phone works and how to care for it. This section outlines performance and safety guidelines that help you understand the basic features of your phone's operation.

Getting the Most Out of Your Reception

Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radiofrequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.01μ watts to 0.2 watts in digital mode.

Knowing Radiofrequency Safety

The design of your PCS Phone complies with updated NCRP standards described below.

In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Maintaining Your Phone's Peak Performance

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- ▶ Hold the phone with the antenna raised, fully-extended, and over your shoulder.
- ▶ Try not to hold, bend, or twist the phone's antenna.
- ▶ Don't use the phone if the antenna is damaged.
- ▶ Speak directly into the mouthpiece.
- ▶ Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it's inoperable, return it to a Sprint Store or call PCS Customer Solutions for service.

Note: For the best care of your phone, only Sprint authorized personnel should service your phone and accessories. Faulty service may void the warranty.

Maintaining Safe Use of and Access to Your Phone

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

When using your phone in the car:

- ▶ Get to know your phone and its features, such as speed dial and redial.
- ▶ When available, use a hands-free device.
- ▶ Position your phone within easy reach.
- ▶ Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- ▶ Do not take notes or look up phone numbers while driving.

- ▶ Dial sensibly and assess the traffic; if possible, place calls when stationary or before pulling into traffic.
- ▶ Do not engage in stressful or emotional conversations that may divert your attention from the road.
- ▶ Dial **9 1 1** to report serious emergencies. It's free from your wireless phone.
- ▶ Use your phone to help others in emergencies.
- ▶ Call roadside assistance or a special non-emergency wireless number when necessary.

Tip: Purchase an optional hands-free car kit at your local Sprint Store. You may also call the PCS Accessory Hotline at 1-800-974-2221 or by dialing **# 2 2 2** on your PCS Phone.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radiofrequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn off your phone when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- ▶ Fueling areas such as gas stations.
- ▶ Below deck on boats.
- ▶ Fuel or chemical transfer or storage facilities.
- ▶ Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- ▶ Any other area where you would normally be advised to turn off your vehicle's engine.

Note: Never transport or store flammable gas, liquid, or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to your Phone

Your PCS Phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- ▶ Use only Sprint-approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- ▶ In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- ▶ Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- ▶ Never dispose of the battery by incineration.
- ▶ Keep the metal contacts on top of the battery clean.
- ▶ Don't attempt to disassemble or short-circuit the battery.
- ▶ The battery may need recharging if it has not been used for a long period of time.
- ▶ It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- ▶ Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

4° F to 140° F (-20° C to 60° C)

More than one month:

4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Lilon) Batteries

For safe disposal options of your LiIon batteries, contact your nearest Sprint-authorized service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Note: For safety, do not handle a damaged or leaking Lilon battery.

Acknowledging Special Precautions and the FCC Notice

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Sprint supplied or approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure that the antenna is at least 1.9 cm from your body when transmitting. Use of non-Sprint approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, please visit the FCC Website at www.fcc.gov.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the SCP-5400 (RL2500) are:

AMPS/CDMA modes (Part 22) - Head: 0.910 W/kg; Body-worn: 0.543 W/kg
PCS mode (Part 24) - Head: 1.160 W/kg; Body-worn: 0.881 W/kg

FCC Radiofrequency Emission

This phone meets the FCC Radiofrequency Emission Guidelines. FCC ID number: AEZSCP-54H. More information on the phone's SAR can be found from the following FCC Website: <http://www.fcc.gov/oet/fccid>.

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: PCS Phone SCP-5400 (PCS Vision Ready Link Phone RL2500)

Serial No.:

User's Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797

5,506,865 5,544,196 5,657,420 5,101,501

5,267,261 5,414,796 5,504,773 5,535,239

5,600,754 5,778,338 5,228,054 5,337,338

5,710,784 5,056,109 5,568,483 5,659,569

5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Manufacturer's Warranty

In This Section

▶ **Manufacturer's Warranty**

This section contains the manufacturer's warranty for your PCS Phone.

For information about the Terms and Conditions of your PCS Service, please see the Start Here guide included with your phone. For the most recent version of the Terms and Conditions, please visit www.sprintpcs.com.

Manufacturer's Warranty

Customer Limited Warranty

SPRINT SPECTRUM, L.P., (Sprint) offers you a limited warranty that the enclosed subscriber unit (Product), including accessories in the product package, will be free from defects in material or workmanship as follows:

SUBSCRIBER UNIT:

A. SPRINT ONE (1) YEAR LIMITED WARRANTY: For a period of one (1) year from the date of purchase, Sprint will, at its option, either pay the parts and labor charges to any authorized PCS® Phone service facility to repair or replace a defective product (with new or rebuilt parts/replacements). After this one (1) year period, you must pay all parts, shipping and labor charges.

B. REPAIRS: For a period equal to the remainder of the original limited warranty period on an original Product or for the 180 days after the date of repair/replacement, whichever is longer, Sprint will repair or replace (with new or rebuilt replacement) defective parts or Product used in the repair or replacement of the original Product under this Limited Warranty.

Proof of purchase in the form of a bill of sale or receipted invoice warranty repair document which is evidence that the Product is within the warranty period must be presented to obtain warranty service. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Products.

Transfer or resale of a Product will automatically terminate warranty coverage with respect to the Products.

This limited warranty does not cover and is void with respect to the following: (i) Products which have been improperly installed, repaired, maintained or modified (including the antenna); (ii) Products which have been subjected to misuse (including Products used in conjunction with hardware electrically or mechanically incompatible or used with accessories not supplied by Sprint), abuse, accident, physical damage, abnormal operation, improper handling and storage, neglect, exposure to fire, water or excessive moisture or dampness or extreme changes in climate or temperature, (iii) Products operated outside published maximum ratings; (iv) cosmetic damage; (v) Products on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) customer instruction; (vii) cost of installation, removal or reinstallation; (viii) signal reception problems (unless caused by defect in material and workmanship); (ix) damage the result of fire, flood, acts of God or other acts which are not the fault of Sprint and which the Product is not specified to tolerate, including damage caused by mishandling and blown fuses; (x) consumables (such as fuses); or (xi) any Products which have been opened, repaired, modified or altered by anyone other than Sprint or a Sprint authorized service center.

This warranty does not cover customer education, instruction, installation, set up adjustments, or signal reception problems.

This warranty is valid only in the United States.

USE WITH ACCESSORIES NOT SUPPLIED BY SPRINT OR OTHERWISE NOT EXPRESSLY AUTHORIZED BY SPRINT MAY BE DANGEROUS.

SPRINT SPECIFICALLY DISCLAIMS LIABILITY, AND SHALL HAVE NO OBLIGATION TO PROVIDE TO BUYER ANY OTHER REMEDY, FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO LOSS OF PROFITS, LOST SALES, LOSS OF USE OF THE PRODUCT, OR ANTICIPATED PROFITS ARISING OUT OF USE OF OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT), DAMAGE DUE TO IMPROPER OPERATION OR MAINTENANCE, INSTALLATION, CONNECTION TO IMPROPER VOLTAGE SUPPLY, OR ATTEMPTED REPAIR OF THE PRODUCT BY ANYONE OTHER THAN A FACILITY AUTHORIZED BY SPRINT. THIS WARRANTY DOES NOT COVER PRODUCTS SOLD AS IS OR WITH ALL FAULTS, OR CONSUMABLES, (SUCH AS FUSES). THIS WARRANTY DOES NOT APPLY WHEN THE MALFUNCTION RESULTS FROM USE OF THE PRODUCT IN CONJUNCTION WITH ACCESSORIES, PRODUCTS OR ANCILLARY OR PERIPHERAL EQUIPMENT NOT SUPPLIED BY OR EXPRESSLY AUTHORIZED FOR USE BY SPRINT, AND WHERE IT IS DETERMINED BY SPRINT THAT THERE IS NO FAULT WITH THE PRODUCT ITSELF.

REPAIR OR REPLACEMENT, AS PROVIDED UNDER THE WARRANTY, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW,

SPRINT MAKES NO OTHER WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, WITH RESPECT TO THE PRODUCTS FOR A PARTICULAR PURPOSE OR AGAINST INFRINGEMENT WITHIN THE TIME PERIOD SPECIFIED IN THE LIMITED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some States do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty last, so the above limitations or exclusions may not apply to you.

This limited warranty gives you specific legal rights, and you may have other rights which vary from State to State.

For other Warranty Service Information, please call PCS CUSTOMER SOLUTIONS at 1-888-211-4727.

Copyright(c) 2003 ACCESS Systems America Inc. ACCESS, NetFront are registered trademarks or trademarks owned by ACCESS Co., Ltd. in Japan and selected countries worldwide. NetFront is a registered trademark of NetFront Communications, Inc. in the United States and is used under a license. Portions of this software are based in part on the work of the Independent JPEG Group.

Powered by JBlend™ Copyright 1997-2003 Aplix Corporation. All right reserved. JBlend and all JBlend-based trademarks and logos are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.

Copyright © 2003 Sprint Spectrum L.P. All rights reserved. No reproduction in whole or in part without prior written approval. Sprint and the diamond logo design are trademarks of Sprint Communications Company L.P. All other trademarks are property of their respective owners.

Index

A

- Abbreviated Dialing 25, 63
- Activating Phone 3
- Airplane Mode 57
- Alert Notification 48
- Answering Calls 16
- Any Key Answer 61
- Auto Answer 59

B

- Backlight Time Length 50
- Battery
 - Capacity 13
 - Charging 14
 - Disposal 183
 - Installing 13
 - Removing 13
 - Standby Time 13
 - Talk Time 13

C

- Calculator 108
- Call Alarm
 - Adding 101
 - Alerts 102
 - Editing 103
 - Erasing 103
 - Menu 102
 - Viewing 103
- Call Forwarding 138
- Call Guard 76
- Call History
 - Erasing 84
 - Making a Call 83
 - Options 82
 - Prepending 84
 - Saving 83
 - Viewing 82
- Call Waiting 136
- Caller ID 136
- Calling in Lock Mode 67

Chat 159

Contacts

- Adding 91, 94
- Dialing 25
- Editing 94
- Erasing 69
- Finding 24, 92
- Options 86
- Saving 23
- Secret 96

D

Dialing

- Abbreviated 25, 63
- Contacts 25
- Number With Pauses 24
- Options 21
- PCS Services 96
- Speed Dialing 26, 62
- Voice-Activated Dialing 120

Display Settings

- Area Name 52
- Backlight Time Length 50
- Color 55
- Display Screen 51
- Font Size 56
- Greeting 50
- Incoming Calls 52
- LED Color 55
- Main Menu 55
- My Buddy 54
- Screen Saver 54
- Standby Mode 53

Downloading

- Accessing Menus 160
- Confirming 112
- Data Size 117
- Erasing 69, 118
- Icon Indication 116
- Selecting 144
- Sorting 116
- Viewing Memory 117

E

- Email 157
- Emergency Calling 20
- End-of-Call Options 23
- Event
 - Adding 99
 - Editing 101
 - Erasing 103
 - Alerts 100
 - Menu 100
 - Viewing 100, 103

F

- FCC Notice 184
- Features 11
- Font Size 56, 146

G

- Games
 - Downloading 162
 - Playing 112, 163
- Greeting 50

H

- Hard Pause 24
- Headset Mode 63
- Help 4

I

- Icon Indication 10, 107, 116
- In-Call Options 22
- Input Mode
 - Alphabet Mode 89
 - Numbers 90
 - Smileys 91
 - Symbols 90
 - T9 Text Mode 87
- Instant Messaging 158

K

- Keyword Match 151

L

- Language 64
- Limit Use 67

- Location Settings 56
- Lock Code 67
- Locking Phone 66
- Locking through SMS 70

M

- Main Menu Style Setting 55
- Making Calls 15
- Making Ready Link Call 29, 30, 31
- Menu Diagram 79
- Messaging
 - Displaying 146
 - Erasing All 153
 - Extracting
 - Email Address 149
 - Phone Number 147
 - URLs 149
 - Folder
 - Adding 151
 - Creating 150
 - Editing 152
 - Erasing 152, 153
 - Font Size 146
 - Moving a Message 151
 - Options 147
 - Prepending 148
 - Signing Up for Updates 153
 - Storage 145
- Message Notification 64
- Missed Call Notification 20, 32
- Muting 19
- My Buddy 54
- My Shortcut 59

N

- Net Guard 142

O

- Open/Close Flip Option 60

P

- Passcode 70
- PCS Business Connection 172
- PCS Mail 154

- PCS Ready Link
 - Adding 36,37
 - Contact Lists 28
 - Copying 34
 - Editing 38
 - Erasing 39,40
 - Finding 36
 - Making Calls
 - by Entering Number 31
 - Contact 29
 - Group 30
 - Options 33
 - Preparing 27
 - Receiving 31,32
 - Redialing 33
 - Saving 35
 - Setting 27
 - PCS Services
 - Call Forwarding 138
 - Call Waiting 136
 - Caller ID 136
 - Customer Solutions 3,5,66,70,96,189
 - Directory Assistance 5
 - Operator Services 5
 - PCS Vision
 - Chat 159
 - Email 157
 - Downloading 160
 - FAQs 173
 - Games 162
 - Instant Messaging 158
 - Launching 141
 - PCS Mail 154
 - Ringers 164
 - Screen Savers 166
 - Short Mail 155
 - Signing In and Out 71
 - Web 168
 - PCS Voice Command 174
 - Phone Number
 - Dialing with Pauses 24
 - Displaying 15
 - Finding 24,92
 - Saving 23
 - Power-off Tone 46
 - Prepend Dialing 84
- Q**
- Quiet Ringer 17
- R**
- Resetting
 - Phone 69
 - Through SMS 70
 - Ringer
 - Assigning 165
 - Downloading 164
 - Purchasing 165
 - Tone Length 45
 - Types 43
 - Volume 19,47
 - Roaming
 - Analog Networks 74
 - Digital Networks 73
 - Setting 75
- S**
- Safety Guideline 177
 - Scheduler
 - Calendar 98
 - Erasing 103
 - Event 99
 - Memory 106
 - Setting the Time/Date 98
 - Setting Holidays 98
 - To Do 104
 - Screen Call
 - Activating 125
 - Erasing 127
 - Recording 126
 - Reviewing 127
 - Selecting Announcement 126
 - Screen Savers
 - Assigning 167
 - Downloading 166
 - Purchasing 167

- Security Menu
 - Accessing 66
 - Changing the Lock Code 67
 - Locking Phone 66
 - Unlocking Phone 67
- Set Secret 96
- Short Mail 155
- Shortcut 59
- Side Key Guard 61
- Silence All 49
- Sleep Mode 64
- Sound Settings
 - Silence All 49
 - Start-up/Power-off Tone 46
 - Volume Settings 19, 47
- Speakerphone 18
- Special Number 68
- Speed Dialing 26, 62
- Standby Time 13
- Start-up Tone 46
- Symbols 90

T

- T9 Text Input 87
- Talk Time 13
- Three-Way Call 137
- To Do Items
 - Adding 104
 - Deleting 105
 - Editing 104
 - Viewing 104
- Tone Length 45
- TTY 57
- Turning On and Off 12
- 2-Second Pause 24

U

- Unlocking Phone 67
- Unmute 19
- Updates 153
- User Address 107
- User Name 140

V

- Version 107
- Voice Command
 - Creating Address Book 175
 - Getting Started 175
 - Making a Call 176
- Voice Dial
 - Erasing 121
 - Programming 120
 - Reviewing 121
 - Using 120
- Voice Memo
 - Erasing 124
 - Recording 122
 - Reviewing 123
- Voice Prompt 46
- Voice mail
 - Button Guide 131
 - Clearing Message Icon 134
 - Menu Key 135
 - Message Alerts 130
 - Notification 130
 - Options 132
 - Retrieving 131
 - Setting Up 130
- Volume Settings
 - During a Conversation 19
 - Muting 19
 - Ringer 19, 47

W

- Warranty 188
- Web
 - Launching 141
 - Navigating 143
 - Net Guard 142
 - User Name 140
- World Clock 53, 108

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>