
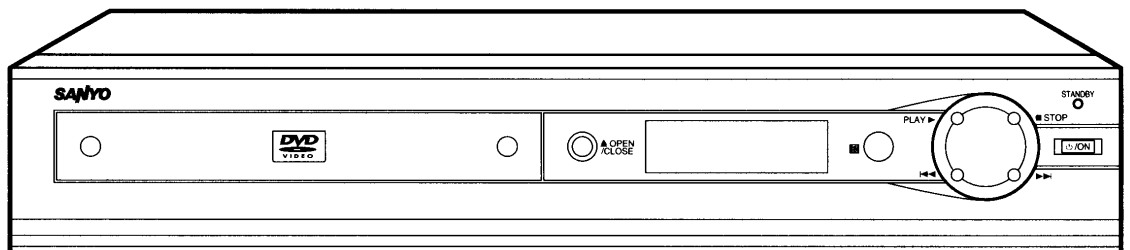



## INSTRUCTION MANUAL

## DVD-SL20

### DVD Player

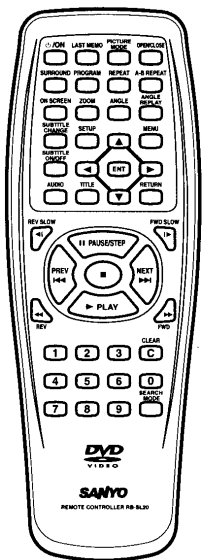

# PRECAUTIONS

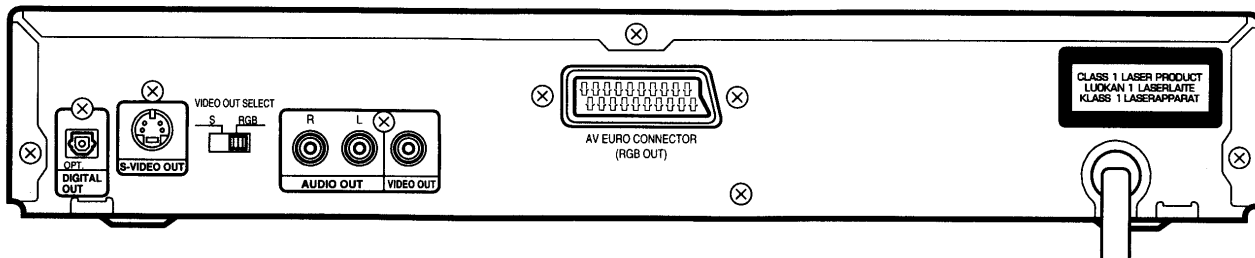

## CAUTION

THIS PRODUCT CONTAINS A LOW POWER LASER DEVICE, TO ENSURE CONTINUED SAFETY DO NOT REMOVE ANY COVERS OR ATTEMPT TO GAIN ACCESS TO THE INSIDE OF THE PRODUCT. REFER ALL SERVICING TO QUALIFIED PERSONNEL.

- The apparatus shall not be exposed to dripping or splashing.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not use where there are extremes of temperature (below 5°C or exceeding 35°C) or where direct sunlight may strike it.
- Because of the DVD player's extremely low noise and wide dynamic range, there might be a tendency to set the volume on the amplifier unnecessarily high. Doing so may produce an excessively large output from the amplifier which could damage your speakers.
- Sudden changes in the ambient temperature may cause condensation to form on the optical lens inside the unit. If this happens, take out the disc, leave the unit for about 1 hour, and then proceed to operate.
- When carrying the unit, be sure to remove a disc which may be inside and turn the power off. Wait at least 10 seconds, then unplug the mains lead from the AC outlet. Carrying the unit with a disc inside may damage the disc and/or the unit.
- Do not install this equipment in a confined space, such as a book case or built in cabinet.

- The unit is not completely disconnected from the mains when the ON button is set to the  $\odot$  position.
- The unit is automatically set to the standby mode after approximately 30 minutes have elapsed under the complete stop mode.

### Important Information:

To connect this unit to a TV, TV must have a set of Audio/Video composite input sockets or a Euro-AV socket at least. You cannot connect it to an RF input socket or aerial terminal of TV.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

## IMPORTANT

If the plug supplied with this equipment is not suitable for the socket outlets in your home it should be cut off and replaced with the correct type.

### Disposal of Plug

If the non rewirable plug is to be cut off, the removed plug should be disposed of carefully as there is a shock hazard should the plug be inserted into a live socket.

### Replacing Fuse

The detachable fuse cover must be replaced after changing the fuse. Only a 3A fuse should be used and should comply with BS1362 and should carry the ASTA mark  $\diamond$ .

The wires in the mains lead are coloured in accordance with the following code;

Blue	Neutral
Brown	Live

The wires in the mains lead must be connected to the terminals in the plug as follows;

Wire colour	Plug terminal marking
Blue	N or Black or Blue
Brown	L or Red or Brown


Do not connect either wire to the earth terminal.

If the mains plug contains a fuse this should be 3A, if a plug without a fuse is used the distribution board fuse should not be greater than 5A.

The unit is not disconnected from the mains unless it is unplugged from the AC outlet.


# CONTROLS

## Front panel

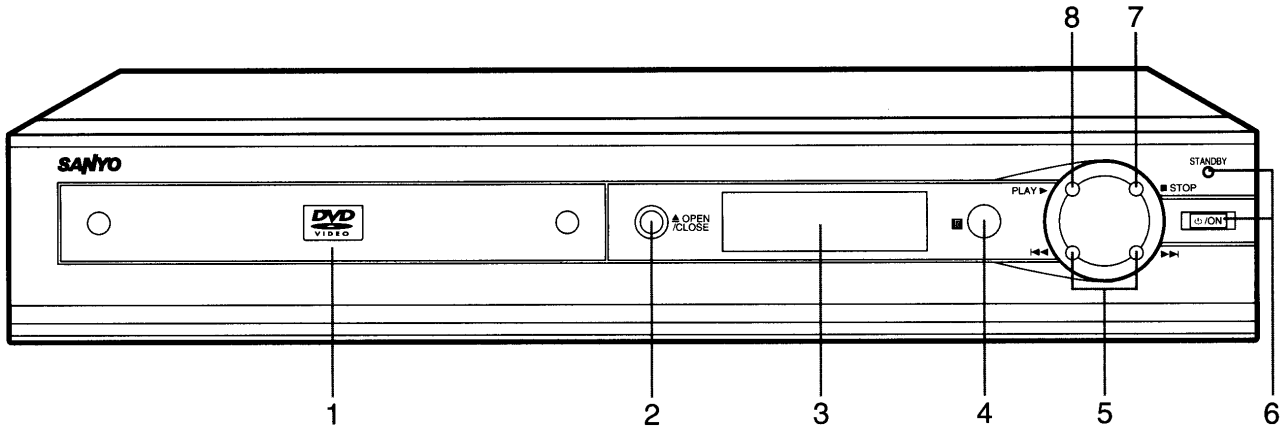


- |   |   |
|---|---|
| 1. Disc tray                                  | 5. Skip/Next/Previous buttons (⏮, ⏭)              |
| 2. Disc tray open/close button (▲ OPEN/CLOSE) | 6. Power button/Standby indicator (⏻/ON, STANDBY) |
| 3. Display                                    | 7. Stop button (■ STOP)                           |
| 4. Remote sensor (IR)                         | 8. Play button (▶ PLAY ▶)                         |

## Display

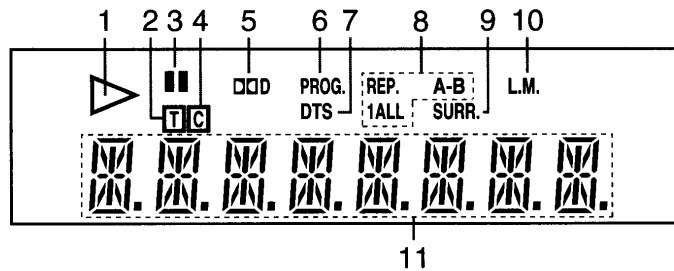

- |   |  |
|---|--|
| 1. Play indicator (▶)                           | 7. DTS indicator (DTS)   |
| 2. Title and Track indicator (T)                | 8. Repeat mode indicators (REP., 1, ALL, A-B)  |
| 3. Pause indicator (  )                         | 9. Surround mode indicator (SURR.)   |
| 4. Chapter indicator (C)                        | 10. Last memory indicator (L.M.)   |
| 5. Dolby Digital indicator (Dolby Digital logo) | 11. Message or number indicators<br>(Title, chapter, track, playing time or other information) |
| 6. Programme indicator (PROG.)                  |  |


## Rear panel

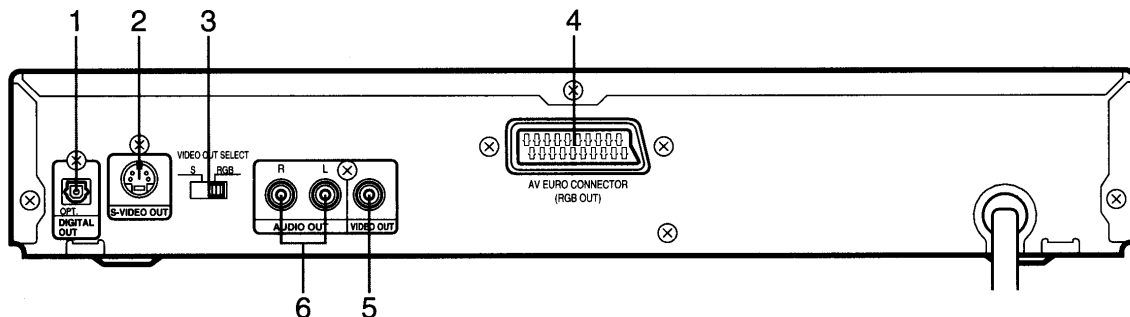

- |  |                                       |
|--|---------------------------------------|
| 1. Optical digital output socket (DIGITAL OUT)   | 4. Euro AV socket (AV EURO CONNECTOR) |
| 2. S-Video output socket (S-VIDEO OUT)           | 5. Video output socket (VIDEO OUT)    |
| 3. Video output select switch (VIDEO OUT SELECT) | 6. Audio output sockets (AUDIO OUT)   |

# REMOTE CONTROL


## Controls

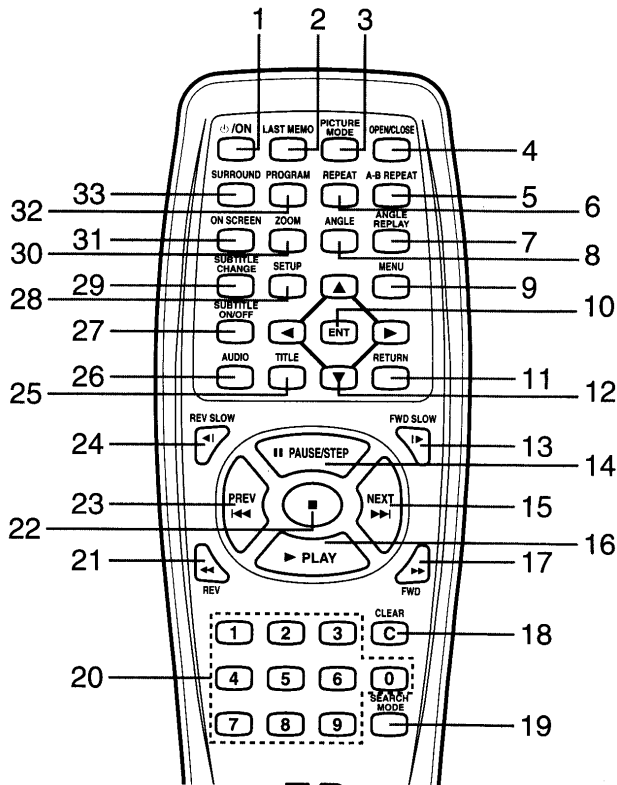

1. Power button (ON/OFF)
2. Last memory button (LAST MEMO)
3. Picture mode button (PICTURE MODE)
4. Open/Close button (OPEN/CLOSE)
5. A-B repeat button (A-B REPEAT)
6. Repeat button (REPEAT)
7. Angle replay button (ANGLE REPLAY)
8. Angle button (ANGLE)
9. Menu button (MENU)
10. Enter button (ENT)
11. Return button (RETURN)
12. Directional arrow buttons (▲, ►, ▼, ◀)
13. Forward slow button (FWD SLOW ►►)
14. Pause/Step button (|| PAUSE/STEP)
15. Skip/Next button (NEXT ►►|)
16. Play button (► PLAY)
17. Forward button (►► FWD)
18. Clear button (CLEAR)
19. Search mode button (SEARCH MODE)
20. Number buttons (1 – 9, 0)
21. Reverse button (◀◀ REV)
22. Stop button (■)
23. Skip/Previous button (PREV ◀◀|)
24. Reverse slow button (REV SLOW ◀◀)
25. Title button (TITLE)
26. Audio button (AUDIO)
27. Subtitle on/off button (SUBTITLE ON/OFF)
28. Setup button (SETUP)
29. Subtitle change button (SUBTITLE CHANGE)
30. Zoom button (ZOOM)
31. On screen display button (ON SCREEN)
32. Programme button (PROGRAM)
33. Surround sound button (SURROUND)

## Inserting batteries


Install two "R6 (HP 7)" batteries.

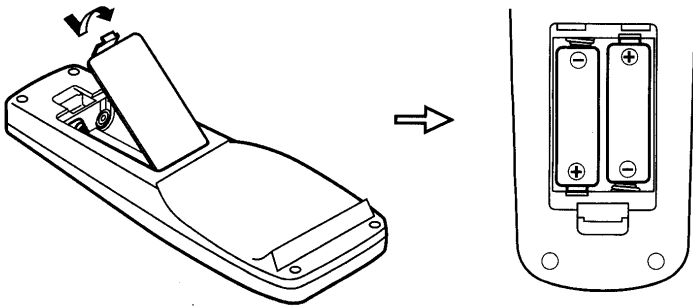

### Note:

Remove the batteries if the remote control is not to be used for a month or more. Batteries left in the unit may leak and cause damage.

## Remote control range

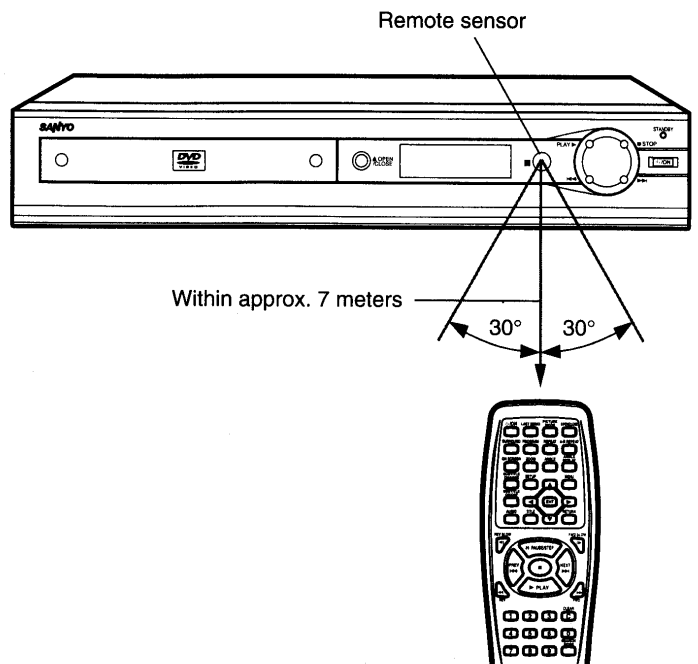


# CONNECTIONS

## Before connections

- Do not connect the unit to a VCR directly. The playback picture will be distorted because DVD discs are copy protected.
- When you connect the unit to your TV and other equipment, be sure to turn off the power and disconnect all of the equipments from the wall outlet until all the connections have been made.
- Please refer to the instruction manuals for the components that you are connecting (TV, AV amplifier, etc.).

## Connecting to a TV with the audio/video cable


This is the easiest way to hook up the unit.

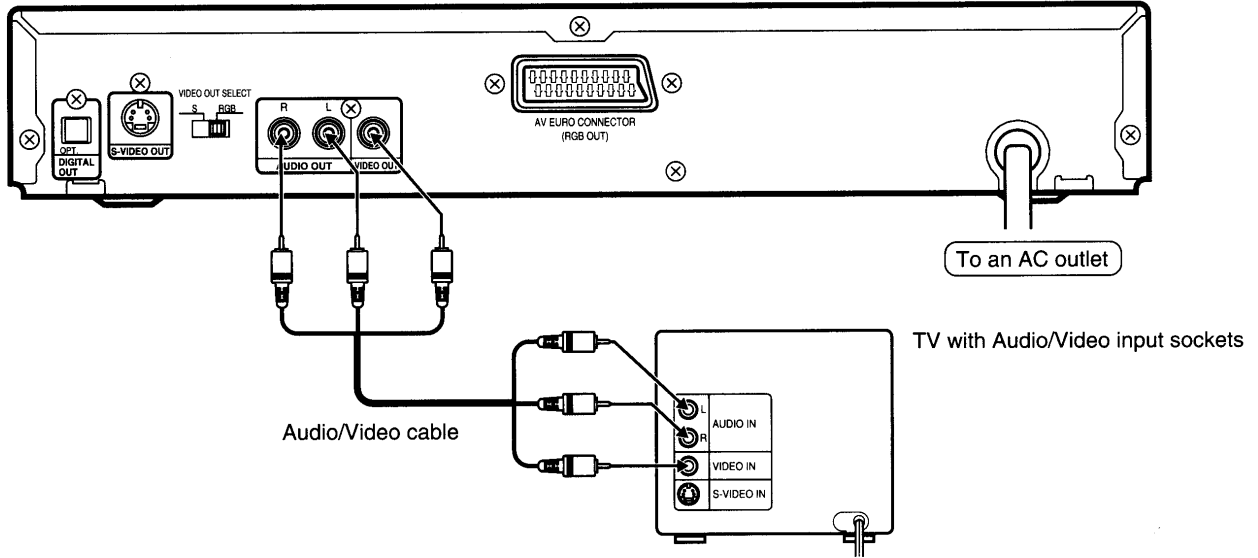

## Connecting to a TV with an audio and S-video cables

Please follow the steps before turn on the power.


1. If your TV has an S-video input socket, connect the unit as shown in figure. (The VIDEO OUT socket connection is not necessary.) You can enjoy clearer picture playback.
2. Set the VIDEO OUT SELECT switch to S.

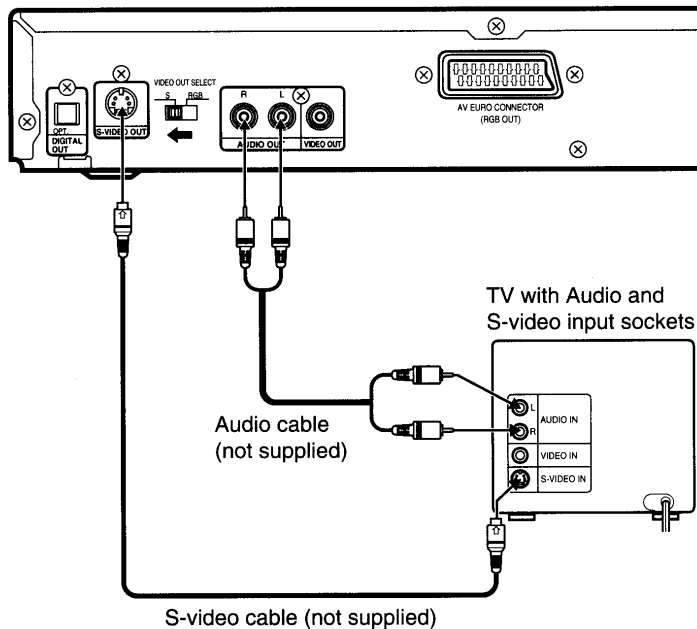

## Connecting to a TV with an EURO-AV cable

Please follow the steps before turn on the power.

1. If your TV has an EURO-AV socket, connect the unit as shown in figure. (Do not connect the video cable to the VIDEO OUT socket.) You can enjoy clearer picture playback.
2. Set the VIDEO OUT SELECT switch to RGB.

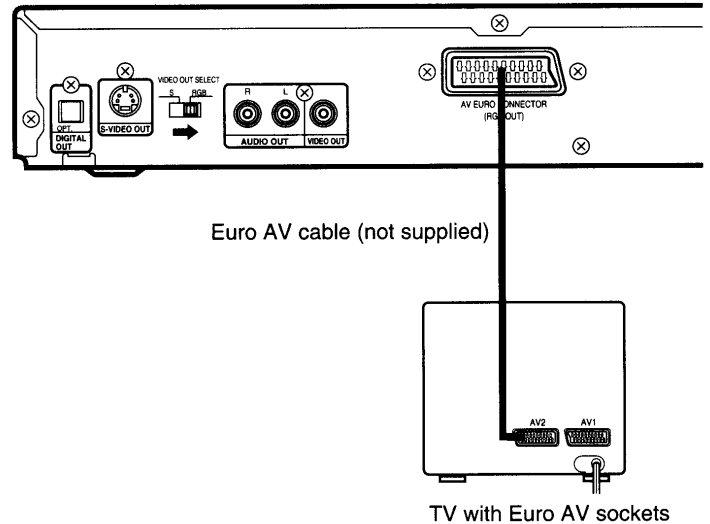

**As an alternative to using the TV's speakers, the sound can also be played back through a HiFi system or an amplifier.**

**Connecting to a HiFi system with analog two-channel stereo sound**

Connect an audio cable (not supplied) to the AUDIO OUT sockets of the unit and to the appropriate sockets of the HiFi system.


- The AUDIO OUT sockets can also be used for connection to an AV system with Dolby Pro Logic decoder.

Note:

To enjoy Dolby Pro Logic sound, select "Dolby Digital: LPCM" in "Setting digital out" under "INITIAL SETTINGS". (See Page 13.)

**Connecting to a digital multi-channel AV amplifier**

Digital multi-channel AV amplifier

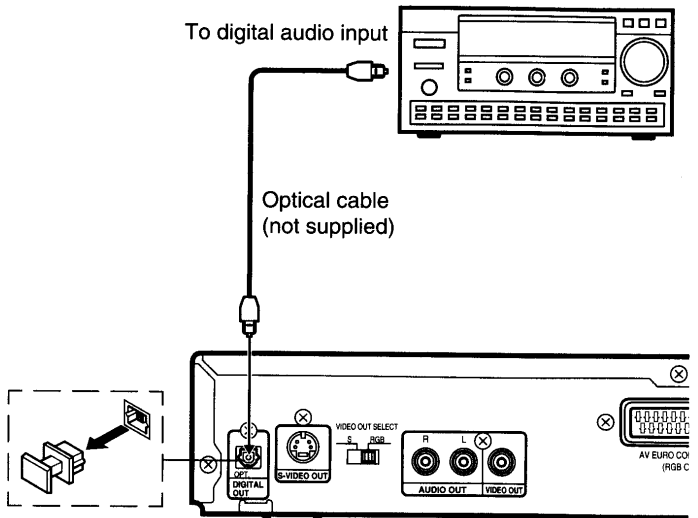

The digital multi-channel sound of a DVD can best be decoded and played with a multi-channel AV amplifier (Dolby Digital decoder or MPEG-2 decoder).

The AV amplifier has to be able to process the DTS audio signal in order to play a DVD with DTS. If it cannot, then you will not be able to hear the DVD.

Note:

Select "Setting digital out" setting under "INITIAL SETTINGS" as follows. (See Page 13.)

- To enjoy Dolby Digital sound, select "Dolby Digital: BitStream".
- To enjoy DTS sound, select "DTS: On".
- To enjoy MPEG-2 sound, select "MPEG: BitStream".
- To enjoy 2 channel digital stereo sound, select "Dolby Digital: LPCM", "DTS: Off", "MPEG: LPCM".

**Notes on the digital socket connection**

Before connecting, remove the protective cap from the DIGITAL OUT socket. Replace the cap if there is no device connected to this socket.



Manufactured under license from Dolby Laboratories.

"Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.

"DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

# PLAYABLE DISCS

The following types of discs can be played on this unit.

Disc type and logo mark		Recorded content	Disc size	Maximum playing time
DVD Video		Audio + Video	12 cm	Approx. 4 hours (Single sided disc) Approx. 8 hours (Double sided disc)
			8 cm	Approx. 80 minutes (Single sided disc) Approx. 160 minutes (Double sided disc)
Music CD		Audio	12 cm	74 minutes
			8 cm	20 minutes

## Region number

Region number (Regional restriction code) is built-in to the unit and DVD discs.



 
 


There is a region number on the rear of the unit.

The same region number or region number "ALL" of DVD discs can be used on this unit.


## DVD disc

There are the marks on some DVD disc package.

Example:

-  Multiple Languages
-  Multi-language subtitles
-  Multi-angle
-  Multi-aspect
-  Region number
-  Closed caption

 DVD discs are divided into titles, and the titles are sub-divided into chapters.



## Music CD disc

Music CD discs are divided into tracks.



## Note:

- Only the above types of discs can be played on this unit. DVD-ROM, CD-ROM, SVCD, VCD, CVD, etc. cannot be played.
- This unit can play back the CD-R/RW that has recorded music data or MP3 files. However, some CD-R/RWs can not be played back depending on the recording conditions.
- The CD-R/RW that has no music data or non-MP3 files can not be played back.
- This unit can play back the DVD-R that has recorded movie data. However, some DVD-Rs can not be played back depending on the recording conditions.
- The DVD-R that has no movie data can not be played back.
- This unit is to be used exclusively with the PAL (or NTSC) colour system discs. SECAM system discs cannot be used with this unit.
- The video output signal format can be selected ("PAL60" or "NTSC") when playing back the NTSC discs.

## Notes on handling discs

- Do not expose the disc to direct sunlight, high humidity or high temperatures for extended periods of time.
- Discs should be returned to their cases after use.
- Do not apply paper or write anything on the disc surface.
- Handle the disc by its edge. Do not touch the playing surface (glossy side).
- Fingerprints and dust should be carefully wiped off the playing surface of the disc with a soft cloth.  
Wipe in a straight motion from the centre to the outside of the disc.
- Never use chemicals such as record cleaning sprays, antistatic sprays or fluids, benzene or thinner to clean discs.

# BASIC OPERATION

## Important note:

- This instruction manual explains the basic instruction of this unit using the remote control.
- Some DVD discs have different functions that may not be explained in this instruction manual. You may need extra instructions. In this case, please follow the instructions displayed on the TV screen or jacket or case of the disc.
- "⊘" may appear on the TV screen during operation. This icon means that the function is not available on the disc now.


## Preparations

- Turn on the TV and select the video input for this unit. Select the playback picture size according to the aspect ratio of the TV. (See "Setting display" under "INITIAL SETTINGS" on Page 12.)
- Turn on the AV amplifier, etc. and select the audio input for this unit.
- Select the desired language for the on-screen menus. The following languages can be selected.  
English, Spanish, French, German, Portuguese  
(See "Setting language" under "INITIAL SETTINGS" on Page 12.)


### Note:

- Do not touch the disc tray while it is moving.
- Never place anything except a disc on the disc tray. Foreign objects can damage the unit.
- Do not apply excessive force to the disc tray.
- One disc must be placed on the disc tray at a time.
- To open or close the disc tray, be sure to use the OPEN/CLOSE button. Do not press the disc tray with your hand.


When operation buttons are pressed, that operation is displayed on the TV screen for several seconds.

1. Press the /ON button.
  - The STANDBY indicator turns off and the unit turns on.
  - "SANYO" logo appears on the TV screen.
  - "NO DISC" appears on the display.
2. Press the OPEN/CLOSE button.
  - "OPEN" appears on the display and the disc tray opens.
3. Place the disc with the label facing up on the disc tray.

12 cm disc

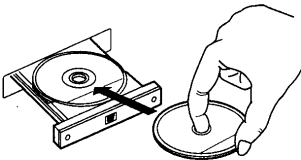


8 cm disc

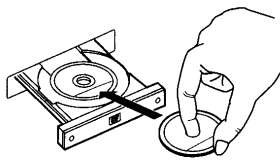


4. Press the OPEN/CLOSE button again.
  - The disc tray closes and "READING" appears on the display.


Note:  
Some discs may start play automatically.

## Starting play

 Press the  PLAY button.

- When using the main unit, use the PLAY  button.

Example:







Chapter number


Elapsed playing time

### Note:

 If the disc is loaded with the label side downward (and it is a single sided disc), or if a badly scratched disc is loaded, "NO DISC" (or "NO PLAY") appears. If this occurs, load the disc correctly or replace the disc.

## If a menu appears on the TV screen...

Press the , ,  or  button (or the number buttons), then press the ENT button to select the desired menu. Playback of the selected menu starts.








Note:


For more details, please refer to the jacket or case of the disc.

## Stopping play

### [DVD]


- Press the  button once.
    - When you press the  PLAY button, play starts automatically from the point where you stopped.
    - When using the main unit, use the  STOP button.
- Note:  
Some discs may not resume play.
- Press the  button twice. The unit stops completely and "STOP" appears on the display.
    - When you press the  PLAY button, play starts from the beginning of the disc.

### [CD]

- Press the  button. The unit stops completely.

To turn off the power, press the /ON button. The STANDBY indicator lights.

## Continuing play from where you stopped watching (LAST MEMORY PLAY) [DVD]


1. During play, press the LAST MEMO button at the point from which you want to resume play later. "L.M. STOP" appears on the display. Play stops automatically.
2. Remove the disc or turn off the power.
3. Load the disc (and press the  PLAY button), or turn on the power. "Last Memory Play?" screen appears.

Last Memory Play?

Yes

No


Clear (The memory is released.)


4. Press the  button to select "Yes".
5. Press the ENT button. Play resumes from the point where you stopped. (If desired, press the LAST MEMO button again.)


Note:

- Points on up to 3 discs can be memorized.
- The Last Memory Play mode may not work correctly with some discs.

## To lock the disc tray (Main unit only)

You can lock the disc tray to prevent misuse of young children. While the disc tray is opened, press the  OPEN/CLOSE button until "LOCK" appears on the display. (The disc tray closes.)

- The  OPEN/CLOSE button will not function.

To release this mode, press the  OPEN/CLOSE button until "UNLOCK" appears on the display.



# VARIOUS PLAYING FUNCTIONS

“ ” may appear on the TV screen during operation. This icon means that the function is not available on the disc now.

## Selecting a DVD menu [DVD]

 
1. Press the MENU button. The main menu screen appears.  
Note:  
Press the MENU button again to resume play.
2. Press the ▲, ▼, ◀ or ▶ button (or the number buttons) to select the desired menu, then press the ENT button. The selected menu play starts.

## Selecting a title menu [DVD]

1. Press the TITLE button. The title menu appears.  
Note:  
Press the TITLE button again to resume play from the scene when the TITLE button was first pressed on some discs.
2. Press the ▲, ▼, ◀ or ▶ button (or the number buttons) to select the desired title, then press the ENT button. The selected title play starts.

Note:  
Selecting a DVD or title menu operation may differ depending on the disc used and may not be possible on some discs.

## Chapter (Track) skip



### Skipping forward

Press the NEXT ►► button during play to skip to the next chapter (or track). A chapter (or track) is skipped each time the button is pressed.  
- When using the main unit, use the ►► button.

### Skipping backward

Press the PREV ◄◄ button during play to skip back to the beginning of the chapter (or track) currently play. Press the button again immediately to skip back to the beginning of the previous chapter (or track).  
- When using the main unit, use the ◄◄ button.

Note:  
You can skip only through the chapters, not over the title on the DVD disc.

## Title search [DVD]

1. Press the SEARCH MODE button once during play or in the stop mode. The title search screen appears.  
Example:  
Title Search --/02
2. Press the number button(s) to enter the title number.  
Example:  
To select No. 3, press 0, then 3 (or press 3).  
To select No. 10, press 1, then 0.  
To select No. 24, press 2, then 4.  
- If you make a mistake, press the CLEAR button.
3. Press the ► PLAY button. Play starts from the selected title.

## Chapter search [DVD]

1. Press the SEARCH MODE button twice during play. The chapter search screen appears.  
Example:  
Title 01 Chapter Search --/35
2. Press the number button(s) to enter the chapter number.
3. Press the ► PLAY button. Play starts from the selected chapter.

## Track search [CD]

Press the number button(s) during play or in the stop mode, then press the ► PLAY button. Play starts from the selected track.

## Time search

### [DVD]

1. Press the SEARCH MODE button three times during play. The time search screen appears.  
Example:  
Time Search --:--:--
2. Press the number button(s) to enter the time.  
Example:  
20 minutes 5 seconds Press 2, 0, 0 then 5.  
1 hour 4 minutes 35 seconds Press 1, 0, 4, 3 then 5.  
- If you make a mistake, press the CLEAR button.
3. Press the ► PLAY button. Play starts from the searched time.

### [CD]

1. Press the SEARCH MODE button once during play. The time search screen appears.
2. Press the number button(s) to enter the time.
3. Press the ► PLAY button. Play starts from the searched time in the track.

## Fast play

Press the ►► FWD or ◄◄ REV button repeatedly to select the fast speed forward or reverse play.

### [DVD]

►► 1", ►► 2", ►► 3", ►► 4" or ◄◄ 1", ◄◄ 2", ◄◄ 3", ◄◄ 4"

### [CD]

►► 1", ►► 2" or ◄◄ 1", ◄◄ 2"

Press the ► PLAY button to return to normal play.

## Slow-motion play [DVD]

Press the FWD SLOW ► or REV SLOW ◄ button repeatedly to select the forward or reverse slow speed play.

► 1", ► 2", ► 3", ► 4" or ◄ 1", ◄ 2", ◄ 3", ◄ 4"

Press the ► PLAY button to return to normal play.

Note:  
The sound is muted during fast play or slow-motion play in DVD.

## Still picture (Pause)

 
[DVD]: Still picture mode, [CD]: Pause mode  
Press the || PAUSE/STEP button during play.  
Press the ► PLAY button to return to normal play.  
Note: The sound is muted.

## Frame by frame advance play [DVD]

Press the || PAUSE/STEP button during still play. Each time the button is pressed, the picture advances one frame.  
Press the ► PLAY button to return to normal play.

Note:  
- The sound is muted.  
- Frame play is operated forward only.

## Picture zoom [DVD]




1. Press the ZOOM button during normal, slow or still play. The central part of the picture is magnified.
  - Each time the button is pressed, the zoom mode changes as follows.  
1 → Q 2 → Q Off
  - Press the ▲, ►, ▼ or ◀ button to change the zoom point.
2. Press the ZOOM button to select "Q Off" to return to the original screen.

Note:

Picture zoom may not work on some discs.

## Viewing from a desired camera angle (Multi-Angle) [DVD]

 

Some DVD discs may contain scenes which have been shot simultaneously from a number of different camera angles. The jacket or case of discs that are recorded with angles will be marked.

Example:



Note: The recorded angles differ depending on the disc used.

1. Play the disc that is recorded with angles.
2. Press the ANGLE button repeatedly until the desired angle appears.

Example:



## Angle replay [DVD]

During Multi-angle play screen, press the ANGLE REPLAY button. The unit skips back to last approximately 10 seconds, changes it to the next camera angle and plays it, and continues play. (If desired, press the button again.)

## Repeat play

Press the REPEAT button during play (or programmed play) of the title (or track) you want to repeat. Each time the button is pressed, the repeat mode changes as follows.


### [DVD]

- ↻ Chapter (REP. 1): Repeat of chapter being played
- ↻ Title (REP. ALL): Repeat of title being played
- ↻ Off: Normal play mode

### [CD]

- ↻ 1 (REP. 1): Repeat of track being played
- ↻ All (REP. ALL): Repeat all tracks
- ↻ Off: Normal play mode

## Designated range repeat play (A-B Repeat)

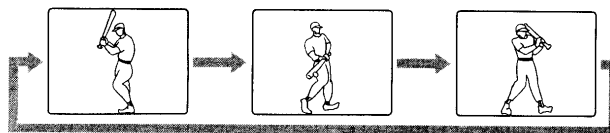

1. Press the A-B REPEAT button during play at the beginning of the section you want to repeat (Point A). "A-B" appears on the screen. "A-B" blinks on the display.
2. Press the A-B REPEAT button again at the end of the section (Point B). "A-B" remains lit on the display. The section between points A and B is played repeatedly.
3. To return to normal play, press the A-B REPEAT button again.

Note:

Repeat play or A-B repeat play mode may not work correctly with some discs.

## Programmed play [CD]

Up to 20 selections can be programmed.

### Programming procedure

1. Press the PROGRAM button in the stop mode. The programme mode screen appears.
2. Press the number button(s) to select the track number.  
Example:  
To select track No.3, press 0, then 3 (or press 3).  
To select track No.10, press 1, then 0.  
To select track No.24, press 2, then 4.  
Note:  
If you make a mistake, press the CLEAR button.
3. Press the ▼ button to move the highlighted box down.

Example:

#### Program Mode

##### All Clear

1	03	6 --	11 --	16 --
2	--	7 --	12 --	17 --
3	--	8 --	13 --	18 --
4	--	9 --	14 --	19 --
5	--	10 --	15 --	20 --

4. Repeat step 2 - 3 above to select another track.
5. Press the ► PLAY button to start play. "PROG." remains lit. When all programmed selections have played, the unit stops automatically.
  - The programme contents are retained in memory.

Note:

To play the programme again, press the PROGRAM button to call up the programme mode screen, then press the ► PLAY button.

### To clear the programme one by one

In the programming mode, press the ▲ or ▼ button to select the track number. Then press the CLEAR button.

### To clear all the programmes

In the programming mode, press the ▲ button to select "All Clear". Then press the ENT button.

### To change the programme

1. In the programming mode, press the ▲ or ▼ button to select the programme number.
2. Press the number button(s) to select the track number to be replaced.

Press the PROGRAM button to quit the programme mode screen.

## Selecting subtitle language [DVD]

This operation works only with discs on which multiple subtitle languages are recorded.

1. Press the SUBTITLE ON/OFF button during play. "☐" appears on the screen.
2. Press the SUBTITLE CHANGE button repeatedly until the desired subtitle language appears on the screen.

Example:

☐ 1/3 fr (French)

After few seconds, "☐" disappears.

Note:

- In some cases, the subtitle language is not changed to the selected one.
- When a disc supporting closed caption is played, the subtitle and the closed caption may overlap each other on the TV screen. In this case, turn the subtitle off.
- When the desired language is not selected even if the button is pressed, the language is not available on the disc.
- When the power is turned on or the disc is replaced, select the subtitle language again.
- If the subtitle language is not necessary, press the SUBTITLE ON/OFF button to select "☐ Off".

## Selecting audio soundtrack language (Multi-Language) [DVD]



This operation works only with discs on which multiple audio soundtrack languages are recorded.

1. Press the AUDIO button during play.
2. Press the AUDIO button repeatedly until the desired language appears on the screen.

Example:

☐ 1/4 fr (French)

☐ 1/3 DTS (DTS sound)

- If using an amplifier with DTS decoder, the DTS sound will be heard.

Note:

 
- When the desired language is not selected even if the button is pressed, the language is not available on the disc.
- When the power is turned on or the disc is replaced, select the language again.
- If the language is not recorded on the disc, only the available language on the disc will be heard.

## Selecting on-screen information


Press the ON SCREEN button repeatedly to show the disc information (Title, Chapter, Title elapsed playing time, Language, etc.).

Example for DVD:

1. Press the ON SCREEN button during play.



2. Press the ON SCREEN button.

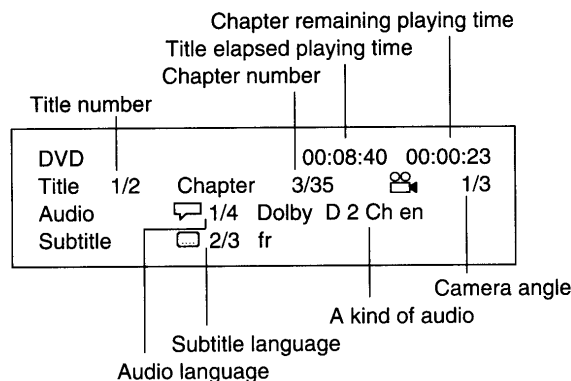

3. Press the ON SCREEN button to close the disc information.


Example for music CD:

1. Press the ON SCREEN button during play.

Track elapsed playing time

02:25

2. Press the ON SCREEN button.

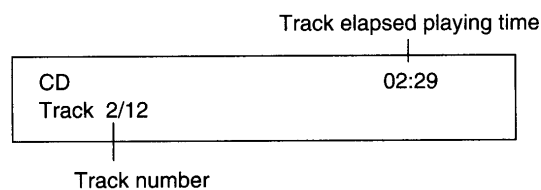

3. Press the ON SCREEN button to close the disc information.

## Selecting picture mode

Press the PICTURE MODE button. Each time the button is pressed, the picture mode changes as follows:

Standard → Mild → Black and White → Standard ...

## Selecting Spatializer N-2-2™ virtual surround sound mode

Press the SURROUND button to set the Spatializer N-2-2 virtual surround sound. "SURR." appears on the display.

Press the button again to return to the original mode. "SURR." disappears.

Portions of this product are licensed from Desper Products, Inc., a subsidiary of Spatializer Audio Laboratories, Inc. Copyright ©1997-2001 Spatializer Audio Laboratories, Inc. All Rights Reserved Worldwide. Spatializer®, N-2-2™ and the circle-in-square device are trademarks of Desper Products, Inc.

# MP3 CD OPERATION

This unit can play back the CD-R/RW that have recorded music data or MP3 files. Before playing back MP3 CD, please read the following.

## MP3 CD information

### Limitations on MP3 CD play

- MP3 CD is the disc that standardized by ISO9660 Level 2.
- This unit can recognize up to 200 files or folders per disc. The CD with 201 files or folders and over is not available to this unit.
- MP3 CD may not be played in the recorded order.
- As for multi-session disc, only the first session can be played.
- If the CD has both audio tracks and MP3 files, only audio tracks are played.
- It would take 30 seconds or more for this unit to read MP3 files depending on its structure.

### Limitations on display

- The maximum number for directory name is approximately 8 letters.
- The maximum number for file name is approximately 10 letters.
- Available letters for display are the following: capital or small alphabets of A through Z, and numbers of 0 through 9.
- Other letters than those above are replaced in "-" (hyphen).

### Notes on MP3 files

- The recommend recording setting for a high-quality sound is 44.1 kHz of sampling frequency and 128kbps of fixing bit rate.
- To play MP3 CD in the recorded order,
  1. Please use the MP3 software with the function that can record data alphabetically or numerically.
  2. Please refrain from making many sub-folders by preference.
- Some MP3 CDs can not be played back depending on the recording conditions.

## MP3 CD play

1. Load the MP3 CD.

A table of contents in the root directory appears on the screen.

Example: (the root directory)

MP3	HYPE-AX	-/24	00:00:00
1	MUSIC001	8	MUSIC008
2	MUSIC002	9	MUSIC009
3	MUSIC003	10	MUSIC010
4	MUSIC004	11	MUSIC011
5	MUSIC005	12	MUSIC012
6	MUSIC006		
7	MUSIC007		

2. Select the desired file by pressing the ▲ or ▼ button. The selected file number is highlighted.

- To go on to the next directory, press the ▲ button to move the highlighted box to the folder (Example: HYPE-AX), then press the ENT button.

A table of contents in the selected directory appears on the screen.

- To go back to the previous directory, press the RETURN button.
- In some discs, if the MENU button is pressed, it goes back to the root directory.

3. Press the ► PLAY button to start play.  
Current file number, total file number and current file elapsed playing time are displayed on the screen.

Example: (the second directory)

MP3	MAX2	13/24	00:00:08
13	MUSIC013	20	MUSIC020
14	MUSIC014	21	MUSIC021
15	MUSIC015	22	MUSIC022
16	MUSIC016	23	MUSIC023
17	MUSIC017	24	MUSIC024
18	MUSIC018		
19	MUSIC019		

### Notes on file skip

#### Skipping forward

Press the NEXT ►► button during play to skip to the next file. Each time the button is pressed, a file is skipped within the same directory.

#### Skipping backward

Press the PREV ◀◀ button during play to skip back to the beginning of the file currently play. Press the button again immediately to skip back to the beginning of the previous file.

#### Note:

To roll up and down the display, press the ▲, ►, ▼ and ◀ buttons respectively.

### Notes on repeat play

Press the REPEAT button during play.

Each time the button is pressed, the repeat mode changes as follows.

↺ 1 (REP. 1): Repeat of file being played

↺ All (REP. ALL): Repeat all files within the current directory

↺ Off: Normal play mode

#### Note:

Repeat play may not work correctly with some discs.

# INITIAL SETTINGS

Once the initial settings have been completed, the unit can always be operated under the same conditions. The settings will be retained in the memory until they are changed, even if the power is turned off.

## Setting language

1. Press the SETUP button in the stop mode. The setup screen appears and "Language" is highlighted.
2. Press the ENT button. "Language" screen appears.
3. Press the ▼ or ▲ button to select the item (highlighted).

Example:

OSD	English
Audio	Disc
Subtitle	Disc
DVD Menu	Disc

4. Press the ENT button. The submenu appears.

Example:

OSD	English	English
Audio	Disc	Español
Subtitle	Disc	Français
DVD Menu	Disc	Deutsch
		Portugues

5. Press the ▼ or ▲ button to select the language (highlighted).
6. Press the ENT button. The selected language remains.
7. Repeat steps 3 - 6 for other items.

Note:

If "Others" is selected, enter the language code. (See "LANGUAGE CODE LIST" on page 14.)

8. Press the ▲ button to skip back to the setup screen (or press the SETUP button to quit the setup screen).

Note:

- You cannot switch audio sound track languages if there is only one language recorded on the disc.
- When you play a DVD disc, the unit automatically displays the pre-selected subtitle language if it is included on the disc.
- **For improvement, on-screen displays subject to change without notice.**

## Setting display

1. Press the SETUP button in the stop mode. The setup screen appears.
2. Press the ► button to select "Display", then press the ENT button. "Display" screen appears.
3. Press the ▼ or ▲ button to select the item (highlighted), then press the ENT button. The submenu appears.

Example:

TV Type	4:3 LB	4:3 LB
NTSC Disc	NTSC	4:3 PS
		16:9

4. Press the ▼ or ▲ button to select the submenu (highlighted).

Example: To select "TV Type: 4:3 PS"

TV Type	4:3 LB	4:3 LB
NTSC Disc	NTSC	4:3 PS
		16:9

5. Press the ENT button. (In this example, "TV Type: 4:3 PS" remains.)
6. Repeat steps 3 - 5 for other items.
7. Press the ▲ button to skip back to the setup screen (or press the SETUP button).

### TV Type:


#### 4:3 LB (Letterbox):

Select when a conventional TV set is connected. When the wide screen disc is played back, the black bands appear at the top and bottom of screen.




#### 4:3 PS (Panscan):

Select when a conventional TV set is connected. When the wide screen disc is played back, it displays pictures cropped to fill your TV screen. The left and right edges are cut off.

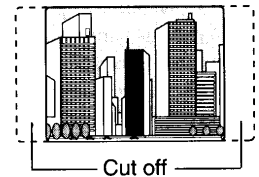

#### 16:9 :

Select when a wide screen TV set is connected. Played in "FULL" size. (Setting the wide screen TV to "FULL" mode is also necessary.)

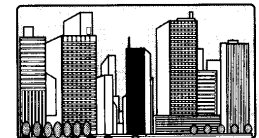

Note:

- The screen size may differ depending on the DVD discs.
- If you select 16:9 to get rid of the black bands on screen when wide screen disc is played back, picture may be slightly distorted.
- In some discs, even if 4:3 PS is selected, the black bands may remain on the screen.

### NTSC Disc:

Select the video output signal format to "PAL60" or "NTSC" when playing back the NTSC discs.

## Setting digital out

If the optical DIGITAL OUT socket is connected to the amplifier, you must set as follows:

1. Press the SETUP button in the stop mode. The setup screen appears.
2. Press the ► button to select "Digital Out", then press the ENT button. "Digital Out" screen appears
3. Press the ▼ or ▲ button to select the item (highlighted), then press the ENT button. The submenu appears.

Example:

96kHz LPCM	48kHz LPCM	
Dolby Digital	LPCM	LPCM
DTS	Off	BitStream
MPEG	LPCM	

4. Press the ▼ or ▲ button to select the submenu (highlighted).

Example: To select "Dolby Digital: BitStream"

96kHz LPCM	48kHz LPCM	
Dolby Digital	LPCM	LPCM
DTS	Off	BitStream
MPEG	LPCM	

5. Press the ENT button. (In this example, "Dolby Digital: BitStream" remains.)
6. Repeat steps 3 - 5 for other items.
7. Press the ▲ button to skip back to the setup screen (or press the SETUP button).

### 96kHz LPCM (96kHz Liner Pulse Code Modulation):

If your amplifier is available for 96kHz sampling, select "96kHz LPCM". If not, select "48kHz LPCM".

Note:

- When "48kHz LPCM" is set, there are 48kHz LPCM audio signals from the AUDIO OUT and AV EURO CONNECTOR sockets, not 96kHz LPCM audio signals.
- When playing back the DVD disc which recorded with 96kHz LPCM, there is no digital output.
- But playing back the DVD disc with no copyright protection, the sound is original recorded sound.

### Dolby Digital:

If your amplifier has Dolby Digital decoder, select "BitStream". If not, select "LPCM".

### DTS:

If your amplifier has DTS decoder, select "On". If not, select "Off".

### MPEG (Moving Picture Expert Group):

If your amplifier has MPEG-2 decoder, select "BitStream". If not, select "LPCM".

## Setting parental

1. Press the SETUP button in the stop mode. The setup screen appears.
2. Press the ► button to select "Parental", then press the ENT button. "Parental" screen appears
3. Press the ▼ button to skip "Password: ----" and select "Level".

Password	----	🔒
Level	Off	

4. Press the ENT button repeatedly to select the parental lock level ("Level: Off, 1 ~ 8").
5. Press the ▲ button to return to "Password: ----".
6. Enter a number in 4 digits, then press the ENT button. The password is now set.

Password	----	🔒
Level	1	

Note:

If you do not set it, Parental control does not work, and it returns to the initial settings.

7. Press the SETUP button. The setup screen disappears.

## Parental control

MPAA (Motion Picture Association of America) guideline is a rating system that provides advanced cautionary information to parent about the content of movie programmes.

The parental lock level is equivalent to the following MPAA rating system.

Level 7: NC-17 (No one 17 and under admitted)

Level 6: R (Restricted)

Level 4: PG13 (Parental guidance cautioned)

Level 3: PG (Parental guidance suggested)

Level 1: G (General audiences)

Some DVD discs contain a restriction level which enables parents to prevent playback of discs by children. This unit is equipped with a password designed to prevent children changing the level.

You cannot play DVD discs rated higher than the level you selected unless you cancel the parental lock function.

For example, when you select level "5", the unit will not play discs with ratings of "6", "7" or "8". The information will appear on the TV screen.

### If you forget the password...

Enter "788444" even if 4 digits "----" appears, then press the ENT button to clear the current password. Enter a new password and set the parental lock level again.

Note:

DVD discs may or may not respond to the parental lock settings. Make sure this function works with your DVD discs.

# LANGUAGE CODE LIST

Enter the appropriate code number for the initial settings "Audio", "Subtitle" and "DVD Menu".

Code	Abbreviation of the language	Language	Code	Abbreviation of the language	Language	Code	Abbreviation of the language	Language
6565	aa	Afar	7369	ie	Interlingue	8278	rn	Kirundi
6566	ab	Abkhazian	7375	ik	Inupiak	8279	ro	Romanian
6570	af	Afrikaans	7378	in	Indonesian	8285	ru	Russian
6577	am	Amharic	7383	is	Icelandic	8287	rw	Kinyarwanda
6582	ar	Arabic	7384	it	Italian	8365	sa	Sanskrit
6583	as	Assamese	7387	iw	Hebrew	8368	sd	Sindhi
6589	ay	Aymara	7465	ja	Japanese	8371	sg	Sangro
6590	az	Azerbaijani	7473	ji	Yiddish	8372	sh	Serbo-Croatian
6665	ba	Bashkir	7487	jw	Javanese	8373	si	Singhalese
6669	be	Byelorussian	7565	ka	Georgian	8375	sk	Slovak
6671	bg	Bulgarian	7575	kk	Kazakh	8376	sl	Slovenian
6672	bh	Bihari	7576	kl	Greenlandic	8377	sm	Samoan
6673	bi	Bislama	7577	km	Cambodian	8378	sn	Shona
6678	bn	Bengali; Bangla	7578	kn	Kannada	8379	so	Somali
6679	bo	Tibetan	7579	ko	Korean	8381	sq	Albanian
6682	br	Breton	7583	ks	Kashmiri	8382	sr	Serbian
6765	ca	Catalan	7585	ku	Kurdish	8383	ss	Siswati
6779	co	Corsican	7589	ky	Kirghiz	8384	st	Sesotho
6783	cs	Czech	7665	la	Latin	8385	su	Sundanese
6789	cy	Welsh	7678	ln	Lingala	8386	sv	Swedish
6865	da	Danish	7679	lo	Laothian	8387	sw	Swahili
6869	de	German	7684	lt	Lithuanian	8465	ta	Tamil
6890	dz	Bhutani	7686	lv	Latvian, Lettish	8469	te	Telugu
6976	el	Greek	7771	mg	Malagasy	8471	tg	Tajik
6978	en	English	7773	mi	Maori	8472	th	Thai
6979	eo	Esperanto	7775	mk	Macedonian	8473	ti	Tigrinya
6983	es	Spanish	7776	ml	Malayalam	8475	tk	Turkmen
6984	et	Estonian	7778	mn	Mongolian	8476	tl	Tagalog
6985	eu	Basque	7779	mo	Moldavian	8478	tn	Setswana
7065	fa	Persian	7782	mr	Marathi	8479	to	Tonga
7073	fi	Finnish	7783	ms	Malay	8482	tr	Turkish
7074	fj	Fiji	7784	mt	Maltese	8483	ts	Tsonga
7079	fo	Faeroese	7789	my	Burmese	8484	tt	Tatar
7082	fr	French	7865	na	Nauru	8487	tw	Twi
7089	fy	Frisian	7869	ne	Nepali	8575	uk	Ukrainian
7165	ga	Irish	7876	nl	Dutch	8582	ur	Urdu
7168	gd	Scots Gaelic	7879	no	Norwegian	8590	uz	Uzbek
7176	gl	Galician	7967	oc	Occitan	8673	vi	Vietnamese
7178	gn	Guarani	7977	om	(Afan) Oromo	8679	vo	Volapük
7185	gu	Gujarati	7982	or	Oriya	8779	wo	Wolof
7265	ha	Hausa	8065	pa	Punjabi	8872	xh	Xhosa
7273	hi	Hindi	8076	pl	Polish	8979	yo	Yoruba
7282	hr	Croatian	8083	ps	Pashto, Pushto	9072	zh	Chinese
7285	hu	Hungarian	8084	pt	Portuguese	9085	zu	Zulu
7289	hy	Armenian	8185	qu	Quechua			
7365	ia	Interlingua	8277	rm	Rhaeto-Romance			

# TROUBLESHOOTING GUIDE

If you have followed the instructions and are having difficulty operation the unit, locate the SYMPTOM in the left column below. Check the corresponding POSSIBLE CAUSE and CORRECTIVE ACTION columns to locate and remedy the problem.

SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION
No picture.	No disc is loaded.	Load a disc.
	An unplayable disc is loaded.	Load a playable disc. (Check the disc logo, type, colour system and regional code.)
	The TV is not set to receive signal from the unit.	Select the correct input function on the TV.
	No video connection.	Connect the video cable to the appropriate socket.
No sound.	No audio connections.	Connect the audio cables to the appropriate sockets.
The playback picture is poor.	An unplayable disc is loaded.	Load a playable disc. (Check the disc logo, type, colour system and regional code.)
"⊗" appears on the TV screen.	The selected function does not operate on the disc now.	The feature or action cannot be completed at this time because: <ul style="list-style-type: none"> <li>- The feature is not available at the moment.</li> <li>- The DVD software restricts it.</li> <li>- The DVD software does not support the feature (e.g., angles).</li> </ul>
No start play.	No disc is loaded.	Load a disc.
	An unplayable disc is loaded.	Load a playable disc. (Check the disc logo, type, colour system and regional code.)
	The disc is loaded with the label side down.	Load the disc on the disc tray correctly.
	The disc is dirty.	Clean the disc or replace it.
	"PARENTAL" is set.	Cancel the parental lock function or change the rating level. Reset it after play.
The operation or display is not normal.	The unit must be reset.	<ol style="list-style-type: none"> <li>1. Disconnect the mains lead.</li> <li>2. Reconnect the mains lead.</li> <li>3. Resume operation.</li> </ol>
The remote control does not work properly.	The batteries in the remote control are weak, or installed incorrectly.	Check the battery polarity (+ or -). Replace the batteries.
	The remote control is not aimed at the remote sensor window.	Aim the remote control at the remote sensor window.

## CLEANING THE UNIT

Clean the outside of the unit with a clean soft cloth moistened with lukewarm water. Do not use benzene, thinner or alcohol since they will mar the finish of the surfaces.



# SPECIFICATIONS

**Playback system:**

DVD-Video, CD

**Playback standard:**

PAL or NTSC

**Laser:**

Semiconductor laser, wavelength: 650/790 nm

Laser output (Continuous wave max.):

1 mW (DVD)

0.5 mW (CD)

**Frequency range (digital audio):**

4 Hz to 44 kHz (DVD fs: 96 kHz)

**Signal to noise ratio:**

More than 105 dB

**Harmonic distortion (digital audio):**

0.003 %

**Wow and flutter:**

Below measurable level

**Outputs:**

**DIGITAL OUT:**

For optical cable

**AV EURO CONNECTOR:**

For Euro-AV cable

**S-VIDEO OUT:**

Y: 1.0 Vp-p (75  $\Omega$ ) NTSC, 1.0 Vp-p (75  $\Omega$ ) PAL

C: 0.286 Vp-p (75  $\Omega$ ) NTSC, 0.3 Vp-p (75  $\Omega$ ) PAL

**VIDEO OUT:**

1.0 Vp-p (75  $\Omega$ )

**AUDIO OUT:**

L: 2 V rms

R: 2 V rms

**Power requirements:**

AC 230 V, 50 Hz

**Power consumption:**

12 W

Less than 2 W (standby mode)

**Dimensions:**

360(W) x 63.5(H) x 250(D) mm

**Weight:**

2.1 kg

**IMPORTANT INFORMATION**

Because its products are subject to continuous improvement, SANYO reserves the right to modify product designs and specifications without notice and without incurring any obligation.





## **GUARANTEE TO CUSTOMER**

Sanyo Europe Ltd. (the Company) guarantees to the initial retail purchaser that if this equipment is or becomes defective and that, in the opinion of the Company, the defect is due to faulty material or workmanship the Company will, for a period of 12 calendar months from the date of sale to the original purchaser repair or replace, at its sole option, free of charge, any such defective component part of the equipment, always provided that: -

1. The equipment has at all times been used in accordance with the operating instructions issued by the Company, and has not been connected to an electrical mains supply for which it has not been adjusted.
2. Accidental damage, or damage caused by negligence or misuse by the user, including leakage from exhausted batteries, is specifically excluded.
3. Unauthorised repairs, or any modification to the equipment which has not been expressly approved by the Company, shall render this guarantee null and void.
4. Failure due to fair wear and tear of any item, such as batteries, record playing styli, and tape recording, playback and erase heads is specifically excluded.

This guarantee is not transferable and is only applicable within the United Kingdom (and the Republic of Ireland). Nothing in this express guarantee affects the statutory rights available to the purchaser of this equipment.

Note: This guarantee supersedes any other form of guarantee that may inadvertently have been enclosed with or attached to the product. (August 1978).

*Dear Customer*

Thank you for buying Sanyo. This equipment should give you many years of pleasure and faithful service but in the event that a fault occurs, the following notes for your guidance may be helpful:-

1. PLEASE RETAIN YOUR PURCHASE RECEIPT WHICH WILL BE REQUIRED FOR SERVICE DURING GUARANTEE.
2. If your Sanyo equipment proves faulty during the period of guarantee, take it or send it back to the dealer who originally supplied it together with this guarantee and the proof of purchase. We have made arrangements with our approved dealers under which they will carry out in-guarantee service repairs on our behalf. In this way, we hope to reduce to a minimum the amount of time you will be without your equipment.
3. If for some reason it is impossible to return the equipment to the original supplier, please contact our Consumer Relations Department at the address below for further advice.
4. Should the equipment require servicing after the expiry of the guarantee period, take or send it to the original supplier or any other Sanyo dealer. He will be pleased to give you a quotation for the repair. If you are in any doubt about what to do, write to us at the address below or telephone:

**Consumer Relations Department,  
Sanyo Europe Ltd.,  
Sanyo House  
Otterspool Way, Watford,  
Hertfordshire WD2 8JX  
Tel: Watford 246363**

R5

The Sanyo logo consists of the word "SANYO" in a bold, sans-serif font. The letter "Y" is stylized with multiple vertical lines passing through it, creating a sense of motion or a multi-lens effect.

**SANYO Electric Co., Ltd.**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>