

Dual Dock Music System for iPod and iPhone



iPod is a trademark of Apple Inc., registered in the U.S. and other countries. iPod shown not included.

“Made for iPod” means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.



iPhone is a trademark of Apple Inc., iPhone shown is not included.

“Works with iPhone” means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

TABLE OF CONTENTS

| | |
|---|----|
| INTRODUCTION..... | 2 |
| IMPORTANT SAFETY INSTRUCTIONS..... | 3 |
| FCC INFORMATION..... | 5 |
| PREPARATION FOR USE | 6 |
| MAINTENANCE..... | 6 |
| BATTERY BACK-UP SYSTEM | 7 |
| LOCATION OF CONTROLS & INDICATORS | 9 |
| REMOTE CONTROL | 11 |
| OPERATING INSTRUCTIONS | 12 |
| CONNECTING EXTERNAL DEVICES..... | 12 |
| SETTING & BASIC OPERATION..... | 13 |
| RADIO OPERATION | 16 |
| PRESETTING STATIONS IN THE TUNER MEMORY | 18 |
| SLEEP TIMER..... | 20 |
| ALARM SETTING | 21 |
| iPod / iPhone OPERATION | 23 |
| DOCK ADAPTOR COMPATIBILITY..... | 25 |
| iPod / iPhone OPERATION CONTROLS | 26 |
| TROUBLESHOOTING GUIDE..... | 28 |
| TECHNICAL SPECIFICATION..... | 29 |
| THE UNIT SUPPORTS THE LISTED iPods / iPhones..... | 30 |
| WARRANTY..... | 31 |

INTRODUCTION

Thank-you for choosing SANYO. This digital music system comes with dual docks for playing and charging iPhone/iPod, an AM/FM stereo digital tuner with 40 presets, dual alarm clock function with wake to iPhone/iPod/radio/buzzer, jumbo backlit LCD display with six level dimmer control, two 2.5" speaker drivers, rear passive subwoofer, 10W system power and a full function remote control.

IMPORTANT SAFETY INSTRUCTIONS

- 1.) Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
- 2.) Install this unit in accordance with the manufacturer's instructions.
- 3.) Only use attachments / accessories specified by the manufacturer.
- 4.) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the unit. When a cart is used, use caution when moving the cart/unit combination to avoid injury from tip-over.
- 5.) Use replacement parts as specified by the manufacturer.
- 6.) Do not install this unit near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 7.) The unit shall not be exposed to dripping or splashing water and no object filled with liquids, such as vases, shall be placed on the apparatus.
- 8.) Do not use this apparatus near water and clean the unit with dry cloth only.
- 9.) Disconnect the unit from the power source when cleaning.
- 10.) No naked flame sources, such as lighted candles, should be placed on the unit.
- 11.) Keep the player clean and never store it next to a heat source or in dirty, humid or wet places. Keep it out of direct sunlight.
- 12.) Do not block any ventilation openings; the ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc. Give minimum 100 mm distances around the apparatus for sufficient ventilation.
- 13.) To prevent fire or shock hazard, do not expose this unit to rain or moisture.
- 14.) Do not subject the product to harsh impacts. Do not drop the appliance. This may result in damage to the product and loss of data.
- 15.) Care required with the use of this apparatus in tropical and/or moderate climates.
- 16.) Do not use this apparatus in an extremely dry environment, as this can lead to static discharge which can damage the player.
- 17.) When the unit experienced a crash due to a strong electromagnetic field or other interference. Please first switch off the mains and disconnect the main unit with the main power supply for a few minutes. Reconnect the unit with the power supply to reset the unit software, the unit will return to normal operation.
- 18.) To prevent fire or shock hazard, do not use this plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.
- 19.) Unplug this unit during lightning storms or when unused for long periods of time.
- 20.) Where the MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

IMPORTANT SAFETY INSTRUCTIONS

- 21.) Do not destruct the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 22.) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 23.) Do not overload wall outlet. Use only power source as indicated.
- 24.) Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
- 25.) Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged. Liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, or has been dropped, does not operate normally.
- 26.) Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- 27.) Attention should be drawn to the environmental aspects or battery disposal.
- 28.) This product is not intended for commercial use. Household use only.
- 29.) Do not install this apparatus in confined space, such as a book case or built-in cabinet. Minimum distance (about 100mm) around the apparatus for sufficient ventilation.
- 30.) To be completely disconnected the power input, the mains plug of apparatus shall be disconnected from the mains.

WARNING:

Handling the cord on this product or cords associated with accessories sold with this product, will expose you to lead, a chemical known to the state of California to cause cancer, and birth defects or other reproductive harm. **Wash hands after handling.**

Servicing:

- This unit contains no user serviceable parts. Refer to qualified personnel.
- Consult your dealer if you are ever in doubt about the installation, operation or safety of this product.

FCC INFORMATION

NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PREPARATION FOR USE

Unpacking And Set Up

- Remove the main unit, the AC adaptor, the 6 iPod® adaptors, the lithium battery(CR2032) and the external AM Loop Antenna from the carton, and remove all packing material from the main unit. We recommend that you save the carton and packing material in the event that the unit ever needs to be returned for service.
- Remove any descriptive labels or stickers from the top or front panels of the unit but do not remove any labels or stickers from the back or bottom panels.

MAINTENANCE

Cleaning The Unit

- To prevent fire or shock hazard, disconnect your unit from the mains power source when cleaning.
- If the cabinet becomes dusty wipe it with a soft dry cloth. Do not use any wax or polish sprays on the cabinet.
- If the cabinet becomes dirty or smudged with fingerprints, it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes, and these will damage the finish of your unit.

Caution: Never allow any water or other liquids to get inside the unit while cleaning.


BATTERY BACK-UP SYSTEM

This system includes a battery back-up circuit that will maintain the time and alarm settings, and the preset tuner memories, in the event of a temporary power interruption. The battery back-up system requires one 3-Volt lithium button cell (Type CR2032 or equivalent). If the back-up battery is not installed, or the battery is exhausted, and the AC power supply is interrupted, the time, alarm, and preset memory stations will be lost. It will be necessary to reset the unit when the power is restored.


The Battery Back-Up compartment is located on the bottom cabinet.

Activating the Back-Up Battery


The CR2032 lithium battery is already installed in the battery compartment on the bottom, pull out the small mylar insulation tab as shown in the illustration to begin using the unit for maintain the time and alarm settings and the preset tuner memories.

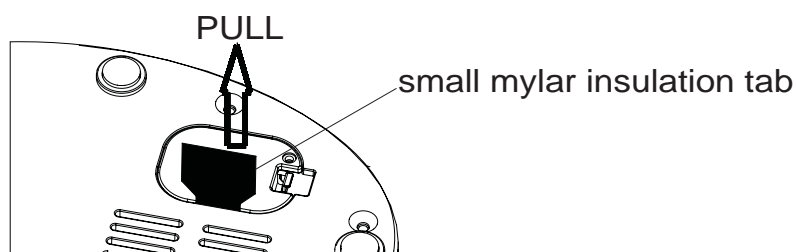

Replacing The Back Up Battery

When it's time to replace the battery the Low Battery Icon () will be shown in the lower left corner of the display. Insert a fresh CR2032 battery following the below procedure, however leave the unit connected to the AC adaptor while replacing the battery to avoid losing all of your settings.

1. Turn the unit upside down on a soft surface such as a cloth or towel to avoid scratching the top cabinet surface.
2. Open the battery compartment cover and remove the old battery as shown in the illustration.
3. Insert a fresh, well-known brand of CR2032 lithium battery into the compartment with the "+" side facing up. Close the battery compartment cover.
4. Turn the unit right side up.

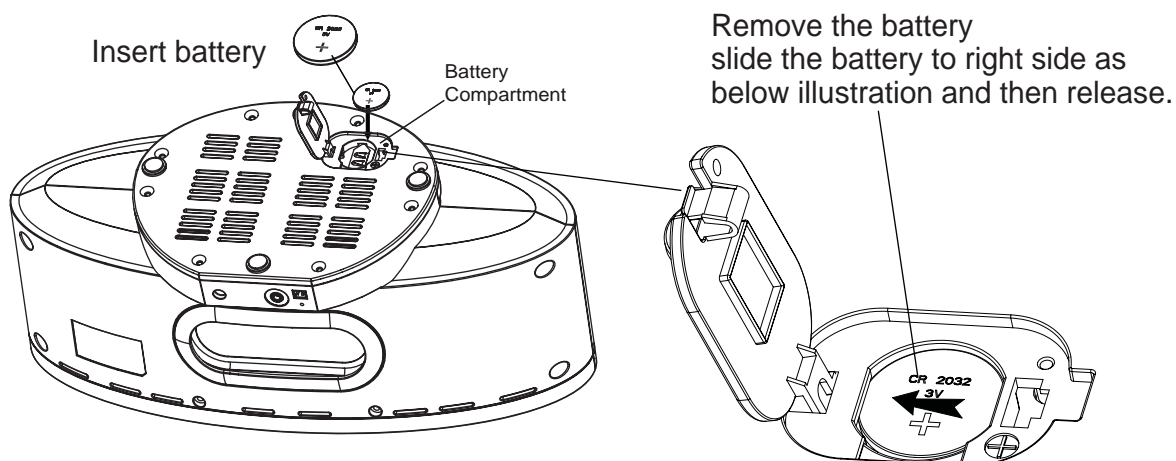

BATTERY BACK-UP SYSTEM


Battery Precautions

Follow these precautions when using a battery in this device.

1. Warning -Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
2. Use only the size and type of battery specified.
3. Be sure to follow the correct polarity when installing the battery as indicated in the Battery Compartment. A reversed battery may cause damage to the device.
4. If the device is not to be used for a long period of time, remove the battery to prevent damage or injury from possible battery leakage.
5. Do not try to recharge a battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's directions.)
6. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Using The AC Adaptor


Connect the small female plug of the AC adaptor to the DC In Jack on the back panel. Connect the housing of the AC adaptor to the 120V AC outlet.

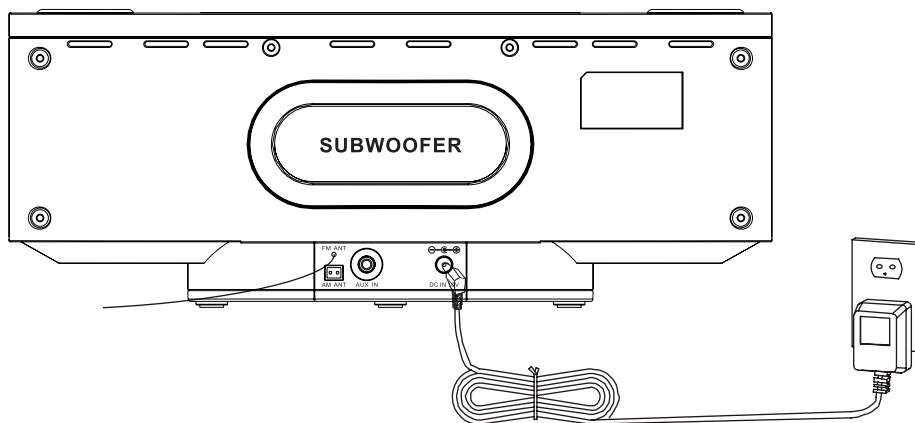

NOTES:

- *The housing of the AC adaptor may become warm during operation. This is normal.*
- *To reduce the risk of electric shock never connect or disconnect the AC adaptor while your hands are wet.*
- *Please use original AC adaptor supplied with the unit, otherwise, will damage the unit.*


LOCATION OF CONTROLS & INDICATORS

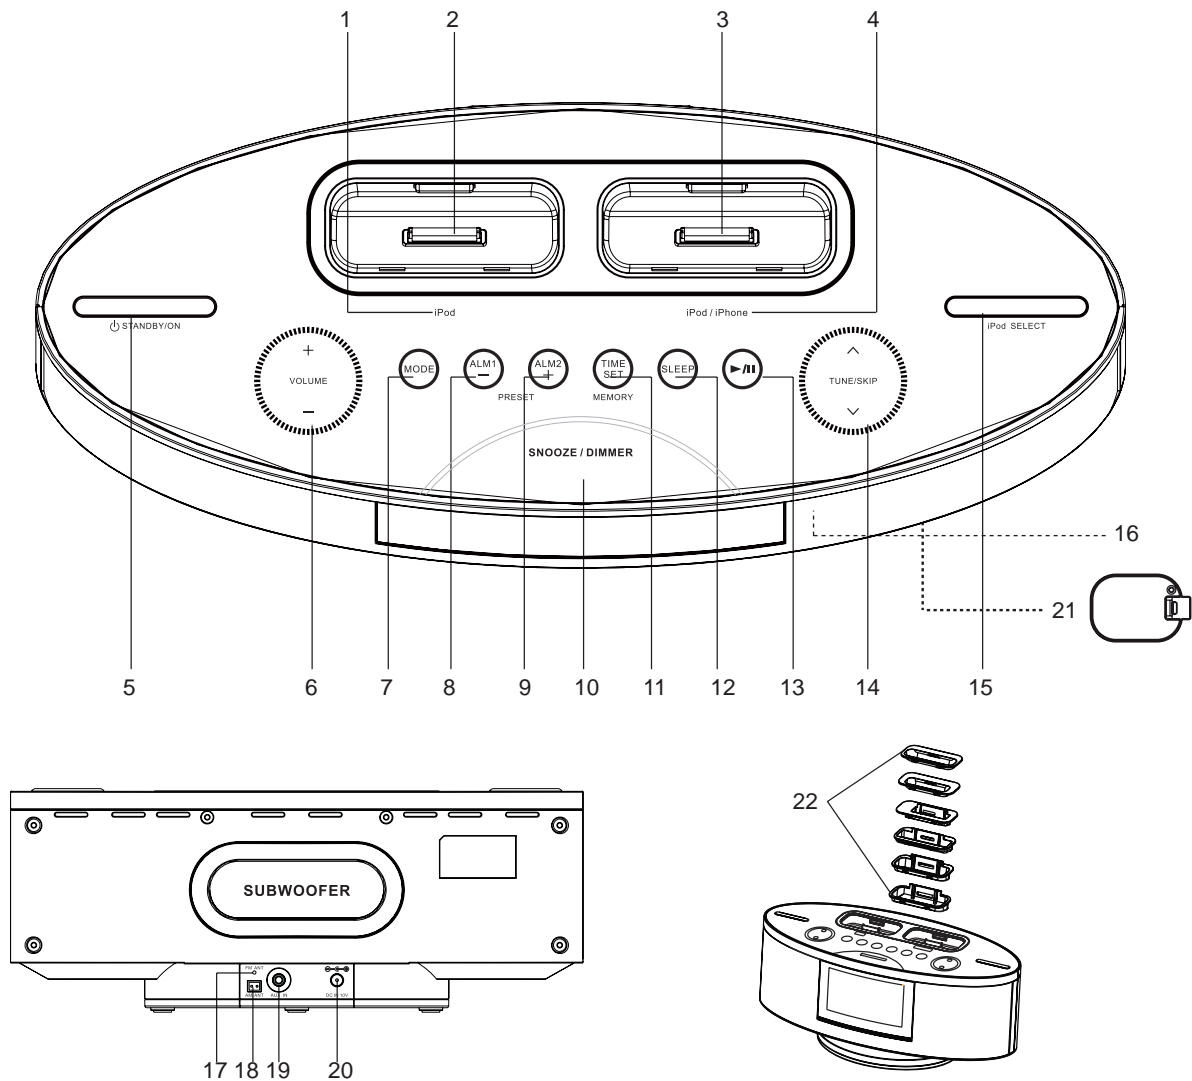


- | | |
|------------------------------------|--|
| 1 . iPod Indicator | 13. PLAY/PAUSE ►/ Control |
| 2 . Universal Dock for iPod | 14. TUNE/SKIP ▲ / ▼ Control |
| 3 . Universal Dock for iPod/iPhone | 15. iPod SELECT Button |
| 4 . iPod/iPhone Indicator | 16. Remote Sensor |
| 5 . ⏻ STANDBY/ON Button | 17. FM ANTENNA |
| 6 . VOLUME + / - Control | 18. AM ANTENNA Socket |
| 7 . MODE Control | 19. AUX IN Jack |
| 8 . ALM 1 / PRESET - Control | 20. DC IN Jack |
| 9 . ALM 2 / PRESET + Control | 21. Back-Up Battery Compartment (On Bottom Cabinet) |
| 10. SNOOZE/DIMMER Control | 22. iPod Holders (6 inserts) |
| 11. TIME SET / MEMORY Control | |
| 12. SLEEP Control | |

LOCATION OF CONTROLS & INDICATORS

LCD DISPLAY

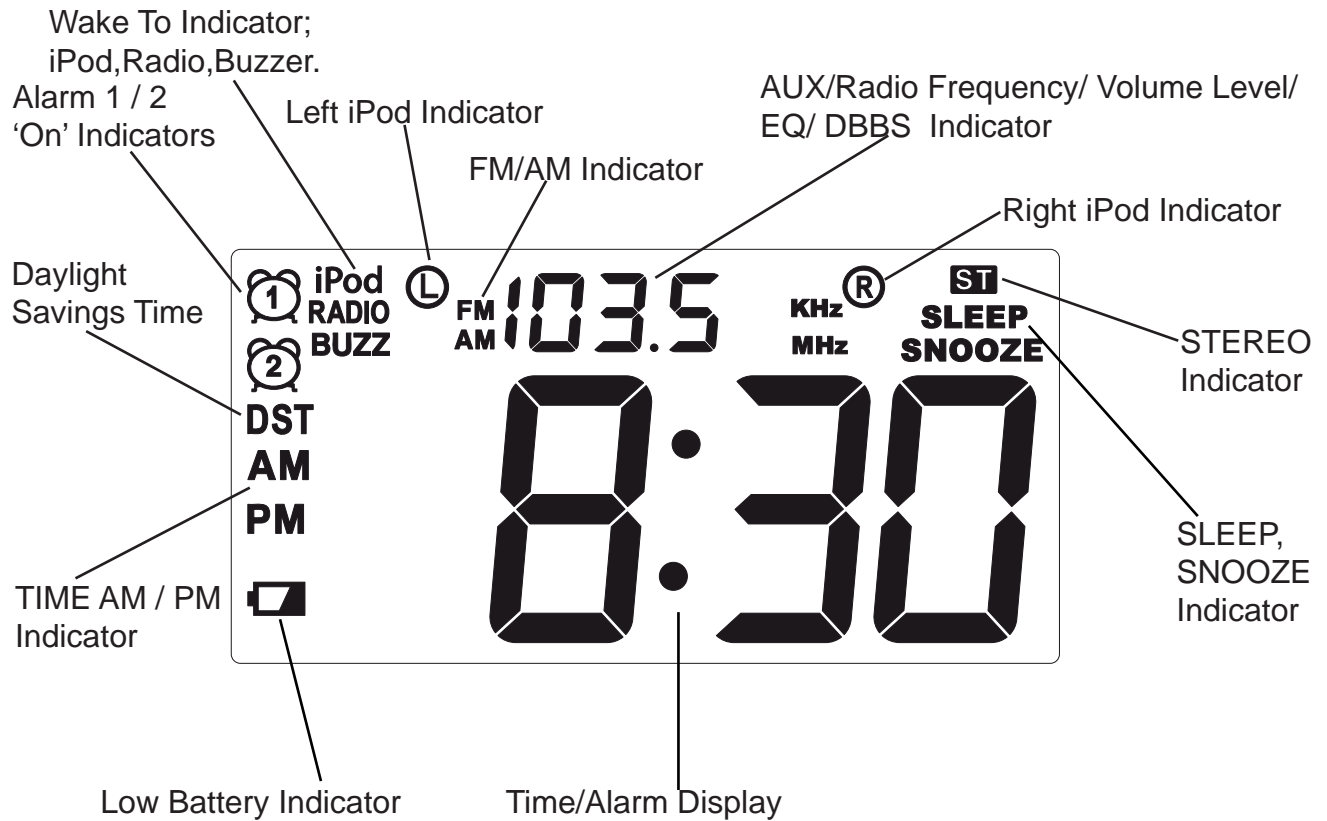


REMOTE CONTROL

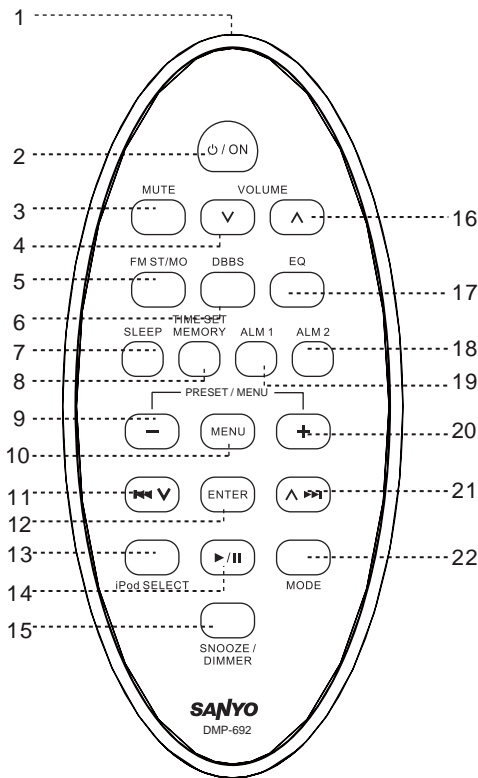

- 1 . Remote Control Transmitter
- 2 . **STANDBY/ON** Button
- 3 . **MUTE** Button
- 4 . **VOLUME** ▾ Button
- 5 . **FM ST/MO** Button
- 6 . **DBBS** Button
- 7 . **SLEEP** Button
- 8 . **TIME SET / MEMORY** Button
- 9 . **PRESET / MENU -** Button
- 10 . **MENU** Button
- 11 . **TUNE / SKIP** ◀◀ ▾ Button
- 12 . **ENTER** Button
- 13 . **iPod SELECT** Button
- 14 . **PLAY/PAUSE** ▶/|| Button
- 15 . **SNOOZE / DIMMER** Button
- 16 . **VOLUME** ▲ Button
- 17 . **EQ** Button
- 18 . **ALM 2** Button
- 19 . **ALM 1** Button
- 20 . **PRESET / MENU +** Button
- 21 . **TUNE / SKIP** ▲ ▶▶ Button
- 22 . **MODE** Button

Using The Remote Control


The CR2032 lithium battery is already installed in the remote control. Pull out the small mylar insulation tab as shown in the illustration to begin using the remote control.

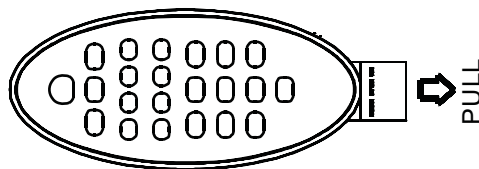

To use the remote controller, point the remote control transmitter on the remote control toward the remote control receiver on the front panel of the main unit and press the desired button. The effective range of the remote controller is approximately 20 feet. Please note that bright sunlight or artificial light may interfere with the proper operation of the remote control.

Battery Replacement

 When the remote operation becomes weak or intermittent, it is time to replace the remote control battery. Pull out the battery holder, remove the old battery and install a new CR2032 battery in the holder as shown in the illustration. Slide the holder back into the remote control. **NOTE:** If the battery is installed incorrectly the remote control will not work.



OPERATING INSTRUCTIONS

- Make sure that you have fully extended the FM antenna wire.
- Be sure to connect the external AM Loop Antenna to the AM Antenna Jack on the back panel if you are planning to listen to AM radio stations (refer to page 17 for connection information) .
- Make sure you have removed the mylar insulation tab from the remote control.
- Make sure that the system is connected to an AC outlet that is always “live”.
- Do not connect the system to an AC outlet controlled by a wall switch.

General Controls

Most of the main functions of this system can be operated by the controls on the top panel of the main unit, or by the buttons on the remote control. If a specific function can only be operated by the remote control, or by the top panel controls, this will be clearly indicated in the instructions.

When operating this system with the remote control, make sure that the IR (Infrared) transmitter on the front of the remote control is pointed at the remote sensor on the front panel of the main unit.

The effective operating range of the remote control is approximately 20 feet. Please note that bright sunlight or room lighting may interfere with the remote control operation. If the remote control is not operating properly, try reducing the brightness of the room or moving closer to the main unit. If this does not solve the problem, it may be time to change the remote control battery.

CONNECTING EXTERNAL DEVICES


Auxiliary Input Jack

This system includes an AUX IN Jack to allow you to connect external audio equipment and listen to the sound from the external equipment through the speakers of this system.

To listen to the external audio source:

- Connect the external audio equipment to AUX IN jack on the rear panel of the system as shown below. The connection cable is not included:

Select the **AUX** mode by repeatedly touching the **MODE** button on the top panel or by repeatedly pressing the **MODE** button on the remote control until the “AUX” indicator appears above the time display.

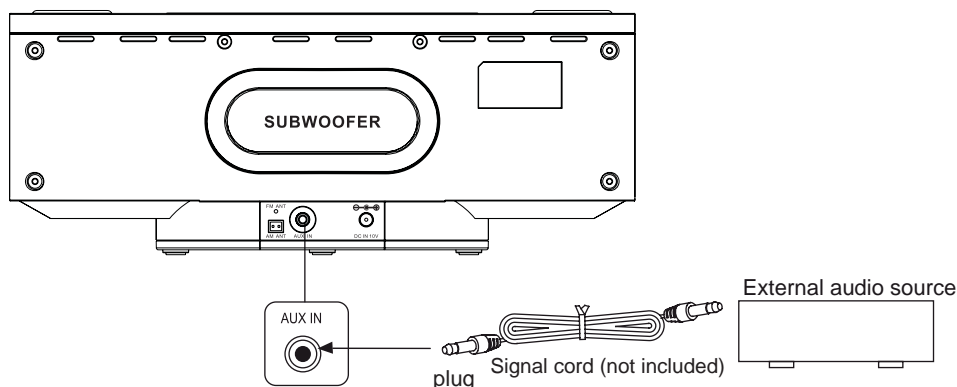

SETTING & BASIC OPERATION

Sensor-Touch Control Information

All of the controls on the top panel of the main unit, with the exception of the STANDBY/ON control and the iPod SELECT control, are special 'Sensor-Touch' controls. There are no buttons to 'push'. When you softly touch one of these 'buttons', it will flash 3 times to confirm it understood the command, and then the system will react accordingly.

Daylight Saving / Standard Time Selection

Note: This adjustment can only be made when the system is in the Standby Mode.

If you are currently observing Daylight Saving Time you should make this adjustment before you set the actual time. If you are currently observing Standard Time you do not need to make this adjustment now. Wait until the beginning of Daylight Saving Time.

1. With the system in the Standby mode, touch and hold the MODE control on the top panel or press and hold the MODE button on the remote control until the number "1" will briefly appear above the time display and the DST indicator also appears. The display will advance by one hour. After a few seconds the number "1" indicator disappears but the DST indicator remains in the display to confirm that the clock is showing Daylight Saving Time.



2. At the end of Daylight Saving Time touch and hold the MODE control on the top panel or press and hold the MODE button on the remote control. Until the number "0" will briefly appear above the time display. The display will back up by one hour. After a few seconds the number "0" indicator and the DST disappears to confirm that the clock is showing Standard Time.



SETTING & BASIC OPERATION

Setting The Clock

When the system is connected to the 120V 60Hz AC Outlet for the first time, "AM 12:00" will flash on the display.



Important: Do not press the STANDBY/ON button to turn the system 'On'. The clock can only be set when the system is in the Standby Mode.

1.) Touch and hold the TIME SET control on the top panel, or depress and hold the TIME SET button on the remote control until only the "Hour" digits are flashing.

2.) Touch the **TUNE/SKIP** ∇ / \blacktriangle Buttons on the top panel, or press the \blacktriangleright / \blacktriangleleft Buttons on the remote control to set the correct hour. Be sure to observe the AM/PM indicators to confirm that the hour is set correctly.



3.) Touch the **TIME SET** button on the top panel or depress the **TIME SET** button on the remote control then the "Minute" digits are flashing. Press the \blacktriangleright / \blacktriangleleft buttons on the remote control or touch the **TUNE/SKIP** ∇ / \blacktriangle buttons on the top panel to set the correct minute.



4.) When the correct time appears on the display, touch the **TIME SET** button on the top panel or press the **TIME SET** button on the remote control once more. The display stops flashing and the clock begins to run.



SETTING & BASIC OPERATION

Volume Controls

To increase or decrease the system volume, press the VOLUME \vee or \wedge button on the remote control or VOLUME + or - on the top panel.

The Volume Level Indicator will appear on the display when you change the volume level.

The level indicator ranges from "00" (Minimum) to "30" (Maximum).

If the volume level less than VOL 24, the system remembers the volume level when the power is switched 'off' and automatically returns to the same level when the power is switched 'on' again.

If the volume level over VOL 24, When the power is switched 'off' and automatically returns to the default level(VOL 15) when the power is switched 'on' again.




EQ (ELECTRONIC Preset Equalizer)(On Remote Control Only)

The preset equalizer allows you to adjust the sound characteristic for the most popular types music.

Press the EQ button on the remote control to cycle through the following equalization modes:

→ EQ1(FLAT) → EQ2(CLASSIC) → EQ3(ROCK) → EQ4(POP) → EQ5(JAZZ) →

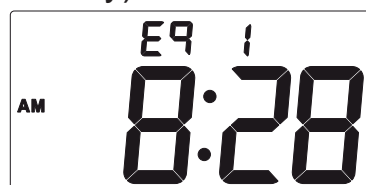


The appropriate EQ indicator briefly appears in the display to confirm your selection.

The system remembers the EQ setting when the power is switched 'Off' and returns to the same setting when the power is switched 'On' again.

DBBS (Dynamic Bass Boost) Control(On Remote Control only)

Press the DBBS button on the remote control to increase the bass response. Press again to cancel the Bass Boost function.

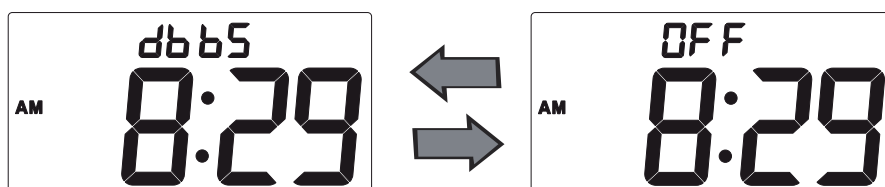

MUTE Button (On Remote Control Only)

Press the MUTE button on the remote control to shut off the speakers temporarily, for example, to answer the telephone.

The sound stops and the Volume Level indicator begins flashing in the display.



Press the MUTE button again to cancel the mute function and restore the sound.

The mute function will also be cancelled automatically by pressing the VOLUME \vee or \wedge button on the remote control or touch the VOLUME + or - on the top panel.

RADIO OPERATION

- 1.) Press the **STANDBY/ON** button on the top panel or on the remote control to turn the system 'On'. The initial default Mode for this system is the iPod function. The "iPod®" indicator will flash above the time display.



- 2.) Touch the **MODE** button on the top panel or press the **MODE** button on the remote control until a FM or AM frequency appears above the time display.



- 3.) Tune to the desired station as follows:

Automatic Tuning

Press and hold the **◀◀ / ▶▶** buttons on the remote control or touch the **TUNE/SKIP** **∇ / ▲** buttons on the top panel until the frequency display starts to change, then release the buttons. The Tuner will search up or down the band for the next strong signal and stop on that station.

Manual Tuning

Repeatedly press the **◀◀ / ▶▶** buttons on the remote control or touch the **TUNE/SKIP** **∇ / ▲** buttons on the top panel until the display shows the frequency of the desired station. Note: Use the Manual Tuning method to tune to stations with weaker signals that may be bypassed during Automatic Tuning.

- 4.) If you tuned to a FM Stereo station the Stereo (ST) indicator will appear in the display. If FM stereo reception is noisy or weak, press the **FM ST/MO** button on the remote control to select the FM Mono mode. This will usually improve the reception but the sound will no longer be in stereo.




- 5.) When you finished listening press the **STANDBY/ON** button on the top panel or on the remote control to turn the system 'Off'. The radio station frequency disappears from the display.

RADIO OPERATION


Hits For Better Reception

FM: The FM lead wire antenna on the back panel should be extended to its full length.

You may also have to vary the direction of this antenna until you find the position that provides the best reception.

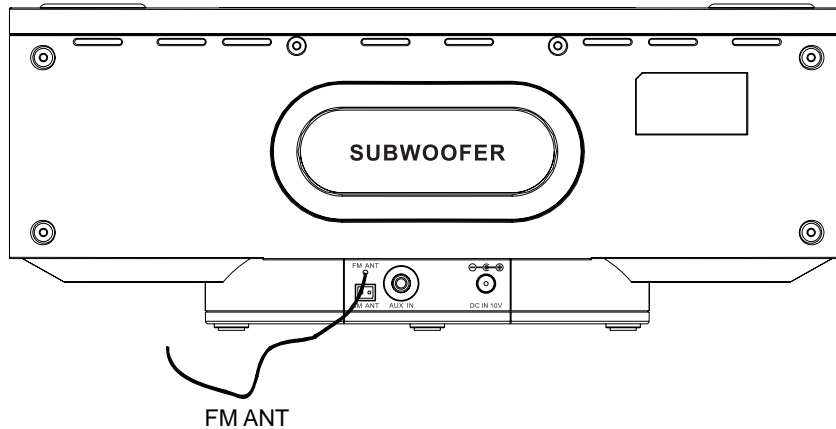

AM: Insert the small black plug at the end of the AM Loop antenna wire into the AM ANT jack on the back panel as shown in the illustration.

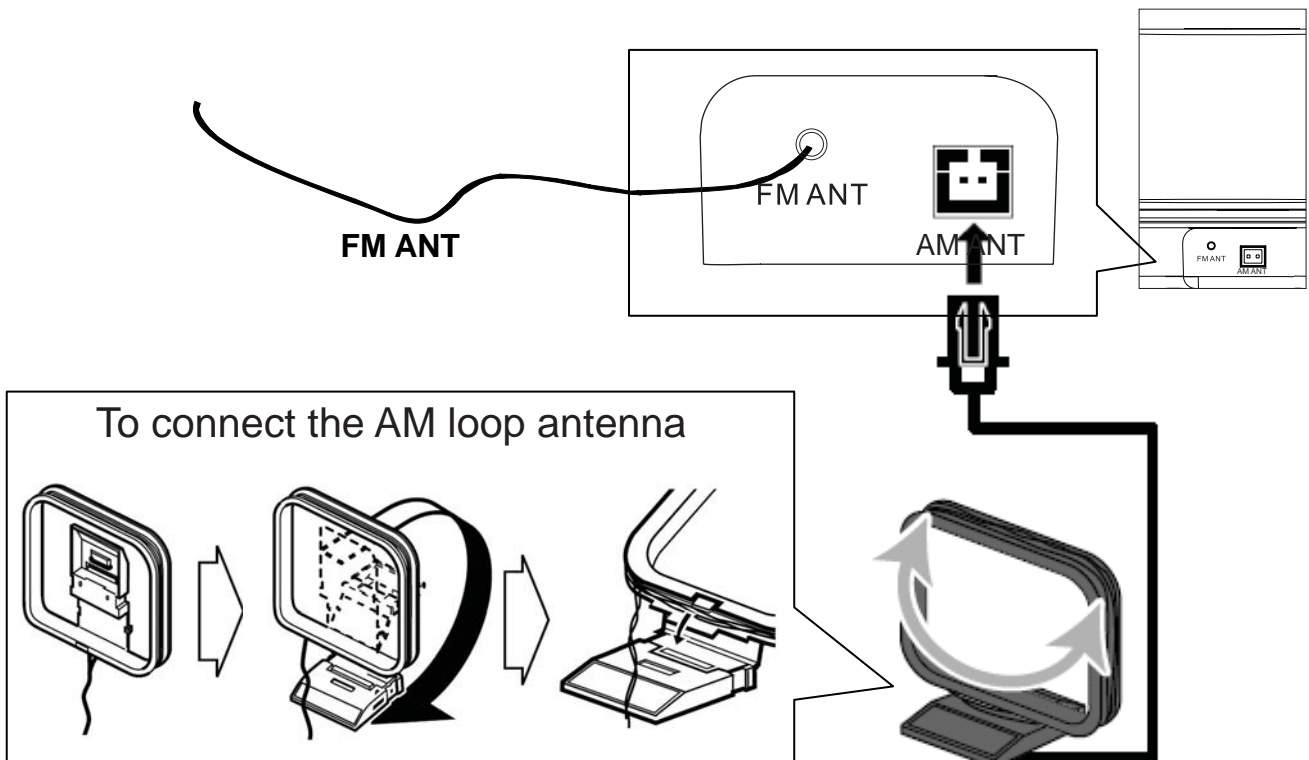

PRESETTING STATIONS IN THE TUNER MEMORY

Up to 40 stations (20 AM / 20 FM) can be stored in the tuner memory for easy recall at any time. Use either the Automatic or Manual tuning methods described on page 16 to tune to the first station to be stored in memory. (Example “**FM 103.5 MHz**”)

- 1.) When the desired station frequency appears in the display, press and release the **TIME SET / MEMORY** button on the remote control or touch **TIME SET / MEMORY** on the top panel. The **P – 01** (Preset Memory #1) indicator will begin flashing in place of the radio frequency display.



To enter your station in Preset Memory #1, press the **TIME SET / MEMORY** button on the remote control or touch **TIME SET / MEMORY** control on the top panel again. The **P – 01** will stop flashing and remain on the display for 5 seconds, and then the display will return to the selected radio frequency. Your selected station has now been entered in Preset Memory #1.



Note: You must press the **TIME SET / MEMORY** button while the memory indicator is flashing in order to enter the station in memory. If the memory indicator stops flashing the station will not be entered in the memory.

- 2.) Tune to the next station that you want to memorize and when that station appears in the display press the **TIME SET / MEMORY** once. The **P – 01** indicator begins flashing. Press the **PRESET / MENU +** or **-** button on the remote control or touch **PRESET / ALM1 -** or **PRESET / ALM2 +** control on the top panel to select a different preset memory number, and then press the **TIME SET / MEMORY** button once more to enter your station in the selected preset memory number.



- 3.) Repeat Step 2, choosing a different preset memory number each time until you have entered up to 20 stations on one band. You may then select the AM band and follow the same procedure to preset up to 20 AM stations in the tuner memory.



PRESETTING STATIONS IN THE TUNER MEMORY

Recalling Preset Stations

Simply press the **PRESET / MENU +** or **-** buttons on the remote control or touch the **PRESET / ALM1 -** or **PRESET / ALM2 +** control on the top panel to scroll forward or backward through the preset station memories.

Changing Preset Stations

Tune to the new station you want to memorize, press the **TIME SET / MEMORY** button on the remote control or touch the **TIME SET / MEMORY** control on the top panel, then press the **PRESET / MENU +** or **-** buttons on the remote control or touch the **PRESET / ALM1 -** or **PRESET / ALM2 +** control on the top panel to select the memory number you wish to change. When that memory number is flashing in the display, press the **TIME SET / MEMORY** button once. The new station is entered in the memory and the previously memorized station is erased.

***Important:** The back-up batteries will maintain the preset tuner memories in the event of a power interruption. However if the back up batteries are not installed, or exhausted, and the Adaptor is disconnected from the wall outlet or the plug is removed from the back of this system, the preset tuner memories will be erased. It will be necessary to re-enter the stations in the preset tuner memories when power is restored.*

SLEEP TIMER

This system includes a programmable Sleep Timer that allows you to fall asleep to between 10 and 120 minutes of music and then turns the unit to standby automatically.

To operate the sleep timer:

- 1.) Turn the system 'On' and operate the TUNER function as usual.
- 2.) Press the **SLEEP** button on the remote control or the **SLEEP** control on the top panel.
- 3.) The display will show "**SLEEP 120**" indicating that the sleep timer will shut the power off after 120 minutes.



Repeatedly press the **SLEEP** button to decrease the amount of sleep timer operation.

- 4.) After a few seconds the Sleep Time display disappears and the normal TUNER display returns, but the small **SLEEP** indicator remains in the display. When the Sleep Timer counts down to "00", the unit returns to the Standby (Power 'Off') mode automatically.



Note:

- You can shut the unit off manually before the Sleep Timer counts down to "00" by pressing the **STANDBY/ON** button at any time.

ALARM SETTING

NOTES:

- Use the Remote Control, you can set the Alarms in STANDBY mode or operation mode. (The **ALM1/ALM2** on the top panel can only be set when the system is in the standby mode.)
- When setting the alarm be sure to observe the AM/PM indicators to confirm that you have set the wake-up hour correctly.
- The procedure for setting Alarm 1 and Alarm 2 is the same. The example below is for Alarm 1.


1). Press and hold the **ALM 1** button on remote control or touch and hold the **ALM 1** control on top panel, while the system is in the standby mode, the default alarm time (AM6:00) and the default alarm mode (iPod) begin flashing in the display. Continue holding the **ALM 1** button until only the **HOUR** digits are flashing.



2). Press the **◀◀** or **▶▶** buttons on the remote control or touch the **TUNE/SKIP** **∨** or **∧** control on the top panel repeatedly to set the display to the desired wake-up Hour, AM or PM.



3). Press the **ALM 1** button again. The Hour digits stop flashing and the Minute digits begin flashing.

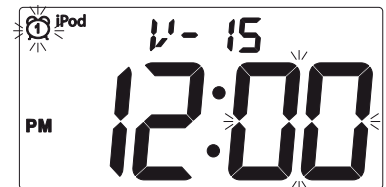

4). Press the **◀◀** or **▶▶** buttons on the remote control or touch the **TUNE/SKIP** **∨** or **∧** control on the top panel repeatedly to set the display to the desired wake up minutes.



5). Press the **ALM 1** button once more to select the wake-up Alarm Mode (iPod, Radio or Buzzer). One of the 3 Alarm Mode indicators will be flashing in the display. Press the **◀◀** or **▶▶** buttons on the remote control or touch the **TUNE/SKIP** **∨** or **∧** control on the top panel repeatedly to select the desired wake up mode, iPod, Radio, or Buzzer (BUZZ)



6). Press the **ALM 1** button once more. If you selected either the iPod or Radio Alarm Mode, the Volume Level indicator begins flashing. Press the **◀◀** or **▶▶** buttons on the remote control or touch the **TUNE/SKIP** **∨** or **∧** control on the top panel – not the Volume **∨** / **∧** buttons - repeatedly to set the desired wake up volume level. Note: if you selected the wake up to Buzzer alarm mode the volume level is fixed and cannot be adjusted.



7). When all settings are completed press the **ALM 1** button once more to exit the setting mode and activate Alarm 1. The display will continue to show all of your alarm settings for a few seconds and then return to the current time. However the Alarm 1 indicator (🔔) will remain in the display to confirm that the alarm is active.



ALARM SETTING

8). At the selected wake-up time the system will turn on to the mode you selected. The alarm will continue for 1 hour and then shut off automatically and reset itself for the same time on the following day. Note: If you selected the wake to iPod mode but there is no iPod docked at the wake up time, the system will default to the wake to Buzzer mode automatically.

NOTE: If you selected the RADIO alarm mode, at the selected wake-up time the system will turn on to the last station you have listened. If you selected the wake to iPod or radio mode, and the system is in iPod or radio operation mode at the wake up time, the system will default to the wake to Buzzer mode automatically.

9). To shut the alarm off sooner, press the STANDBY/ON (Power “Off”) button at any time.

To check the alarm settings at any time, press the appropriate **ALM 1** or **ALM 2** button. The display will briefly show the current alarm settings for a few seconds and then return to the correct time, but the Alarm indicator will remain in the display indicating that the alarm is active. To deactivate the alarm press the appropriate **ALM 1** or **ALM 2** button once more. The Alarm indicator disappears and the alarm is canceled.



Snooze / Display Dimmer Control

When the alarm turns the system ‘On’ to wake you, touch the **SNOOZE / DIMMER** area on the top panel or press the **SNOOZE / DIMMER** button on the remote control. The alarm will stop for 9 minutes and then turn ‘On’ again. This action can be repeated continuously, but if you don’t press **SNOOZE / DIMMER** button again, after one hour the alarm will not turn ‘On’ again. The **SNOOZE** indicator appears in the display during Snooze Timer operation.” To switch **SNOOZE** function off, you can press **STANDBY/ON** button.

During normal operation touch the **SNOOZE / DIMMER** area on the top panel or press the **SNOOZE / DIMMER** button on the remote control to control the brightness of the display. There are 6 levels of brightness that you can select. If you continue to press this control the display will return to full brightness.

iPod/iPhone OPERATION


This SANYO system includes two separate docking stations so that you can dock and charge two separate iPod models, or one iPod and one iPhone model simultaneously. Since this model is 'Works With iPhone' certified it is not necessary to place your iPhone in the Airplane mode to avoid audio interference. You will be able to make and receive calls, without interference, while the system is in operation.

Use the left side dock for any docking iPod model. Use the right side dock for any docking iPod model or any iPhone model.

IMPORTANT NOTES:

- A. *The right side dock labeled iPod/iPhone has priority in this model. If you are playing an iPod in the left side dock labeled iPod and you insert an iPhone or iPod in the right side dock, the system will automatically switch to the iPod or iPhone in the right side dock.*
- B. *When you dock an iPhone or certain newer iPod models in either dock there may be a delay of several seconds before the system recognizes the device and the main menu is displayed. This is because the system and the docked device must go through an 'Authentication Process' before the docked device can accept any commands. THIS IS NORMAL AND NOT AN INDICATION OF ANY PROBLEM WITH YOUR SYSTEM.*

This system is supplied with 6 different iPod adaptor/inserts intended to insure that older iPod models fit properly in the docking area. If your iPod was supplied with a docking adaptor at the time of purchase, that adaptor will fit properly into the docking area of this system. If you have an older iPod model that was not supplied with a docking adaptor, please select the appropriate adaptor from the chart below. Each adaptor is identified by the letters "A" through "F" on the bottom of the adaptor. Select the adaptor with the letter that corresponds to your iPod model. Position the adaptor in the docking area as shown and make sure that it 'locks' in place, then place your iPod into the adaptor and make sure that the iPod connector on this system is fully inserted into the slot on the bottom of your iPod. When properly docked your iPod should be 'leaning backward' slightly on a 15 degree angle. DO NOT ATTEMPT TO "STRAIGHTEN" YOUR IPOD. THIS COULD RESULT IN DAMAGE TO THE DOCKING CONNECTOR OR DAMAGE TO YOUR IPOD.

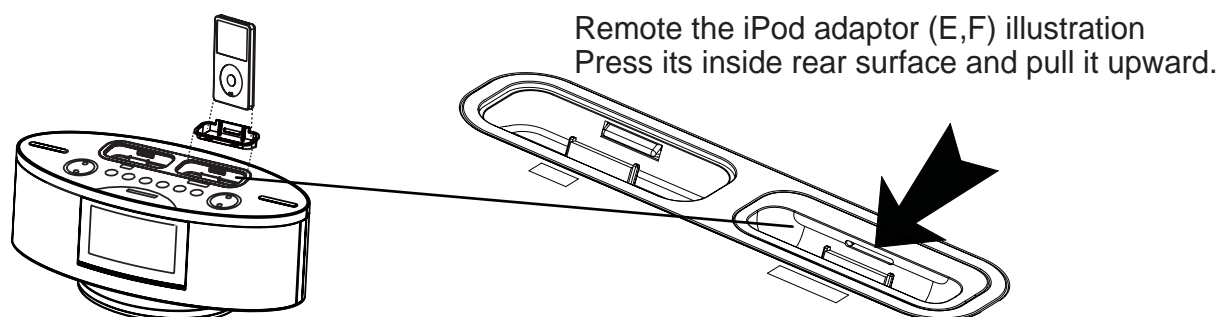

iPod / iPhone OPERATION

Choosing The Correct Adaptor




When connecting an iPod / iPhone to this iPod Dock, please ensure that the correct adaptor plate is used. FAILURE TO DO SO MAY RESULT IN DAMAGE TO THE iPod / iPhone.

This iPod Dock comes with 6 removable dock adaptors. Using the correct adaptor ensures the proper fit for your iPod / iPhone and helps to reduce the stress on the connector when operating the iPod / iPhone.

To place a dock adaptor:

1. Refer to the compatibility table below and select the correct dock adaptor for the iPod / iPhone.
2. Place the proper adaptor into the dock and press it into position. The adaptor will only go in one way. The iPod dock connector should fit through the opening in the bottom of the adaptor.
3. Carefully align and then gently insert the iPod / iPhone into the dock. (The iPod / iPhone must not be in a case or "SKIN")
4. To remove/replace a dock adaptor, first remove the iPod / iPhone, then grip the adaptor and pull gently upwards.

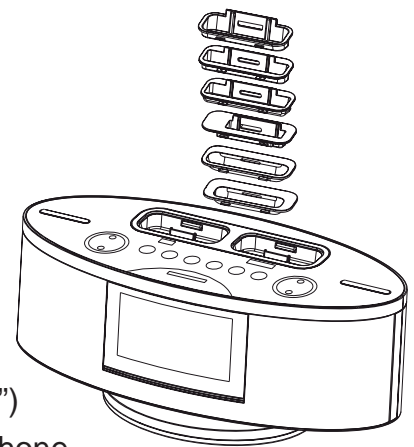

Charging your iPod / iPhone





















Note: Please make sure you are using the correct insert for your iPod / iPhone and that it is properly docked into this unit.

FAILURE TO DO SO MAY DAMAGE THE iPod / iPhone.

When an iPod / iPhone is inserted into the dock, it will go to standby mode then turn off. While the iPod / iPhone is docked in the system, it will recharge (until fully charged). Please note that older 3rd generation iPod cannot be charged by this unit.

NOTE: In order to avoid interfering with the reception, the iPod / iPhone will not be charged in the TUNER mode(FM / AM).

Dock Adaptor Compatibility

| | | A  | B  | C  | D  | E  | F  |
|---|-------|---|---|---|--|---|---|
| 3G iPhone  | 8GB | | X | | | | |
| | 16GB | | X | | | | |
| 3GS iPhone  | 16GB | | X | | | | |
| | 32GB | | X | | | | |
| iPhone  | 4GB | | X | | | | |
| | 8GB | | X | | | | |
| | 16GB | | X | | | | |
| 4G nano  | 8GB | | | | X | | |
| | 16GB | | | | X | | |
| iPod touch  | 8GB | | | | | | X |
| | 10GB | | | | | | X |
| 3G nano  | 4GB | | | | | X | |
| | 8GB | | | | | X | |
| iPod classic  | 80GB | | | X | | | |
| | 120GB | | X | | | | |
| | 160GB | | X | | | | |
| 2G nano  | 2GB | | | | X | | |
| | 4GB | | | | X | | |
| | 8GB | | | | X | | |
| 5G iPod (with video)  | 30GB | | | X | | | |
| | 60GB | | X | | | | |
| | 80GB | | X | | | | |
| iPod nano  | 2GB | | | | X | | |
| | 4GB | | | | X | | |
| iPod photo  | 20GB | | X | | | | |
| | 30GB | | X | | | | |
| | 40GB | X | | | | | |
| | 60GB | X | | | | | |
| 4G iPod  | 20GB | | X | | | | |
| | 40GB | X | | | | | |
| iPod mini  | 4GB | | X | | | | |
| | 6GB | | X | | | | |
| 3G iPod (Play only will not charge)  | 10GB | | X | | | | |
| | 15GB | | X | | | | |
| | 20GB | | X | | | | |
| | 30GB | X | | | | | |
| | 40GB | X | | | | | |

iPod/iPhone OPERATION CONTROLS

▶/II(Play/Pause) – Touch this area on the top panel or Press this button on the remote control to begin playback on your iPod/iPhone. Press again to Pause playback.

^ / v **TUNE/SKIP** buttons on Main Unit – During playback press to skip forward or backward to the next or previous track.

▶▶ / ◀◀ Skip Back/Forward buttons on Remote control - During playback press to skip forward or backward to the next or previous track.

iPod SELECT – Touch or press this button to switch between the iPod in the left dock and the iPod or iPhone in the right dock. Indicators on the top panel and in the main display will show which device has been selected.

MENU button (Remote control Only) – Press this button to access the Menu of the iPod or iPhone which is playing. This button operates exactly like the Menu button on the iPod itself.

+ / - (Plus/Minus) buttons on Remote Control – After pressing the MENU button to access the iPod/iPhone Menu, press the + or - buttons to move up(+) or down(-) within the Menu display.

ENTER button (Remote Control Only) – After selecting the desired Genre, Album, Song, etc in the Menu display with the + or - buttons, press the **ENTER** button to Enter (Open) that Genre, Album, or begin playback of the selected song.

- 1). If necessary, press the STANDBY/ON button on the top panel or the remote control to turn the system 'On'.
- 2). If necessary, touch the MODE control on the top panel or press the MODE button on the remote control to select the iPod mode. The word "iPod" begins flashing above the time display and the "R" (Right) iPod indicator appears
- 3). Make sure that you have inserted the correct adaptor into the right dock and then insert your iPod or iPhone into the adaptor. The word "iPod" stops flashing and remains 'On'. Your iPod/iPhone display will come on. If you were playing music on your iPod/iPhone before inserting in the dock your iPod/iPhone may change to pause mode, but it may take several seconds for your iPod or iPhone to go through the authentication process. If your iPod or iPhone was in the Pause mode when inserted into the dock it may remain in the Pause mode. In that case touch the Play/Pause (▶/II) area on the top panel or press the Play/Pause (▶/II) button on the remote control to release the Pause mode and resume playback.
- 4). To skip forward or backward to different tracks, touch the **TUNE/SKIP** ^ / v controls on the top panel or press the ▶▶ / ◀◀ buttons on the remote control.

iPod/iPhone OPERATION CONTROLS

- 5). The MENU button on the remote control works the same way as the MENU button on your iPod. Press the MENU button repeatedly to access the Main Menu of your iPod. Press the + or - buttons on the remote control to navigate Up or Down through the displayed Menu list. When the desired Genre, Artist, Album, or Song is 'highlighted' on your iPod Menu display, press the ENTER button on the remote control to 'Enter' or 'Select' the highlighted item. If the highlighted item is a specific song, pressing the ENTER button will begin playback of that song.
- 6). If you have two iPod models, or an iPod and an iPhone docked at the same time you can switch between the two devices by pressing the iPod SELECT button on the top panel or the remote control.
- 7). To pause iPod playback touch the ►/|| control on the top panel or press the ►/|| button on the remote control. Press again to release pause and resume iPod playback.
- 8). To stop iPod playback touch and hold the ►/|| control on the top panel or depress the ►/|| button on the remote control until your iPod shuts off and enters the 'Charging' mode. However please note that the system power remains 'On'.
- 9). To shut the system 'Off' completely, press the **STANDBY/ON** button on the top panel or remote control. The control panel lighting turns 'Off' and any iPod or iPhone in the docking area will shut off and enter the Charging mode.

TROUBLESHOOTING GUIDE

| Symptom | Possible Cause | Solution |
|--|---|--|
| Radio | | |
| Noise or sound distorted on FM or AM broadcasts. | Station not tuned properly for FM or AM. | Retune FM or AM broadcast station. |
| | FM: Wire aerial is not positioned correctly . | Extend FM wire aerial. |
| | Loop aerial is not positioned correctly. | Reposition so that the best reception is obtained. |
| FM STEREO indicator does not light. | FM station is mono or station signal is weak. | Extend FM aerial. Try other strong stations. |
| AM or FM, no sound. | Function is not set to Tuner. | Press MODE button to select Tuner function. |
| | Volume at minimum. | Increase Volume. |
| iPod Player | | |
| Unit does not respond (no power) | AC adaptor is not plugged into a wall outlet or the connector is not plugged into the DC IN jack on the back of the unit. | Plug the AC adaptor into a wall outlet and plug the connector into the DC IN jack on the unit. |
| | Using no or wrong iPod insert | Make sure the dock insert is the proper fit for the iPod. |
| iPod does not dock properly | iPod did not install properly | Remove the iPod from the dock and check for obstruction on the connections in the dock and on the iPod,Then reseal it in the dock. |
| iPod does not respond to the unit. | iPod is not installed properly | Remove the iPod from the dock and check for obstruction on the connections in the dock and on the iPod,Then reseal it in the dock. |
| | iPod is locked up | Please make sure your iPod is working properly before docking into the unit. Please refer to the iPod manual for details. |
| | Using first or second generation iPod, iPod Shuffle or other devices. | This unit cannot control those iPod or other devices. |
| iPod did not charge up | iPod is not installed properly | Remove the iPod from the dock and check for obstruction on the connections in the dock and on the iPod,Then reseal it in the dock. |
| | iPod is locked up/frozen | Please make sure your iPod is working properly before docking into the unit. Please refer to the iPod manual for details. |
| | iPod battery has problem | |

Remarks:

If troubleshooting(see above)does not eliminate the problem, disconnect the unit from the mains power and re-connect after a few seconds. Resetting causes the unit to restore its factory default setting and results in all the setting made by the user being deleted.

TECHNICAL SPECIFICATION

1. General

| | |
|-------------------------|--|
| Power requirements | AC Adaptor Input: AC 100-240V ~ 50/60Hz Output: DC 10V 2.4A |
| Power consumption | 21W |
| Dimensions of main unit | 320mm(W) x 136.7mm(D) X 122.5mm(H) |
| Weight of main unit | 1.35 Kg |

2. Amplifier

| | |
|--------------|----------------|
| Power Output | 5W x 2 THD 10% |
|--------------|----------------|

3. Tuner

| | |
|-----------------|-----------------------|
| AM Tuning range | 520 KHz to 1710 KHz |
| FM Tuning range | 87.5 MHz to 108.0 MHz |

4. Speaker system

| | |
|-----------|---|
| Impedance | 8 Ω 2.5" Speaker X2 + passive subwoofer panel system |
|-----------|---|

5. AUX IN














 
 
 


| | |
|-------------|---------------|
| Input | Φ 3.5mm |
| Max voltage | 1 V |
| Impedance | 47 K Ω |

Specifications subject to change without notice.

THE UNIT SUPPORTS THE LISTED iPods / iPhones

iPod / iPhone charge and operation only

iPods / iPhones shown are not included

| | | |
|--|--|---|
|  <p>Made for iPod mini (4GB, 6GB only)</p> |  <p>Made for iPod (4th generation) (20GB only)</p> |  <p>Made for iPod (4th generation) (40GB only)</p> |
|  <p>Made for iPod with color display (4th generation) (20GB, 30GB only)</p> |  <p>Made for iPod with color display (4th generation) (40GB, 60GB only)</p> |  <p>Made for iPod with video (5th generation) (30GB only)</p> |
|  <p>Made for iPod with video (5th generation) (60GB, 80GB only)</p> |  <p>Made for iPod nano (1st generation) (1GB, 2GB, 4GB only)</p> |  <p>Made for iPod nano (2nd generation) (aluminum) (2GB, 4GB, 8GB only)</p> |
|  <p>Made for iPod nano (3rd generation) (video) (4GB, 8GB only)</p> |  <p>Made for iPod nano (4th generation) (8GB, 16GB only)</p> |  <p>Made for iPod classic (80GB, 160GB only)</p> |
|  <p>Made for iPod classic (2nd generation) (120GB only)</p> |  <p>Made for iPod touch (8GB, 16GB, 32GB only)</p> |  <p>Made for iPod touch (2nd generation) (8GB, 16GB, 32GB only)</p> |
|  <p>Made for iPhone (4GB, 8GB, 16GB only)</p> |  <p>Made for 3G iPhone (8GB, 16GB only)</p> |  <p>Made for 3GS iPhone (16GB, 32GB only)</p> |

**SANYO AUDIO
LIMITED WARRANTY**

OBLIGATIONS

In order to obtain warranty service, the product must be delivered to and picked up from an authorized Sanyo factory service center at the user's expense, unless specifically stated otherwise in this warranty. The names and addresses of Authorized Sanyo Service Centers may be obtained by calling the toll-free number listed below.

For product operation, authorized service center referral or service assistance, call
CUSTOMER INFORMATION: (USA 1-800-421-6382) (Mexico 001-800-726-9775)
Weekdays 7:30 A.M. – 5:00 P.M. Pacific Time
(Canada 1-800-263-2244 -- Weekdays 8:30 A.M. – 5:00 P.M. Eastern Time)

THIS WARRANTY IS VALID ONLY ON SANYO PRODUCTS PURCHASED OR RENTED AND USED IN CANADA OR IN MEXICO OR IN THE UNITED STATES OF AMERICA, EXCLUDING ALL U.S. TERRITORIES AND PROTECTORATES. THIS WARRANTY IS VALID ONLY IN THE COUNTRY IN WHICH THE PRODUCT WAS PURCHASED. THIS WARRANTY APPLIES TO THE ORIGINAL RETAIL USER AND DOES NOT APPLY TO PRODUCTS USED FOR ANY INDUSTRIAL, PROFESSIONAL OR COMMERCIAL PURPOSE. THE ORIGINAL DATED BILL OF SALE, SALES SLIP OR RENTAL AGREEMENT MUST BE SUBMITTED TO THE AUTHORIZED SANYO SERVICE CENTER AT THE TIME WARRANTY SERVICE IS REQUESTED. For service in Mexico, in case there is no service center in the city where the product was purchased, user shall send the product, in accordance with the instructions provided by SNA's authorized servicer, to the nearest service center freight collect. Subject to the OBLIGATIONS above and EXCLUSIONS below, SANYO North America Corporation, Consumer Solutions Division (SNA) warrants this SANYO product against defects in material and workmanship for the periods of LABOR and PARTS specified below. SNA will repair or replace (at its option) the product and any of its parts which fail to conform to this warranty. The warranty period commences on the date the product was first purchased or rented at retail.

| | |
|---------|---------|
| LABOR | PARTS |
| 90 DAYS | 90 DAYS |

For Product Purchased in Canada: Please visit ca.sanyo.com for up-to-date-Warranty details.

EXCLUSIONS

This warranty does not cover (A) the adjustment of customer-operated controls as explained in the appropriate model's instructions manual, or (B) the repair of any product whose serial number has been altered, defaced or removed.

This warranty shall not apply to the cabinet or cosmetic parts, antenna, knobs, batteries or routine maintenance. This warranty does not apply to uncrating, set up, installation, removal of the product for repair or reinstallation of the product after repair. This warranty does not apply to repair replacements necessitated by any use beyond the control of SNA including, but not limited to, any malfunction, defect or failure caused by or resulting from unauthorized service or parts, improper maintenance, operation contrary to furnished instructions, shipping or transit accidents, modifications or repair by the user, abuse, misuse, neglect, accident, incorrect power line voltage, fire, flood, or other Acts of God, or normal wear and tear.

The foregoing is in lieu of all other warranties and SNA does not assume or authorize any party to assume for it any other obligation or liability.

THE DURATION OF ANY WARRANTIES WHICH MAY BE IMPLIED BY LAW (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS) IS LIMITED TO THE TERM OF THIS WARRANTY. IN NO EVENT SHALL SNA BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM OWNERSHIP OR USE OF THIS PRODUCT, OR FOR ANY DELAY IN THE PERFORMANCE OF ITS OBLIGATIONS UNDER THIS WARRANTY DUE TO CAUSES BEYOND ITS CONTROL.

IN THE UNITED STATES AND CANADA, SOME STATES AND PROVINCES, RESPECTIVELY, DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OR LIMITATION OF CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE, FROM PROVINCE TO PROVINCE, AND FROM COUNTRY TO COUNTRY.

For your protection in the event of theft or loss of this product, please fill in the information below for your own personal records.

Model No. _____

Serial No. _____

(Located on back or bottom side of unit)

Date of Purchase _____

Purchase Price _____

Where Purchased _____

SISTEMAS DE AUDIO SANYO GARANTÍA LIMITADA

OBLIGACIONES

Para poder obtener el servicio de garantía, el producto se debe entregar y recoger en un centro de servicio autorizado del fabricante de Sanyo por cuenta y gasto del usuario, a menos que específicamente se mencione lo contrario en esta garantía. Los nombres y direcciones de los Centros de Servicio Autorizados de Sanyo se pueden obtener llamando sin costo a la línea que se muestra a continuación.

Para obtener información del funcionamiento del producto, de derivación a centros de servicio autorizados o asistencia de servicio, llame a

INFORMACIÓN AL CLIENTE: (EUA 1-800-421-6382) (México 001-800-726-9775)

Días hábiles de 8:00 A. M. a 5:00 P. M. hora del Pacífico

(Canadá 1-800-263-2244 -- Días hábiles de 8:30 A. M. a 5:00 P. M. hora del Este)

LA PRESENTE GARANTÍA ES VÁLIDA ÚNICAMENTE EN LOS PRODUCTOS SANYO COMPRADOS O RENTADOS Y USADOS EN CANADÁ O EN MÉXICO O EN LOS ESTADOS UNIDOS DE AMÉRICA, SIN INCLUIR TODOS LOS TERRITORIOS O PROTECTORADOS DE EUA. ESTA GARANTÍA ES VÁLIDA ÚNICAMENTE EN EL PAÍS EN EL QUE SE COMPRÓ EL PRODUCTO. LA PRESENTE GARANTÍA SE APLICA AL USUARIO AL MENUDEO ORIGINAL Y NO SE APLICA A LOS PRODUCTOS USADOS CON ALGÚN PROPÓSITO INDUSTRIAL, PROFESIONAL O COMERCIAL. SE DEBE ENVIAR LA FACTURA DE VENTA, EL RECIBO DE VENTA O EL CONTRATO DE RENTA ORIGINAL FECHADO AL CENTRO DE SERVICIO AUTORIZADO DE SANYO EN EL MOMENTO EN QUE SE SOLICITE EL SERVICIO DE GARANTÍA. Para obtener servicio en México, en caso de que no haya un centro de servicio en la ciudad en donde se compró el producto, el usuario deberá enviar el producto, de acuerdo con las instrucciones que brinde el prestador del servicio autorizado de SNA, al centro de servicio más cercano mediante envío por cobrar. Sujeto a las OBLIGACIONES que preceden y las EXCLUSIONES que se muestran más adelante, SANYO North America Corporation, División de Soluciones al Consumidor (SNA) garantiza este producto SANYO contra defectos en material y mano de obra durante los periodos de MANO DE OBRA y REPUESTOS que se especifican a continuación. SNA reparará o reemplazará (a su opción) el producto y cualquiera de sus partes que no cumplan con esta garantía. El periodo de garantía comienza en la fecha en que se compró o rentó el producto por primera vez al menudeo.

| MANO DE OBRA | REPUESTOS |
|--------------|-----------|
| 90 DÍAS | 90 DÍAS |

En el caso de producto comprado en Canadá: Visite ca.sanyo.com para obtener detalles de garantía actualizados.

EXCLUSIONES

Esta garantía no cubre (A) el ajuste de controles operados por el cliente como se explica en el manual de instrucciones correspondiente al modelo, o (B) la reparación de un producto cuyo número de serie esté alterado, mutilado o ausente.

La presente garantía no se aplica al gabinete o a las partes cosméticas, la antena, los botones, las baterías o el mantenimiento de rutina. Esta garantía no se aplica durante el desempaque, configuración, instalación o remoción del producto para su reparación o reinstalación después de ser reparado. Esta garantía no se aplica a los reemplazos de reparación que se necesiten para un uso que esté fuera del control de SNA, incluyendo pero no limitado a una avería, defecto o falla causada o que sea resultado del servicio o repuestos no autorizados, mantenimiento inadecuado, operación contraria a las instrucciones provistas, accidentes durante el envío o tránsito, modificaciones o reparación por parte del usuario, abusos, mal uso, negligencia, accidentes, voltaje eléctrico incorrecto, fuego, inundación u otro caso fortuito, así como el uso y desgaste normales.

Lo que antecede es en lugar de todas las demás garantías y SNA no asume ni autoriza a ninguna persona a que asuma por éste una obligación o responsabilidad adicional.

LA DURACIÓN DE ALGUNA GARANTÍA QUE ESTÉ IMPLÍCITA POR LEY (INCLUIDAS LAS GARANTÍAS DE COMERCIABILIDAD E IDONEIDAD) ESTÁ LIMITADA AL PLAZO DE VIGENCIA DE ESTA GARANTÍA. EN NINGÚN CASO SNA SERÁ RESPONSABLE DE DAÑOS Y PERJUICIOS ESPECIALES, INCIDENTALS O RESULTANTES QUE SURJAN DE LA PROPIEDAD O USO DE ESTE PRODUCTO, O DE ALGUNA DEMORA EN LA EJECUCIÓN DE SUS OBLIGACIONES DERIVADAS DE ESTA GARANTÍA DEBIDO A CAUSAS QUE ESTÉN FUERA DE SU CONTROL.

EN LOS ESTADOS UNIDOS Y CANADÁ, ALGUNOS ESTADOS Y PROVINCIAS, RESPECTIVAMENTE, NO PERMITEN PONER UN LÍMITE EN EL TIEMPO QUE DURA UNA GARANTÍA IMPLÍCITA Y/O NO PERMITEN LA EXCLUSIÓN O LIMITACIÓN DE DAÑOS Y PERJUICIOS RESULTANTES, DE MANERA QUE ES POSIBLE QUE LAS LIMITACIONES Y EXCLUSIONES QUE PRECEDEN NO SE APLIQUEN A SU CASO.

LA PRESENTE GARANTÍA LE OTORGA DERECHOS LEGALES ESPECÍFICOS. ES POSIBLE QUE CUENTE CON OTROS DERECHOS, LOS CUALES VARÍAN EN CADA ESTADO, PROVINCIA Y PAÍS.

Para su protección en caso de ocurrir robo o pérdida de este producto, sírvase llenar la información que se le pide a continuación y guárdela en sus archivos personales.

Modelo N.º _____

N.º de serie _____

(se localiza en la parte posterior o el lado inferior de la unidad)

Fecha de compra _____

Precio de compra _____

Lugar en donde efectuó la compra _____

SANYO AUDIO GARANTIE LIMITÉE

ENGAGEMENTS

Afin de bénéficier du service de garantie, l'appareil doit être livré et récupéré d'un Centre de service agréé de Sanyo aux frais de l'utilisateur, sauf stipulation expresse contraire de cette garantie. Les noms et adresses des Centres de service agréés de Sanyo peuvent être obtenus en appelant le numéro sans frais inscrit ci-dessous.

Pour connaître le fonctionnement de l'appareil et obtenir les coordonnées d'un Centre de service agréé ou du service d'assistance, appelez
INFORMATION CLIENTS : (États-Unis 1-800-421-6382) (Mexique 001-800-726-9775)
Jours ouvrables 8 h – 17 h, Heure du Pacifique
(Canada 1-800-263-2244 -- Jours ouvrables 8 h 30 – 17 h Heure de l'Est)

LA PRÉSENTE GARANTIE EST VALIDE UNIQUEMENT POUR LES PRODUITS SANYO ACHETÉS OU LOUÉS ET UTILISÉS AU CANADA, AU MEXIQUE OU AUX ÉTATS-UNIS D'AMÉRIQUE, EXCEPTION FAITE DE TOUS LES TERRITOIRES ET PROTECTORATS AMÉRICAINS. CETTE GARANTIE EST VALIDE UNIQUEMENT POUR LE PAYS DANS LEQUEL LE PRODUIT A ÉTÉ ACHETÉ. CETTE GARANTIE S'APPLIQUE À L'UTILISATEUR INITIAL ET NE S'APPLIQUE PAS AUX PRODUITS UTILISÉS À DES FINS INDUSTRIELLES, PROFESSIONNELLES OU COMMERCIALES. L'ACTE DE VENTE ORIGINAL DATE, LA FACTURE OU LE CONTRAT DE LOCATION DOIT ÊTRE SOUMIS AU CENTRE DE SERVICE AGRÉÉ DE SANYO AU MOMENT OÙ LE SERVICE DE GARANTIE EST EXIGÉ. Pour l'entretien au Mexique, si aucun Centre de service n'est disponible dans la ville où le produit a été acheté, l'utilisateur devra envoyer le produit conformément aux instructions fournies par le dépanneur agréé de SNA, dans le Centre de service le plus proche, en port payable à l'arrivée. Sous réserve des ENGAGEMENTS ci-dessus et des EXCLUSIONS ci-après, SANYO North America Corporation, Division des solutions pour le consommateur (SNA) garantit ce produit SANYO contre tout défaut de matériel et de fabrication pour les périodes de MAIN-D'ŒUVRE et les PIÈCES spécifiées ci-dessous. La SNA réparera ou remplacera (à sa discrétion) le produit et n'importe laquelle des pièces non conformes à cette garantie. La période de garantie commence le jour de l'achat initial ou de la location au détail du produit.

| MAIN-D'ŒUVRE | PIÈCES |
|--------------|----------|
| 90 JOURS | 90 JOURS |

Pour un produit acheté au Canada : Veuillez visiter le site ca.sanyo.com pour des informations actualisées sur la garantie.

EXCLUSIONS

La présente garantie ne couvre pas (A) le réglage des commandes actionnées par le client, tel qu'expliqué dans le manuel d'utilisation du modèle concerné ou (B) la réparation d'un produit dont le numéro de série a été modifié, déformé ou effacé.

Cette garantie ne s'applique pas à l'armoire ou aux pièces cosmétiques, antennes, boutons, piles ou aux entretiens de routine. Cette garantie ne s'applique pas au déballage, au paramétrage, à l'installation, au déplacement de l'appareil pour réparation ou à sa réinstallation après réparation. Cette garantie ne s'applique pas à un remplacement de pièces consécutif à une utilisation qui ne dépend pas du contrôle de la SNA, y compris, mais sans limitation, un dysfonctionnement, un défaut ou une défaillance causés ou résultant d'un entretien ou d'un remplacement de pièces non autorisés, un entretien inadéquat, un fonctionnement contraire aux instructions fournies, des accidents de transport ou de transit, une modification ou réparation par l'utilisateur, un abus, un mauvais traitement, une négligence, un accident, une tension d'alimentation inappropriée, un incendie, des inondations ou autres catastrophes naturelles ou une usure normale.

La garantie qui précède remplace toute autre garantie et SNA n'assume ou n'autorise aucune partie à se prévaloir d'une autre obligation ou responsabilité.

LA DURÉE D'UNE GARANTIE QUI PEUT ÊTRE IMPLICITE PAR LA LOI (Y COMPRIS LES GARANTIES DE QUALITÉ MARCHANDE ET D'ADÉQUATION) EST LIMITÉE AUX TERMES DE CETTE GARANTIE. SNA NE SERA EN AUCUN CAS RESPONSABLE DE DOMMAGES PARTICULIERS, ACCESSOIRES OU INDIRECTS DÉCOULANT DE LA PROPRIÉTÉ OU DE L'UTILISATION DE CET APPAREIL OU POUR UN RETARD DANS LA PERFORMANCE DE SES ENGAGEMENTS DANS LE CADRE DE CETTE GARANTIE EN RAISON DE CAUSES INDÉPENDANTES DE SA VOLONTÉ.

AUX ÉTATS-UNIS ET AU CANADA, CERTAINS ÉTATS ET CERTAINES PROVINCES, RESPECTIVEMENT, NE PERMETTENT PAS DE LIMITATION DE DURÉE DE GARANTIE IMPLICITE ET/OU NE PERMETTENT PAS D'EXCLUSION OU DE LIMITATION DE DOMMAGES CONSÉCUTIFS. LES LIMITATIONS ET EXCLUSIONS CI-DESSUS POURRAIENT NE PAS S'APPLIQUER À VOTRE CAS.

CETTE GARANTIE VOUS DONNE DES DROITS PRÉCIS. VOUS POUVEZ AVOIR D'AUTRES DROITS QUI VARIENT D'UN ÉTAT À UN AUTRE, D'UNE PROVINCE À UNE AUTRE ET D'UN PAYS À UN AUTRE.

Pour votre protection en cas de vol ou de perte de ce produit, nous vous prions de remplir les informations ci-dessous pour vos registres personnels.

N° du modèle _____ N° de série _____
(situé à l'arrière ou au bas de l'appareil)
Date d'achat _____ Prix d'achat _____
Lieu d'achat _____



CODE NO.: 116421160

SANYO Electric Co., Ltd.
Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>