



WELCOME TO THE WORLD OF SANYO

 
Thank you for purchasing a Sanyo Multimedia Remote Control. You made an excellent choice for Performance, Reliability, Value, and Styling.

Model RMT-U340

6-Function

Multimedia Remote Control

Owner's Manual

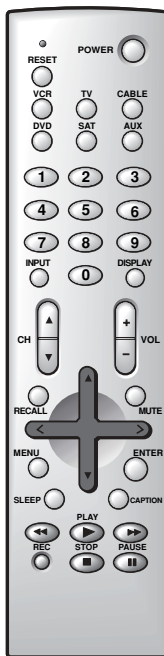


Need assistance? Visit our web site at www.sanyoctv.com.

BEFORE YOU BEGIN

Installing The Batteries

 - Step 1.** Release the battery cover by pressing the tab. Then tilt the cover upward.
- Step 2.** Install two "AAA" batteries as shown. Be sure to match the +/- signs on the batteries with the +/- marks inside the case.

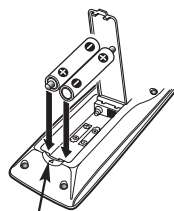

Note: **Do Not** mix new and used batteries or mix different types of batteries together.

 
Press tab and tilt battery cover up.

IMPORTANT NOTE: SPENT OR DISCHARGED BATTERIES MUST BE RECYCLED OR DISPOSED OF PROPERLY IN COMPLIANCE WITH ALL APPLICABLE LAWS. FOR DETAILED INFORMATION, CONTACT YOUR LOCAL COUNTY SOLID WASTE AUTHORITY.

PROGRAMMING THE REMOTE CONTROL

- Step 1.** Find your TV, VCR, DVD, Cable Box, and Satellite Receiver brand codes in the charts on pages 3 ~ 7.
- Step 2.** Press and hold the TV, VCR, CABLE, DVD, SAT (Satellite), or AUX (Auxiliary) mode key while entering a three-digit code number. Then release the mode key.

If the code was accepted, the **Activity Lamp** will flash 5 times after the **Mode** key is released. If you entered an invalid code, the **Activity Lamp** will *not* flash. Check the code number and repeat Step 2.

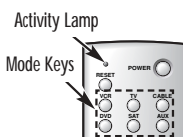

The **VCR**, **TV**, **Cable Box**, **DVD**, and **Satellite** modes will accept only each mode's specific code type.

The **AUX** mode will accept all code types, but only one code at a time.

Perform Steps 1 and 2 for each piece of equipment you have. After entering each code number check the unit's operation by pressing the **Power** and/or **Channel** keys. If these keys operate your equipment, you have probably entered the correct code number for that device. If not, follow Steps 1 and 2 and enter another code, if available.

After you have programmed the remote control and confirmed its operation, enter your codes in the spaces provided below for easy reference.

VCR CODE	<input type="text"/>	SATELLITE CODE	<input type="text"/>
TV CODE	<input type="text"/>	DVD CODE	<input type="text"/>
CABLE BOX CODE	<input type="text"/>	AUX CODE	<input type="text"/>

OPERATING TIPS AND TROUBLESHOOTING HINTS

- To operate each device (**VCR**, **TV**, **Cable Box**, **DVD Player**, or **Satellite Receiver**), you must first program the remote control; then press the proper mode key (**VCR**, **TV**, **CABLE**, **DVD**, **SAT**, or **AUX**) to select an operating mode. The **VCR**, **TV**, and **DVD** modes are preprogrammed with Sanyo codes.
- Some manufacturers use many different codes. If your brand of equipment has more than one code listed, try programming your remote with the different available codes until you locate the correct one for your device.
- There may be **VCRs**, **TVs**, **DVDs**, **Cable Converter Boxes**, and **Satellite Receivers** that this remote control cannot operate. Some models may operate only partially.
- Codes will remain in memory for five minutes as you replace batteries.
- Remove batteries from the remote control if it will not be used for a month or more. Weak batteries may leak and damage the remote control.
- This remote control uses an invisible (infrared) beam of light to operate the equipment. Objects between the equipment and the remote control can block the beam of light. Therefore, the remote control must be pointed directly at the equipment you want to operate.
- This remote control *cannot* add keys or features to your equipment. Your equipment's manufacturer must have originally provided them.
- When switching from the **VCR** or **DVD** mode to the **TV** mode, the **VCR/DVD** specific control keys will continue to operate the last device (mode) selected. For example, when switching from **DVD** to **TV** mode, the **VCR/DVD** control keys will continue to function as **DVD** keys.
- Replace the batteries if the remote control fails to operate any of your equipment. Be sure to install batteries correctly.
- Many of the remote control keys are multi-functional. Refer to the chart on the inside of the carton for a brief description of the keys and their functions. Refer to your original operating manuals for specific feature operation.

Television Codes	
Admiral	130, 137, 138, 152, 100, 103, 105, 113, 114, 115, 118, 124, 129, 155
Aiwa	163, 100, 139
Aikai	143, 101, 102, 110, 111, 122, 133
America Action	103
Anam	101, 102, 111, 133
AOC	159, 157
Apex	151, 154, 103, 105
Baysonic	103
Beaumarck	102, 114, 133
Belcor	101, 111
Bell & Howell	113, 114, 115, 129, 137
Bradford	103
Broksonic	162, 160, 152, 101, 102, 104, 111, 113, 115, 116, 133
Brokwood	101, 111
Candle	132, 136, 101, 102, 103, 111, 113, 115, 117, 121, 133, 143, 148
Carver	113, 115
Celebrity	110
Cineral	151
Citizen	101, 102, 111, 121, 133, 148
Concerto	148
Contec	103
Craig	103, 105, 117, 143
Cranivale	102, 133
Crosley	113, 115
Crown	132, 103, 111, 117, 101
Curtis Mathes	132, 137, 151, 101, 102, 105, 111, 113, 115, 118, 124, 133, 138, 143, 148
CXC	103
Daewoo	154, 150, 151, 101, 102, 107, 111, 121, 132, 133, 136, 139
Daytron	101, 111, 132, 136
Dumont	101, 114
Electroband	110
Electrohome	101, 111, 132
Emerson	104, 154, 101, 102, 103, 105, 111, 112, 116, 117, 129, 132, 133, 142, 143, 148, 150, 152
Envision	102, 133
Fisher	100
Funai	104, 103, 105
Futuretech	103
GE	126, 156, 118, 124, 125, 138, 150, 151, 132, 135, 148, 101, 103, 107, 111, 123, 143, 144
Gibraltar	101, 102, 111, 114, 133
GoldStar	132, 133, 138, 148, 101, 102, 111, 114, 155
Gradiente	121, 148
Grumpy	103
Hallmark	148, 144
Harman/Kardon	113, 115
Harvard	103
Hitachi	141, 132, 135, 136, 137, 101, 102, 111, 118, 123, 124, 129, 133, 148
Infinity	113, 115
Inteq	114
JBL	102, 113, 115, 133
JCB	110
JVC	121, 123, 143
KEC	103
Kenwood	101, 102, 133, 111
Konka	158
KTV	132, 101, 102, 103, 105, 111, 133
LG	132, 133, 138, 148, 101, 102, 111, 114, 155
Logik	114, 137
Luxman	148
LXI	104, 131, 138, 148, 100, 101, 102, 111, 113, 115, 118, 124, 133
Magnasonic	131, 136, 101, 102, 111, 113, 115, 129, 133
Magnavox	113, 115, 145, 149, 132, 133, 135, 101, 102, 104, 111, 112, 117, 121, 123, 129
Majestic	137
Marantz	102, 113, 115, 133
Megatron	148, 144
Memorex	137, 148, 152, 100, 111, 122, 101
MGA	148, 101, 102, 111, 122, 133, 144
Midland	101, 111, 114, 118, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 111, 144
MTC	136, 101, 102, 111, 113, 115, 133, 143, 148
Multitech	103
NAD	131, 148, 144
NEC	101, 102, 111, 112, 133, 148
Newtech	100
Nikko	102, 133, 148
Omwa	103
Optonica	147
Orion	142, 152, 105, 116
Panasonic	139, 135, 136, 105, 107, 112, 118, 123, 124
Penny	131, 132, 138, 101, 102, 111, 118, 123, 124, 133, 143, 148, 155
Philco	113, 115, 145, 132, 133, 136, 152, 101, 102, 111, 112, 117, 121, 129
Philips	113, 115, 145, 132, 133, 101, 102, 111, 121, 129
Pilot	101, 102, 111, 133
Pioneer	135, 107, 108, 111, 112, 101
Proscan	126, 156, 118, 124, 125, 138, 102, 133, 155
Proton	132, 148, 101, 102, 111, 117, 118, 124, 133, 144
Portland	101, 111
Pulsar	101, 111, 114, 136
Quasar	139, 135, 147, 107, 112, 123
Radio Shack	100, 101, 102, 103, 105, 107, 111, 113, 115, 118, 122, 124, 130, 132, 133, 147, 148
RCA	161, 126, 156, 118, 124, 125, 138, 132, 135, 101, 102, 103, 107, 108, 111, 133, 143
Realistic	147, 148, 100, 101, 103, 111, 133
Runco	102, 114, 133
Sampo	107, 111, 135, 101
Samsung	143, 132, 148, 101, 102, 105, 111, 121, 129, 133
Samsux	111, 101
Sansui	142, 152
Sansel	151
Sanyo	100
Scimitu	101, 111
Scotch	148, 144
Scott	131, 132, 148, 101, 103, 105, 111, 113, 115, 116, 118, 124, 144
Sears	131, 138, 148, 100, 101, 102, 104, 113, 115, 124, 111, 118, 133, 155
Semivox	103
Semp	131
Sharp	130, 132, 147, 110, 111, 129, 101
Shogun	101, 111
Signature	130, 137
Simpson	149
Sony	110, 132
Soundesign	103, 148, 144
Squarview	104
SSS	101, 103, 111
Starlite	103
Supreme	110
Sylvania	104, 133, 136, 145, 101, 102, 111, 112, 113, 115, 117, 121
Symphonic	104, 105
Tandy	145
Tatung	107
Technics	135, 112, 123
Techwood	148
Teknika	132, 136, 137, 101, 102, 103, 105, 111, 113, 115, 117, 122, 133, 148
Telefunken	148
Toshiba	131, 130, 121, 143
Totevision	111, 101
TMK	148
Vector Research	102, 133
Victor	121
Vidikron	113, 115
Vidtech	141, 148, 101, 102, 111, 133
Wards	137, 145, 147, 148, 101, 102, 111, 113, 114, 115, 117, 118, 121, 124, 129, 133, 143
W. Westinghouse	151, 152, 154, 100, 103, 116
Yamaha	136, 101, 102, 112, 117, 111, 133
Zenith	114, 137, 136, 152

VCR Codes (cont.)	
JBL	237
Jensen	209
JVC	220, 238, 226, 201, 209, 230
KEC	205
Kenwood	220, 226, 238, 201, 209
Kodak	232
Lloyd's	228
Logik	219
LXI	232, 228, 230, 201, 202, 206, 211, 217
Magnasonic	205, 219
Magnavox	204, 232, 228, 211, 217, 219, 220
Marta	206
Matsushita	232
MEI	232
Memorex	227, 232, 243, 245, 224, 228, 229, 230, 200, 201, 202, 206, 215
Minolta	230
Mitsubishi	244, 224, 226, 229, 210
Motorola	232, 229, 224
MTC	228, 217, 219
Multitech	228, 217
NEC	238, 226, 201, 206, 209, 215, 217, 248
Olympus	232
Optimus	245, 248, 224, 229, 201
Orion	243, 227, 234, 205, 206, 210, 211
Panasonic	245, 232, 236, 202, 211, 219
Penny	230, 232, 248, 211, 219
Pentax	238, 230
Philco	204, 232, 243, 228, 217
Philips	204, 232, 228, 211, 217
Pioneer	242, 204, 207, 220
Proscan	222, 241, 246, 230, 236, 226
Proton	219
Pulsar	248, 205, 217
Quarter	200
Quartz	200
Quasar	245, 232, 236
Radio Shack	228, 245
RCA	250, 222, 241, 246, 248, 230, 232, 236, 224, 226, 229, 201, 207, 210
Realistic	232, 248, 224, 228, 229, 200, 201, 202, 206, 210, 202, 206, 211, 217
Samsung	248, 211, 217, 222
Samtron	248
Sansui	243, 226, 228, 209, 219, 220
Sanky	229, 224
Sanyo	200, 201, 202
Scott	234, 247, 227, 211
Sears	232, 228, 230, 200, 201, 202, 206, 211, 217
Semp	211
Shintom	219, 227
Sharp	252, 229, 224
Signature	228, 217, 229, 224, 200
Sony	214, 218, 232, 237, 226, 228
STS	230
Sylvania	228, 232, 244, 204, 217
Symphonic	228, 217, 226, 202
Yamaha	238, 226
Tatung	226, 209
Teac	228, 209, 214, 217
Technics	232
Teknika	232, 228, 217
Toshiba	211, 244, 202, 205, 210
Tomas	228, 217
Vector	211
Video Concept	211
Wards	230, 232, 248, 224, 228, 229, 202, 204, 211, 217
W. Westinghouse	243, 205
XR-1000	228, 232
Zenith	206, 215, 237, 243, 220, 228, 222

Satellite Codes	
AlphaStar	431
Echostar	432, 410, 416
ExpressVu	432
Fujitsu	404
GE	426, 436, 437, 423
Gen. Instruments	425, 427, 415, 435, 405
Hitachi	407, 421
HTS	432
Hughes	442, 407
Janeil	404
Jerrold	425, 427
JVC	432
Magnavox	429, 430
Memorex	430
Next Level	415
Optimus	430
Panasonic	441, 428, 400
Philips	439, 438, 429, 430, 432
Primestar	425, 427
Proscan	426, 436, 437, 423
Radio Shack	415
RCA	426, 436, 437, 423
Samsung	440
Sony	420
Star Choice	415, 435
Toshiba	422, 405
Uniden	429, 430, 406, 409, 412
Video Pall	404
Viewstar	418
Zenith	434, 404

DVD Codes	
Aikai	529
Apex	535, 534, 533, 525, 527, 528, 523
Broksonic	536
Daewoo	529
Denon	501, 520
Emerson	540, 521, 524, 527
Fisher	500
GE	541, 504
Hitachi	530
JVC	515, 510
Kenwood	507
Koss	522
Lasonic	544
Magnavox	508, 502
Marantz	508
Mintek	543
Norcent	532
Onkyo	516, 502
Optimus	511
Orion	526
Oritron	522
Panasonic	501, 518
Philips	508, 502
Pioneer	542, 537, 511, 505, 518
Proscan	504
RCA	539, 538, 504
Samsung	512
Sanyo	500, 526
Sharp	531, 517
Sony	506
Sylvania	524
Symphonic	524
Technics	501
Theta Digital	511
Toshiba	502, 526
Hytex	318
Jerrold	300, 303, 309, 313, 314, 320, 321, 329

BIENVENUE DANS L'UNIVERS DE SANYO

 
Nous vous remercions d'avoir acheté un télécouleur Sanyo. Vous avez fait un choix excellent du point de vue du fonctionnement du style, de la fiabilité et du rapport qualité/prix.

BEFORE YOU BEGIN

Installation del plies

Step 1. Release the battery cover by pressing the tab. Then tilt the cover upward.

Step 2. Install two "AAA" batteries as shown. Les signes + et - des piles doivent correspondre à ceux de l'intérieur de la télécommande.

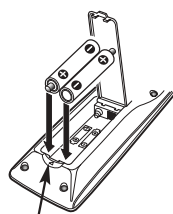

Press tab and tilt battery cover up.

Remarque : N'utilisez pas en même temps des piles usagées et des piles neuves ni des piles de types différents.

PROGRAMMATION DE LA TÉLÉCOMMANDE

Étapes 1. Look in the codes chart for your TV, VCR, DVD, Cable Box, and Satellite Receiver brand codes.

Étapes 2. Press and hold the TV, VCR, CABLE, DVD, SAT (Satellite), or AUX (Auxiliary) mode key while entering a three-digit code number. Then release the mode key.

If the code was accepted, the Activity Lamp will flash 5 times after the Mode key is released. If you entered an invalid code, the Activity Lamp will not flash. Check the code number and repeat Step 2.



Les modes VCR, TV, CABLE, DVD, et SAT accepteront seulement des codes de type.

The AUX mode will accept all code types, but only one code at a time.

Passez par les étapes 1 et 2 pour chaque appareil que vous avez. Après avoir composé le numéro de code, vérifiez le fonctionnement de l'appareil en appuyant sur les touches POWER et-ou CHANNEL. Si ces touches font fonctionner votre équipement, vous avez probablement composé le bon numéro de code pour cet appareil. Sinon, reprenez à l'étape 2 et entrez un autre code s'il y en a de disponible.

Après avoir programmé la télécommande et vérifié son fonctionnement, inscrivez vos codes dans les boîtes données ci-dessous afin de pouvoir y faire facilement référence.

TV Code :	<input type="text"/>	<input type="text"/>	<input type="text"/>
Code magnétoscope :	<input type="text"/>	<input type="text"/>	<input type="text"/>
Code boîte de télé par câble :	<input type="text"/>	<input type="text"/>	<input type="text"/>
Code de lecteur de vidéodisque :	<input type="text"/>	<input type="text"/>	<input type="text"/>
Code récepteur de satellite :	<input type="text"/>	<input type="text"/>	<input type="text"/>
Code auxiliaire :	<input type="text"/>	<input type="text"/>	<input type="text"/>

NOM DU DISPOSITIF ICI

OPERATING TIPS AND TROUBLESHOOTING HINTS

- To operate each device (VCR, TV, Cable Box, DVD Player, or Satellite Receiver), you must first program the remote control; then press the proper mode key (VCR, TV, CABLE, DVD, SAT, or AUX) to select an operating mode. The VCR, TV, and DVD modes are preprogrammed with Sanyo codes.
- Some manufacturers use many different codes. If your brand of equipment has more than one code listed, try programming your remote with the different available codes until you locate the correct one for your device.
- There may be VCRs, TVs, DVDs, Cable Converter Boxes, and Satellite Receivers that this remote control cannot operate. Some models may operate only partially.
- Codes will remain in memory for five minutes as you replace batteries.
- Remove batteries from the remote control if it will not be used for a month or more. Weak batteries may leak and damage the remote control.
- This remote control uses an invisible (infrared) beam of light to operate the equipment. Objects between the equipment and the remote control can block the beam of light. Therefore, the remote control must be pointed directly at the equipment you want to operate.
- This remote control cannot add keys or features to your equipment. Your equipment's manufacturer must have originally provided them.
- When switching from the VCR or DVD mode to the TV mode, the VCR/DVD specific control keys will continue to operate the last device (mode) selected. For example, when switching from DVD to TV mode, the VCR/DVD control keys will continue to function as DVD keys.

Television Codes	
Admiral	130, 137, 138, 152, 100, 103, 105, 113, 114, 115, 118, 124, 129, 155
Aiwa	163, 100, 139
Akai	143, 101, 102, 110, 111, 122, 133
America Action	103
Anam	103
AOC	101, 102, 111, 133
Apex	159, 157
Audiovox	151, 154, 103, 105
Baysonic	103
Beaumarck	102, 114, 133
Belcor	101, 111
Bell & Howell	113, 114, 115, 129, 137
Bradford	103
Broksonic	162, 160, 152, 101, 102, 104, 111, 113, 115, 116, 133
Brokwood	101, 111
Candle	132, 136, 101, 102, 103, 111, 113, 115, 117, 121, 133, 143, 148
Carver	113, 115
Celebrity	110
Cineral	151
Citizen	101, 102, 111, 121, 133, 148
Concerto	148
Contec	103
Craig	103, 105, 117, 143
Cranvale	102, 133
Crosley	113, 115
Crown	132, 103, 111, 117, 101
Curtis Mathes	132, 137, 151, 101, 102, 105, 111, 113, 115, 118, 124, 133, 138, 143, 148
CXC	103
Daewoo	154, 150, 151, 101, 102, 107, 111, 121, 132, 133, 136, 139
Daytron	101, 111, 132, 136
Dumont	101, 114
Electroband	110
Electrohome	101, 111, 132
Emerson	104, 154, 101, 102, 103, 105, 111, 112, 116, 117, 129, 132, 133, 142, 143, 148, 150, 152
Envision	102, 133
Fisher	100
Funai	104, 103, 105
Futuretech	103
GE	126, 156, 118, 124, 125, 138, 150, 151, 132, 135, 148, 101, 103, 107, 111, 123, 143, 144
Gibraltar	101, 102, 111, 114, 133
GoldStar	132, 133, 138, 148, 101, 102, 111, 114, 155
Gradiente	121, 148
Grumpy	103
Hallmark	148, 144
Harman/Kardon	113, 115
Harvard	103
Hitachi	141, 132, 135, 136, 137, 101, 102, 111, 118, 123, 124, 129, 133, 148
Infinity	113, 115
Inteq	114
JBL	102, 113, 115, 133
JCB	110
JVC	121, 123, 143
KEC	103
Kenwood	101, 102, 133, 111
Konka	158
KTV	132, 101, 102, 103, 105, 111, 133
LG	132, 133, 138, 148, 101, 102, 111, 114, 155
Logik	114, 137
Luxman	148
LXI	104, 131, 138, 148, 100, 101, 102, 111, 113, 115, 118, 124, 133
Magnasonic	131, 136, 101, 102, 111, 113, 115, 129, 133
Magnavox	113, 115, 145, 149, 132, 133, 135, 101, 102, 104, 111, 112, 117, 121, 123, 129
Majestic	137
Marantz	102, 113, 115, 133
Megatron	148, 144
Memorex	137, 148, 152, 100, 111, 122, 101
MGA	148, 101, 102, 111, 122, 133, 144
Midland	101, 111, 114, 118, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 111, 144
MTC	136, 101, 102, 111, 113, 115, 133, 143, 148
Multitech	103
NAD	131, 148, 144
NEC	101, 102, 111, 112, 133, 148
NewTech	100
Nikko	102, 133, 148
Onwa	103
Optonica	147
Orion	142, 152, 105, 116
Panasonic	139, 135, 136, 105, 107, 112, 118, 123, 124
Penny	131, 132, 138, 101, 102, 111, 118, 123, 124, 133, 143, 148, 155
Philco	113, 115, 145, 132, 133, 136, 152, 101, 102, 111, 112, 117, 121, 129
Philips	113, 115, 145, 132, 133, 101, 102, 111, 121, 129
Pilot	101, 102, 111, 133
Pioneer	135, 107, 108, 111, 112, 101
Proscan	126, 156, 118, 124, 125, 138, 102, 133, 155
Proton	132, 148, 101, 102, 111, 117, 118, 124, 133, 144
Portland	101, 111
Pulsar	101, 111, 114, 136
Quasar	139, 135, 147, 107, 112, 123
Radio Shack	100, 101, 102, 103, 105, 107, 111, 113, 115, 118, 122, 124, 130, 132, 133, 147, 148
RCA	161, 126, 156, 118, 124, 125, 138, 132, 135, 101, 102, 103, 107, 108, 111, 133, 143
Realistic	147, 148, 100, 101, 103, 111, 133
Runco	102, 114, 133
Sampo	107, 111, 135, 101
Samsung	143, 132, 141, 101, 102, 105, 111, 121, 129, 133
Samsux	111, 101
Sansui	142, 152
Sansei	151
Sanyo	100
Scimitus	101, 111
Scotch	148, 144
Scott	131, 132, 148, 101, 103, 105, 111, 113, 115, 116, 118, 124, 144
Sears	131, 138, 148, 100, 101, 102, 104, 113, 115, 124, 111, 118, 133, 155
Semivox	103
Semp	131
Sharp	130, 132, 147, 110, 111, 129, 101
Shogun	101, 111
Signature	130, 137
Simpson	149
Sony	110, 132
Soundesign	103, 148, 144
Squarview	104
SSS	101, 103, 111
Starlite	103
Supreme	110
Sylvania	104, 133, 136, 145, 101, 102, 111, 112, 113, 115, 117, 121
Symphonic	104, 105
Tandy	145
Tatung	107
Technics	135, 112, 123
Techwood	148
Teknika	132, 136, 137, 101, 102, 103, 105, 111, 113, 115, 117, 122, 133, 148
Telefunken	148
Toshiba	131, 130, 121, 143
Television	111, 101
TMK	148
Vector Research	102, 133
Victor	121
Vidikron	113, 115
Vidtech	141, 148, 101, 102, 111, 133
Wards	137, 145, 147, 148, 101, 102, 111, 113, 114, 115, 117, 118, 121, 124, 129, 133, 143
W. Westinghouse	151, 152, 154, 100, 103, 116
Yamaha	136, 101, 102, 112, 117, 111, 133
Zenith	114, 137, 136, 152

Tableau des codes de magnétoscope

Admiral	234, 243, 247, 224, 229, 222, 215
Adventura	228
Aiko	205
Aiwa	228, 217
Akai	209, 215
America Action	205
America High	232
Bell&Howell	201
Broksonic	234, 243, 247, 227, 204
Candle	248, 222, 204, 205, 211, 217
Canon	232
CCE	205
Cineral	205

- Replace the batteries if the remote control fails to operate any of your equipment. Be sure to install batteries correctly.
- Many of the remote control keys are multi-functional. Refer to the chart on the inside of the carton for a brief description of the keys and their functions. Refer to your original operating manuals for specific feature operation.

Tableau des codes de magnétoscope (suite)

Citizen	222, 205, 211, 217
Craig	202, 219
Craver	204
Curtis Mathes	232, 236, 238, 248, 222, 228, 209, 211, 217
Daewoo	205, 211
Daytron	205
Denon	230
Dynatech	228
Emerex	214
Emerson	251, 228, 243, 234, 236, 247, 227, 201, 204, 205, 206, 210, 211, 217
Fisher	200, 201, 202, 211
Fuji	232
Funai	228, 217
GE	222, 246, 248, 232, 236, 226, 229, 224, 212
Goldstar	253, 238, 248, 226, 206, 215, 217
Go Video	248, 249, 212, 219
Gradiente	228
Garrard	228
Harley Davidson	228
Headquarter	200
Hitachi	228, 230, 246, 226, 222, 209, 217
Hughes	230
JBL	237
Jensen	209
JVC	220, 238, 226, 201, 209, 230
KEC	205
Kenwood	220, 226, 238, 201, 209
Kodak	232
Lloyd's	228
Logik	219
LXI	232, 228, 230, 201, 202, 206, 211, 217
Magnasonic	205, 219
Magnavox	204, 232, 228, 211, 217, 219, 220
Marla	206
Matsushita	232
MEI	232
Memorex	227, 232, 243, 245, 224, 228, 229, 230, 200, 201, 202, 206, 215
Minolta	230
Mitsubishi	244, 224, 226, 229, 210
Motorola	232, 229, 224
MTC	228, 217, 219
Multitech	228, 217
NEC	238, 226, 201, 206, 209, 215, 217, 248
Olympus	232
Optimus	245, 248, 224, 229, 201
Orion	243, 227, 234, 205, 206, 210, 211
Panasonic	245, 232, 236, 202, 211, 219
Penny	230, 232, 248, 211, 219
Pentax	238, 230
Philco	204, 232, 243, 228, 217
Philips	204, 232, 228, 211, 217
Pioneer	242, 204, 207, 220
Proscan	222, 241, 246, 230, 236, 226
Proton	219
Pulsar	248, 205, 217
Quarter	200
Quartz	200
Quasar	245, 232, 236
Radio Shack	228, 245
RCA	250, 222, 241, 246, 248, 230, 232, 236, 224, 226, 229, 201, 207, 210
Realistic	232, 248, 224, 228, 229, 200, 201, 202, 206, 217
Samsung	248, 211, 217, 222
Samtron	248
Sansui	243, 226, 228, 209, 219, 220
Sanky	229, 224
Sanyo	200, 201, 202
Scott	234, 247, 227, 211
Sears	232, 228, 230, 200, 201, 202, 206, 211, 217
Semp	211
Shintom	219, 227
Sharp	252, 229, 224
Signature	228, 217, 229, 224, 200
Sony	214, 218, 232, 237, 226, 228
STS	230
Sylvania	228, 232, 244, 204, 217
Symphonic	228, 217, 226, 202
Yamaha	238, 226
Tatung	226, 209
Teac	228, 209, 214, 217
Technics	232
Teknika	232, 228, 217
Toshiba	211, 244, 202, 205, 210
Tomas	228, 217
Vector	211
Video Concept	211
Wards	230, 232, 248, 224, 228, 229, 202, 204, 211, 217
W. Westinghouse	243, 205
XR-1000	228, 232
Zenith	206, 215, 237, 243, 220, 228, 222

Tableau des codes de récepteur de satellite

AlphaStar	431
Echostar	432, 410, 416
ExpressVU	432
Fujitsu	404
GE	426, 436, 437, 423
Gen. Instruments	425, 427, 415, 435, 405
Hitachi	407, 421
HITS	432
Hughes	442, 407
Janeil	404
Jerrold	425, 427
JVC	432
Magnavox	429, 430
Memorex	430
Next Level	415
Optimus	430
Panasonic	441, 428, 400
Philips	439, 438, 429, 430, 432
Primestar	425, 427
Proscan	426, 436, 437, 423
Radio Shack	415
RCA	426, 436, 437, 423
Samsung	440
Sony	420
Star Choice	415, 435
Toshiba	422, 405
Uniden	429, 430, 406, 409, 412
Video Pall	404
Viewstar	418
Zenith	434, 404

Tableau des codes de lecteur de DVD

Akai	529
Apex	535, 534, 533, 525, 527, 528, 523
Broksonic	536
Daewoo	529
Denon	501, 520
Emerson	540, 521, 524, 527
Fisher	500
GE	541, 504
Hitachi	530
JVC	515, 510
Kenwood	507
Koss	522
Lasonic	544
Magnavox	508, 502
Marantz	508
Mintek	543
Norcent	532
Onkyo	516, 502
Optimus	511
Orion	526
Oritron	522
Panasonic	501, 518

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>