


INSTRUCTION MANUAL

SANYO

SC-5006

VACUUM CLEANER

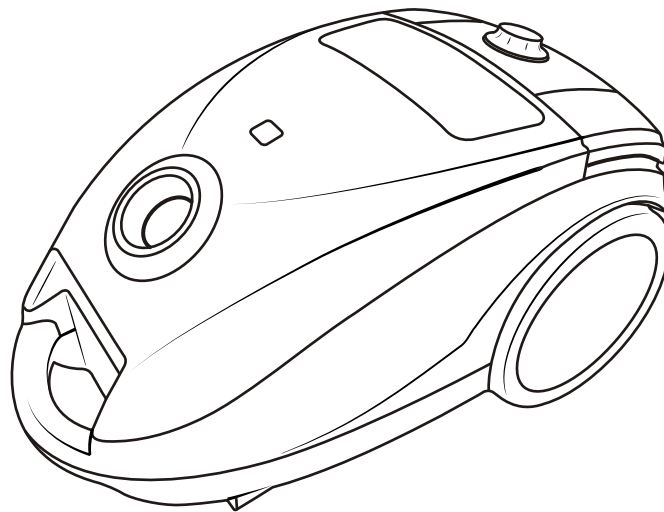

HOUSEHOLD USE ONLY

NAME AND FUNCTION OF PARTS (Assemble as indicated in the center illustration.)

TURBO CLEAN™


- Change the switch lever according to the area you want to vacuum.

High

- The "TURBO CLEAN" turns at a high speed. It is ideal for vacuuming on the rug when the switch lever is selected to this position.

Low

- The "TURBO CLEAN" turns at a low speed. It is ideal for vacuuming on the floor when the switch lever is selected to this position.



Switch Lever


Caution

- Please do not vacuum on the floor while the switch lever is set to "HIGH", as this may damage the floor.
- When the dust compartment is full, the TURBO CLEAN™ may turn slowly. Please empty the dust compartment.

Warning-To reduce the risk of injury, unplug before connecting the TURBO CLEAN™.

Vacuum Power Adjustment Ring

- The full vacuum power of the cleaner may be too strong in certain cases, for instance when vacuuming curtains and draperies. In these cases, turn the vacuum power adjustment ring (on the hose) to control the vacuum power. Match the hole in the ring to "circle" shape to reduce the power.

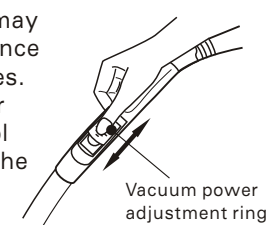


Vacuum power adjustment ring

Hose Stopper

- Insert the hose stopper all the way up to the air inlet.
- To detach it, press button on the hose stopper and pull the hose toward you.

Power Control

- Set the **POWER CONTROL** to "MAX" for maximum suction. In the position "MIN" the suction power is decreased.

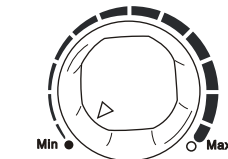


Min Max

Cord Rewind Button

- To pull the cord back into the unit, press the cord rewind button.

Caution:

- * Hold the plug when rewinding the cord so that the plug does not damage furniture, hands, the vacuum cleaner or the cord by hitting them. Holding the plug will make rewinding smoother.

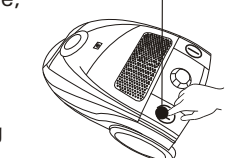


Cord rewind button

Extension Pipe

- The pipe is adjustable according to the height of the user.

(How to expand / contract the pipe)

- Adjust the length of the pipe while pushing the ring in.
- Make sure that you hear a "clicking" sound.

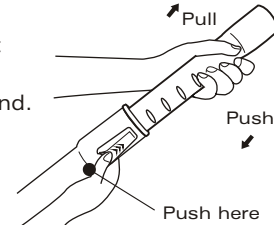

Pull Push here


Caution

- Please do not place your hand on the expansion pipe ring during operation.
- Please do not push the ring in when adjusting the length.

Attachments

Dusting brush


- The head of the brush can rotate.

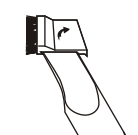

- For vacuuming edges and gaps, and for vacuuming fragile or easily scratched items.

Dust Indicator

- The dust indicator shows the amount of dust that has been collected in the dust compartment. Hold the floor nozzle away from the floor, while operating to check.




DUST INDICATOR DUST INDICATOR

- When "Dust Indicator" indicates "Green", vacuuming can continue.
- When "Dust Indicator" indicates "Red", dust compartment should be emptied.

Cord and Plug


- Pull out the cord and connect the wall outlet.
- Do not extend the cord from the unit beyond the red marker line.

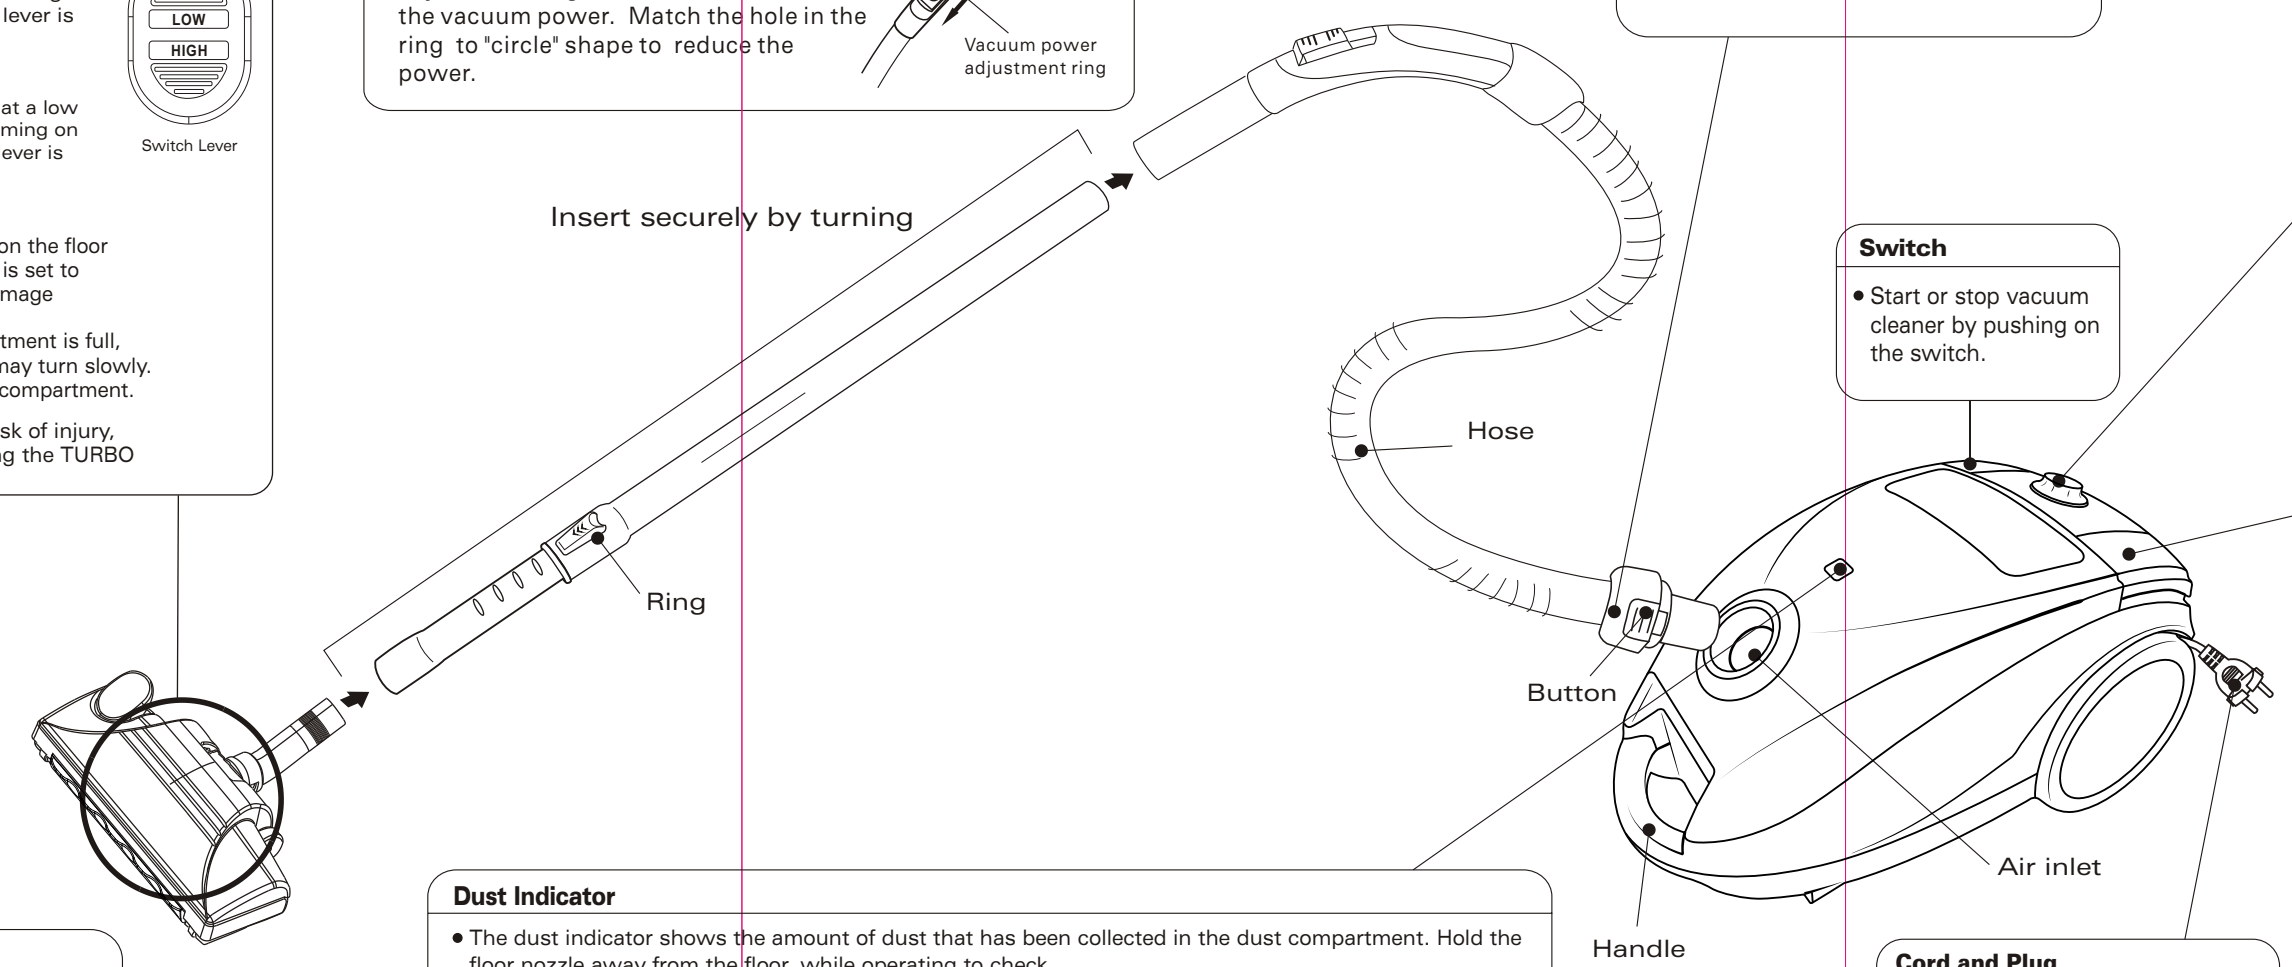


DUST DISPOSAL

When the dust compartment is full, turn the motor off, pull the hose out of the vacuum cleaner and dispose of the paper dust bag as follows:


1. Open the dust compartment cover by pulling out the clamp button.

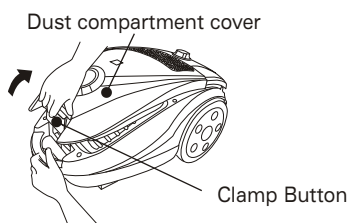


2. Remove the filter frame.

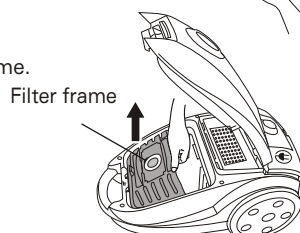

3. Remove the used bag from the filter frame and dispose of the bag.

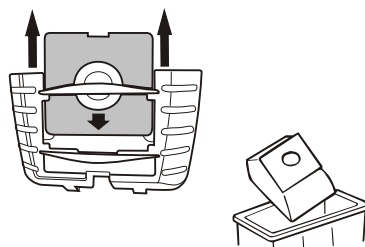


4. Set a new bag in the filter frame.

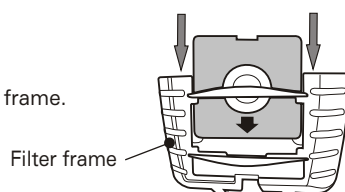

⚠ Caution:

Please equip the paper bag with the arrow sign downward, otherwise, it is possible to be destroyed.

5. Reattach the filter frame and close the dust compartment cover.

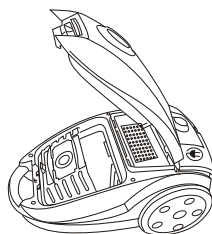

⚠ Caution:

- Do not use the vacuum cleaner without a bag, it may damage a motor.
- As a safety feature, the dust compartment cover cannot be closed if the paper bag is not mounted correctly.

Thank you for your purchase of the Sanyo Vacuum Cleaner.
Please read these instructions carefully before using.



A FEW PRECAUTIONS

1. Operating without the filter in place will allow dust to enter the motor and could damage the vacuum cleaner.
2. Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolor the plastic parts of the unit.
3. Keep the vacuum cleaner free of insecticides. Do not wipe with benzine, thinner, petrol or other oils which might cause discoloration or cracking. To clean the body and hose, dampen a cloth with a mild detergent and wipe clean.
4. Blocking the suction inlet or allowing the dust to clog the hose will decrease the efficiency of the motor.
5. Be sure not to push the clamp button while carrying the vacuum cleaner
6. Never try to vacuum the following objects. They may damage the unit or cause a fire.
 - * Wet things, mud, soil, and fluids
 - * Burning cigarettes
 - * Needles and razor blades
 - * Inflammable materials such as gasoline and thinner
7. The following kinds of treatment shorten hose life:
 - * Bending hose at an acute angle when storing
 - * Pulling the hose with excessive force
 - * Placing heavy objects on, or stepping on the hose
8. Pull out the plug from the power source after use. Grasp the plug-not the cord-when pulling out the plug. Pulling on the cord may lead to short circuiting.
9. Long and continuous use causes the exhaust air and the body of the vacuum cleaner to become warm. This, however, does not denote malfunction.
10. When vacuuming places that are very dusty, and also when vacuuming regularly, empty the dust compartment before it becomes completely filled. Frequent emptying lengthens the life of the motor and maintains strong suction power.
11. If the supply cord of this appliance is damaged, it must only be replaced by a repair shop appointed by the manufacturer, in order to avoid a hazard.
12. Do not allow it to be used as a toy. Close attention is necessary when used by or near children or infirm persons.
13. This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
14. Young children should be supervised to ensure that they do not play with the appliance.

CARE OF FILTER

Filter

- Take out the filter frame remove the filter from the filter frame and cleaned by water.

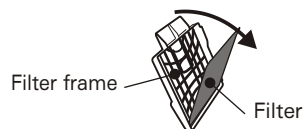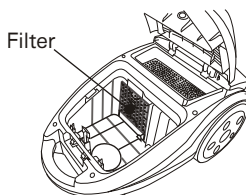

⚠ Caution:


Never insert the filter into the vacuum cleaner unless it is completely dry.

- ※ **To assure the best results, we recommend cleaning the filters once every one (1) year, depending on usage.**


REPLACING THE HEPA FILTER

- Under normal usage, the HEPA Filter will require replacement once every one year; however, vacuuming large amounts of extremely fine dust, powder or similar material over a long period of time may decrease airflow performance through the filter. If this occurs, it may become necessary to replace the HEPA Filter more often. Only use genuine Sanyo replacement filters.

1. Open the dust compartment cover.

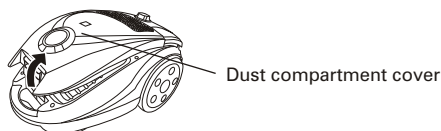

2. Remove the HEPA Filter.

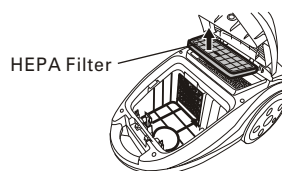

3. Insert a new HEPA Filter, close the dust compartment cover.

⚠ Caution:

- Be sure the HEPA Filter is facing the right direction.

⚠ IMPORTANT (Paper Bag Type only)


- Use only genuine Sanyo paper bags to assure best results.
- Genuine Sanyo paper bags are available through your dealer.
(Be sure to state the type number SC-P8A.)

CARE OF TURBO CLEAN™

- Before caring for the TURBO CLEAN™, be sure to turn OFF the switch of the unit and disconnect the plug from the outlet.
- If needles, pins or waste paper get stuck in the suction inlet, remove them after going through the above procedure.
- Trying to remove them during operation is dangerous.

EDGE GRABBER™

- The Edge Grabber system is designed to help clean all the way up to the baseboards. The suction shutter is opened when the floor nozzle is pushed against the wall.

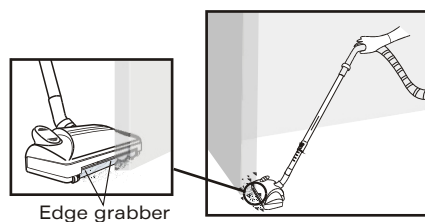

CARE AND MAINTENANCE

If you have a problem with your vacuum cleaner, consult the handy guide below. If the vacuum cleaner is malfunctioning, do not operate it. Contact your dealer or the nearest Sanyo Service Center.

Problem	Possible cause	Possible solution
(1) Cleaner won't run.	1. Not firmly plugged in. 2. No voltage in wall outlet.	1. Plug unit in firmly. 2. Check fuse or breaker.
(2) Suction does not increase after cleaning out the dirt.	1. Filter dirty. 2. Clogged floor nozzle or hose.	1. Clean out the filter. 2. Clean out floor nozzle or hose.
(3) Cord doesn't fully rewind.	1. Cord twisted or uneven.	1. Pull out cord and rewind.

9BF-D-P111-07100 0709-©
E

SANYO

SANYO Electric Co., Ltd.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>