

# ***SYLVANIA***

## **USER'S MANUAL**



### **Digital Photo Frame**

MODEL NO: SDPF785

## CONTENTS

Chapter 1 Product introduction .....	2
1.1 Specification.....	2
1.2 Package .....	2
Chapter 2 Operation introduction .....	2
2.1 Operation of inserting the cards.....	2
2.2 Button operation introduction for main unit.....	3
2.3 POWER ON/OFF introduction.....	3
2.4 Operation guide.....	4
2.5 Selecting mode.....	4
2.5.1 auto-play mode.....	4
2.5.2 photo.....	5
2.5.3 clock and calendar display.....	5
2.5.4 time and calendar setting .....	6
2.5.5 menu.....	6
Chapter 3 Daily protection and maintenance.....	7
3.1 Digital photo frame protection.....	7
3.2 Panel cleanness.....	7
Chapter 4 Trouble shooting.....	7

## CHAPTER 1 product introduction

### 1.1 Specification

support picture format: JPEG

support SD/MMC/MS cards, this machine doesn't support music

panel: 7 inch LED screen

Power: DC5V 1A

Operation control: button operation control

### 1.2 Packaging list

digital photo frame 1pc

user manual 1pc

 
adapter 1pc

warranty card 1pc

## CHAPTER 2 Operation introduction

### 2.1 Operation of inserting the cards


Insert the card in correct direction like below indication:

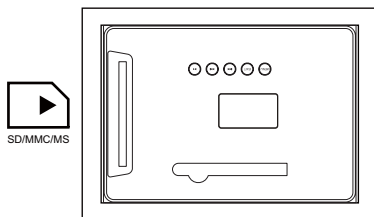

Machine will recognize the card automatically, it can insert USB or one of SD/MMC/MS card.

## 2.2 Button operation introduction for main unit

 This product can be operated by pressing button as below:

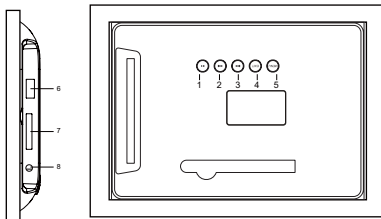

1. "ENTER" button/ playing picture mode in normal playing /pause
2. "RIGHT" / "DOWN" button
3. "LEFT" / "UP" button
4. "EXIT" button
5. "MENU" / "SETUP" / "POWER ON/OFF" button
6. USB input jack
7. Memory card slot
8. Power input jack

## 2.3 POWER ON/OFF introduction

Power ON/OFF : Long Press MENU button and hold on 3 seconds can power ON/OFF the unit.

 
## 2.4 Operation introduction

start up screen: power on the unit , will show the start up picture



## 2.5 Selecting mode

Press EXIT three times to choose card selection, Press EXIT two times to choose play mode, under this mode, have four function menu for selection: PHOTO, FILE, CALENDAR, SETUP

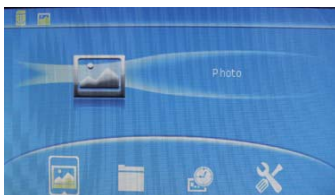

select one function press ENTER to operate the function , press EXIT key to return to select card mode

### 2.5.1 auto-play mode



This product will play automatically once insert card, when playing, press ENTER key can pause the playing , press ◀◀/▶▶ key can browse the photo page by page,press ENTER again return back to play mode; press EXIT key can return to photo browsing mode , press EXIT key again can return to the main menu Under browse photo mode, press ▲/▼/◀/▶ key to select the desired photo, press ENTER key to pause the browsing , press again ENTER key to play

 
### 2.5.2 photo



6 screen image preview, press SETUP can pop up delete file sub-menu, you can delete the file you want to delete. 6 screen image preview,select a picture after press ENTER key to full-screen preview image,press SETUP can pop up setup menu, You can set image display mode:save picture /rotate/zoom operation, Save picture can save the picture to the built-in memory(if can't copy pictures to the built-in memory,please format memory first),after full-screen preview,press ENTER again it will slide show.


### 2.5.3 clock and calendar display

enter to selection mode , select calendar to display the clock and calendar

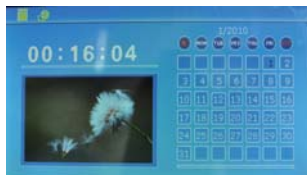

## 2.5.4 time and calendar setting

 
Select SETUP menu under selection mode or press MENU key directly,

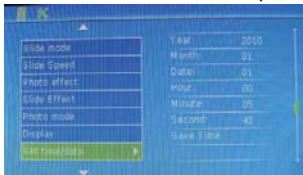

it will display the setup menu, press ◀▶ key to select time/date menu, press ENTER key to enter to sub-menu, press ◀▶ key to select the item you want to change, press ENTER key again till the item change to red, press ◀▶ key to set up the time or calendar, press ENTER key once more till the item change to green, then select save time to save.

## 2.5.5 MENU

 enter to selection mode , select calendar to display the clock and calendar

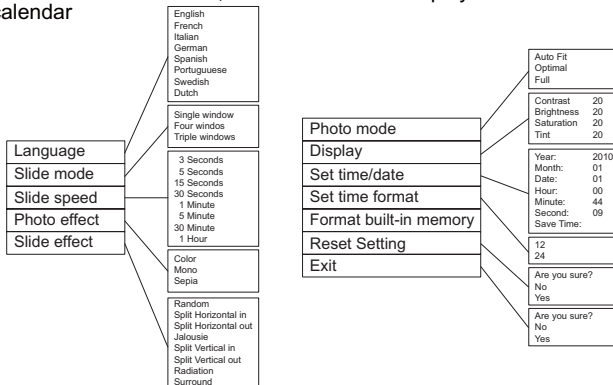

Select "SETUP" key to show setting menu,press "▲/▼" key to select setting items,press "◀/▶"key to adjust option,then press "ENTER" key to save the setting,press "EXIT" key to return to the first-level menu,then press "EXIT" key exit the setting menu.

## Chapter 3 Daily protection and maintenance

### 3.1 Digital photo frame protection

To reduce the risk of fire or electric shock, do not expose or use this product at rainy or moisture place

Do not block the intake of the back panel

Do not place this unit under sunshine

### 3.2 Panel cleanness

The panel is easy to broken , please take and put it gently  
If the panel 's surface is dirty, please clean it with the soft cloth ,  
if necessary , can wet the cloth with little water then clean it

## Chapter 4 Trooble Shooting

1. **Question:** What kind of photos does this device support?

**Answer:** The frame will display digital photos that are stored in the JPEG format, which is the standard format for nearly all digital cameras. Some cameras allow images to be stored as TIFF or RAW files as well as JPEG. Only the JPEG format is compatible with the frame. Photos of up to million pixels can be displayed.

2. **Question:** What should I do if the system does not respond when the power is turned on?

**Answer:** Please make sure the unit is properly connected to a power source. Then turn it off, re-connect the power and turn it on again.

3. **Question:** Why is the memory card not recognized?

**Answer:** The memory card might be inserted backwards or is not pushed far enough. After inserting the memory card in the right direction, if the still cannot be read, please turn off the unit and then power it on again.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>