



**SYLVANIA****STID970**

# USER'S MANUAL AND OPERATING INSTRUCTION



## FEATURES:

1. FSK/DTMF Dual System Caller ID Speakerphone
2. English / Spanish / French / Italian Selectable
3. Up to 90 Message Memories
4. 15 Digits of Name and 14 digits of Number of Incoming Call Display
5. New Incoming Call Indication
6. Real Time Clock Display
7. 3 One-Touch Dialing Memories
8. 10 Two-Touch Dialing Memories
9. 6 Levels of LCD Contrast Adjustment
10. VIP Function
11. Music On Hold Function
12. Tone / Pulse Switchable
13. Flash Time Selectable (100/200/300/400/500/600/700/800/900MS)
14. Low Battery Indicator
15. Ringer Volume Control
16. Handset Volume Control
17. Speakerphone Volume Control

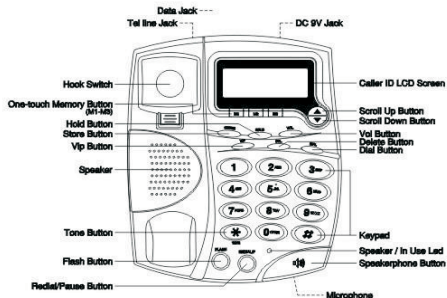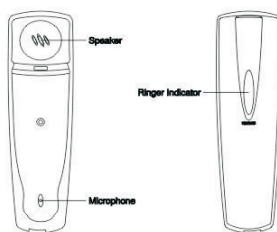

## INSTALLATION

- Plug one end of coiled cord to the jack of handset and the other end to the jack of the base set.
- Plug one end of flat cord to line jack of the phone and the other end to the wall jack
- Open the battery compartment cover, install 3pcs AA batteries (not included) or
- Connect the 9V adapter to the DC jack of the unit (not included)

Note: 1. Adapter and batteries are not included for the unit  
2. When inserting or replacing batteries, pick up the handset first, then replace the batteries, otherwise, all settings and memory will be lost.

## DESCRIPTION OF DISPLAYING

A. 3 line LCD displaying, upper line displays the basic information, middle line displays the number of in-coming call and bottom line displays the name of caller

- "LOW" appears when the battery power is in low status
- "NEW" appears when there are new incoming calls
- "CALL #" means the total amount of incoming calls
- "XX:XX AM/PM XX/XX" means Hour:Minute Morning/Afternoon Date/Month respectively

B. If the time and date of incoming call is different from the Telephone Company, the telephone will adjust the time and date automatically according to Telecom Provider when receiving calls.

C. If there is no operation or no incoming calls more than 20 seconds, LCD only displays time and date, total amount of received calls and amount of new incoming calls

D. This telephone can store up to 90 incoming calls. If there is a new call after the 90<sup>th</sup> call, the oldest one will be erased automatically and the new call will be stored.

## SETTING UP

Press [DIAL] for three seconds to enter the setting menu, use [▲] or [▼] to select from the menu including Date/Time, Local Area Code, Regional Area Code, Select Language, T/P Dial Mode. Press [FLASH] to exit setting manual.

### A. SET TIME/DATE

- When the LCD displays "DATE/TIME", press [DIAL] to enter
- Press [▲] or [▼] to set the present month
- Press [DIAL] to confirm the month
- Use the same method to set day, hour, minute and am/pm respectively.

### B. SET LOCAL AREA CODE

- When the LCD displays "LOCAL AREA CODE", press [DIAL] to enter
- Use [▲] or [▼] to select the first digit of area code
- Press [DIAL] to confirm the first digit
- Use the same method to set the rest digits

### C. SET REGIONAL AREA CODE

- When the LCD displays "REGIONAL AC S-1", press [DIAL] to enter
  - There are 3 groups of area code, 3 digits of each group. Use [▲] to select the first digit of area code
  - Press [▼] to skip to next digit
  - Press [DIAL] to confirm the first group
  - Use the same method to set the rest groups of area code.
- Note: You also can input the digits directly by using keypad.

### D. SET LANGUAGE

- When the LCD displays "SELECT LANGUAGE", press [DIAL] to enter
- Use [▲] or [▼] to select the desired language (ENGLISH=English, ESPANOL=Spanish, FRANCAIS=French, ITALIAN= Italian)
- Press [DIAL] to confirm

### E. SET TONE/PULSE

- When the LCD displays "T/P DIAL MODE", press [DIAL] to enter
- Press [▲] or [▼] to select the dialing mode: Tone / Pulse
- Press [DIAL] to confirm

### F. EXIT MENU

- When the LCD displays "EXIT SETUP", press [DIAL] to confirm and exit from the menu.

### G. LCD CONTRAST

- Press [VIP] button to adjust the LCD contrast level.
- There are totally six levels to be select. (Level 3 was set as default)

### H. FLASH TIME SELECTABLE

- Press [STORE] and then press [FLASH], "FLASH=600MS" will be shown on the screen
- Press [▲] or [▼] to select the suitable flash time (100/ 200/ 300/ 400/ 500/ 600/ 700/ 800/ 900MS)
- Press [STORE] again to confirm and exit the setting.

### I. RINGER VOLUME CONTROL

- Under off-hook state or during the incoming call is ringing, press [VOL] to adjust the ringer volume from level 1 to 4.

Note: ' □ □ □ ' means to turn the ringer volume as silent.

### J. HANDSET VOLUME CONTROL

- Pick the handset and press [VOL] to adjust the handset volume from level 1 to 4.

### K. SPEAKERPHONE VOLUME CONTROL

- Press [SPEAKER] button to adjust the speakerphone volume from level 1-4.



## RECEIVING CALLER ID INFORMATION

Note: You must make sure your Telephone Company offer caller ID service so that the caller ID function can be activated.

### A. Incoming Call Display

When there is an incoming call, the LCD will display the number, area code, name, time and date of the call.

### B. Please note the following indicator:

“UNKNOWN NUMBER”

The call is made through a telephone company, which does not offer Caller ID service or does not transfer calls by long distance net

“BLOCKED NUMBER”

Some areas allow the option for callers to prevent the telephone data from being displayed on others' telephone. If you received such a call, “BLOCKED CALL” will be shown on LCD

“MESSAGE WAITING”

If you apply message service to your telephone company, LCD will display “MESSAGE WAITING” when there is a message left.

## REVIEWING THE CALLER ID LIST

Press [▲] or [▼] to review the incoming calls (at most 90 calls)

## ERASING DATA FROM THE CALLER ID LIST

- Press [▲] or [▼] to select the wanted number, press [DEL] to erase the record
- If press [DEL] continuously more than three seconds, the LCD will display “ERASE ALL?”, press [DEL] once more and the entire Caller ID list will be erased.

## CALLING BACK A NUMBER FROM THE CALLER ID LIST

- Under on-hook state, press [▲] or [▼] to select the wanted number
- Press [DIAL] once, the LCD will display “PICKUP OR ADJ”(if the incoming call is 10 digits) or “PICK UP PHONE”(if the incoming call is 7 or 11 digits), pick up the handset and the displayed number will be dialed out automatically
- Under off-hook state, press [▲] or [▼] to select the wanted number
- Press [DIAL] once, if the displaying number is 7 or 11 digits, the displaying number will be dialed out automatically. (If the displaying number is 10 digits, it will be dialed out with adding '1' as the first digit automatically.)

## VIP FUNCTION

- During the reviewing caller ID list by using [▲] or [▼], press [VIP] to store the record to VIP.
- Press [VIP] again to cancel the [VIP] function

Note: The record cannot be deleted from the caller ID list if it was saved as VIP.

## TO STORE ONE-TOUCH MEMORY

- Under on-hook state, press [STORE] button, the LCD will display “M0-M9”

- Press the desire one-touch memory button among M1-M3, then the LCD will display “E1”, “E2” or “E3”.
- Press [STORE] button to confirm
- Enter the wanted number
- Press [STORE] again to confirm

Note: Use [DEL] button to edit during entering the wanted number.

## DAILING OUT FROM THE ONE-TOUCH MEMORY

- Pick the handset or press [SPEAKER] button, then press the desired one-touch key among M1-M3, the number will be dialed out automatically.

## TO STORE TWO-TOUCH MEMORY

- Under on-hook state, press [STORE] button, the LCD will display “M0-M9”
- Press the desire two-touch memory button among 0-9
- Press [STORE] to confirm
- Enter the wanted number
- Press [STORE] to confirm
- Enter the name by using key pad (e.g. enter “C”, just continuously press [2] key three times).
- Press [STORE] again to confirm

Note: Use [DEL] to edit during entering the wanted number or name

## DIALING OUT FROM THE TWO-TOUCH MEMORY

- Pick the handset or press [SPEAKER] button, press the [DIAL] button
- Press the desired two-touch memory key among 0-9 and the number will be dialed out automatically.

## MUSIC ON HOLD FUNCTION

- During the conversation, press [HOLD] key once, the LCD will display “MIC MUTE”
- Press [HOLD] once more or press [SPEAKER] button to go to talk with the caller

## LAST NUMBER REDIAL

The last outgoing number can be redialed automatically just by pressing the [REDIAL/P] key under off-hook state. This is useful especially if the line is busy.

## FLASH FUNCTION

- When in an office equipped with PABX, this telephone makes it easy to transfer calls
- Ask caller to wait and press [FLASH] key once
- Dial the extension number which caller intended
- When the party answers, just hang up the handset
- When the line is busy or nobody answers, press [FLASH] key again to re-connect with the caller


## PAUSE FUNCTION

In some cases, such as PABX or long distance service, pauses should be inserted in the dialing sequence. The unit provides stackable pause function which facilities flexible applications.

- Press [STORE] and then press [REDIAL/P] button, the LCD will display [PAUSE=4S].
- Press [▲] or [▼] to select pause time from 1/2/3/4/5/6/7/8/9S (1-9 seconds)
- Press [STORE] to confirm and exit.

## IMPORTANT NOTE:

To operation this unit, you must have “CALLER ID SERVICE” setup with your local telephone company. Some functions such as CALLER NAME INDICATION will only operate if such service are included in the user's Caller I.D. program with the local telephone company.

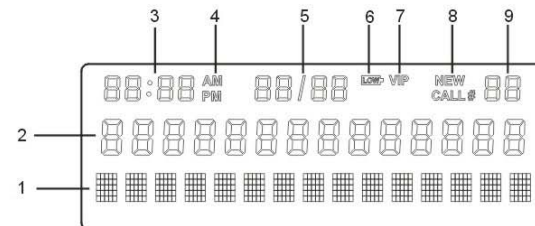

- |           |                          |
|-----------|--------------------------|
| 1. Name   | 6. Low Battery Indicator |
| 2. Number | 7. VIP                   |
| 3. Clock  | 8. New Calls             |
| 4. Am/pm  | 9. Number of Calls       |
| 5. Date   |                          |

## IMPORTANT SAFETY INSTRUCTIONS

When you use this telephone, follow these safety precautions to reduce the risk of fire, electric shock and injury.

- Read and understand all instructions
- Unplug the phone from the wall jack before cleaning with a damp cloth
- Do not use liquid or aerosol cleanser. Do not use this phone near water for example, near a bath tub, sink, or pool
- To reduce the risk of electric shock, do not push objects through the phone's slot or disassemble the phone. Pushing objects in the phone or opening or removing covers might expose you to dangerous voltages or other risk. Take it to a servicereperson when service or repair is required. Incorrect reassemble can cause electric shock when you use the telephone
- Do not place the phone on a bed, rug, and any similar surface or near a heater. The phone has slots and openings for ventilation that must not be blocked or covered.
- Do not place this phone on an unstable cart, stand or table. The phone might fall and be seriously damaged
- Unplug the phone from the phone line jack and refer service to servicereperson under the following conditions:
  - a) If the phone is exposed to rain or water
  - b) If the phone fails to operate normally
  - c) If the phone is dropped or the cabinet is damaged
  - d) If the phone exhibits a distinct change in performance
- Avoid using the phone during electrical storms. There is a risk of electric shock from lightning
- Do not use the phone to report a gas leak in the vicinity of the leak
- Follow all safety rules and use with caution when installing or modifying telephone lines. For example:
  - a) Do not install telephone wire during a lightning storm
  - b) Only install telephone jacks in dry locations unless the jack is specifically designed for wet locations
  - c) Avoid touching uninsulated telephone wires or terminals unless the telephone line is disconnected at the network interface

## SAVE THESE INSTRUCTIONS

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>