



Cat. No. 16-289

 
OWNER'S MANUAL


Please read before using this equipment.

13-Inch Color TV/Monitor



Radio Shack



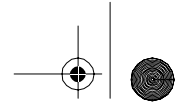

FEATURES

Your Radio Shack 13-Inch Color TV/Monitor has many features for easy and convenient TV viewing. Your TV is specially designed for the hearing-impaired, with a built-in digital decoder that allows you to read closed-captioned and text-service broadcasts. You can also use your TV to monitor an audio/video source that has audio/video outputs, such as a VCR or camcorder. The supplied remote control lets you operate the TV from a distance.

Your TV also includes these special features.

181-Channel Tuning Capability — lets you select up to 68 VHF/UHF channels and cable channels 1–125.

Automatic Channel Programming — automatically stores in memory all active channels in your area for quick tuning.

Programmable Sleep Timer — automatically turns off your TV after the time you set.

Auto Demonstration — lets you review the TV's set-up menus.

Bilingual On-Screen Display — lets you select English or Spanish for the on-screen language.

Automatic Picture Control — lets you select the factory preset picture so you do not need to manually adjust the picture controls.

Multicolored On-Screen Bar Graph Displays — show the relative adjustment level for each picture control.

Earphone Jack — lets you connect an earphone so you can listen without disturbing others.

Note: You need two AA batteries (not supplied) to power the remote control.

For your records, we suggest you record your TV's serial number here. The number is on the back of the TV.

Serial Number _____

© 1997 Tandy Corporation.
All Rights Reserved.

Radio Shack is a registered trademark used by Tandy Corporation.

SAFETY PRECAUTIONS

Power Supply: This TV operates on 120V, 60 Hz AC power only. Never connect the TV to a voltage other than the specified voltage (such as to the output of a nontransformer type converter or to direct current).

Polarized Plug: This TV is equipped with a polarized plug (one blade is wider than the other). This plug fits into an AC power outlet only one way. If you are unable to fully insert the plug into the outlet, try reversing the plug.



Installation: Do not expose the TV to any unnecessary jarring, moisture, dust, direct sunlight, or heat.

Select a place for this TV that minimizes the length of the antenna lead and power cord.

Allow sufficient space between the TV and wall so the chassis components are properly ventilated.

Do not cover the ventilation slots on the top or back of the TV or place the TV on any soft material that could affect ventilation on the bottom of the TV.

Warning: To prevent fire or shock hazard, do not expose this product to rain or moisture.

	CAUTION RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.		



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

CONTENTS

Getting Started	5
Choosing a Location	5
Connecting Antennas	5
Connecting an Outdoor Antenna	5
Connecting Cable TV	6
Connecting an Audio/Video Source	7
Connecting Power	7
Connecting Earphones	7
Installing the Remote Control's Batteries	8
Using the TV's Controls	9
Using the TV's Front Panel Controls	9
Using the Remote Control	10
Using Auto Demonstration	11
Operation	12
Turning the TV On/Off	12
Setting the On-Screen Language	12
Selecting the Input Signal	12
Selecting TV or Video	13
Using Automatic and Manual Channel Programming	13
Using Automatic Programming	13
Manually Adding a Channel	13
Manually Deleting a Channel	14
Auto Picture Control	15
Adjusting the Picture	15
Special Functions	17
Setting the Sleep Timer	17
Using Closed Captions	17
Selecting the Caption Function	19
Using the Text Function	19
Selecting Text	20
Troubleshooting	21
Care and Maintenance	22
FCC Information	23
Specifications	24

GETTING STARTED

CHOOSING A LOCATION

Choose a location for the TV where:

- Air flows freely on all sides.
- The power cord is not in the way of normal traffic.

Note: Do not plug in the power cord until you make all other connections.

CONNECTING ANTENNAS

The supplied rod antenna provides adequate reception in most areas.

To connect the rod antenna, insert it into the hole on the top of the TV. Attach the 300-ohm twin-lead connectors to the two screw terminals on the supplied adapter.

300 Ohm Flat Wire

300-to-75 Ohm Adapter

Then connect the adapter to the TV's **VHF/UHF (75Ω)** terminal.

Rod Antenna

300-to-75 Ohm Adapter

VHF/UHF (75Ω) Terminal

Connecting an Outdoor Antenna

For the best reception, we recommend you use an outdoor antenna.

Note: Before you connect the TV to an outdoor antenna, inspect the antenna and the antenna's cable. Severely weathered antennas and antenna cables can reduce the signal quality. Your local Radio Shack store sells replacement antenna cable (300-ohm flat wire or 75-ohm coaxial cable) and a wide variety of outdoor antennas.

The antenna connection you use depends on the type of antenna and cable you have.

Warning: When installing an outdoor antenna, read and follow all instructions and cautions that accompany the antenna.

- If you have a combination VHF/UHF antenna and the antenna uses 75-ohm coaxial cable, connect the cable directly to the TV's **VHF/UHF (75Ω)** terminal.

VHF/UHF Antenna

VHF/UHF (75Ω) Terminal

75 Ohm Coaxial Cable

- If you have a combination VHF/UHF antenna and the antenna uses 300-ohm flat wire, connect the flat wire to the screw terminals on the supplied 300-to-75 ohm adapter. Then connect the adapter to the TV's **VHF/UHF (75Ω)** terminal.

VHF/UHF (75Ω) Terminal
VHF/UHF Antenna

300-to-75 Ohm Adapter
300 Ohm Flat Wire

- If you have separate VHF and UHF antennas, use a VHF/UHF combiner (not supplied) to combine the VHF and UHF signals. Then connect the combiner's 75-ohm connector to the TV's **VHF/UHF (75Ω)** terminal.

VHF Antenna
UHF Antenna

VHF/UHF (75Ω) Terminal
VHF/UHF Combiner

CONNECTING CABLE TV

If you subscribe to a cable TV service, connect the cable company's 75-ohm coaxial cable directly to the TV's **VHF/UHF (75Ω)** terminal.

If you use a cable box, connect the box's output to the TV's **VHF/UHF (75Ω)** terminal.

From Cable Company

75-Ohm Coaxial Cable

OUT IN

Cable Box

Set the TV to the same channel as the box's output (Channel 3 or 4) and use the box to select channels.

Note to CATV System Installer: This reminder is provided to call the CATV system installer's attention to Section 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

You can listen to your TV by connecting an earphone to the TV's **EARPHONE** jack, or by connecting the TV's **AUDIO IN/VIDEO IN** jacks to a home audio system.

CONNECTING AN AUDIO/VIDEO SOURCE

You can use your TV to monitor an audio/video source (such as a VCR, camcorder or laser disc player). Connect the audio/video source's output jacks to the **AUDIO IN/VIDEO IN** jacks on the back of the TV.

AUDIO IN
VIDEO IN

CONNECTING EARPHONES

For private listening, plug a pair of earphones with a 1/8-inch mini-plug (not supplied) into the **EARPHONE** jack on the right side of the TV.

EARPHONE

To view the audio/video source, follow the steps in "Selecting TV or Video" and play the audio/video source according to its instructions.

Note: If you use the **EARPHONE** jack, use the TV's **VOLUME** control to adjust the volume.

CONNECTING POWER

Plug the TV's AC power cord into a standard AC power outlet.

Listening Safely

To protect your hearing, follow these guidelines when you use earphones.

- Set the volume to the lowest setting before you begin listening. After you begin listening, adjust the volume to a comfortable level.
- Do not listen at extremely high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- Once you set the volume, do not increase it. Over time, your ears adapt to the volume level, so a volume level that does not cause discomfort might still damage your hearing.

INSTALLING THE REMOTE CONTROL'S BATTERIES

The remote control requires two AA batteries (not supplied) for operation. For the longest battery life, use alkaline batteries (Radio Shack Cat. No. 23-552). To ensure consistent operation, change the batteries about once a year.

Batteries

1. Remove the battery compartment cover by pressing down and sliding it in the direction of the arrow.
2. Install two AA batteries as indicated by the polarity markings (+ and -) inside the compartment.

Cautions:

- Batteries installed incorrectly might leak and damage the remote control.
 - Do not mix old batteries with new ones, and do not mix different types of batteries (for example, standard and alkaline).
3. Replace the cover.



USING THE TV'S CONTROLS



USING THE TV'S FRONT PANEL CONTROLS

This section briefly describes the function of each button on the TV's front panel. Each function is described in detail later in this manual.

Remote Control Receiver

 
 
 


FUNCTION — Selects the different on-screen function controls.

VOL — Press the top **VOL** button to increase the volume and bottom **VOL** button to lower it. The number of vertical bars at the lower part of the screen indicates the relative volume level. You also use these buttons to adjust the TV's on-screen function controls.

CH — Press the top **CH button** to select the next higher channel and the bottom **CH** button to select the next lower channel. Press and hold down either button to quickly scroll through channels. See "Using Automatic and Manual Channel Programming" on Page 13.

POWER — Turns on or off the TV.



USING THE REMOTE CONTROL

The remote control has the same controls as the TV's front panel, as well as the additional controls described in this section.

To operate the remote control, point its front window toward the TV's front panel. Then press the desired button(s) on the remote control.

Channel Selection Buttons

Channel Selection (Number) Buttons — Press to directly select a channel. The selected channel number appears on the screen for about 5 seconds.

- To select a single-digit broadcast (AIR) channel — Channel 5, for example — press **5**. You do not need to press **0** before entering a single-digit channel (but, if you do, the TV changes channels faster).
- To select a double-digit broadcast channel — Channel 12, for example — press **1** and then **2**.
- To select a three-digit cable channel — Channel 121, for example — press **1**, **2**, and **1**.

Note: You must select **CABLE** as the input source before you can select a cable channel. See "Selecting the Input Signal" on Page 12.

 
RECALL — Displays the current channel number for about 5 seconds. Also clears the on-screen function displays.

SLEEP — Sets the sleep timer.

PICTURE — Selects a picture control (contrast, brightness, color, tint, or sharpness) for adjustment.

TV/VIDEO — Selects the TV or VIDEO mode.

CAPTION — Turns the closed caption decoder on or off.



REVIEW — Returns to the previously selected channel.

MUTE — Press once to mute the sound. **MUTE** appears on the screen. Press again to restore the sound.

APC (Auto Picture Control) — Returns to the factory preset picture settings or the settings you select.

SET-UP — Selects the different on-screen function controls. (This button is similar to the **FUNCTION** button on the TV; however, it only performs set-up operations.)

 
 
 
USING AUTO DEMONSTRATION

Auto demonstration lets you see all the on-screen controls.

1. Press **SET-UP** on the remote control until **AUTO DEMO .** appears on the screen.
2. Press **VOL +** or **-** to start the demonstration. The screen shows the different controls and adjusts them so you can see how each one works.

When the demonstration reaches the last display, it starts again from the beginning.

3. To stop auto demonstration, press any button on the remote control or front panel. The picture returns to the settings selected before the demonstration.



OPERATION

TURNING THE TV ON/OFF

Press **POWER** on the TV's front panel or remote control to turn the TV on or off.

SETTING THE ON-SCREEN LANGUAGE

1. Press **SET-UP** on the remote control or **FUNCTION** on the front panel until **LANGUAGE** appears on the screen.

2. Press **VOL +** or **-** so the arrow points to **ENGLISH** or **ESPAÑOL** (Spanish).
3. The on-screen display automatically clears in about 5 seconds. Or, you can press **RECALL** to clear it.

All on-screen displays are now in the selected language.

SELECTING THE INPUT SIGNAL

Follow these steps to select between receiving cable stations and receiving broadcast channels.

1. Press **SET-UP** on the remote control or **FUNCTION** on the front panel until **INPUT SELECTION** appears on the screen.

Note: When you press **SET-UP** on the remote control, **VIDEO** does not appear as a selection. Press **TV/VIDEO** on the remote control to select **VIDEO** (see "Selecting TV or Video" on Page 13).

2. Press **VOL +** or **-** so the arrow points to **AIR**, **CABLE**, or **VIDEO**.

Select **AIR** if you are using an antenna or **CABLE** if you are using a cable service. Select **VIDEO** to view the audio/video source connected to the TV's input jacks.

3. The on-screen display automatically clears in about 5 seconds. Or, you can press **RECALL** to clear it.

SELECTING TV OR VIDEO

Press **TV/VIDEO** on the remote control to view the selected input signal (**TV**) or the audio/video source connected to the TV's input jacks (**VIDEO**).

3. Press **VOL +** or **-**. The TV automatically scans and memorizes all active channels in your area.

USING AUTOMATIC AND MANUAL CHANNEL PROGRAMMING

When you turn on the TV for the first time, use the automatic channel programming feature to scan and memorize all active broadcast and cable channels in your area. If there are additional channels you want to add or delete, you can manually add or delete them.

Using Automatic Programming

1. Press **TV/VIDEO** so **TV** is selected.
2. Press **SET-UP** on the remote control or **FUNCTION** on the front panel until **AUTO PROGRAM** appears on the screen.

Note: You can press any button on the remote control or front panel to stop automatic programming.

When the TV has scanned and stored all active channels, it stops on the nearest programmed channel to where you started.


Now, when you press **CH +** or **-**, the TV skips inactive channels.

Note: If the TV is unplugged for more than 24 hours, you must repeat automatic channel programming to restore channels in memory.

Manually Adding a Channel

To add a channel that was not stored during automatic programming, follow these steps.

1. Press **TV/VIDEO** so **TV** is selected.

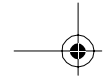

2. Select the input signal (**AIR** or **CABLE**).

3. Use the remote control's number button(s) to select the channel you want to store.

4. Press **SET-UP** on the remote control until the channel number, **ADD**, and **DELETE** appear on the screen.

5. Press **VOL +** or **-** so the arrow points to **ADD**.
6. The on-screen display automatically clears in about 5 seconds. Or, you can press **RECALL** to clear it. The channel is added.

 
 
Manually Deleting a Channel

If the TV stored a channel you do not want, follow these steps to delete the channel from memory.

1. Press **TV/VIDEO** so **TV** is selected.
2. Select the input signal (**AIR** or **CABLE**).

3. Press **CH +** or **-** or the remote control's number button(s) to select the channel you want to delete.

4. Press **SET-UP** on the remote control until the channel number, **ADD**, and **DELETE** appear on the screen.



5. Press **VOL +** or **-** so the arrow points to **DELETE**.

6. The on-screen display automatically clears in about 5 seconds. Or, you can press **RECALL** to clear it. The channel is deleted.

appears. If you want to return to the picture controls you previously selected, press **APC** until **PICTURE RESET OFF** appears.

ADJUSTING THE PICTURE

Follow these steps to adjust the picture's contrast, brightness, color intensity, tint, and sharpness.


1. Press **PICTURE** on the remote control or **FUNCTION** on the front panel until the desired picture control appears.
2. Adjust the selected control level by pressing **VOL +** or **-**.

AUTO PICTURE CONTROL

Press **APC** on the remote control to display the Auto Picture Control status. When **PICTURE RESET** is set to **ON**, the TV's picture shows the factory settings. If you adjust the picture, **ON** automatically changes to **OFF** (see "Adjusting the Picture").





If you have adjusted the picture and want to return to the factory settings, press **APC** until **PICTURE RESET ON**

The bar graph on the screen shows the relative adjustment level.

 

Refer to the following picture control chart.

CONTROL	CONTROL BUTTON	
	-	+
CONTRAST	Lower	Higher
BRIGHTNESS	Darker	Brighter
COLOR INTENSITY	Lighter	Deeper
TINT	Reddish	Greenish
SHARPNESS	Softer	Sharper

    


SPECIAL FUNCTIONS

SETTING THE SLEEP TIMER

You can set the sleep timer to automatically turn off the television after the selected time period.

Follow these steps to use the sleep timer.

1. Press **SLEEP** on the remote control until the desired time period appears on the screen: ---, 240, 210, 180, 150, 120, 90, 60, 30, 20, or 10 minutes.

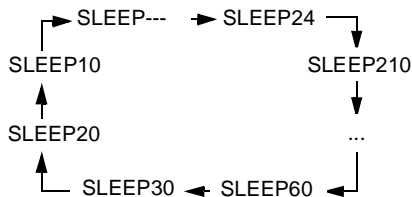

2. Wait about 5 seconds for the display to automatically clear. The timer begins to count down for the selected number of minutes.

Notes:

- To view the remaining sleep time, press **SLEEP** once. After about 5 seconds, the display clears.
- To cancel the sleep timer, press **SLEEP** until the display shows **SLEEP ---**. After about 5 seconds, the display clears.

USING CLOSED CAPTIONS

Closed captioning displays the audio portion of a television program as written words that appear on the television screen (in a form similar to English subtitles). Closed captions allow viewers to read the dialogue and narration of television programs.

Caption signals are transmitted as part of the TV broadcast and then decoded by the TV to display as words.

Caption Tips

- Sometimes TV stations broadcast two different caption signals on the same channel. By selecting **MODE 1** or **MODE 2** under **MODE SELECTION**, you can choose which signal to view. **MODE 1** is usually the signal with the captions, while **MODE 2** might show demonstration or programming information.
- Not all TV broadcasts include closed caption signals. Check your local programming guide.



- Your TV might not properly receive caption signals in the following situations.

Ignition: Black spots or horizontal streaks appear; picture flutters or drifts. Usually caused by interference from an automobile ignition system, neon lamps, drills, or other electrical appliances.

Ghosts: Double images appear. Ghosts are caused by the television signal following two paths: the direct path and another reflected from a building, hill, or other object. Changing the direction or position of the antenna might improve the reception.

Snow: Small dots in the picture. If your TV is located at the fringe area of a television broadcast, where the signal is weak, you might need to install a special antenna to improve the picture.

You are using an old, bad, or illegally recorded tape in the VCR connected to the TV.

An airplane or car is interfering with the TV signal.


The signal from the antenna is weak.

The program wasn't captioned when it was produced, transmitted, or taped.

- If you connect a VCR that has a captioning function, note the following.

For the best reception of caption signals, connect a signal distributor as shown.

75-Ohm Antenna Jack
CATV Output Terminal
Signal Distributor
Back of TV
Antenna Input Terminal
Back of VCR
TV Input Terminal

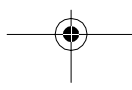

Select the caption function for either the TV or the VCR, but not both. If both are decoding caption signals, captions might overlap or reception might be poor.

4. To turn off captions, press **CAPTION** or **FUNCTION** so **DECODER** appears, then press **VOL +** or **-** so the arrow points to **OFF**.

Selecting the Caption Function

1. Press **CAPTION** on the remote control or **FUNCTION** on the front panel so **DECODER** appears. Then press **VOL +** or **-** so the arrow points to **ON**.

Note: If you select captioning and then turn off the TV, captioning is still active when you turn on the TV again.

USING THE TEXT FUNCTION

2. Press **CAPTION** or **FUNCTION** so **DECODER MODE** appears. Then press **VOL +** or **-** so the arrow points to **CAPTION**.

Text is information presented in a black box on the television screen as a service to viewers. Some examples of text broadcasts are captioned program lists, weather forecasts, stock exchange reports, and wire-service news.

3. Press **CAPTION** or **FUNCTION** until **MODE SELECTION** appears. Press **VOL +** or **-** so the arrow points to **MODE 1** or **MODE 2**.

Some television stations provide two different text services. You can choose between the two text signals by selecting **MODE 1** or **MODE 2** under **MODE SELECTION**.

Note: Not all television stations provide text services.

Selecting Text

1. Press **CAPTION** on the remote control or **FUNCTION** on the front panel to display **DECODER**. Then press **VOL +** or **-** so the arrow points to **ON**.
2. Press **CAPTION** or **FUNCTION** so the display shows **DECODER MODE**. Then press **VOL +** or **-** so the arrow points to **TEXT**.
3. Press **CAPTION** or **FUNCTION** so the display shows **MODE SELECTION** and press **VOL +** or **-** so the arrow points to **MODE 1** or **MODE 2**.
4. To turn off the text function, press **CAPTION** or **FUNCTION** so **DECODER** appears, then press **VOL +** or **-** so the arrow points to **OFF**.

Note: If the signal for the text program is weak, the black box might appear and disappear on the screen. This problem goes away when reception improves.

TROUBLESHOOTING

If you have problems with your 13-inch Color TV/Monitor, review the suggestions below. If you cannot eliminate the problem, contact your local Radio Shack store for assistance.

Problem	Suggestion
No power.	Make sure the power cord is plugged in
	Make sure the television is turned on.
No picture or sound.	Try another channel.
	Check the Air, Cable, or Video setting.
	Check all connections.
Sound is OK; picture is poor.	Try another channel (station trouble).
	Check all connections.
	Adjust the picture controls.
Poor reception.	Adjust the antenna.
	Check all connections.
	Might be local interference.
Lines in picture or ghosts (multiple images).	Try another channel (station trouble).
	Adjust the antenna.
	Adjust the picture controls.
	Check all connections.
Remote control doesn't work.	Might be local interference.
	Check batteries in the remote control.
Cannot tune to the desired channel.	Try another channel (station trouble).
	Check the Air, Cable, or Video setting.
	Channel might not be programmed in channel memory. Store it using auto or manual programming.

CARE AND MAINTENANCE

Your Radio Shack 13-Inch Color TV/Monitor is an example of superior design and craftsmanship. The following suggestions will help you care for your TV/Monitor so you can enjoy it for years.



Keep the TV/Monitor dry. If it gets wet, wipe it dry immediately. Liquids might contain minerals that can corrode the electronic circuits.



Handle the TV/Monitor gently and carefully. Dropping it can damage circuit boards and cases and can cause the TV/Monitor to work improperly.



Use and store the TV/Monitor only in normal temperature environments. Temperature extremes can shorten the life of electronic devices and distort or melt plastic parts.




Keep the TV/Monitor away from dust and dirt, which can cause premature wear of parts.



Wipe the TV/Monitor with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the TV/Monitor.

Modifying or tampering with the TV/Monitor's internal components can cause a malfunction and might invalidate your TV/Monitor's warranty and void your FCC authorization to operate it. If your TV/Monitor is not performing as it should, take it to your local Radio Shack store for assistance.

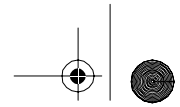





FCC INFORMATION


This TV/Monitor complies with the limits for a Class B digital device as specified in Part 15 of *FCC Rules*. These limits provide reasonable protection against radio and TV interference in a residential area. However, your TV/Monitor might cause TV or radio interference even when it is operating properly. To eliminate interference, you can try one or more of the following corrective measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the TV/Monitor and the radio or TV.
- Use outlets on different electrical circuits for the TV/Monitor and the radio or TV.

Consult your local Radio Shack store or an experienced radio/TV technician if the problem still exists.

    You must use shielded cables with this equipment.



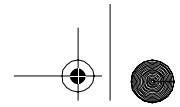

SPECIFICATIONS

System NTSC-M

Picture Tube Type No. A34KPU02XX

Horizontal Resolution 260 Lines

Receiving Channels Broadcast VHF: 2∠13
Broadcast UHF: 14∠69
CATV: 1∠125

Intermediate Frequency Picture IF Carrier Frequency: 45.75 MHz
Sound IF Carrier Frequency: 41.25 MHz
Color Sub-Carrier Frequency: 42.17 MHz

Maximum Sensitivity VHF: 28 dB μV max; UHF/CATV: 32 dB μV max

Antenna VHF/UHF 75-Ohm Unbalanced

Power Source AC 120V, 60Hz

Power Consumption 85 W Maximum

Output Power 1.2 W Maximum

Load Impedance 16 Ohms

Frequency Response 80 Hz–7 kHz (3 dB Bandwidth)

Total Harmonic Distortion 2%

 
 
 
 
Speaker 16 Ohm 1.5 Watt (Maximum 3W)

 
Input Level:
Video 1 Vp-p (75-Ohm Terminated)
Audio 400 mV rms

Dimensions (HWD) 14³/₄ × 14⁶/₇ × 14²/₉ Inches (375 × 377.5 × 361.5 mm)





Weight 17 lb 8 oz (7.9 kg)






Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.








NOTES

    

     

 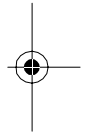

 

RADIO SHACK LIMITED WARRANTY

 
 
This product is warranted against defects for 90 days from date of purchase from Radio Shack company-owned stores and authorized Radio Shack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your Radio Shack sales slip** as proof of purchase date to any Radio Shack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage.

EXCEPT AS PROVIDED HEREIN, RADIO SHACK MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

We Service What We Sell




9/94



RADIO SHACK
A Division of Tandy Corporation
Fort Worth, Texas 76102

P/N 482-H59L
Printed in Mexico

   1A7



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>