

tangent

CDP-50

Operation Manual
CD-Player



tangent



have about your Tangent CDP-50.
the unit!

ACCESSORIES

Accessories 01

CONTENTS

Contents 02

SAFETY PRECAUTIONS

Safety precautions 03

IMPORTANT SAFETY INSTRUCTIONS

Important safety instructions 04

IMPORTANT INFORMATION

Important information 06

CONNECTION

Connection to the mains 07

REMOTE CONTROL

Installation of batteries 08
 Using the remote control 08
 Remote control functions 09

FRONT PANEL AND CONNECTIONS

Front panel 10
 Connections 11
 Explanation of LCD Display 11

CONNECTION

Audio connection layout 12

OPERATION AND FUNCTIONS

ON, OFF and standby 13
 Load a disc 13
 Play 13
 Pause 14
 Stop/Clear 14
 Previous and next 14
 Forward and rewind 15
 Random 15
 Program 16
 Repeat 16

TROUBLESHOOTING

Troubleshooting 17

TECHNICAL DATA

 
Technical data 18



A triangle with a lightning symbol draws the user's attention to "dangerous voltage" without insulation in the cabinet which may be high enough to entail a risk of electric shock.



A triangle with an exclamation mark draws the user's attention to important instructions for use and maintenance in the accompanying manual, which should be studied.



A symbol for CLASS II (double insulation)

WARNING: TO MINIMISE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THE UNIT TO RAIN OR MOISTURE. DO NOT OPEN THE CABINET AS IT CONTAINS DANGEROUS VOLTAGE. ONLY QUALIFIED TECHNICIANS ARE ALLOWED TO CARRY OUT REPAIR AND SERVICE.

CAUTION: If the plug of the power cord needs to be replaced, it is important that the replacement is identical to the plug to be replaced, or that the new plug has been recommended by the manufacturer.

TO AVOID ELECTRICAL SHOCK, IT IS IMPORTANT TO INSERT THE PLUG CORRECTLY INTO THE SOCKET.

WARNING: IT IS IMPORTANT THAT YOU READ AND OBSERVE BOTH THE INSTRUCTIONS IN THIS MANUAL AND THE INSTRUCTIONS ON THE UNIT. KEEP THIS MANUAL FOR FUTURE REFERENCE.

This unit was designed and manufactured with a view to providing maximum safety for the user. Incorrect use of the unit may cause electrical shock or fire. The protection devices built into this unit will protect the user if the procedures below are observed in connection with installation, use and repair. This unit is fully electronic and contains no parts that can be repaired by the user.

DO NOT REMOVE THE CABINET. RISK OF DANGEROUS VOLTAGE. ONLY QUALIFIED TECHNICIANS ARE ALLOWED TO REPAIR THE UNIT.

 
Read the manual

Upon unpacking the unit, please read the manual carefully and observe all the instructions given.



Heat

Do not place the unit near sources of heat such as radiators, heat registers, ovens or other units that produce heat.

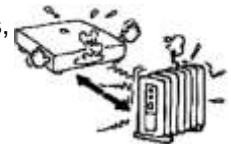

Power supply

Only the power supply indicated on the rating plate must be used for this unit. If you are not sure which power supply you have, please contact the distributor or the local electricity supplier.



Water and moisture

The unit must not be placed close to water, such as bathtub, wash basin, kitchen sink or laundry tub, in a damp cellar or close to a swimming pool, etc.



Cleaning

Unplug the unit before cleaning. Do not use liquid detergents and aerosol cleaning agents. Use a dry cloth.



Earthing or polarisation

If the plug cannot be inserted properly into the socket, or if the plug does not fit, the unit must not be used in your country.



Ventilation

The cabinet is provided with slots and openings to ensure ventilation and reliable operation and to protect the unit against overheating. Do not block or cover these openings. The openings must never be blocked, for instance by placing the unit on a bed, a sofa, a carpet or similar surface.

Power cords

Wiring must be organised to prevent people from stepping on the cables and to avoid pinching by objects placed on or beside them. Take special care around sockets and plug boxes and where the power cords leave the unit.



Overloading

Make sure that wall sockets, extension cords and plug boxes are not overloaded as this may lead to fire or electrical shock.



Lightning

Unplug the unit for additional protection during thunder or when the unit is not used for prolonged periods. This will prevent damage to the unit from lightning and power surges.

**Penetration of objects and liquid**

Never push any foreign objects through the openings into the unit, as they may touch dangerous voltage points or short-circuit parts and thus cause fire or electric shock. Do not spill liquid on the unit.

**Accessories**

Do not place the unit on unstable surfaces such as a trolley, stand, tripod, shelf or table. The unit may fall and injure children or adults or be seriously damaged. Use only trolley, stand, tripod, shelf or table that is very stable or provided with the Unit. The unit must be installed in accordance with the manufacturer's instructions and by means of installation equipment recommended by the manufacturer.

If the unit is placed on a trolley, the trolley must be moved very carefully. Sudden stops, unnecessary force and uneven surfaces may cause the trolley to turn over.

**Loads**

Do not place heavy loads on the unit and do not step on it. The load may fall and cause serious injury to persons or damage to the unit.

**Damage**

Unplug the unit and contact qualified technicians in the following cases:

- A) If the power cord or the plug is damaged.
- B) If liquid has been spilled on the unit or objects have fallen into the unit.
- C) If the unit has been exposed to rain or water.
- D) If the unit does not work properly after adhering to the instructions in the operation manual. Only the settings described in the operation manual must be made as incorrect setting may result in damage and often will make it difficult for a qualified technician to make the unit work properly again.
- E) If the unit has been dropped or damaged in any other way.
- F) When the operation of the unit changes drastically, the unit requires service.

Service

Do not attempt to carry out any service work yourself. By opening or removing the cabinet, you will be exposed to dangerous voltage or other hazards. Any service work should be carried out by qualified technicians.

**Spare parts**

If spare parts are required, make sure that the service technician uses spare parts specified by the manufacturer or spare parts with the same characteristics as the original. Unauthorised spare parts may cause fire, electrical shock, etc.

Safety check

After service or repairs on the unit, ask the service technician to carry out a safety check to ensure that the unit is ready for use.



Handling instructions

- The top and back panel of the unit may become warm after prolonged use. This is not due to a defect.
- Turn off the power when the unit is not used.

Protect the power cord

Follow the instructions below to prevent abnormal operation, electrical shock, fire or personal injury:

- Hold the plug firmly when inserting it into the socket.
- Avoid heat-producing devices.
- Do not place objects on the power cord.
- Do not carry out service work on or change the power cord.

Positioning

Do not place the unit in any of the fol. places:

- In sunlight, close to heat-producing devices or in an enclosed rack.
- In places with high temperatures (40C or more) or high relative humidity (90% or more).
- In dirty places as some internal parts may be damaged.

Do not put your fingers or any other objects into the unit

- Touching the internal parts is dangerous and may cause injury or damage. Do not open the cabinet.
- Do not place any foreign matter in the unit.

Interference

 
Placing the unit near a television set, radio or video player may cause poor picture and sound quality. In that case, move the unit further away from the television set, radio or video player.

Condensation


Condensation may occur in the following cases:

- When the unit is moved directly from a cold to a warm place.
- When the unit is used in a room where the radiator has just been switched on or a place where the cold air from the air-conditioning system is directed at the unit.
- If the unit is used in the summer in a warm and humid room just after it has been moved from an air-conditioned room.
- If there is steam or a high level of humidity in the room.

In case of condensation, the unit will not work properly. Turn off the unit. Unplug the unit and leave it for 2-3 hours. The unit will then have adapted to the environment and any condensation will have disappeared.

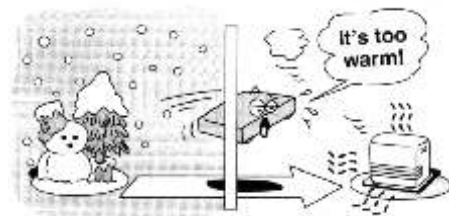

CONNECTION

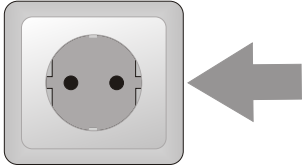 

Do not turn on the power before all connections have been made correctly. Check that all connections have been made correctly before turning on the power. Check that the mains voltage is 230-240V AC50Hz before turning on the power.




Connection to the mains

Check that all other connections have been made correctly before inserting the mains plug into the wall socket.

Then insert the plug into a suitable socket.

If the unit is to be used abroad, you may need an adapter.

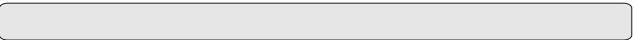

- 1 
- 2
- 3
- 4
- 5
- 6
- 7 
- 8
- 9
- 10
- 11
- 12
- 13
- 14
- 15
- 16 
- 17
- 18
- 19
- 20

Some of the functions of the unit can only be performed by means of the remote control. Some functions are connected with the selected signal input source. Some buttons on the remote control may therefore not be available if the corresponding signal input source has not been selected.

 
FRONT PANEL AND CONNECTIONS

Front panel



- 1 **Mains switch:** Used to interrupt the mains voltage.
- 2 **LED indicator:** Lights green when the unit is turned on. Lights red when the unit is in standby mode or in operation.
- 3 **Program:** Makes it possible to play the tracks of a CD a certain order.
- 4 **Random:** Makes it possible to play the tracks of a CD in random order.
- 5 **Previous:** Selects the previous track.
- 6 **Next:** Selects the next track.
- 7 **Play/Pause:** Starts playback at first press and stops playback at second press.
- 8 **Stop:** Stops playback completely.
- 9 **Open/Close:** Opens and closes the CD tray.
- 10 **Disc tray:** CD tray.


Connections

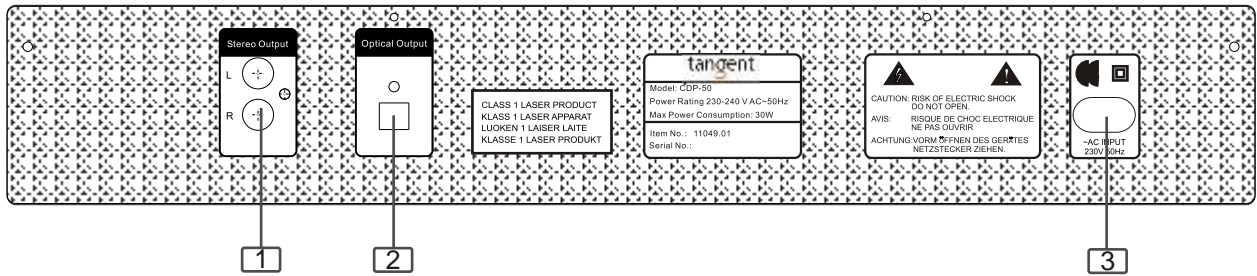

- 1 **Stereo Output:** Analogue stereo output. For connection to stereo amplifier or receiver with analogue input.
- 2 **Optical Output:** Optical SPDIF output. For connection to stereo amplifier or receiver with digital input.
- 3 **AC input:** For connection of mains voltage. Make sure that the plug has been correctly inserted, and that the voltage corresponds to the text printed on the back panel of the cabinet.

Explanation of LCD display

 This unit does not feature any OSD (On Screen Display). Instead it features a more descriptive LCD display that displays all the information required. Below you can see a picture of the display and an explanation of the various symbols.

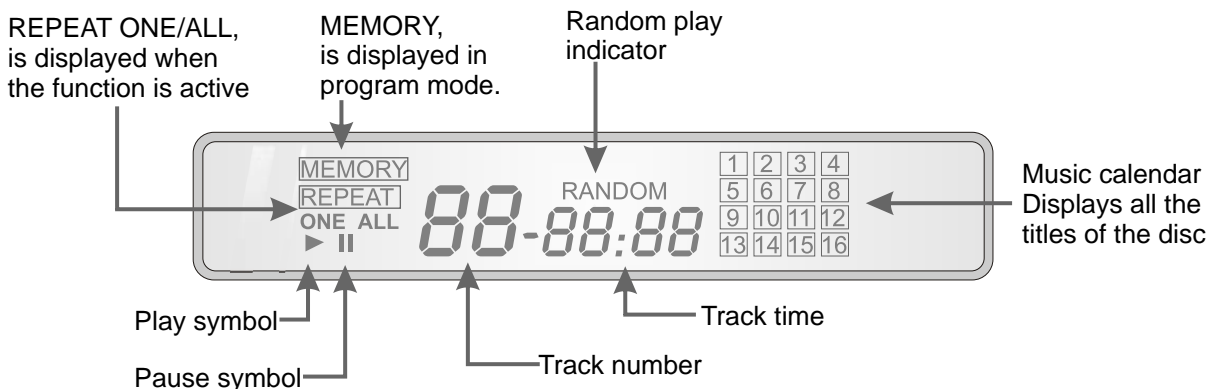


NEO

CLASS 1 LASER PRODUCT
KLASS 1 LASER APPARAT
LUOKEN 1 LAISERILAITTE
KLASSE 1 LASER



On, Off and standby

 - 1 Turn on the unit by pressing the mains switch.
- 2 Press the standby button on the remote control to switch to standby mode. The display will turn off and all functions will be reduced to a minimum to make sure that the unit uses minimal power. When in standby mode the unit only reacts to the standby button of the remote control.
- 3 If you wish to turn off the unit to avoid any power consumption, you must press the mains switch.

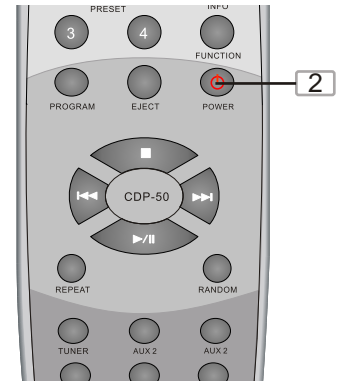

Protect the environment and turn off the unit after use.

 


Load a disc

If you want to play a disc, you must load it. You do that by pressing the eject button on the remote control or on the front panel of the CD player.

When the disc has been read, the display will show the number of tracks on the disc and the total playback time.

If there is not disc in the tray, the message "NO DISC" will be displayed. If the unit has trouble reading a disc, you must check if the disc is clean and free from dirt. If the disc can still not be played, you must contact your dealer.



Play

Press the PLAY/PAUSE button on the remote control or on the front panel once to start playback.

The display will show a small play symbol, which track is played, how long the current track has been playing, and the music calendar will show how many tracks are left.

 


Pause

Press the PLAY/PAUSE button once more to stop playback.

The small play symbol will disappear, and a small pause symbol will be displayed instead.

To continue playback, press the PLAY/PAUSE button again.




Stop/Clear

To stop playback completely, press the STOP button once.

The display will again display the number of tracks on the disc and the total playback time.

 To delete all previous programming settings you must press the STOP button once more.





Previous and next

From the CD track being played it is possible to switch to the previous track or to the next track.

If you want to continue to the next track, you must press the >> (next) button on the remote control or on the front panel once. If you want to move on several tracks, you must press >> until you reach the track desired.

  If you wish to go back to one of the previous tracks, you must use the same procedure but not the same button. Use the << (Previous) button instead.




Forward and rewind

It is possible to perform a search in the track played.

If you wish to search forward, depress the >> (next) button until you get to that part of the track that you wish to hear. You will see that the time counter in the display counts up very quickly.

 If you wish to search backward, use the same procedure as when you search forward, but use the << (Previous) button instead.



Note:

The search speed will increase the longer you depress the button. When searching, the volume will be lower than usual.

The search function can be activated in pause mode, but no sound will be heard.

Random

It is possible to select random play by pressing the RANDOM button on the remote control or the front panel.

The CD tracks will be played in random order. The text RANDOM will be displayed when this function has been activated.

It is possible to activate random play both in stop mode and during playback.

Press the RANDOM button again if you wish to deactivate random play.



Note:

When you press << or >> during random play, it will not be possible to select the next track but any other track.

Program

The CDP-50 can be programmed to play the tracks of a CD in a certain order. Press the PROGRAM button when playback has been stopped. The MEMORY symbol and "Pr p:01" will be displayed. Use << and >> to select the track that you wish to include in the programming and confirm your choice by pressing the PROGRAM button again. This procedure must be repeated until you have selected all the tracks that you wish to hear.

 
 
The tracks that have been selected are shown on the display by means of the music calendar. It will also be possible to view the total number of tracks programmed by means of the text "p:09". (P:09 if you have programmed a total of 9 tracks.)

Press the PLAY button to start playback.

Press the STOP button twice to deactivate the programming function. Then the normal display will return.

Note:

When you press << or >>, you will select the next track in the programmed order.



Repeat

The CDP-50 can be set to repeat one or all tracks of a CD. This is done by means of the REPEAT button on the remote control. (Note that this function can only be activated by means of the remote control).

 
 
If you press the button once, one track will be repeated and the message "REPEAT ONE" will be displayed.

If you press the button twice, all tracks will be repeated and the message "REPEAT ALL" will be displayed.

If you wish to deactivate the repeat function, press the REPEAT button for a third time.

Note:

This function can also be used when "Program" has been activated.



Troubleshooting

PROBLEM	CAUSE/REMEDY
No power when unit is turned on.	<ul style="list-style-type: none"> - Switch on the electric current at the socket. - Check that the plug has been correctly inserted into the socket. - The internal fuse has blown and must be replaced by a qualified service technician. - The power cord has been damaged and must be replaced.
No sound.	<ul style="list-style-type: none"> - The unit has not been turned on. - Incorrect connection to the amplifier. - No loudspeakers have been connected to the amplifier. - No CD in the unit.
The unit will not read the disc.	<ul style="list-style-type: none"> - Check if the disc has been turned upside down. - Check if the disc is clean and undamaged. - Check if it is a CD or a CD-r.
The unit skips some parts during playback.	<ul style="list-style-type: none"> - Check if the disc is clean and undamaged. - The unit is positioned on an unstable surface.
A buzzing can be heard.	<ul style="list-style-type: none"> -The RCA cables between the CDP-50 and the amplifier/receiver have been damaged. -The RCA cables between the CDP-50 and the amplifier/receiver have been wound around the power cord.

Technical data

Output voltage	0.7V+/-2dB
Frequency characteristics (Reference: 1kHz 0dB)	
20 Hz 0dB	-0.5 dB +/- 1 dB
100 Hz 0dB	0 dB +/- 1 dB
10 kHz 0dB	-0.5 dB +/- 2 dB
20 kHz 0dB	-3.0 dB +/- 2 dB
Channel balance	< 2.0 dB
Separation	> 60 dB
Harmonious distortion (T H D + noise)	< 0.05%
Signal/noise ratio	> 990 dB
Voltage and power consumption	See back panel
Dimensions (WxDxH)	430 x 290 x 75 mm
Weight	4.3Kg

We reserve the right to change the technical data and the design of the product without notice as a result of further development.

tangent

www.tangent-audio.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>