

THE
SHARPER
IMAGE

ONE YEAR LIMITED WARRANTY

SI PRODUCTS sells its products with the intent that they are free of defects in manufacture and workmanship for a period of one year from the date of original purchase, except as noted below. SI PRODUCTS warrants that its products will be free of defects in material and workmanship under normal use and service. This warranty extends only to consumers and does not extend to Retailers.

To obtain warranty service on your SI PRODUCTS product, mail the product and your dated sales receipt (as proof of purchase), postpaid, to the following address:

SI PRODUCTS

Return Center

43155 W. Nine Mile Road Suite 3

Novi, MI 48375

No COD's will be accepted.

SI PRODUCTS does not authorize anyone, including, but not limited to, Retailers, the subsequent consumer purchaser of the product from a Retailer or remote purchasers, to obligate SI PRODUCTS in any way beyond the terms set forth herein. This warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; improper installation; unauthorized repairs or modifications; improper use of electrical/power supply; loss of power; dropped product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; transportation damage; theft; neglect; vandalism; or environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; or any other conditions whatsoever that are beyond the control of SI PRODUCTS.

This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. A product that requires modifications or adoption to enable it to operate in any other country than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

THE WARRANTY PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE WARRANTY. THERE SHALL BE NO OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS OR ANY OTHER OBLIGATION ON THE PART OF THE COMPANY WITH RESPECT TO PRODUCTS COVERED BY THIS WARRANTY. SI PRODUCTS SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES. IN NO EVENT SHALL THIS WARRANTY REQUIRE MORE THAN THE REPAIR OR REPLACEMENT OF ANY PART OR PARTS WHICH ARE FOUND TO BE DEFECTIVE WITHIN THE EFFECTIVE PERIOD OF THE WARRANTY.

NO REFUNDS WILL BE GIVEN. IF REPLACEMENT PARTS FOR DEFECTIVE MATERIALS ARE NOT AVAILABLE, SI PRODUCTS RESERVES THE RIGHT TO MAKE PRODUCT SUBSTITUTIONS IN LIEU OF REPAIR OR REPLACEMENT.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sale of such products on Internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express and written consent of SI PRODUCTS.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual regulations, some of the above limitations and exclusions may not apply to you. For more information regarding our product line in the USA, please visit: www.siproducts.com

THE SHARPER IMAGE® name and logo are registered trademarks. Marketed and distributed by SI Products, LLC under license. ©The Sharper Image. All rights reserved.

IB-EVSIHTR70

THE
SHARPER
IMAGE

FLAT PANEL CERAMIC TOWER HEATER



Instruction Manual and
Warranty Information

EVSI-HTR70

1 year
limited warranty

Thank you for purchasing The Sharper Image® Flat Panel Ceramic Tower Heater. This product, along with the entire The Sharper Image® collection, connects innovation with cutting-edge design to provide you with years of dependability and enjoyment.

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING

DANGER - TO REDUCE THE RISK OF ELECTRIC SHOCK:

- The output of this heater may vary and its temperature may become intense enough to burn exposed skin. Persons with reduced sensitivity to heat or an inability to react to avoid burns should not use this device.
- Individuals with diabetes should not use this device.
- Always unplug the appliance from the electrical outlet immediately after using and before cleaning.
- Keep cord away from heated surfaces.
- DO NOT place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater.
- DO NOT reach for an appliance that has fallen into water. Unplug it immediately.
- DO NOT use while bathing or in the shower.
- DO NOT place or store appliance where it can fall or be pulled into a tub or sink.
- DO NOT place in or drop into water or other liquid.
- NEVER use pins or other metallic fasteners with this appliance.
- DO NOT leave heater unattended while ON.

Caution: All servicing of this product must be performed by authorized SI Products Service Personnel only.

- DO NOT use heater while sleeping.
- Keep dry - DO NOT operate in a wet or moist condition.
- This appliance is designed for personal, non-professional use only.
- Do not use attachments not recommended by The Sharper Image; specifically any attachments not provided with the unit.
- Check your heater cord and plug connections.
 - a) Faulty wall outlet connections or loose plugs can cause the outlet or plug to overheat. Be sure the plug fits tight in the outlet.
 - b) This heater draws 12.5 amps during operation. To prevent overloading a circuit, do not plug the heater into a circuit that already has other appliances working.
- **CAUTION: It is normal for the plug to feel warm to the touch; however, a loose fit between the AC outlet (receptacle) and plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.**

WARNING - TO REDUCE THE RISK OF BURNS, ELECTRIC SHOCK, FIRE OR INJURY TO PERSONS:

- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surface. If provided, use handles when moving this heater. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least three feet from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug the heater when not in use.
- Do not operate the heater with a damaged cord or plug, or after the heater malfunctions, has been dropped or damaged in any manner. Discard the heater or return to SI Products Service facility for examination, electrical or mechanical adjustment, or repair.

- This heater is not intended for use in bathroom, laundry areas and similar moist indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic areas where it can be tripped over.
- To disconnect the heater, first turn controls to the OFF position, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surface, like a bed, where openings may become blocked.
- A heater may have hot and arcing sparking parts inside. Do not use it in the areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only for its intended use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocate power tap (outlet/power strip).

CAUTION: Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord should be No.14 AWG minimum size and rated not less than 1875 watts.

 
- DO NOT use outdoors.

SAVE THESE IMPORTANT INSTRUCTIONS FOR EASY REFERENCE

TECHNICAL SPECIFICATIONS

Input Voltage	120V
Rated Frequency	60 Hz
Power	1500 Watts
Weight	3.62 lbs
Noise Level	<50dB
Unit height	25.43 inches
Oscillation	85 degrees side to side
Remote Control Battery	CR2032 3V


Main Features on the Flat Panel Ceramic Tower Heater

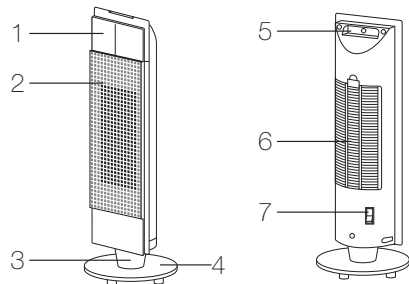

- 1. Control Panel
- 2. Grill
- 3. Stand Pole
- 4. Glass Base
- 5. Handle
- 6. Back Grill Cover
- 7. ON/OFF Switch


CAUTION: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature. To do so could result in an electric shock hazard.

 Touch Screen Control Panel

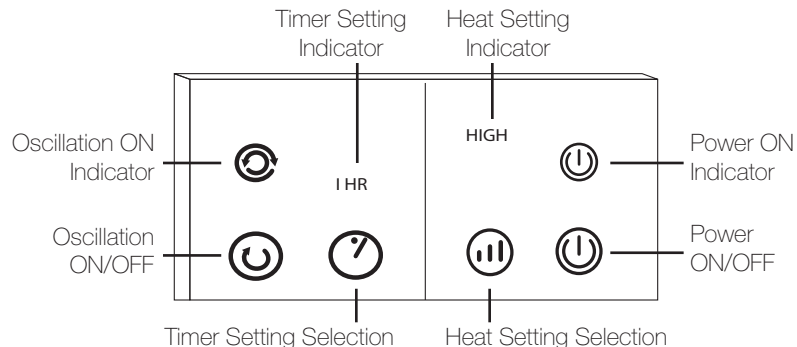

ASSEMBLY INSTRUCTIONS

 Insert the bottom of stand pole into the center hole of the base. Lock it into place by screwing on the nut. Make sure the nut is completely tightened.

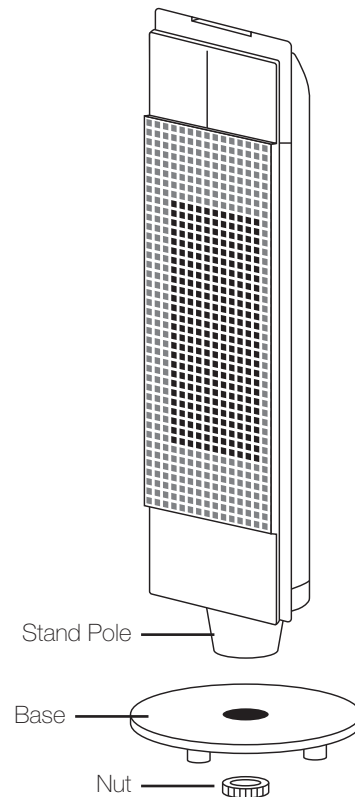



OPERATING INSTRUCTIONS






Turning the Unit On

- Check that neither the appliance nor the power cord has been damaged .
- Place the heater on a firm level surface.
- Connect the power cord into a standard AC outlet. The heater will beep twice to confirm the connection.




 
1. Main switch (on the back side of the device)

- To turn the heater on, flip the main switch to the ON position. When the main switch is flipped to the ON position, the heater will initially be OFF until the ON/OFF  button is pressed on the touch screen.
- The heater will beep twice indicating that the heater is ready for use.
- Press ON/OFF  button on the touch screen.
- NOTE: Every time a command is pressed on the touch screen, the heater will emit a small beep and the appropriate symbol will light up confirming the selection.

 

2. On/Off and Heat Settings

- Turn the heater ON by pressing the ON/OFF  button on the touch screen. Every time the heater is turned on it will be operating as follows: LOW heat, timer OFF, and oscillation OFF.
- Once the heater is ON, press HEAT  button to select heat setting. Press HEAT  button once to select HIGH heat. Press HEAT  button again to return to LOW heat. Either the HIGH or LOW symbol will light up depending on the heat setting selected.
- To turn the heater OFF, simply press ON/OFF  button.

3. Oscillation

- To activate the oscillation, press OSCILLATE  button on the touch screen. The heater will oscillate 85 degrees side to side. The oscillation symbol  will light up when the heater is oscillating.
- To turn the oscillation off, press OSCILLATE  button. The oscillation symbol  will no longer be seen on the screen.

4. Timer

There are four possible timer settings: 0.5 hours, 1 (one) hour, 2 (two) hours and 8 (eight) hours. To activate the timer and select a time setting, press TIMER  button on the touch screen. Each time the TIMER  button is pressed, it will switch between settings in a repeating cycle as follows: 0.5 hours, 1 hour, 2 hours, 8 hours, OFF. Press again and the cycle begins again. The selection will light up on the screen matching the time period. When the timer is OFF, no selections will be lit.

5. Tip-Over Auto Shut Off

If you tilt the heater at least 40 degrees to the side, you will hear a click sound. This is the Auto Shut Off safety feature that will power the heater OFF if it is knocked over. Once the heater is again positioned upright with the base on a firm, flat surface, the heater will resume power.

6. Overheat Protection

The heater is equipped with a resettable heat fuse, which is activated and powers the heater OFF if it overheats. If this occurs, disconnect the heater from the AC power outlet. As soon as the heater cools down, connect it to the AC power outlet and you may turn it on again.

 
This heater is also equipped with a non-resettable heat fuse in case first heat fuse malfunctions. If the non-resettable heat fuse has been activated, operation cannot be resumed. The heater will need to be repaired by authorized SI product service personnel.

Using the Remote Control


Battery Installation

One CR2032 3V battery is included with the remote control. To activate the remote control functions, pull out the plastic pull tab protruding from the remote control housing. To change the battery, remove the battery drawer at the bottom back of the remote by squeezing the side and pulling the drawer out. Please insert the battery into the remote with the positive side up as shown on the drawer.

NOTE: Always keep the battery and remote control out of the reach of children.

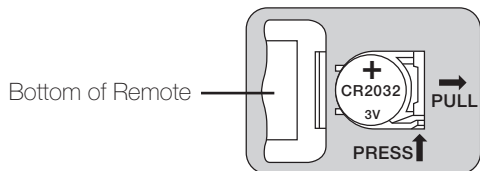

Remote Control Features

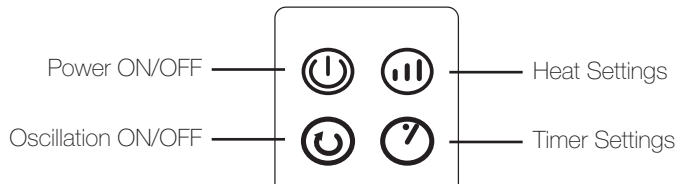 

- Only use CR2032 3V battery with this remote control.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Batteries may pose a choking hazard. Do not let children handle batteries.
- Clean the battery contacts and also those of the device prior to battery installation.
- After opening battery door, be sure the door is properly closed and clicks shut.
- Remove used batteries promptly. Dispose of used batteries immediately.
- If the unit is not going to be used for a long period of time, remove batteries to prevent damage due to possible battery leakage.
- Please dispose of used batteries per local regulations.

Cleaning and Storage

We recommend that the heater be cleaned at least once a month and before off-season storage.

- Turn the heater OFF at the main switch and unplug it. Allow it to cool.
- Use a dry cloth to clean the external surfaces of the heater.

DO NOT USE WATER, WAX, POLISH OR ANY CHEMICAL SOLUTION

- Clean your heater using the above-mentioned steps, then disassemble and pack the heater in its original container and store it in a cool, dry place.
- The motor is factory lubricated and will require no further lubrication.

Air Filter

- Dirt and dust may be caught on the air filter, affecting the function of the device. Clean the air filter regularly.
- To clean, turn unit OFF and unplug unit from outlet, then remove the Back Grill Cover on the back of the heater. Remove the air filter from the grill.
- Wash the filter by hand in a lukewarm solution of water and detergent. Rinse the filter in clean water and allow it to dry thoroughly. Place the clean, dry filter back into the back grill and close the back grill cover.
- Do not use the device without the filter and back grill cover secure.

Troubleshooting

If the Heater Fails to Operate

- Be sure it is plugged in and that the AC outlet is working. Check circuit breaker in case of a blown circuit.
- Check for any obstruction. If you find an obstruction, press ON/OFF main switch to turn the heater OFF. Unplug the heater and wait at least ten minutes for it to cool. Carefully remove the obstruction. Plug the heater back in and restart it as described under OPERATING INSTRUCTIONS.
- If the heater still does not operate, remove the power cord from the AC outlet and have the heater service by authorized SI product service personnel.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>