

BDP-5004 BLU-RAY DISC PLAYER



Please read this User Manual carefully to ensure proper use of this product and keep this manual for future reference.

Content

Important Safety Instructions	2
1. Overview	3
2. Front Panel and Rear Panel Illustration	4
3. Output Illustration	7
4. Remote Control	9
5. System Setting	11
6. Audio, Video, Picture files on disk or USB devices	15
7. BD-Live Operation	20
8. Trouble shooting	22
9. Specifications	23

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lightening storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 15) The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 16) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 17) Attention should be drawn to the environmental aspects of battery disposal.
- 18) The use of apparatus in moderate climate.
- 19) Portable Cart Warning

A product and cart combination should be moved with care. Quick stop, excessive force, and uneven surface may cause the product and cart combination to overturn.



(Symbol provided by RETAC)

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

WARNING: The batteries must not be exposed to excessive heat such as sunshine, fire or the like.



The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.



The symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.



This symbol indicates that this product incorporates double insulation between hazardous main voltage and user accessible parts. When servicing use only identical replacement parts.

1. OVERVIEW

This BD player has the capability of providing high-definition, cinema-like pictures and multi-channel audio. Soundtracks in more than one language are usually included on the disk, and subtitles in more languages are often included as well.

1.1 PLAYABLE DISK TYPES

The following types of disks can play in the REF player:

Blu-Ray™ Disks		DVD-RW	
DVD Video Disks (DVD-ROM)		DVD-R	
Audio CDs (CDDA)		DTS-CD	
VCD		MP3/WMA/JPEG Data CD	

NOTES:

For writeable **DVD** disks (DVD-RW, DVD-R)

- Only DVD-RW/-R recorded with UDF or ISO9660 format can be played back.
- The disks must be finalized, VR-mode.
- Playback may not work for some types of disks, or when specific operations, such as angle change and aspect ratio adjustment, are being performed. Information about the disks is written in detail on the box. Please refer to this if necessary.
- Some DVD-VR disks will be playable but not all features are available.

For writeable **CD** disks


- Only CD-R/-RW media recorded with UDF or ISO9660 format can be played, and they must be finalized.

1.2 REGION CODE

If the Region number of a BD or DVD disk does not correspond to the region number of this Blu-ray disk player, the BD player cannot play the disk. The region code is printed on the rear panel of the BD Player.


2. Front Panel and Rear Panel Illustration

2.1 Front panel

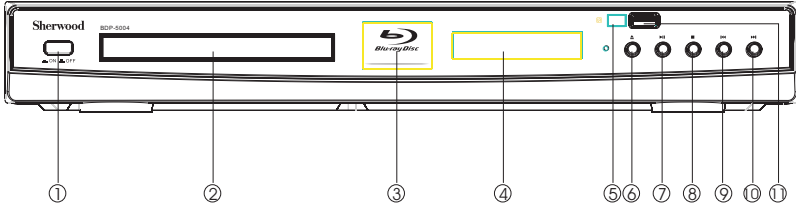


- | | | |
|--------------|---------------------|---------------|
| ① POWER | ⑤ SENSOR | ⑨ PREV BUTTON |
| ② CABIN DOOR | ⑥ OPEN/CLOSE BUTTON | ⑩ NEXT BUTTON |
| ③ BD LIGHT | ⑦ PLAY/PAUSE BUTTON | ⑪ USB |
| ④ DISPLAY | ⑧ STOP BUTTON | |

2.2 Rear panel

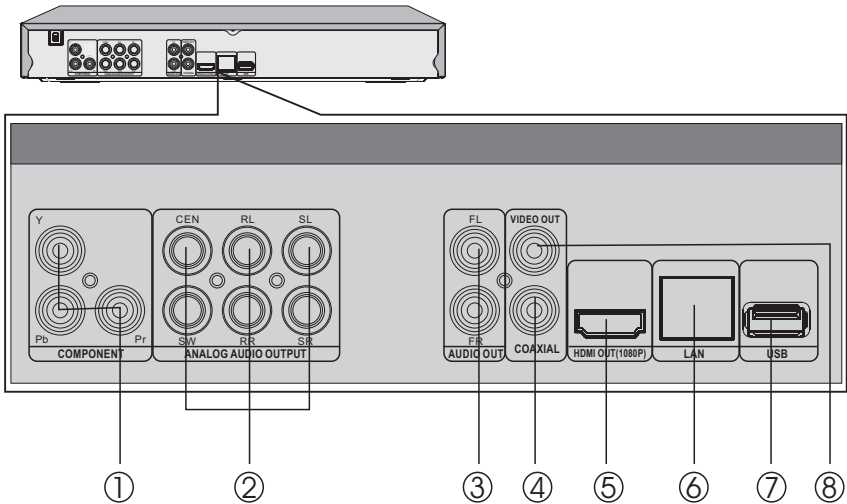

- | | |
|-------------------------------------|--------------------------|
| ① Component Video output(Y, Pb, Pr) | ⑤ HDMI output |
| ② Audio output (SR,SL,RR,RL,SW,CEN) | ⑥ LAN |
| ③ Audio output(FR,FL) | ⑦ USB |
| ④ Digital Audio COAXIAL output | ⑧ COMPOSITE VIDEO output |

2.3 TV Set Connections

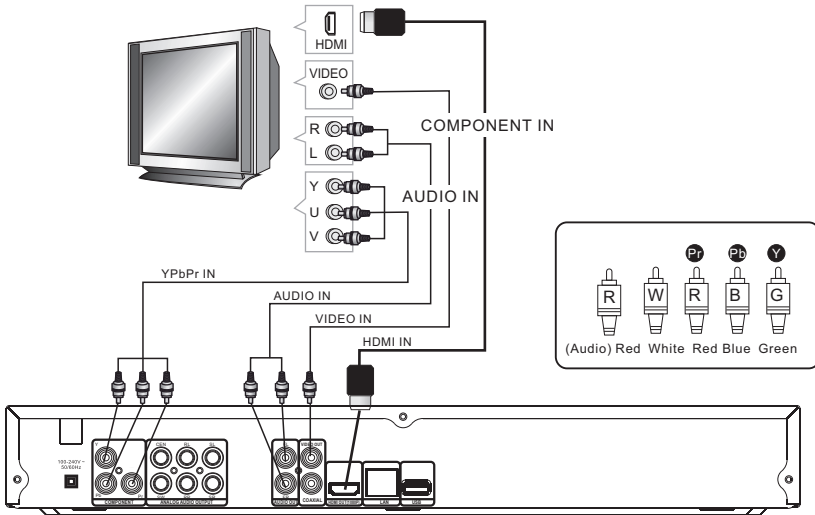

2.3.1 CONNECT BD PLAYER TO TV SET BY AV CABLE

Connect the BD player's FL and FR jack to the audio input jack on the TV. Connect the BD player's video out jack to the video input jack of TV.


2.3.2 CONNECT THE BD PLAYER TO TV SET USING THE Y/Pb/Pr JACKS

Use the COMPONENT Cable (not supplied) to connect BD player to your TV. Connect the BD player's Audio output L and R jack to the audio input jack on the TV.

2.3.3 CONNECT THE BD PLAYER TO TV SET USING THE HDMI OUTPUT

Use the HDMI cable (not supplied) to connect BD player to your TV.

2.3.4 Connecting to an AV Amplifier with Digital Audio Input

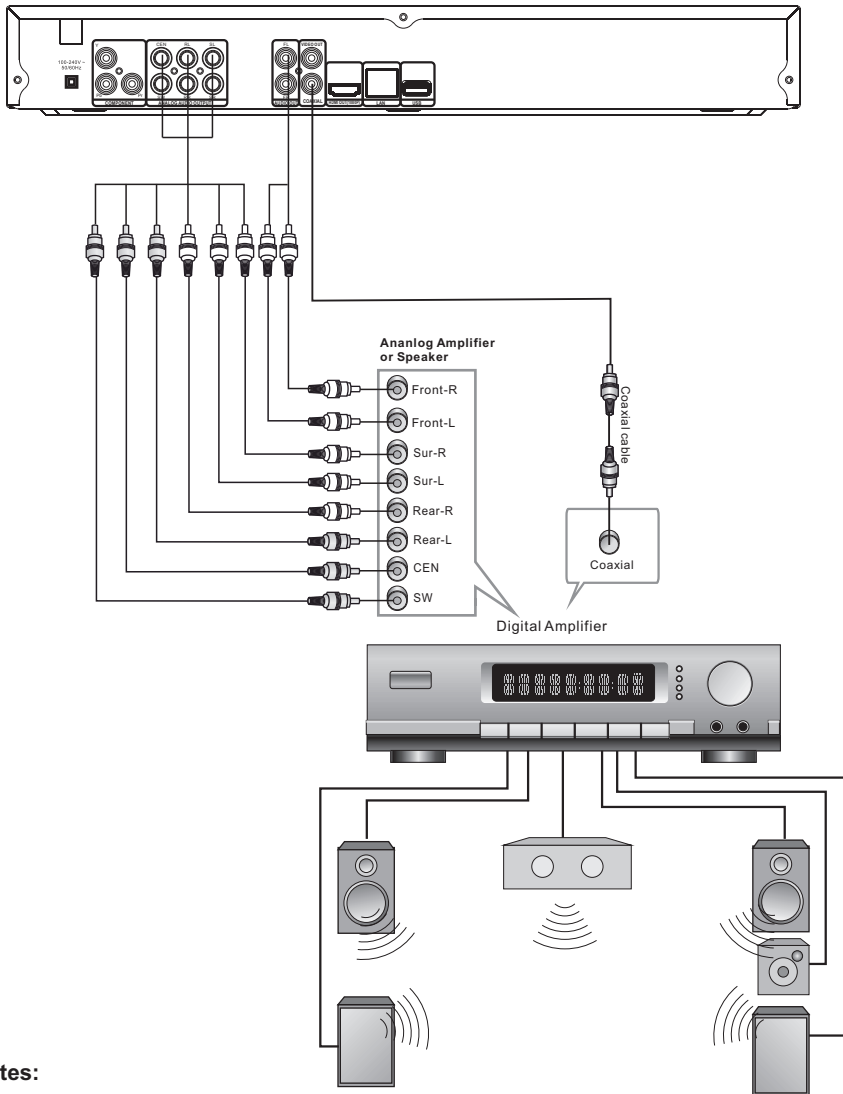

3. Output Illustration

3.1 Video Output Capabilities

Each of the video outputs are capable of different levels of functionality, as described in the table below. Actual output will depend on setup menu settings and TV capabilities for HDMI televisions.

BD Player Video Output	Resolutions Supported (NTSC Models)	Resolutions Supported (PAL Models)
HDMI	1080p 60/50/30/25/24 1080i 60 720p 60/30/24 420p 60/30/24 480i	1080p 60/50/30/25/24 1080i 50 720p 50/30/24 576p 60/30/24 576i 50
Component Video	1080i 60/48 720p 60/30/24 576p 60/30/24 480p 60/30/24 NTSC SD (480i)	1080i 60/48 720p 60/30/24 576p 60/30/24 480p 60/30/24 PAL SD (576i)
Composite Video	NTSC SD (480i)	PAL SD (576i)

3.2 Audio Output Capabilities

Each of the audio outputs are capable of different levels of functionality, as described in the table below. Actual output will depend on

- BD player setup menu settings,
- What types of audio tracks are encoded on the disk, and,
- Surround sound receiver capabilities (for BD players connected to a surround-sound system through HDMI or SPDIF)

BD Player Audio Output	Audio tracks that can be sent directly to output
HDMI	Dolby TrueHD Dolby Digital Plus DTS-HD High-Resolution Audio Dolby Digital DTS PCM (From mono up to 7.1 channels @96 KHz)
SPDIF	Dolby Digital DTS PCM (stereo <u>only</u> , up to 96 KHz)
7.1 Analog Outputs	Any selected digital track will be decoded, mixed with effects and secondary channel, and converted to analog.

3.3 Connectors Description

3.3.1 Analog 7.1 Audio Outputs

Connect these outputs to the analog inputs of a surround sound receiver. (If surround sound receiver is 5.1 channel, leave the rear channels disconnected). Some surround-sound receivers can also accept digital audio signals via SPDIF, or HDMI connection

3.3.2. Stereo Audio Outputs

These are analog, "old fashioned" stereo (left/right) outputs. If your TV does not have an HDMI input, you can connect these outputs to the stereo audio inputs of a TV.

3.3.3. Composite Video

If your TV does not have component or HDMI video inputs, connect this output to the composite video input of the television.

3.3.4. HDMI 1.3 Audio/Video Output

If you are using a surround-sound audio receiver with an HDMI input, connect the HDMI output of the BD player to the HDMI input of the audio receiver. (You will need to connect a second HDMI cable from the HDMI output of the audio receiver to the HDMI input of the television)

If your surround-sound audio receiver does not have an HDMI input (or if you are not using a surround-sound receiver), connect this output directly to the HDMI input of the TV. One of the other audio outputs can be connected to the audio receiver.


3.3.5. Ethernet Connector

For BD-Live only, use an Ethernet cable to connect this connector to access Ethernet while playing BD-Live disk.

3.3.6. USB 2.0 Connector

Used for external USB memory access, play supported audio/video files on USB memory or store download content into USB memory for BD-Live

4. Remote Control

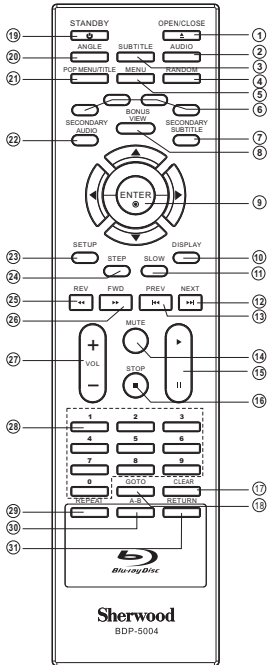

1. Open/Close

Press this button to open/close the disk tray.

2. Audio

This key is used to cycle through the movie audio soundtracks available on the disk. (Not available on all disks).

3. Subtitle

This key can be used to enable/disable subtitles during BD/DVD playback. If the disk has more than one subtitle language, it can also be used to cycle through the subtitle languages.

4. Random

Used for random playback of audio files on disk. (Not available on all disks).

5. Menu

Pressing this key will immediately stop playback, and bring up the main or 'top' menu of the BD or DVD disk. (Not available on all disks) In the main menu, you can typically choose subtitle language, audio track, or different scene etc.

6. Colour Keys

The red, green, yellow, and blue keys are used to implement disk-specific features on some BD disks. (Not available on all disks).

7. Secondary Subtitle

Used to bring up the subtitle (if available) for the picture-in-picture (director's commentary, etc) on a BD title. If the disk has more than one director's commentary subtitle language, it can also be used to cycle through the subtitle languages. (Not available on all disks).

8. Bonus View

On BD disks, this button is used to turn the video portion of the director's commentary (picture-in-a-picture) on and off. (Not available on all disks).

Note: Director's commentary must have been turned on in the BD's main menu in order for this key to work.

9. Menu Navigation Keys

These keys are used when navigating the menus on BD and DVDs. They are also used for navigating the setup menus for the BD player.

10. DISPLAY

Press this button to show current play status and time information.

11. SLOW

Pressing this button will cause the video to be played at 1/2, 1/4, 1/8 speed.



12. NEXT

Press this button to play next title, chapter, track or file if valid.

13. PREV

Press this button to play previous title, chapter, track or file if valid.

14. MUTE

Pressing this button to avoid audio output, pressing the MUTE button again will resume audio output. Mute Mute Off

15. Play/Pause

Pressing the bottom of this button will pause audio and video playback. Pressing the top of this button will resume playback.

16. STOP

This button stops playback of a BD/DVD movie or files on disk.

17. CLEAR

When entering numeric values via the numeric keypad, this button is used to clear a number entered incorrectly.

18. GOTO

This button is used with the numeric keypad to jump to a specific track on an audio CD.

19. STANDBY

Press the STANDBY button to turn the BD player on or off.

Note: Press STANDBY key during system (about 20s) startup will be no effect.

Press STANDBY key during system is on, system will enter low power standby mode in about 6s.

20. Angle

Some BD and DVDs are filmed with more than one camera angle. During playback of such a disk, pressing this button will allow you to switch camera angles. (Not available on all disks)

21. Pop Menu/Title

On BD disks only, this button can be used to bring up the main movie menu. (Not available on all disks).

22. Secondary Audio

On BD disks equipped with multiple director's commentaries in several languages, pressing this key will cycle through all of the languages available for the director's commentaries. (Not available on all disks).

23. Setup

Bring out the settings menu of the BD player. This key will not work during disk playback.

24. Step

Pressing this button will play movie by one frame.



25. Fast Reverse

Used to "Fast Reverse" during content playback.

26. Fast Forward

Used to "Fast Forward" during content playback.



27. Volume

Pressing the top (+) half of this button will increase the volume of the BD player's audio output. Pressing the bottom (-) half of this button will decrease the volume of the BD player's audio output.



28. Numeric Keypad

These buttons are used with the GOTO button to jump to specific title/chapter (track) or time.

29. REPEAT

This button is used to cycle through the possible "repeat" modes based on content played.

BD/DVD or video files on disk: (Not available on all disks)



CDDA or audio Files on disk:



30. A-B

When a disk is playing, pressing this button once will save a "start point" for repeating playback. Pressing this button again to select a "end point" then playback will repeat from the start point to the end point. (Not available on all disks)




31. Return

When navigating files on a data CD or USB stick, pressing this button will return you to the previous folder or menu.

5. System Setting

Press SETUP button under stop status or press RIGHT button in main menu. System will bring out setting menu as below picture:

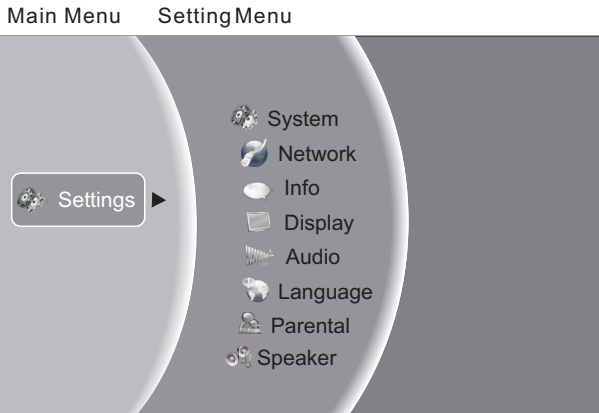

5.1 Language

5.1.1 OSD: set language used for user interface displayed.

5.1.2 Menu: set language used for BD/DVD menu (not available on all disk).

5.1.3 Audio: select audio language for BD/DVD disk (not available on all disk).

5.1.4 Menu: select subtitle language used for BD/DVD disk (not available on all disk).

5.2 Display

5.2.1 TV Type: Select to output NTSC or PAL video format .

5.2.2 Resolution: Set maximum resolution of your TV here to get best video quantity, if you are not sure, please use HDMI Auto, system will read the preferred resolution your TV supported via EDID.

5.2.3 TV Aspect: Select right video ratio based on your TV. (Refer to below table)

Note: Aspect setting only effect HDMI and component output, and 4:3 setting has no effect if resolution has been set to 720p or 1080i or 1080p).

TV Aspect Menu Selection					
		If your TV is more rectangular (16:9), choose:		If your TV is more square (4:3), choose:	
		16:9 Full	16:9 Pillarboxed	4:3 Letterboxed	4:3 Pan Scan
Disk Contents					
Movie in widescreen format	Movie will fill entire screen	No effect - Movie will fill entire screen	Movie will be shown in rectangular "wide" aspect ratio (Horizontal bars will be shown above/below movie)	Center of movie will be shown on TV. Left and right portion of movie contents will not be shown	
HD television episodes in widescreen format	Episode will fill entire screen	No effect - Episode will fill entire screen	Episode will be shown in rectangular "wide" aspect ratio (Horizontal bars will be shown above/below movie)	Center of episode will be shown on TV. Left and right portion of episode contents will not be shown	
SD (4:3) television episodes	Episode will be <i>stretched horizontally</i> to fit entire screen	Episode will be shown in center of screen; vertical bars will appear on sides of screen	No effect - Episode will fill entire screen	No effect - Episode will fill entire screen	
Cropped Movie (Movie put on disk in 4:3 Aspect Ratio)	Movie will be <i>stretched horizontally</i> to fit entire screen	Movie will be shown in center of screen; vertical bars will appear on sides of screen	No effect - Cropped movie will fill entire screen	No effect - cropped movie will fill entire screen	

Note: 4:3PS and 4:3LB only valid under SD mode (resolution is 480p/576p or 480i/576i).

5.2.4 Film Mode: system will output 1080p 24Hz if this item is set to ON and disk movies are recorded on film at rate of 24 frames per second.

Note: this item only effect when Resolution is set to 1080p, and make sure your TV can support 1080P24Hz mode.

5.3 Audio

5.3.1 PCM Downsampling: select right bitrate for PCM signal to ensure your SPDIF receiver can handle it correctly. It's no effect for HDMI digital audio output.

5.3.2 Digital Output:

If you only have two speakers, set PCM stereo.

If you connect receiver with more than two speakers, please refer to below tables:

	Receiver Capabilities		
	Can decode DTS	Can decode Dolby Digital	Can decode Dolby Digital Plus
I want the highest-fidelity audio movie soundtrack possible	Set to 'Bitstream Legacy' for disks with DTS soundtracks.	Set to 'Bitstream Legacy' for disks with Dolby digital soundtracks. Set to PCM 5.1 or PCM 7.1 for disks without Dolby sound tracks (depending on the number of speakers connected to your surround receiver)	Set to 'Bitstream Legacy' for disks with DD+ soundtracks. Set to PCM 5.1 or PCM 7.1 for disks without Dolby Digital plus sound tracks (depending on the number of speakers connected to your surround receiver)
I want to hear the directors commentary on the BD disk --OR-- I want to set this menu item once and then forget it	Set the output to 'Bitstream Mixed'	Set to 'Bitstream mixed' if your receiver also supports DTS. Otherwise, set the output to PCM 5.1 or PCM 7.1 (depending on the number of speakers connected to your surround receiver) instead.	

	Receiver Capabilities		
	Can decode DTS-MA Essential	Can decode Dolby TrueHD	Can't decode DTS-HD or Dolby TrueHD
I want the highest-fidelity movie soundtrack audio possible	Set to Bitstream HD for disks with DTS-HD soundtracks. Set to Bitstream mixed otherwise	Set to Bitstream HD for disks with Dolby TrueHD soundtracks. Set to Bitstream mixed otherwise	Refer to above table to decide
I want to hear the directors commentary on the BD disk --OR-- I want to set this menu item once and then forget it	Set the output to Bitstream mixed		

5.3.3 Dynamic Range Control: means that you can allow the BD player to make the loud parts of a movie's audio track quieter than they would be in the theatre, without making the dialog of the actors any quieter. (It effects on analog audio output and digital output should be set to PCM or Bitstream Mixed).

5.4 System

- 5.4.1 Optical Disc Auto Play: This option is used to tell the BD player whether or not to start loading the main title menu of a disk as soon as the disk tray is closed.
- 5.4.2 BD-Live Internet Access: Control BD player accessing internet
Limit access : Only allow the inserted Blu-Ray disk to download content from a BD-Live website which has a valid online certificate. This will reduce the chances of downloading malicious content onto the player.
Always allow access : Allow the BD the inserted Blu-Ray disk to access content from all BD-Live internet sites whose internet address is encoded onto the disk. There is no danger of malicious code download from valid commercial BD disks, but choosing this option and downloading BD-live content via illegally authored BD disks, or disks obtained from questionable sources, could result in malicious code being downloaded onto the player.
Prohibit access : Blocks the inserted Blu-Ray disk from accessing BD-Live content over the internet.
- 5.4.3 BD-Live Storage:
Show BD-Live storage information, select storage device to clear Blu-ray storage.
- 5.4.4 Screen Saver Duration:
This BD player will **activate** screen saver mode by shutting video output (TV will go "Blank") after certain period of time set by this item when system is playing music file or in stop/full stop mode.
- 5.4.5 Erase Blu-Ray Storage: Clear Blu-Ray storage.
- 5.4.6 CEC support:
Set this item to enable/disable CEC:
The CEC feature is designed to allow CEC-enabled devices to command and control each other without user intervention. For example: If your TV is also CEC-enabled and you will turn off your TV, the Blu-Ray player will get a CEC signal and turn off automatically. Or if you turn on your Blu-Ray player, your TV will automatically turn on and switch to HDMI input.
Note: Not every CEC-Enabled unit is compatible with this unit.
- 5.4.7 Reset Settings:
Reset all settings to factory default (Parental Control level will not be reset).

5.5 Network

Press "ENTER" button when the item is highlighted, then select "WIRED" to config network:

- 5.5.1 Link Status:
Show if ethernet cable is connected to BD player.
- 5.5.2 MAC Address
Show MAC address of this BD player.
- 5.5.3 IP Mode
Choose IP mode here for internet access. Choosing "Manual" mode, 4.5.5 ~ 4.5.8 will be activated for user input, otherwise they are inactivated.
- 5.5.4 IP Address:
Show current IP address or access user input while in "Manual" IP mode.
- 5.5.5 Subnet Mask:
Show current Subnet Mask or access user input while in "Manual" IP mode.
- 5.5.6 Gateway:
Show current Gateway or access user input while in "Manual" IP mode.
- 5.5.7 Primary DNS:
Show current Primary DNS or access user input while in "Manual" IP mode.

5.5.8 Secondary DNS:

Show current Secondary DNS or access user input while in "Manual" IP mode.

Press ENTER key while Apply button is highlighted to activate setting you made, or press ENTER key while Cancel button is highlighted to cancel changes you made for network settings.

5.6 Info

This item shows software and hardware information for loader and main board, no changes are allowed.

5.7 Parental

5.7.1 Parental Country:

Use this menu item to tell the BD player what country you are in. (Currently this menu item has no effect)

5.7.2 Parental Control:

To turn parental control ON or OFF,

5.7.3 Parental Level:

To restrict playback of disks encoded with a rating level equal to or higher than the level you set. Parental Control *must be turned on* for this menu item to have an effect

5.7.4 Parental Password:

Change new password for Parental Control menu operation. (Default value is: 6666)

5.8 Speaker

Set this menu properly for analog audio output.

If there are only 2 speakers, just keep Front L-R as "large", set others to "Off"

If there are more speakers connected through amplifier, set Front L-R set to "Large", others you can set to "Large" or "Small", and turn Subwoofer to "On". Only when the source content with 5.1CH or 7.1CH audio stream, player can output 5.1CH or 7.1CH analog audio

6. Audio, Video, Picture files on disk or USB devices

6.1 INTRODUCTION

This section explains how to playback PC-type audio, pictures, and video files that have been placed onto a disk or USB memory stick.

6.2 Supported Audio, Video, Picture files types

Video

- .MPEG4 (.mp4) files
- .m4v files
- .mpg files

Music:

- .mp3 files
- .wma files
- .aac files

Picture:

- .jpeg files
- .Png files

6.3 Disk or USB devices preparation

6.3.1 CD-R/RW, DVD+/-R, DVD+/-RW, BD-R or BD-RE with supported files recorded in UDF or ISO9660 format (must be finalized) can be playback on this BD player.

6.3.2 USB device with supported files on it's FAT/FAT32 partition will be recognized.

6.4 Browsing video files

6.4.1 Select Videos icon in main menu which will appear after BD player read out disk or/and USB device. Press ENTER key while Video icon is highlighted, system will bring out a sub menu for file source selection.(Figure 5-1)

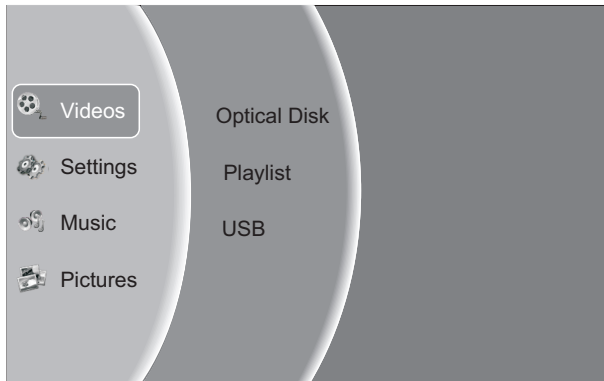


Figure 5-1 Video Media Selector

6.4.2 Select disk or USB to open a browser which allow you to view files on current disk/ USB device, so you can choose any files you want to play.(Figure 5-2)

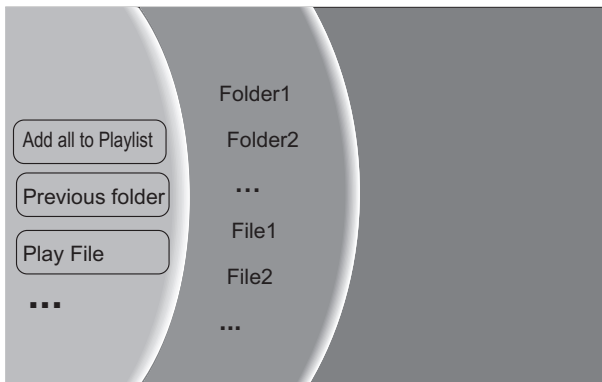


Figure 5-2 Video Browser Screen

6.5 Browsing Audio files

6.5.1 Select Music icon in main menu which will appear after BD player read out disk or /and USB device. Press ENTER key while Music icon is highlighted, system will bring out a sub menu for file source selection.(Figure 5-3)

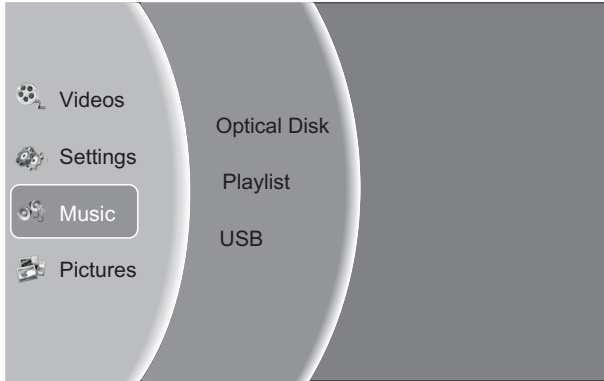


Figure 5-3 Audio Media Selector

6.5.2 Select disk or USB to open a browser which allow you to view files on current disk / USB device, so you can choose any files you want to play.(Figure 5-4)

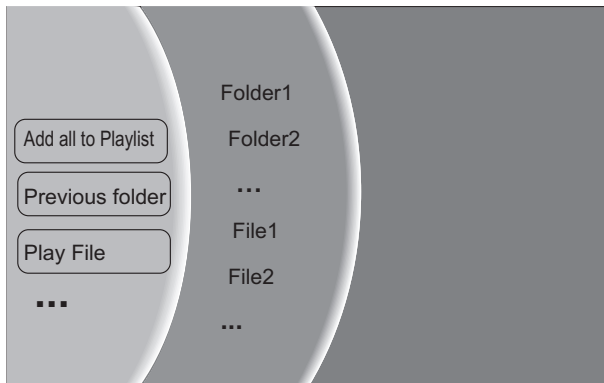


Figure 5-4 Audio Browser Screen

6.6 Browsing picture files

6.6.1 Select Pictures icon in main menu which will appear after BD player read out disk or/and USB device. Press ENTER key while Pictures icon is highlighted, system will bring out a sub menu for file source selection.(Figure 5-5)

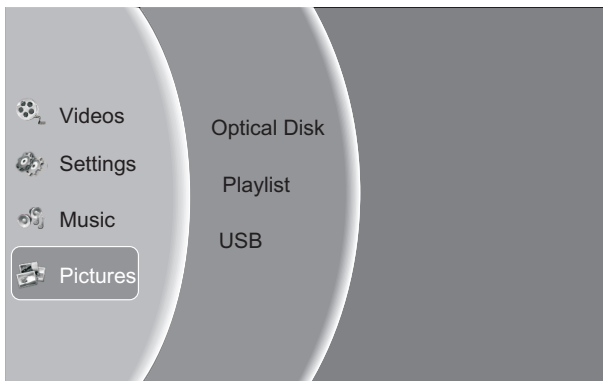


Figure 5-5 PictureMedia Selector

6.6.2 Select disk or USB to open a browser which allows you to view files on current disk/USB device, so you can choose any files you want to play.(Figure 5-6)

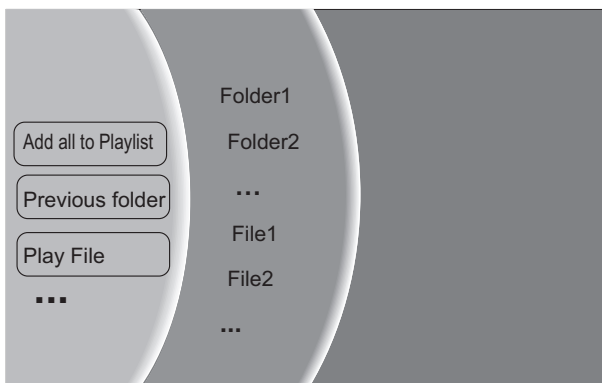


Figure 5-6 PictureBrowser Screen

6.7 File playback

6.7.1 Refer to Figure 5-7, select “ PlayAll” to play all selected type files on selected media, or select “Play Current Folder” to play all selected type files in current folder.

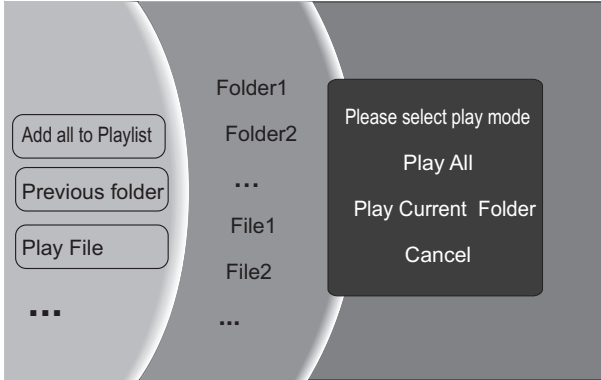


Figure 5-7 Multi-files operation

6.7.2 Also you can choose to play current highlighted file refer to Figure 5-8.

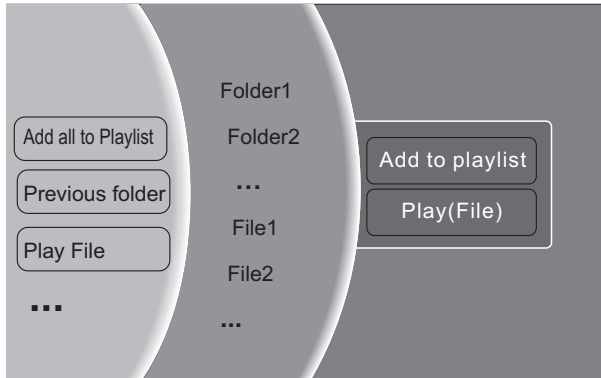


Figure 5-8 Single file operation

6.8 Creating Playlist and Playlist Playback

6.8.1 In file browser mode(refer to Figure 5-2, 5-4 and 5-6), press “ ENTER” key while “ AddAll to Playlist” is highlighted and will add all selected type files in current folder into playlist,
or refer to Figure 5-8, choose “Add to playlist” icon and press “ENTER” to add current highlighted file into playlist.

6.8.2 In Media Selector Menu(refer to Figure 5-1), you can choose “playlist” to play files in playlist.

7. BD-Live Operation

7.1 Description

Some (but certainly not all) BD disks contain additional features that are made available to players that are connected to the internet, and have additional memory added. These additional features may include things like

- the ability to download new movie trailers,
- additional 'commentary' by actors and directors,
- multiperson game play and chat

In order to access BD-Live functions, the player must be properly configured for BD-Live internet access, and it must be equipped with additional memory.

7.2 Adding external BD-live Memory to player

7.2.1 Obtain USB memory which has been formatted as FAT32.

7.2.2 Insert the USB memory stick into the USB slot on the player.

7.3 Setting BD-Live Internet Access Mode

7.3.1 In the BD Player's main setup menu, go to the 'Other' menu choice; Then, choose "BD-Live Internet Access". Be sure that "Limit Access" or "Always Allow Access" is checked.

7.3.2 Once the USB memory stick has been inserted, if there is not at least 100Mbyte of free space on the device, you should choose "Clear BD Storage" from the "Other" setup menu item


7.3.3 In the BD Player's main setup menu, go to the 'Network' menu choice; Then, choose "IP mode". Set up the Network IP addresses per your router's or ISPs recommendations

NOTE: The 'Connectivity Test' must pass, or you are not connected to the internet, and cannot access BD-Live Content on the web.


7.4 BD-Live Internet Access Example

7.4.1 Obtain a BD-Live disk like <The 6th Day>

7.4.2 Select BD-Live option from Special Features Menu (or in some disk, you can see BD-Live option in main menu)

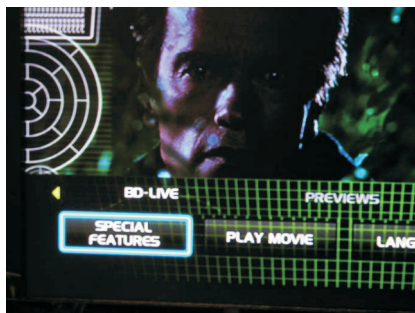

- 7.4.3 The player will connect to internet and show download menus as below picture.
 Note: This can take several minutes.

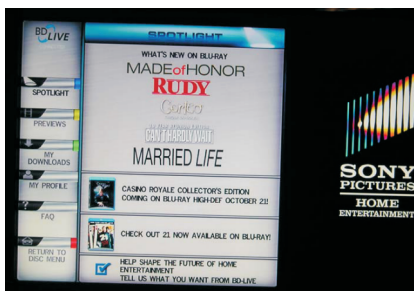

- 7.4.4 You can select the content to download from the Previews sub menu.
 Note: This can take several minutes.



- 7.4.5 The downloaded content is stored under My Downloads. You can choose to either play back or delete the downloaded content



7.5 BD-Live Notes

- 7.5.1 This player only supports the connection of USB memory in order to store BD 2.0 downloaded content
- 7.5.2 Any externally connected device will be set as BD-Live storage and internal storage will be ignored in same time.
- 7.5.3 Some BD-Live content will be expired and not playable, user need to manually delete the contents in BD storage in order to free space.

8. Trouble shooting

If you have any questions, please consult the troubleshooting guide below.

NO PICTURE OR SOUND

- Ensure the power button is on.
- Ensure the power outlet is operational.
- Ensure the power cord is not damaged.
- Ensure the power plug is connected firmly to the outlet.

PICTURE BUT NO SOUND

- Ensure the audio jacks are securely connected.
- Ensure the audio connector is not damaged.
- Ensure you have set the player's AUDIO settings correctly.
- Ensure you have entered the correct AV input for your TV.
- Ensure the audio is not set to mute.

SOUND BUT NO PICTURE

- Ensure the video jacks are securely connected.
- Ensure you have entered the correct AV input for your TV.
- Ensure the video connector is not damaged.
- Ensure you have set the player's VIDEO settings correctly.

POOR PICTURE OR SOUND

- Ensure you have set the player's AUDIO settings correctly.
- Ensure the disc is not scratched or stained.
- Ensure the AV connector or the output terminal is not damaged.

REMOTE NOT WORKING

- Make sure the Main unit's POWER button is on.
- Ensure the remote batteries are working.
- Point the remote control directly at the player's IR sensor.
- Remove any obstacles between the remote and the IR sensor.

UNIT NOT WORKING

- Turn off the power, and then turn it on again.

"NO DISC" DISPLAYED

- Ensure you have put the disc on the tray.
- Ensure the disc is not upside down.
- Ensure the disc is not distorted, stained or scratched.

9. Specifications

General

Power requirements: AC 100-240 Volt, 50/60Hz

Power consumption: 35W

Discs Compatibility:

BD,DVD,DVD+/-R/RW,VCD,CD-DA,CD-R/RW.

Video out

Video out: 1.0V(p-p)/75Ω, sync, negative polarity, RCA pin jack x 1

Audio out

7.1 channel out: RCA pin jackx8

Coaxial out: 0.5V(p-p)75Ω, RCA pin Jack x 1

Frequency response: 20Hz to 20kHz

S/N ratio:>90dB

Total harmonic distortion: <-65dB

[Accessories]

Remote Control x 1

User's Manual x 1

Specifications are subject to change without notice.

Weight and dimensions are approximate.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise by Macrovision. Reverse engineering or disassembly is prohibited.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trade marks of Dolby Laboratories. Copyright 1992 -1997 Dolby Laboratories. All rights reserved.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and(2) this device must accept any interference received, including interference that may cause undesired operation.

Manufactured under license under U.S. Patent#’ s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS is a registered trademark and the DTS logos, Symbol, DTS-HD and DTS-HD Advanced Digital Out are trademarks of DTS, Inc. ©1996-2008 DTS, Inc. All Rights Reserved.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>