

- · This guide shows you how to connect your speakers and BD/DVD player and enjoy multi-channel surround sound.
- For full details on using this unit, refer to the main operating instructions.
- · Please be certain that this unit is unplugged from the AC outlet before making any connections.

# **Placing Speakers**

### ■If you have 5.1 ch speakers

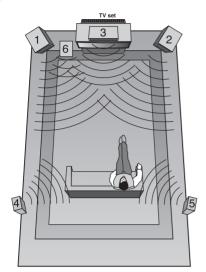

■If you have 7.1 ch speakers

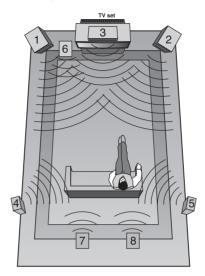


- 1. Front Left
- 2. Front Right
- 3. Center
- 4. Surround Left
- 5. Surround Right
- 6. Subwoofer
- 7. Surround Back Left
- 8. Surround Back Right


# **Connecting Speakers**

 Be sure to connect speakers firmly and correctly according to the channel (left and right) and the polarity (+ and -). If the connections are faulty, no sound will be heard from the speakers, and if the polarity of the speaker connection is incorrect, the sound will be unnatural and lack bass.

#### ■Caution

- Be sure to use the speakers with the impedance of 6 ohms or above.
- Do not let the bare speaker wires touch each other or any metal part of this unit. This could damage this unit and/or the speakers.
- Never touch the speaker terminals while the AC input cord is connected to the wall AC outlet.
   Doing so could result in electric shocks.

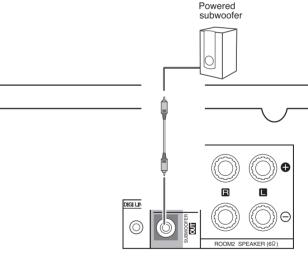

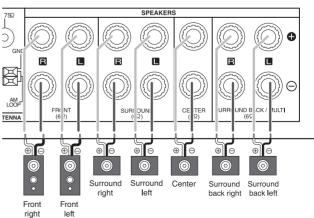


### Connecting TV & BD/DVD Player

#### **■**Connecting a TV

• Connect the TV to the same type of Monitor video output that you did connect to the BD/DVD player, as shown.


### **■**Connecting a BD/DVD Player

- Use a Component S-video or (composite) video cable to connect this unit's VIDEO 2 to the corresponding video output on your BD/DVD player, as shown.
- Use an Optical or Coaxial cable to connect this unit's OPT IN 2 or COAX IN 2 to the optical output or the coaxial output on your BD/DVD player. (You don't need to do both.)
- Use an Audio (analog) cable to connect this unit's VIDEO 2 (L/R) to audio output on your BD/DVD player.
- Use a HDMI cable to connect this unit's HDMI 2 to HDMI output on your BD/DVD player.

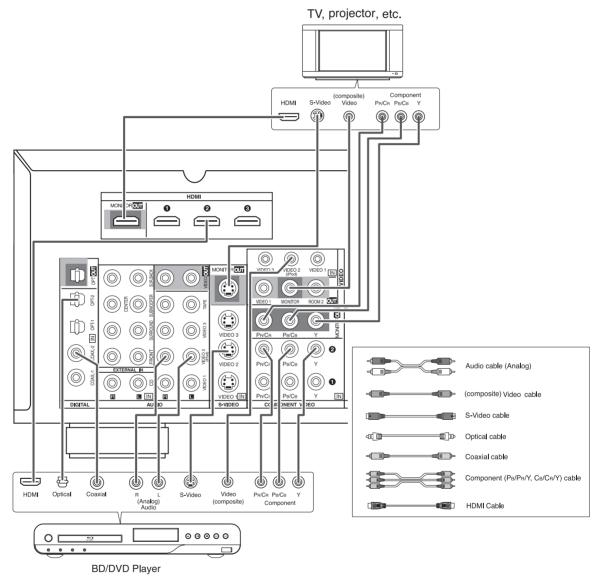

- There are three types of video jacks (COMPONENT, S-VIDEO, (composite) VIDEO) for analog video connections and the HDMI connector for digital video and audio connections.
   Connect them to the corresponding video jacks according to their capability.
- For your reference, the exellence in picture quality is as follows: "HDMI" > "COMPONENT" > "S-VIDEO" > "(composite) VIDEO".
- When making COMPONENT VIDEO connections, connect "Y" to "Y", "PB/CB" to "CB" (or "B-Y", "PB") and "PR/CR" to "CR" (or "R-Y", "PR").
- The HDMI connection can carry uncompressed digital video signals and digital audio signals.


# **Turning on the Unit**

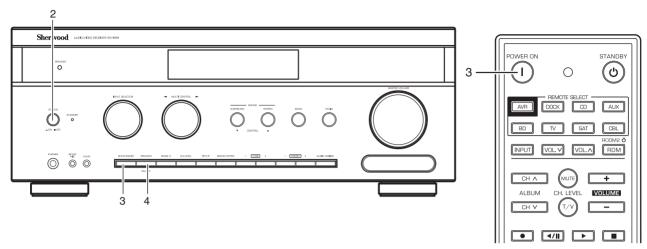

- 1. Connect the AC input cord.
- 2. Press the [POWER] switch on the front panel to enter the standby mode.
- 3. In the standby mode, press the [ON/STANDBY] button on the front panel or [POWER ON] button on the remote control to enter the operating mode.
- 4. Press the [SPEAKER] button to switch the speakers on.

  Then the SPEAKER indicator lights up and the sound can be heard from the speakers.

# Playing a BD/DVD Player (VIDEO 2)

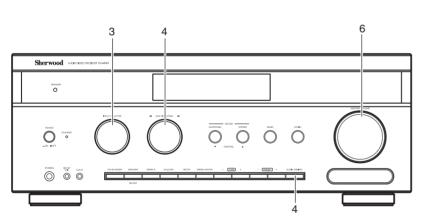





- 2. Select the appropriate input on your TV.
- 3. Rotate the [INPUT SELECTOR] knob on the front panel to select [V2/IPOD] input source. On the remote control, press the [VIDEO 2] button directly.
- ■In case that the HDMI connections between components are not made
- 4. When you want to play the digital signals from the connected digital input, press the [AUDIO ASSIGN] button to display "AUD ~" and then rotate the [MULTI CONTROL] knob or press the CURSOR LEFT/RIGHT buttons to select the desired of [OPT 2] and [COX 2].


#### ■Note:

- If the Audio Mode is set to the mode other than "Digital" for VIDEO 2 input source on the INPUT SETUP menu, you cannot hear the sound from the selected digital input. (For details, refer to "SETTING THE INPUT SETUP" on the main operating instructions.)
- 5. Start playback on your BD/DVD player.
- 6. Adjust the volume.

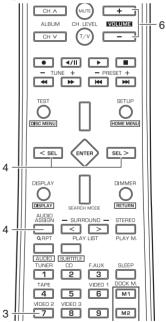

# **Enjoying Surround Sound**

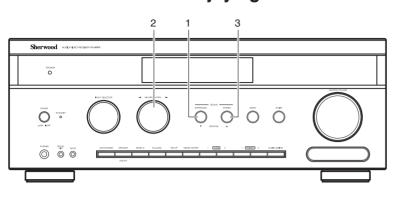

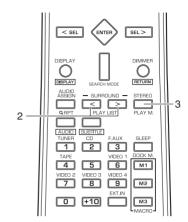

1. Depending on how to select a surround mode, press the [SURROUND] button to select the auto surround mode or the manual surround mode.

Auto Surround Mode : The optimum surround mode will be automatically selected depending on the signal format ([AUTO] lights up) being input.

Manual Surround Mode: You can select the desired of different surround modes selectable for the signal being ([AUTO] goes off) input with using the [MULTI CONTROL] knob or the [SURROUND </>] buttons.

### ■When selecting the manual surround mode.

- 2. Rotate the [MULTI CONTROL] knob or press the [SURROUND </>) buttons to select the desired surround mode.
  - Then the surround mode changes depending on the input signal format.

#### ■To cancel the surround mode for stereo operation.

- 3. Press the [STEREO] button.
  - Then either the stereo mode or the 2 CH downmix mode is selected depending on the signal format which is being input.
  - To cancel either the stereo mode or the 2 CH downmix mode, rotate the [MULTI CONTROL] knob or press the [SURROUND </>] buttons to select the surround mode.

#### ■Note:

 You should adjust the speaker settings for the optimum sound acoustics according to your environment and speaker layout. (For details, refer to "SETTING THE SPEAKER/ROOM EQ SETUP" on the main operating instructions.)

4

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com