 


OPERATING INSTRUCTIONS

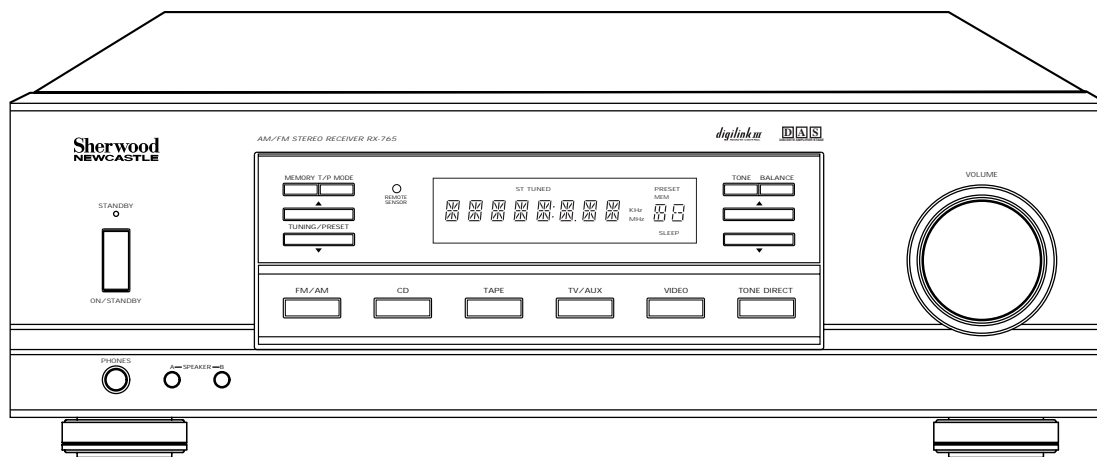

RX-765

AM/FM STEREO RECEIVER

SAFETY INSTRUCTIONS


- 1. Read Instructions** - All the safety and operating instructions should be read before the product is operated.
- 2. Retain instructions** - The safety and operating instructions should be retained for future reference.
- 3. Heed Warnings** - All warnings on the product and in the operating instructions should be adhered to.
- 4. Follow Instructions** - All operating and use instructions should be followed.
- 5. Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 6. Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- 7. Water and Moisture** - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool; and the like.
- 8. Accessories** - Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
- A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



- 10. Ventilation** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 11. Power Sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
- 12. Grounding or Polarization** - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
Alternate Warnings - This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
- 13. Power-Cord Protection** - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
- 14. Outdoor Antenna Grounding** - If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit,

connection to grounding electrodes, and requirements for the grounding electrode. See Figure 1.

 Figure 1
Example of antenna grounding as per
National Electrical Code, ANSI/NFPA 70

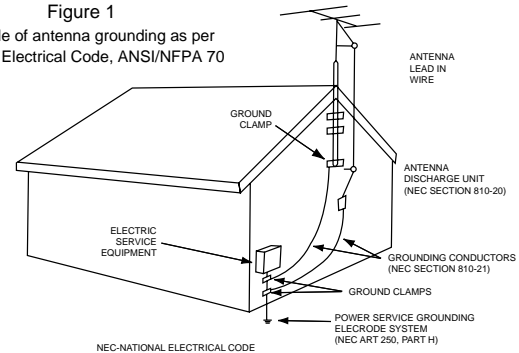

- 15. Lightning** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- 16. Power Lines** - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 17. Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 18. Object and Liquid Entry** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 19. Servicing** - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 20. Damage Requiring Service** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - When the power-supply cord or plug is damaged,
 - If liquid has been spilled, or objects have fallen into the product,
 - If the product has been exposed to rain or water,
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - If the product has been dropped or damaged in any way, and
 - If the product exhibits a distinct change in performance - this indicates a need for service.
- 21. Replacement Parts** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- 22. Safety Check** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- 23. Wall or Ceiling Mounting** - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 24. Heat** - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.



Introduction

UNPACKING AND INSTALLATION

Congratulations on Your Purchase!

Your new high fidelity receiver is designed to deliver maximum enjoyment and years of trouble free service. Please take a few moments to read this manual thoroughly. It will explain the features and operation of your unit and help ensure a trouble free installation. Please unpack your unit carefully. We recommend that you save the carton and packing material. They will be helpful if you ever need to move your unit and may be required if you ever need to return it for service. Your unit is designed to be placed in a horizontal position and it is important to allow at least two inches of space behind your unit for adequate ventilation and cabling convenience.

To avoid damage, never place the unit near radiators, in front of heating vents, in direct sunlight, or in excessively humid or dusty locations. Connect your complementary components as illustrated in the following section.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

Caution : Do not block ventilation openings or stack other equipment on the top.

FOR U.S.A.

■ **Note to CATV System Installer:** This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

■ **FCC INFORMATION**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Caution regarding placement (Except for U.S.A. and Canada)

To maintain proper ventilation, be sure to leave a space around the unit (from the largest outer dimensions including projections) equal to, or greater than, shown below.



Left and right panels: 5 cm
Rear panel: 10 cm
Top panel: 20 cm

READ THIS BEFORE OPERATING YOUR UNIT

FOR U.S.A AND CANADA 120 V

FOR YOUR SAFETY

Units shipped to the U.S.A and Canada are designed for operation on 120 V AC only.

Safety precaution with use of a polarized AC plug. However, some products may be supplied with a nonpolarized plug.

CAUTION : To prevent electric shock, match wide blade of plug to wide slot, fully insert.

FOR CHINA, EUROPE AND AUSTRALIA 220V/230V/240V

FOR YOUR SAFETY

Units shipped to China are designed for operation on 220 V AC only.

Units shipped to Australia are designed for operation on 240 V AC only.

To ensure safe operation, the three-pin plug supplied must be inserted only into a standard three-pin power point which is effectively earthed through the normal household wiring. Extension cords used with the equipment must be three-core and be correctly wired to provide connection to earth.

Improper extension cords are a major cause of fatalities. The fact that the equipment operates satisfactorily does not imply that the power point is earthed and that the installation is completely safe. For your safety, if in any doubt about the effective earthing of the power point, consult a qualified electrician.

PAN-EUROPEAN UNIFIED VOLTAGE

All units are suitable for use on supplies 230-240 V AC.

FOR OTHER COUNTRIES 115 V/230 V

 
FOR YOUR SAFETY

Units shipped to countries other than the above countries are equipped with an AC voltage selector switch on the rear panel. Refer to the following paragraph for the proper setting of this switch.

AC VOLTAGE SELECTION

This unit operates on 115/230 V AC. The AC voltage selector switch on the rear panel is set to the voltage that prevails in the area to which the unit is shipped. Before connecting the power cord to your AC outlet, make sure that the setting position of this switch matches your line voltage. If not, it must be set to your voltage in accordance with the following direction.

AC voltage selector switch






Move switch lever to match your line voltage with a small screwdriver or other pointed tool.

CONTENTS

SAFETY INSTRUCTIONS	2
Introduction	
• UNPACKING AND INSTALLATION	3
• READ THIS BEFORE OPERATING YOUR UNIT.....	4
System Connections	6
Front Panel & Remote Controls	8
• REMOTE CONTROL OPERATION RANGE	10
• LOADING BATTERIES	10
Operations	
• LISTENING TO A PROGRAM SOURCE	11
• LISTENING TO RADIO BROADCASTS	13
• RECORDING	15
• OTHER FUNCTIONS	15
Troubleshooting Guide	16
Specifications	17

System Connections

   
- Do not plug the AC input cord into the wall AC outlet until all connections are completed.
- Be sure to connect the white RCA pin cords to the L(left) and the red RCA pin cords to the R(right) jacks when making audio connections.
- Change the position of the FM indoor antenna until you get the best reception of your favorite FM stations.
- A 75 Ω outdoor FM antenna may be used to further improve the reception.
Disconnect the indoor antenna before replacing it with the outdoor one.
- Place the AM loop antenna as far as possible from the receiver, TV set, speaker cords and the AC input cord and set it to a direction for the best reception.
- If the reception is poor with the AM loop antenna, an AM outdoor antenna can be used in place of the AM loop antenna.
- Make connections firmly and correctly. If not, it can cause loss of sound, noise or damage to the receiver.
- If the electricity fails or the AC input cord is left unplugged for more than 2 weeks, the memorized contents will be cleared. Should this happen, memorize them again.

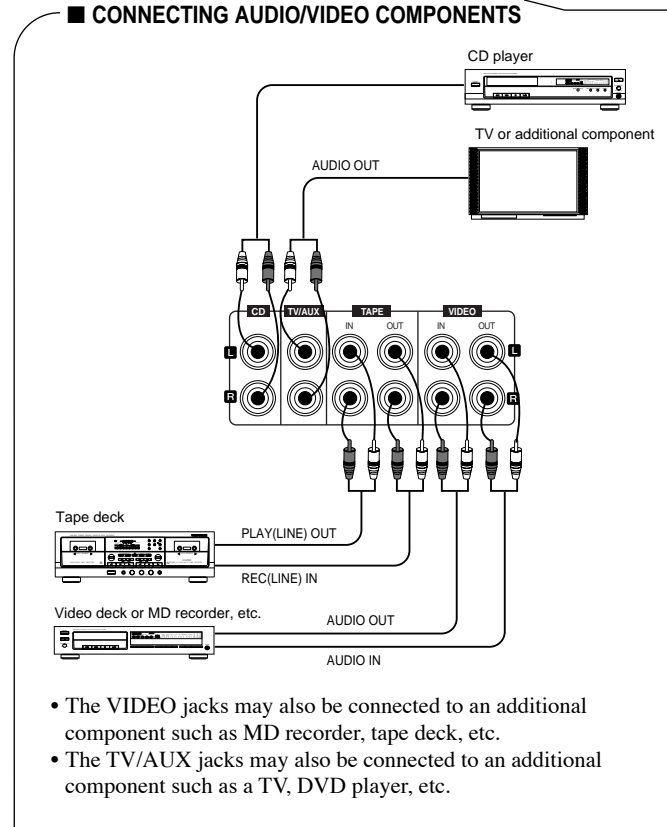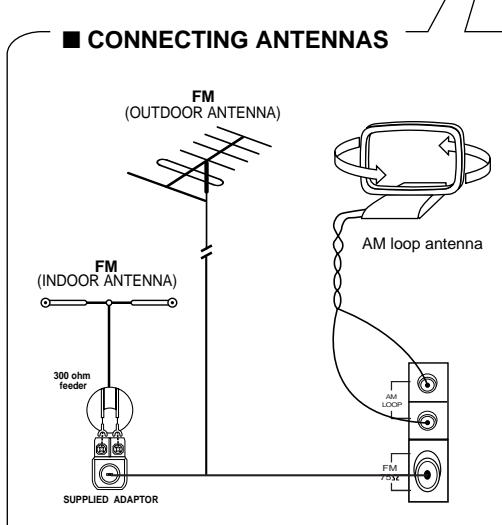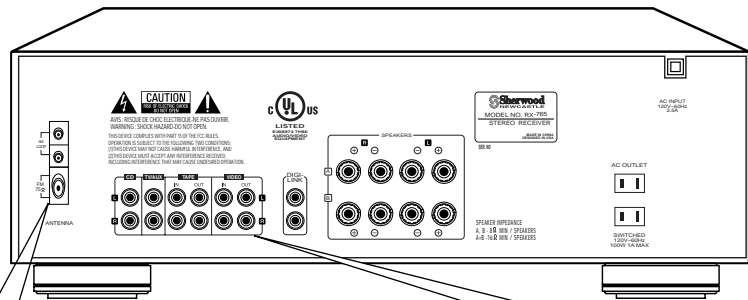

- The VIDEO jacks may also be connected to an additional component such as MD recorder, tape deck, etc.
- The TV/AUX jacks may also be connected to an additional component such as a TV, DVD player, etc.

■ AC INPUT CORD

 Plug this cord into a wall AC outlet.

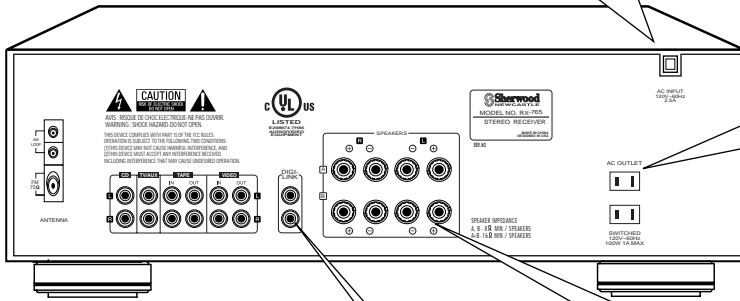


■ SWITCHED AC OUTLETS

- These outlets are switched on (power-on mode) and off (standby mode) according to power control as follows (Maximum total capacity is 100W, 1A):


[Standby mode — switched AC outlet off]
 [Power-on mode — switched AC outlet on]

 ■ CONNECTING SYSTEM CONTROL

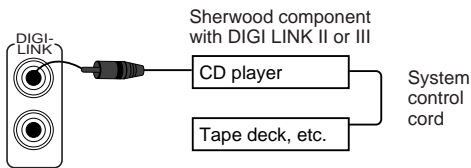

- Connect this jack to the DIGI LINK jack of the external Sherwood component that uses the DIGI LINK II or III remote control system.

 ■ CONNECTING SPEAKERS

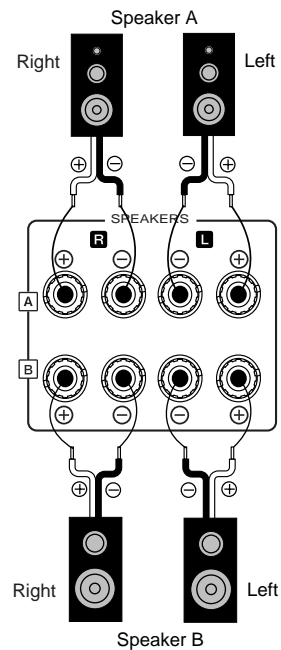


- Usually SPEAKER A terminals are used for only a pair of speakers. When you have another pair of speakers, SPEAKER B terminals can be used.
- Never short-circuit the + and - speaker cords.
- Be sure to connect speakers firmly and correctly according to the channel (left and right) and the polarity (+ and -).


Note :

- For safe amplifier operation, use the speakers with impedance of over 8Ω when you use only SPEAKER A or B terminals and use the speakers with impedance of over 16Ω when you use both SPEAKER A and B terminals.

 Front Panel & Remote Controls

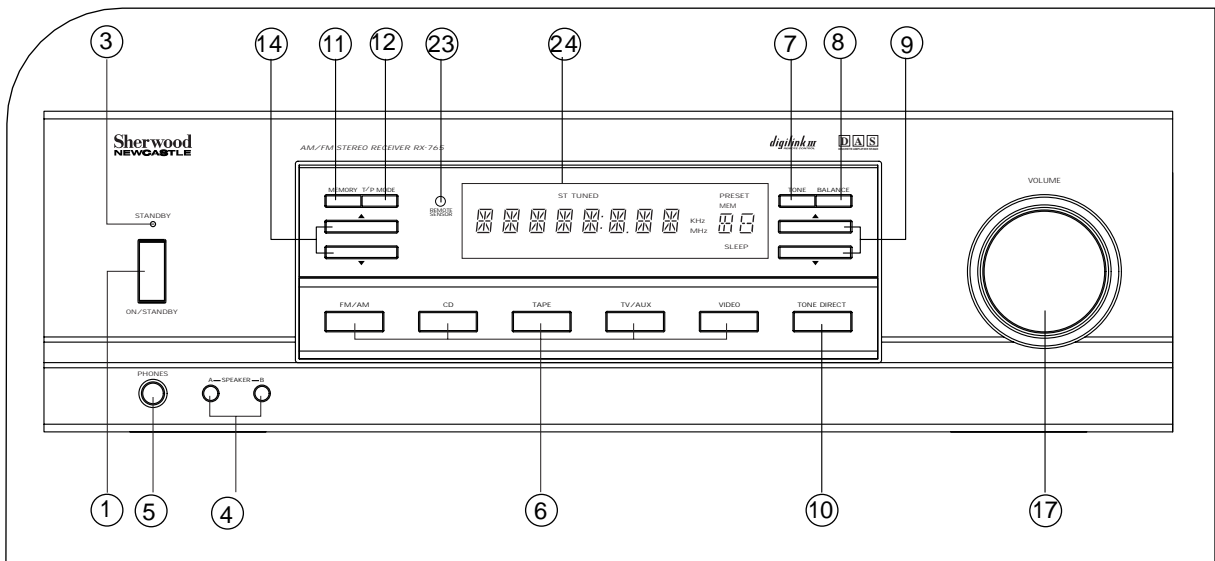

DIGI LINK III System Remote Controls

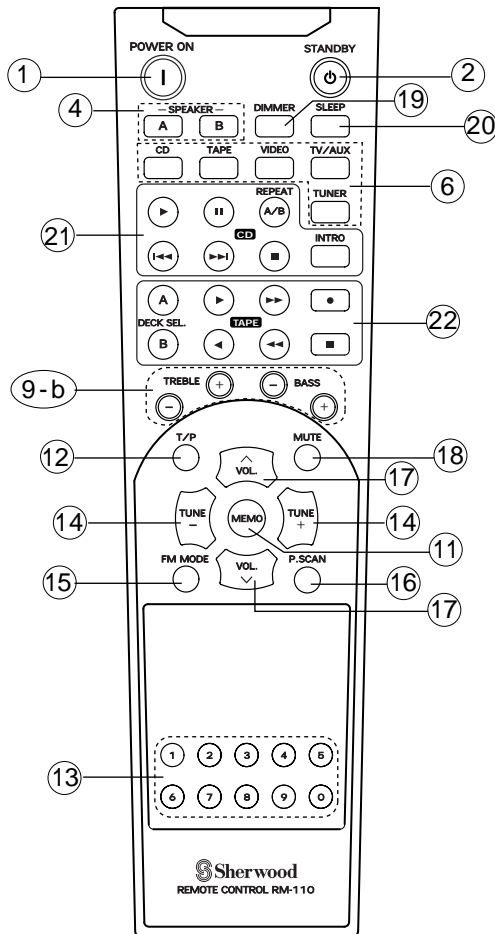 

- You can remotely control not only this receiver but also Sherwood compatible components bearing the DIGI LINK II or III logo.
- For system remote control operation, first make the DIGI LINK connections.
- In the DIGI LINK III remote control system, if pressing PLAY, etc. on CD player or tape deck, CD or TAPE is selected automatically without selecting the input source and then PLAY, etc. starts.

Notes:

- Some functions for a CD player or tape deck may not be available.
- For details about functions, refer to the operating instructions of each component.

① POWER BUTTON

In the standby mode, press this button, then this unit is turned on to enter the operating mode.

② STANDBY BUTTON

In the operating mode, press this button or the POWER button on the front panel, then this unit is turned off to enter the standby mode.

③ STANDBY INDICATOR

④ SPEAKER A, B SELECTOR BUTTONS

These buttons allow you to select various combinations of speakers as follows:

- To drive A speakers, press only the SPEAKER A button (“SPK A” is displayed).
- To drive B speakers, press only the SPEAKER B button (“SPK B” is displayed).
- To drive both A and B speakers, press the SPEAKER A(or B) and B(or A) buttons in order.(“SPK A B” is displayed).
- When using headphones for private listening, press these buttons in order to switch off the speaker A and B (“SPK OFF” is displayed).

⑤ HEADPHONE JACK

Stereo headphones with a standard 1/4 inch plug can be plugged into this jack for private listening.

⑥ INPUT SELECTOR BUTTONS

Press the button to select the desired input source.

⑦ TONE BUTTON

When adjusting the tone (bass and treble), press this button to select the desired tone mode.

- Each time this button is pressed, the tone mode is changed to bass or treble.

⑧ BALANCE BUTTON

When adjusting the sound volume balance, press this button to enter the balance mode.

⑨ BALANCE, TREBLE/BASS UP/DOWN (▲, + / ▼, -) BUTTONS

- a) At the balance mode, adjust the sound volume balance between left and right speakers with these buttons.
- b) At the desired tone mode, adjust the tone as desired with these buttons.

⑩ TONE DIRECT BUTTON

Press this button to listen to a program source without the tone effect.

⑪ MEMORY BUTTON

Press this button to store preset stations.

⑫ TUNING/PRESET MODE BUTTON

Press this button to select the tuning mode or the preset mode.

⑬ NUMERIC BUTTONS(0 ~ 9)

Press these buttons to select or to store preset stations directly.

⑭ TUNING/PRESET UP/DOWN(▲, + / ▼, -) BUTTONS

Press these buttons to tune in the desired stations.

⑮ FM MODE BUTTON

Press this button to select the desired FM mode.

- Each time this button is pressed, the FM mode is changed to the stereo mode or the mono mode.

⑯ PRESET SCAN BUTTON

Press this button to scan the stations in the preset sequence.

⑰ VOLUME CONTROL KNOB, UP/DOWN(∧/∨) BUTTONS

Adjust the volume to a comfortable listening level with this knob or these buttons.

⑱ MUTE BUTTON

Press this button to temporarily mute the sound. Press again to resume the previous sound level.

⑲ DIMMER BUTTON

Press this button to select the brightness of the fluorescent displays as desired.

- Each time this button is pressed, the brightness of all fluorescent displays changes together as follows:

→ ON → dimmer → OFF

⑳ SLEEP BUTTON

Press this button to activate the sleep timer for a specified period of time.

- Each time this button is pressed, the sleep time changes as follows:

→ 10 → 20 → 30 → 60 → 90 → OFF
Unit : minutes

㉑ CD PLAYER SECTION

DISC - for disc selection (CD changer only)

▶ - to begin play

■ - to pause play

REPEAT A/B - to play a specific part repeatedly

◀◀, ▶▶ - to skipping backward or forward

■ - to stop play

INTRO - to preview each track only for 10 seconds

② TAPE DECK SECTION

DECK SELECTOR A, B- for selecting deck A or B

◀, ▶ - to begin reverse or forward side playback.

◀◀, ▶▶ - to wind up the tape reversely or forwardly.

● - for recording.

 
■ - to stop playback or recording.

② REMOTE SENSOR


This receives the signals from the remote control unit.

② FLUORESCENT DISPLAY


■ FLUORESCENT DISPLAY

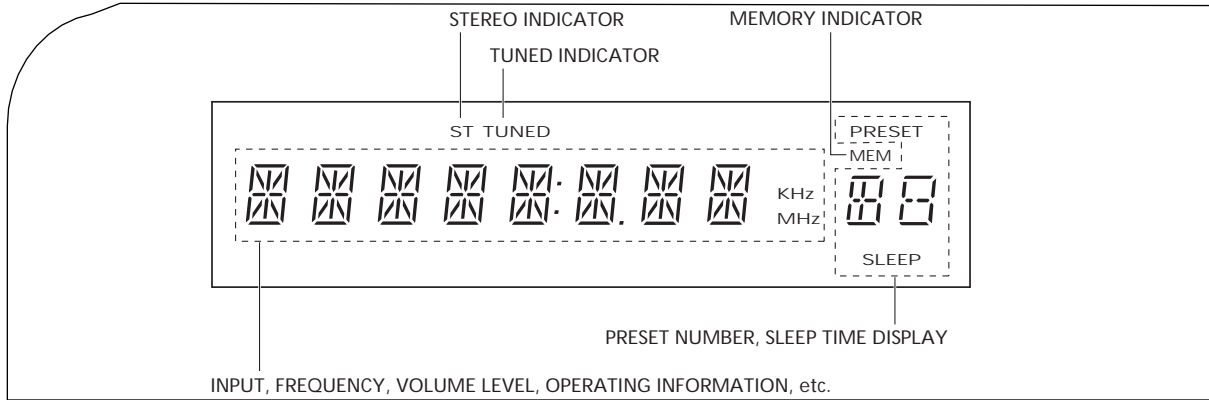

REMOTE CONTROL OPERATION RANGE

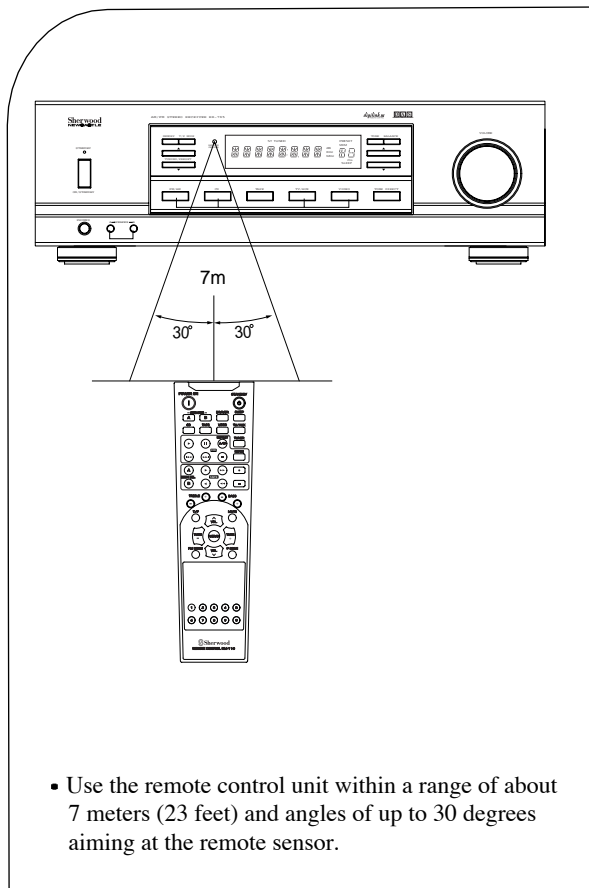 

LOADING BATTERIES

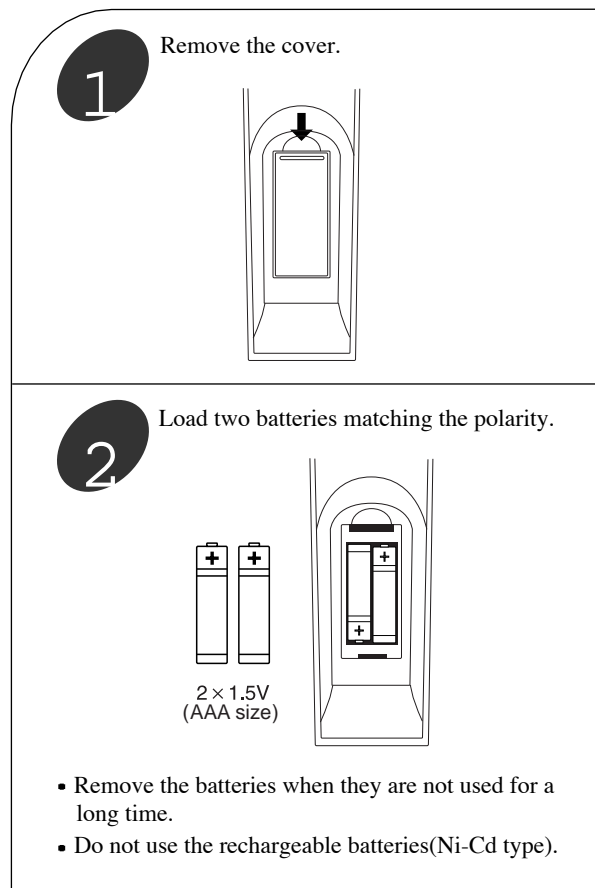 

Operations

LISTENING TO A PROGRAM SOURCE

1 Turn the power on.

STANDBY

OR

ON/STANDBY

POWER ON

STANDBY

SPEAKER A B DIMMER SLEEP

CD TAPE VIDEO TV/AUX

REPEAT A/B TUNER

TREBLE BASS

TYP MUTE

2 Switch the desired speakers on.

A-SPEAKER-B

OR

SPEAKER A B

POWER ON

STANDBY

SPEAKER A B DIMMER SLEEP

CD TAPE VIDEO TV/AUX

REPEAT A/B TUNER

3 Select the desired input source.

FM/AM CD TAPE TV/AUX VIDEO

OR

CD TAPE VIDEO TV/AUX

TUNER

POWER ON

STANDBY

SPEAKER A B DIMMER SLEEP

CD TAPE VIDEO TV/AUX

REPEAT A/B TUNER

4 Operate the selected component for playback.

5 Adjust the volume to a comfortable listening level.

VOLUME

DOWN UP

TREBLE BASS

 
TUNE TUNE TUNE

FM/AM CD TAPE VIDEO TV/AUX

VOL. VOL.

6

To mute the sound.

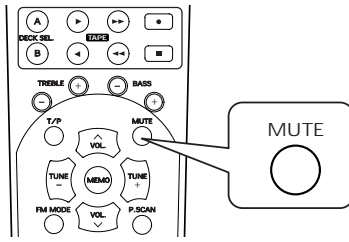

- “MUTE” lights up and flickers.
- To resume the previous sound level, press this button again.

7

To listen with the headphones.



- Be sure to switch off both A and B speakers.

 
Adjusting the tone(bass and treble)

8

Enter the tone mode.



- Each time this button is pressed, the corresponding tone mode is selected and shown for 3 seconds as follows:




■Note:

- When the tone direct function is activated, the tone mode cannot be entered and “TON DIR” flickers for 3 seconds.

9

 At the desired tone mode, adjust the tone as desired.




- If the tone display disappears, start from the step 8 again.
- When pressing the TREBLE UP/DOWN(+/-) or BASS UP/DOWN(+,-) buttons, you need not select the desired tone mode on the step 8.

■Notes:

- Extreme settings at high volume may damage your speakers.
- In general, the bass and treble levels are adjusted to 0.

10

 To listen to a program source without the tone effect.




- “TON DIR” is displayed and the sound that bypasses the tone circuitry will be heard.
- To cancel the tone direct function, press this button again to display “TON CTRL”.

Adjusting the sound volume balance

11

 
Enter the balance mode.



- “BAL” and the balance level is displayed for 3 seconds.

12

 Adjust the sound volume balance between the left and right speakers.





- If the balance display disappears, start from the step 11 again.

■Note:


- In general, the balance level is set to 0.

LISTENING TO RADIO BROADCASTS

 
 
Auto tuning

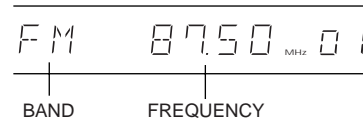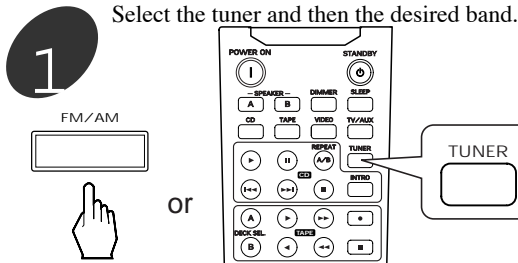

 - Each time this button is pressed, the band is changed to FM or AM.

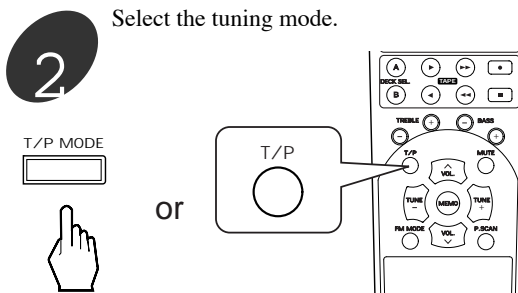

  
- Each time this button is pressed, the mode changes as follows:

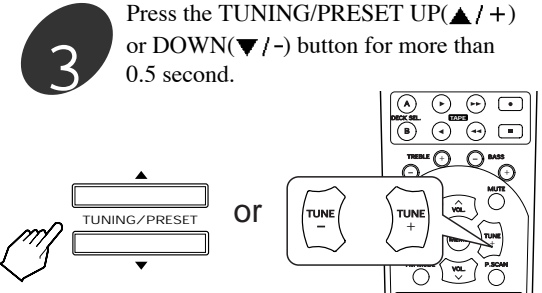

- The tuner will now search until a station of sufficient strength has been found. The display shows the tuned frequency and "TUNED".
- If the station found is not the desired one, simply repeat this operation.
- Weak stations are skipped during auto tuning.



Manual tuning

 - Manual tuning is useful when you already know the frequency of the desired station.
- Perform the steps 1 and 2 in "Auto tuning" procedure and press the TUNING/PRESET UP(▲/+) or DOWN(▼/-) button repeatedly until the right frequency has been reached.

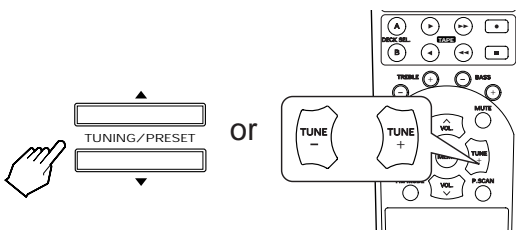


Presetting radio stations

  - You can store up to 30 preferred stations in the memory.

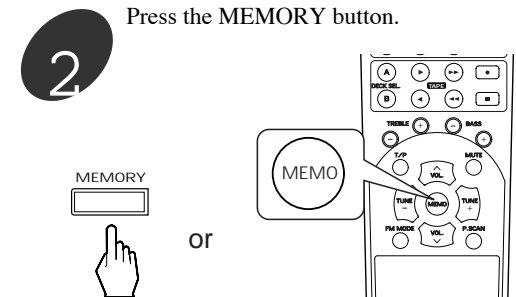

- "MEMO" is flickering for 5 seconds.

 3 Select the desired preset number (1~30) and press the MEMORY button.

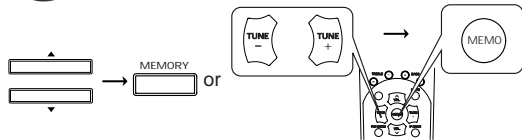

- When using the NUMERIC buttons on the remote control.

Examples) For "3" : **3**

For "15" : **1** → within 2 seconds → **5**

For "30" : **0**

- The station has now been stored in the memory.
- When using the NUMERIC buttons, the station is stored automatically without pressing the MEMO button.
- A stored frequency is erased from the memory by storing another frequency in its place.
- If "MEMO" goes off, start again from the above step 2.

4 Repeat the above steps 1 to 3 to memorize other stations.

■ MEMORY BACKUP FUNCTION

The following items, set before the receiver is turned off, are memorized.

 
- INPUT SELECTOR settings
- Preset stations, etc.

■ Note

- If the electricity fails or the AC input cord is disconnected for more than 2 weeks, they are all cleared. So you should memorize them again.


Tuning to preset stations

1 After selecting the tuner as an input source, select the preset mode.

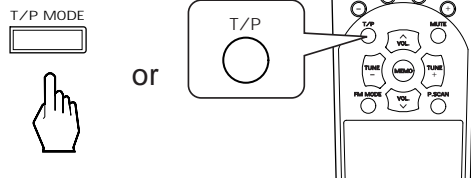

- Then "PRESET" lights up.

 2 Select the desired preset number.

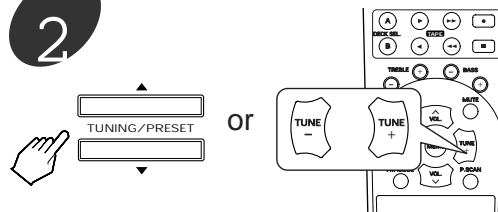

- When using the NUMERIC buttons on the remote control.

Examples) For "3" : **3**

For "15" : **1** → within 2 seconds → **5**

For "30" : **0**

- When selecting the desired preset number with the NUMERIC buttons, the desired preset station will be tuned to automatically without selecting the preset mode.

 
Listening to FM stereo broadcasts

- While listening to FM broadcasts,


- Each time this button is pressed, the FM mode changes as follows:

↳ Stereo mode : "ST" lights up. ↳
 ↳ Mono mode : "ST" goes off. ↳

- When FM stereo broadcasts are poor because of weak broadcast signals, select the FM mono mode to reduce the noise, then FM broadcasts are reproduced in monaural sound.

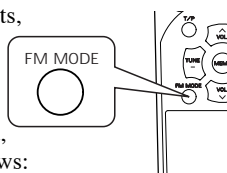



Scanning preset stations in sequence

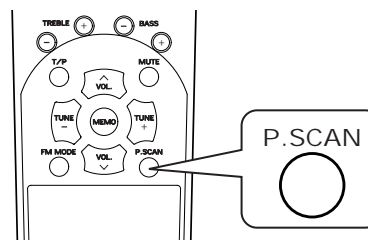 



- The receiver will start scanning the stations in the preset sequence.
- At the desired station, press this button again to stop scanning.

RECORDING

- The volume, tone(bass, treble) and balance settings have no effect on the recording signals.
- When you select tuner, CD or TV/AUX as a recording source, recording may be made on TAPE or VIDEO, or both simultaneously.

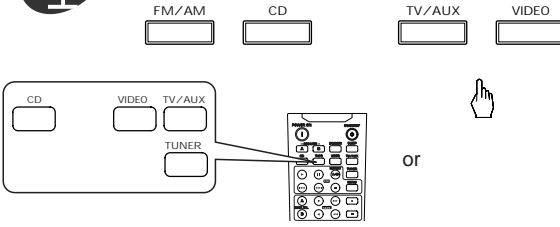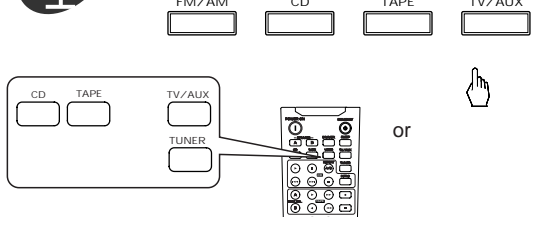Recording with TAPE	Recording with VIDEO
<p>1 Select the desired input as a recording source except for TAPE.</p> 	<p>1 Select the desired input as a recording source except for VIDEO.</p> 
<p>2 Start recording on the TAPE.</p>	<p>2 Start recording on the VIDEO.</p>
<p>3 Start play on the desired input.</p>	<p>3 Start play on the desired input.</p> <ul style="list-style-type: none"> • The audio signals from the desired input will be recorded onto the VIDEO.

OTHER FUNCTIONS

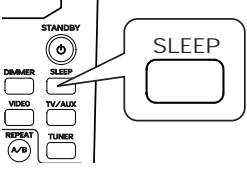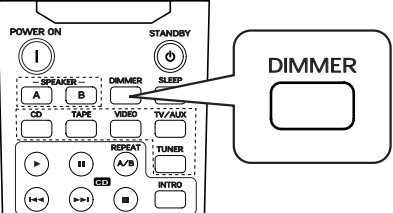Operating the sleep timer	Adjusting the brightness of the fluorescent displays
<ul style="list-style-type: none"> • The sleep timer allows the system to continue to operate for a specified period of time before automatically shutting off. • To set the receiver to automatically turn off after the specified period of time.  <p>→ 10 → 20 → 30 → 60 → 90 → OFF Unit : minutes</p> <ul style="list-style-type: none"> • Each time this button is pressed, the sleep time changes as follows: • While operating the sleep timer, "SLEEP" lights up. • When the sleep time is selected, all display panels of Sherwood components connected by the DIGI LINK III are dimly lit. 	<p>Adjusting the brightness of the fluorescent displays</p>  <ul style="list-style-type: none"> • Each time this button is pressed, the brightness of all fluorescent displays of Sherwood components connected by the DIGI LINK III changes together as follows: <p>→ ON → dimmer → OFF</p> <ul style="list-style-type: none"> • In the display OFF mode, pressing any button will restore the display ON mode.

Troubleshooting Guide

If a fault occurs, run through the table below before taking your receiver for repair.

If the fault persists, attempt to solve it by switching the receiver off and on again. If this fails to resolve the situation, consult with your dealer. Under no circumstances should you repair the receiver yourself as this could invalidate the warranty.

PROBLEM	POSSIBLE CAUSE	REMEDY
No power	<ul style="list-style-type: none"> • The AC input cord is disconnected. • Poor connection at AC wall outlet or the outlet is inactive. 	<ul style="list-style-type: none"> • Connect the cord securely. • Check the outlet using a lamp or another appliance.
No sound	<ul style="list-style-type: none"> • The speaker cords are disconnected. • The volume is adjusted too low. • The MUTE button on the remote control is pressed to ON. • Speakers are not switched on. • Incorrect selection of the input source. • Incorrect connections between the components. 	<ul style="list-style-type: none"> • Check the speaker connections. • Adjust the volume. • Press the MUTE button to cancel the muting effect. • Press the SPEAKER A or B button to ON. • Select the desired input source correctly. • Make connections correctly.
Stations cannot be received	<ul style="list-style-type: none"> • No antenna is connected. • The desired station frequency is not tuned in. • The antenna is in wrong position. 	<ul style="list-style-type: none"> • Connect an antenna. • Tune in the desired station frequency. • Move the antenna and retry tuning.
Preset stations cannot be received	<ul style="list-style-type: none"> • An incorrect station frequency has been memorized. • The memorized stations are cleared. 	<ul style="list-style-type: none"> • Memorize the correct station frequency. • Memorize the stations again.
Poor FM reception	<ul style="list-style-type: none"> • No antenna is connected. • The antenna is not positioned for the best reception. 	<ul style="list-style-type: none"> • Connect an antenna. • Change the position of the antenna.
Continuous hissing noise during FM reception, especially when a stereo broadcast is received.	<ul style="list-style-type: none"> • Weak signals. 	<ul style="list-style-type: none"> • Change the position of the antenna. • Install an outdoor antenna.
Continuous or intermittent hissing noise during AM reception, especially at night.	<ul style="list-style-type: none"> • Noise is caused by motors, fluorescent lamps or lightning, etc. 	<ul style="list-style-type: none"> • Keep the receiver away from noise sources. • Install an outdoor AM antenna.
No recording	<ul style="list-style-type: none"> • Incorrect selection between the components. • Incorrect operation of each component for playback and recording. 	<ul style="list-style-type: none"> • Make connections correctly. • Operate each component correctly.
Remote control unit does not operate.	<ul style="list-style-type: none"> • Batteries are not loaded or exhausted. • The remote sensor is obstructed. 	<ul style="list-style-type: none"> • Replace the batteries. • Remove the obstacle.
Other Sherwood components do not react to remote control commands.	<ul style="list-style-type: none"> • DIGI LINK connections are not made properly. 	<ul style="list-style-type: none"> • Make proper DIGI LINK connections.

Specifications

■ AMPLIFIER SECTION

- Power output, stereo mode, 8 Ω , THD 0.08 %, 20 Hz~20 kHz 2X100 W
- Total harmonic distortion, 8 Ω , 100 W, 20 Hz~20 kHz 0.04 %
- Intermodulation distortion
60 Hz : 7 kHz= 4 : 1 SMPTE, 8 Ω , 100 W 0.1 %
- Input sensitivity, 47 k Ω
Line 200 mV
- Signal to noise ratio, IHF "A" weighted
Line 95 dB
- Frequency response
Line, 20 Hz~40 kHz ± 3 dB
- Output level
TAPE/VIDEO OUT, 2.2 k Ω 200 mV
- Bass/Treble control, 100 Hz/10 kHz ± 10 dB

■ FM TUNER SECTION

- Tuning frequency range 87.5~108 MHz
- Usable sensitivity, THD 3%, S/N 30 dB 15 dBf
- 50 dB quieting sensitivity, mono/stereo 25.2/45.2 dBf
- Signal to noise ratio, 65 dBf, mono/stereo 68/65 dB
- Total harmonic distortion, 65 dBf, 1 kHz, mono/stereo 0.5/0.8%
- Frequency response, 20 Hz~14 kHz ± 3 dB
- Stereo separation, 1 kHz 40 dB
- Capture ratio 4 dB
- IF rejection ratio 80 dB

■ AM TUNER SECTION

- Tuning frequency range 520~1710 kHz
- Usable sensitivity 800 μ V/m
- Signal to noise ratio 40 dB
- Selectivity 25 dB

■ GENERAL

- Power supply 120 V~ 60 Hz
- Power consumption 2.5A
- Dimensions (W \times H \times D) 440 \times 138 \times 332 mm(17-3/8 \times 5-7/16 \times 13 inches)
- Weight (Net) 9.2 kg(20.29 lbs)

Note: Design and specifications are subject to change without notice for improvements.

O P E R A T I N G I N S T R U C T I O N S



RX-765

AM/FM STEREO RECEIVER

5707-04740-002-0

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>