

 
These sound-isolating earphones with VoicePort inline microphone connect to both your cell phone and portable media player. The inline control switch allows you to easily transition from listening to music to answering phone calls. WideBand MicroDrivers deliver an extended frequency soundstage that you can now enjoy at low listening levels, even in noisy environments.

©2005, Shure Incorporated
27EN3210 (Rev. 2)

Printed in U.S.A.

WEARING THE EARPHONES


Wear the earphones as illustrated below.

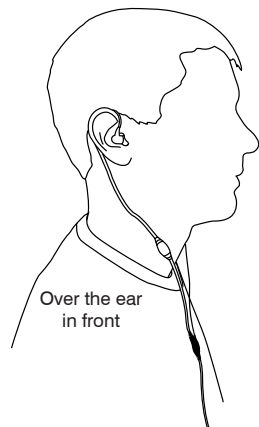


Over the ear
in front

INSERTING THE EARPHONES

 If the earphone seems to be lacking in low frequency response (bass), check the tightness of the seal between the earphone and your ear, or try one of the other sleeve options.

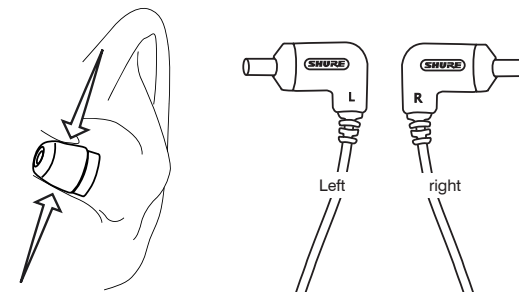

 Warning: Do not push the earphone sleeve beyond the ear canal opening. Make sure that the sleeve completely covers the earphone nozzle. If any part of the nozzle is exposed, the sleeve is not properly installed.

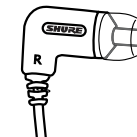

CHOOSING AN EARPHONE SLEEVE

Your earphones come with a selection of sleeves. Make sure the sleeve you use is easy to insert into your ear, fits comfortably, and is easy to remove from your ear.



Flex Sleeves

In small, medium, and large sizes. Made from translucent PVC.



 
Soft Flex Sleeves

In small, medium, and large sizes. Made from pliable rubber.

Foam Sleeves




When using the foam sleeves, compress the sleeve between your fingers before inserting it into the ear canal. Hold the earphone in place for about ten seconds while the foam expands and creates a tight seal.




Triple-Flange Sleeves (Optional Accessory)


If desired, the sleeve nozzle may be shortened. Use sharp scissors to carefully trim the nozzle to the desired length.

INLINE SWITCH CONTROL

  Push and hold to MUTE cell phone microphone

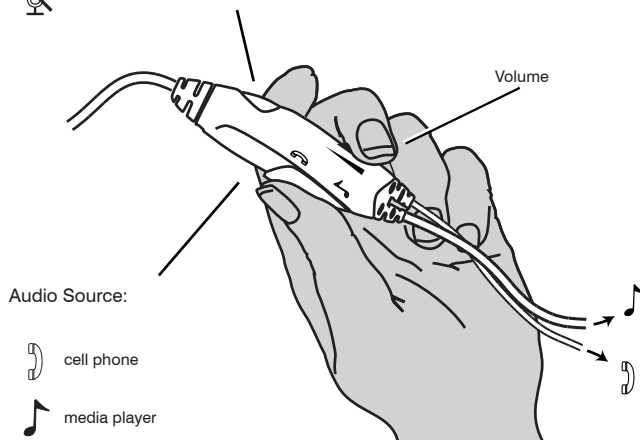

Audio Source:

 

cell phone



 
media player

Note: Turn volume control to its lowest setting before switching between music and cell phone. Switching to media during a call mutes cell phone.

Download from www.Somanuals.com. All Manuals Search And Download.

CLEANING THE EARPHONE NOZZLE

If the nozzle of your earphone is blocked, clean the nozzle using the supplied wax removal loop.

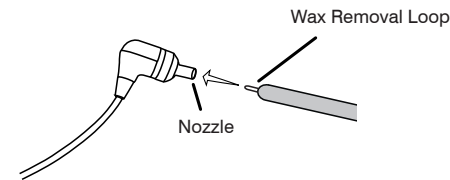

When cleaning, do not force any object through the earphone nozzle! This will damage the earphone sound filter.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>