



# UHF IN-LINE PASSIVE RF FILTER





THIS RADIO EQUIPMENT IS INTENDED FOR USE IN MUSICAL PROFESSIONAL ENTERTAINMENT AND SIMILAR APPLICATIONS.

NOTE: THIS RADIO APPARATUS MAY BE CAPABLE OF OPERATING ON SOME FREQUENCIES NOT AUTHORIZED IN YOUR REGION. PLEASE CONTACT YOUR NATIONAL AUTHORITY TO OBTAIN INFORMATION ON AUTHORIZED FREQUENCIES FOR WIRELESS MICROPHONE PRODUCTS IN YOUR REGION.

## GENERAL DESCRIPTION

The Shure UAPF-X1 is an in-line passive RF filter to attenuate frequencies outside the X1 band and intended to be used with any Shure X1 band wireless product that has removable antennas, including SLX, ULX, and UHFR.

### **FEATURES**

- · Filters out extraneous RF signals.
- · Mountable on supplied desk-/wall-mount or on a microphone stand
- · Extremely durable under the heaviest use
- · Shure quality, ruggedness, and reliability

#### **APPLICATION**

Optimally, the unit should be located prior to any amplification of an RF signal. Positioning should be tested and adjusted for each individual setup.

Antennas should be spaced far enough to obtain the widest possible RF field and to minimize RF signal drop out. In a diversity system, Shure recommends that antennas be positioned at  $45^{\circ}$ .

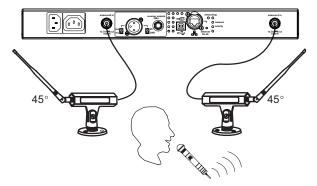


Figure 1. Diversity System

The following table shows three typical connectivity arrangements for the UAPF-X1:

Antenna	Passive Filter	In line Amplifier	Antenna Distribution Unit	Receiver
UA820X (or PA805SWB, UA860SWB, PA805X)	UAPF-X1			UR4D-X1 (or UA4S-X1)
UA820X (or PA805SWB, UA860SWB, PA805X)	UAPF-X1		UA845-SWB	UR4D-X1 (or UA4S-X1)
UA820X (or PA805SWB, UA860SWB, PA805X)	UAPF-X1	UA830X	UA845-SWB	UR4D-X1 (or UA4S-X1)

## INSTALLATION

#### IMPORTANT: DO NOT USE INFORMATION:

This device must not be used with antennas or other devices that have a DC short circuit at their feed point without using an external (BNC) DC Block. A suitable BNC DC Block is the JFW Industries Model 50DB-002.

#### INSTALLATION INSTRUCTIONS

 Thread the Shure Model UAPF-X1 unit on the supplied stand or on a 5/8 in.-27 thread microphone stand (Figure 2) and connect the antenna wand to either antenna port (filter functions in both directions).

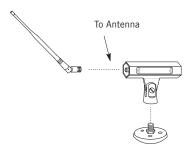


Figure 2. Attaching Base and Antenna

 Using 50 W low-loss coaxial cable (purchased separately, Shure UA825 or UA850 or UA8100 recommended), connect to the opposite port to the Shure Model UR4 or ULX, SLX wireless receiver or UA845SWB, or UA844SWB Antenna Distribution System (Figure 3).

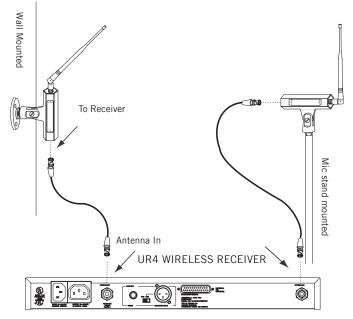


Figure 3: Connecting Receiver

#### MAINTAINING CABLE INTEGRITY

To maintain Shure cables in top condition in permanent installations:

- 1. Avoid sharp bends or kinks in the cables.
- 2. Do not deform cables with makeshift clamps, such as bending a nail over the cable.
- 3. Do not use cables in permanent outdoor installations.
- 4. Do not expose cables to extreme moisture

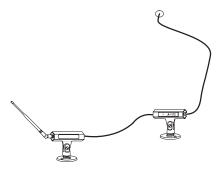


Figure 4: Cable Chaining

# **SPECIFICATIONS**

RF frequency range	3dB bandwidth = 36Mhz 20dB bandwidth = 49Mhz
Stop-Band Attenuation:	Minimum 30dB, Typical 32-36dB
Insertion Loss	Typical 3.25dB
Case	Aluminum die-casting, black painted
VSWR in pass-band (input, output):	Typical 2.0dB
Swivel Adapter	Positive action, break-resistant adjustable from 0 degrees to 90 degrees, with standard 5/8 in. –27 thread
Net Weight	Without mounting stand.28kg (9.8 oz)
	With mounting stand .42 kg (14.8 oz)
Power Consumption (12 Vdc)Pa	ssively passes power (12Vdc) 0.6 to 0.72 W for use with UA870X active antenna.
Connectors	Female, BNC-type
Dimensions (without accessories) de	66.7 mm high x 31.75 mm wide x 112 mm tep (2.625 x 1.250 x4.40 inches), 108 mm (4.25 in.) high w/mounting stand

## REPLACEMENT PARTS

Mounting Base	HDB
---------------	-----

For additional service or parts information, please contact Shure's Service department at 1-800-516-2525. Outside the United States, please contact your authorized Shure Service Center.



SHURE Incorporated http://www.shure.com United States, Canada, Latin America, Caribbean:
5800 W. Touhy Avenue, Niles, IL 60714-4608, U.S.A.
Phone: 847-600-200
U.S. Fax: 847-600-1212
Intl Fax: 847-600-6446

Inti Fax: 847-000-0446
Europe, Middle East, Africa:
Shure Europe GmbH, Phone: 49-7131-72140
Fax: 49-7131-721414
Asia, Pacific:
Shure Asia Limited, Phone: 852-2893-4290
Fax: 852-2893-4055

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com