


Hair Straighteners SHGR 75 A1

61



GB **Hair Straighteners**
IE Operating instructions
CY

KOMPERNASS GMBH
BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com
ID-Nr.: SHGR 75 A1-01/10-V3

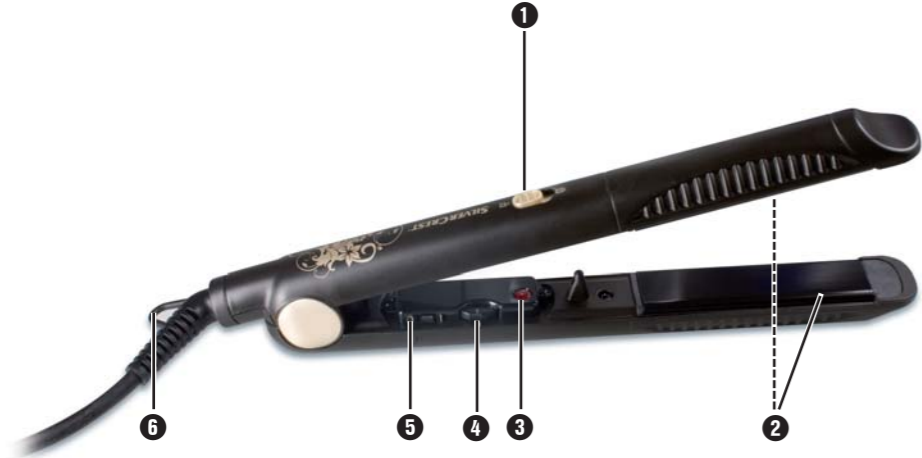

HAIR STRAIGHTENERS

Read the operating instructions carefully before using the appliance for the first time and preserve this booklet for later reference. Pass the manual on to whomsoever might acquire the appliance at a later date.

Safety information

Risk of electrocution!

- Connect the appliance only to wall sockets supplying the current strength detailed on the model plate.



Under no circumstances may the appliance be submersed in fluids or fluids be allowed to permeate the housing. Do not expose the appliance to humidity and do not use it outdoors. Should liquids enter the housing, unplug the appliance from the power source immediately and arrange for it to be repaired by a qualified technician.

- Do not use the appliance outdoors.



Never use the appliance near water, particularly not near sinks, baths or other vessels. The proximity of moisture presents a risk, even when the appliance is switched off. After use, always remove the plug from the power socket. As additional protection, the installation of a faulty-current protection unit with an activation power rating of not more than 30 mA is recommended for the power circuit in the bathroom. Ask your electrician for advice.

- In the event of operating malfunctions and before cleaning the appliance, remove the power plug from the wall socket.
- Always remove the power cable from the socket by pulling on the plug, NOT on the power cable.
- Do not wrap the power cable around the appliance and protect it from being damaged.

- The power cable on this appliance cannot be replaced. In the event of it being damaged the whole appliance must be disposed of.
- Do not pinch or squeeze the power cable and lay it in such a way that no one can tread on or trip over it.
- In order that you can disconnect the appliance quickly in an emergency, do not use extension cables.
- NEVER grasp the appliance, the power cable or the power plug with wet hands.
- Unplug the appliance immediately after use. Only when you unplug the appliance from the mains supply is it completely free from electricity.

Risk of burns and physical injuries

- This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. Children should be supervised to ensure that they do not play with the appliance.
- NEVER leave a switched on appliance unsupervised.
- Do not place the appliance close to sources of heat and protect the power cable from damage.
- Do not operate the appliance if it has fallen or is damaged. Arrange for the appliance to be checked and, if necessary, repaired by qualified technicians.
- Do not open the housing or attempt to repair the appliance yourself. Should you do so, the safety concept of the appliance may be compromised and the warranty becomes void. Permit only authorised technicians to repair a defective appliance if repairs should be necessary.

- The appliance becomes hot during use. Hold it only by the grip when it is hot.


Intended use

The Hair Straightener is intended for the smoothing and shaping of human hair only, under no circumstances may it be used for wigs and hairpieces made of synthetic material. The Hair Straightener is intended for domestic use only. Pay heed to all of the information in this operating manual, especially the safety instructions.

Items supplied

- Hair Straighteners
- Operating Instructions

Technical data

Mains voltage: 220 - 240 V ~ 50 Hz
 Power consumption, max.: 75 W
 Protection class: II / 

Appliance description

- ❶ Locking device
- ❷ Hotplates
- ❸ Control lamp
- ❹ Heat level dial
- ❺ On/Off switch
- ❻ Suspension loop

Before straightening


- The hair should be clean, dry and free of styling products. Excepted are the special products that support a straightening of the hair.
- Comb the hair thoroughly before straightening so that there are no knots in it.
- To achieve an especially good straightening result, spread special products for hair straightening through the hair.
- Divide the hair into manageable portions and secure the upper portions to the head with grips so that they do not get in the way.

Operation

Preparation


Note:

The hotplates ❷ must be free from contamination of all kinds. If necessary, clean them before taking the appliance into use (see chapter "Cleaning").

The appliance is locked, the locking device ❶ has been pushed into the position .

1. Insert the power plug into a wall socket.
2. Slide the On/Off switch ❺ to the position I. The control lamp ❸ glows. The hotplates ❷ are being warmed up.
3. Set the required temperature with the heat level dial ❹:

- 1 - 2, minimum heat level, for very fine hair.
- 2 - 3, low heat level, for fine hair.
- 3 - 4, medium heat level, for normal hair.
- 4 - 5, highest heat level, for thick or difficult to shape hair.

4. Wait for approx. 2 - 3 minutes, until the programmed temperature has been reached.
5. Slide the locking device ❶ into the position .

Straightening hair


- Prepare the hair as described in "Before straightening".
- Start with the lower hair sections at the back of the head. Work over the sides to the front.

1. Separate a ca. 2 cm wide hair strand.

Attention!

Ensure that the hotplates ❷ do not make contact with the skin of the head. Risk of Burns!

Ensure that when squeezing the hotplates ❷ together you do not touch the front part of the appliance (hotplates ❷/ housing / top front). When it is in use, you may only hold the appliance by the handle! Risk of burns!

2. Clamp the hair strands between the hotplates ❷ and close to the skin, then press them together.
3. Pull the whole of the hair strand through the hotplates ❷, in that you pull the hair straightener downwards.
4. Repeat the process with each individual strand.
5. When all strands have been smoothed, slide the On/Off switch ❸ to the position 0. The control lamp ❹ goes out.
6. Remove the plug from the mains power socket.
7. Press the hotplates ❷ together and slide the locking device ❶ to the position .

Cleaning

Attention!

Remove the power plug from the wall socket.

Risk of electric shock!

Always allow the appliance to cool down completely before cleaning it. Risk of Burns!

- Wipe the housing and the hotplates ❷ with a soft and slightly moistened cloth.
- In cases of stubborn soiling, apply some mild detergent to the moistened cloth.

Note:

Do not use aggressive or abrasive cleaning agents. These could attack the upper surfaces and irreparably damage the appliance.

Note:

Do not use the appliance again until it has completely dried out.


Storage

Attention!

NEVER wrap the power cable with the plug around the appliance. This would cause irreparable damage to the appliance.

Attention!

To avoid an unintentional switch on of the appliance, ALWAYS remove the plug from the mains power socket if the appliance is not in use.

- When the appliance is cooling down, always place it on a heat-resistant surface or hang the appliance up by the suspension loop ❸.
- Press the hotplates ❷ together and slide the locking device ❶ to the position .
- Store the hair straightener at a clean and dry location.

Disposal



Do not dispose of the appliance in your normal domestic waste. This product is subject to the provisions of European Directive 2002/96/EC.

Dispose of the appliance through an approved disposal centre or at your community waste facility.

Observe the currently applicable regulations.

In case of doubt, please contact your waste disposal centre.



Dispose of all packaging materials in an environmentally friendly manner.

Warranty and Service

The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, but not for transport damage, for wearing parts or for damage to fragile components, e.g. buttons or batteries. This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty.

The warranty period will not be extended by repairs made under warranty. This applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment.

GB DES UK LTD

Tel.: 0871 5000 700 (£ 0.10 / minute)

e-mail: support.uk@kompernass.com

IE Kompernass Service Ireland

Tel: 1850 930 412 (0,082 EUR/Min.)

Standard call rates apply. Mobile operators may vary.

e-mail: support.ie@kompernass.com

Importer

KOMPERNASS GMBH

BURGSTRASSE 21

D-44867 BOCHUM

www.kompernass.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>