

### Kettle SWK 3000 EDS A1

61



**GB** Kettle  
**IE** Operating instructions

KOMPERNASS GMBH  
BURGSTRASSE 21 · D-44867 BOCHUM  
www.kompernass.com  
ID-Nr.: SWK3000EDSA1-09/10-V1  
IAN: 61662



# Kettle

---

Read the operating instructions carefully before using the appliance for the first time and preserve this booklet for later reference. Pass the manual on to whomsoever might acquire the appliance at a later date.

## Intended use

---

This appliance is intended for the boiling-up of water in domestic households. It is not intended for use with other liquids or for commercial applications.

## Technical Data

---

Voltage:	220 - 240 V ~ / 50 Hz
Power consumption:	2500 - 3000 W
Volume:	max. 1.7 l min. 0.5 l

① In older electrical installations, the building fuse (12A) may be triggered due to the high power consumption.

## Safety information

---

### **⚠ To avoid potentially fatal injury through electric shock:**

- Ensure that the base with the electrical connections does not come into contact with water! If it has unintentionally come into contact with water, first allow it to dry out completely before taking it into use.
- Only use the water boiler with the supplied base.
- Ensure that the power cable never becomes wet or damp during operation. Lay the cable so that it cannot be trapped or otherwise damaged.

- Arrange for defective power plugs and/or cables to be replaced at once by qualified technicians or our Customer Service Department.
- Always remove the plug from the power socket after use. Simply switching the appliance off is not sufficient, as the appliance is under power for as long as the plug is connected to the socket.

### **⚠ To avoid burns and other injuries:**

- Always heat water with the lid closed, otherwise the automatic cut-out may not function. Boiling water could then spray out over the rim.
- Hot steam clouds may be released. The boiler also becomes very hot during operation. Wear oven mitts.
- Ensure that the appliance is standing securely and vertically before switching it on. Boiling water can cause an unstable kettle to fall over.
- This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use an external timing switch or a separate remote control system to operate the appliance.
- Never leave the appliance unsupervised whilst in use.

## Items supplied

---

Kettle  
Base  
Operating instructions

## Operating Elements

---

- ❶ Unlocking button
- ❷ ON/OFF switch with integrated control lamps
- ❸ Base
- ❹ Scale with integrated control lamps
- ❺ Pourer sieve

## Commissioning

---

### **Caution**

Always and only use fresh tap water in the water boiler! Do NOT consume water that is not specifically designated as drinking water. If you do, there will be a risk of damage to your health!

- Before taking the appliance into use, ensure that ...
  - the appliance, the plug and the power cable are in good working order and...
  - all packaging materials have been removed from the device.
- Fill the appliance with water up to the MAX marking and let it come to a full boil once – as described in the next section.
- After it has boiled, pour this water away.
- Rinse the water boiler out with clear water.
- Fill the appliance with water up to the MAX marking on the scale ❹ and then bring it to the boil. When done, pour this water away also.

The appliance is now ready for use.

## Boiling water

---

### **Danger**

Never place the electrical base ❸ in close proximity to water – a potentially fatal risk!

### **Caution**

Always use fresh tap water. Do not consume any water that has already stood in the water boiler for longer than one hour. Do not reboil water that has cooled down. Always pour old water away. Microbes could have formed in it!

- Lift the kettle off of the base when filling it!
- Open the lid by pressing the unlocking button ❶.
- Hold the kettle upright while filling it. Only in this way can you correctly read the markings on the scale ❹. Fill the kettle...
  - at least to the MIN mark, so that the device does not overheat,
  - no higher than the MAX mark, so that no boiling water spills out.
- First close the lid and then place the kettle onto the base ❸, ensuring that it is firmly seated on the base ❸.
- Now insert the plug into the mains power socket.
- Press the ON/OFF switch ❷ down until it engages downwards.
- The control lamp integrated in the scale ❹, as well as the control lamp in the on/off switch ❷, indicate that the appliance is now heating itself up.
- The appliance switches itself off, and the control lamps go out, as soon as the water is on the boil. The ON/OFF switch ❷ is released upwards.

### **Warning**

First remove the plug from the wall power socket before you lift the kettle from the base **3**. This avoids the risk that any water splashing out could come into contact with live electrical connections in the base **3**, which could cause a short circuit.

### **Injury hazard**

For safety reasons, the lid should not be opened while the water is boiling or is very hot. There is a risk of receiving severe scalds.

## Cleaning and Care

---

### **Danger**

Do not open any part of the housing. There are no user-servicable elements inside. An open housing can create the risk of a lethal electrical shock.



Never submerge any parts of the appliance in water or other liquids! This can create the risk of a life-threatening electrical shock if residual liquid comes into contact with powered components.

### **Risk of personal injuries**

Before cleaning the appliance, remove the plug from the mains power socket and allow the appliance to cool down.

- Clean the exterior surfaces and the power cord with a slightly damp cloth. Be sure to dry the appliance well before taking it back into use.
- For stainless steel surfaces, you can use appropriate cleaning agents from a specialized dealer.
- Never use detergents, abrasive cleaners or solvents. These can damage the appliance.

### **In the event of scale deposits:**

- Before descaling, remove the pourer sieve **5** (see chapter "Removing/replacing the pourer sieve").
- Obtain any decalcifying agent suitable for kitchen utensils (e.g. decalcifiers for coffee machines) from a hardware shop. Proceed as detailed in the instructions provided for the use of the decalcifying agent.

### **Removing/replacing the pouring sieve**

- Open the lid.
- Press the retainer at the top of the pourer sieve **5** down and, at the same time, pull the pourer sieve **5** inwards.
- Remove the pourer sieve **5**.
- Clean the pouring sieve **5** with a lightly moistened dishcloth and under running water.
- Replace the pourer sieve **5** after cleaning it. Ensure that the retainer engages and that the pourer sieve **5** is firmly seated.

### **Notice**

Should the scale deposits in the pourer sieve **5** be firmly established, lay it in a water-vinegar solution having a ratio of 6:1 for a few hours. The scale deposits will dissolve themselves. Rinse the pourer sieve **5** with lots of clear water.

## Storage

---

Allow the appliance to cool off completely before putting it into storage.

- Wind the power cable around the cable retainer on the underside of the base **3**.
- Store the appliance in a dry place.

## Disposal

---



**Do not dispose of the appliance in your normal domestic waste. This product is subject to the provisions of European Directive 2002/96/EC.**

Dispose of the appliance through an approved disposal centre or at your community waste facility.

Observe the currently applicable regulations.

In case of doubt, please contact your waste disposal centre.



Dispose of all packaging materials in an environmentally friendly manner.

## Warranty and Service

---

The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, but not for transport damage, for wearing parts or for damage to fragile components, e.g. buttons or batteries. This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty.

The warranty period will not be extended by repairs made under warranty. This applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment.

### DES UK LTD

Tel.: 0871 5000 700 (£ 0.10 / minute)

e-mail: support.uk@kompernass.com

### Kompernass Service Ireland

Tel: 1850 930 412 (0,082 EUR/Min.)

Standard call rates apply. Mobile operators may vary.

e-mail: support.ie@kompernass.com

## Importer

---

KOMPERNASS GMBH

BURGSTRASSE 21

D-44867 BOCHUM, GERMANY

[www.kompernass.com](http://www.kompernass.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>