

Steam Brush SDRB 1000 A1



GB **Steam Brush**
IE Operating instructions



CONTENT	PAGE
Safety instructions	2
Intended Use	3
Technical data	3
Items supplied	3
Description of the appliance	3
Before the First Usage	3
Operation	4
Filling with water.....	4
Attaching/detaching the brush attachment	5
Steam brush function.....	5
Clothing care	5
Curtain and soft furnishing care.....	6
Fluff brush.....	6
Ironing function	6
After using the steam brush	7
Cleaning and care	7
Scale removal	7
Storage	7
Troubleshooting	7
Disposal	8
Warranty & Service	8
Importer	8

Read the operating instructions carefully before using the appliance for the first time and preserve this booklet for later reference. Pass the manual on to whomsoever might acquire the appliance at a later date.

STEAM BRUSH

Safety instructions

⚠ Risk of personal injury!

- When the appliance is hot, grasp it only by the handle.
- This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used.
- Children should be supervised to ensure that they do not play with the appliance.
- Never hold your hand over the steam spray or on hot metal parts.
- You should not open the filler opening of the water reservoir while the iron is in use. First of all, remove the plug from the power socket and allow the device to cool down completely.
- NEVER iron clothing while still wearing it!
- NEVER direct jets of steam at other people or animals.
- Under NO circumstance should you use the appliance if it shows visible signs of damage, has fallen or leaks water. Arrange for it to be repaired by qualified specialists.

⚠ Risk of fire!

- Do NOT leave the appliance unsupervised when it is connected to mains power.
- Put the appliance into storage only when it has cooled down.
- Place the appliance on level and heat resistant surfaces only with the stand folded out. The appliance must be stood securely when it is put down.


- Use only the ironing temperatures given in the care instructions for the material, or those suitable for it. Otherwise, you could damage the textiles. Should care instructions not be given or known, start with the lowest temperature setting.

⚠ Risk of electrical shocks.

- The rating of the local power supply must tally completely with the details given on the rating plate of the appliance.
- To avoid possible dangers, arrange for a defective appliance to be checked and possibly repaired by qualified technicians, or contact our Customer Service Department.
- Arrange for defective power plugs and/or cables to be replaced at once by qualified technicians or our Customer Service Department.
- To disconnect from the power source, pull only on the plug itself, not on the cable.
- Never bend (kink) or crush the power cable. Arrange it in such a way that it can not come into contact with hot surfaces and such that no-one can step on it or trip over it.
- After every usage, before cleaning the appliance and when refilling with water, remove the plug from the power socket.
- Always unroll the power cable fully before switching on and do not use an extension cable.
- Never touch the power cable or the power plug with wet hands.
- Under no circumstances may the appliance be submersed in fluids or fluids be allowed to permeate the housing. Do not expose the appliance to humidity and do not use it outdoors. Should liquids enter the housing, unplug the appliance from the power socket immediately and arrange for it to be repaired by a qualified technician.

- NEVER use the appliance adjacent to water contained in a bath, shower, wash basin or other vessels. The proximity of moisture presents a danger, even when the appliance is switched off.
- You may not open the appliance housing. Permit only authorised technicians to repair a defective appliance.

⚠ Attention!

- Should the care instructions in the clothing item forbid ironing (Symbol ) , you may not use the steam brush on it. Should you do so, the clothing item could be permanently damaged.
- The water tank is to be filled exclusively with mains water (or a mix of distilled and mains water). You will otherwise damage the appliance.
- You may not clean the appliance with solvents, alcohol or abrasive cleaning agents. These could cause damage to it.

Intended Use

This Steam Brush is intended exclusively for the smoothing and removal of crinkles, fluff and hairs on home textiles. It may only be used indoors and in a domestic household. All other use is deemed improper use.

Technical data

Rated voltage: 220-240V~50Hz
Output: 1000 W

Items supplied

Steam Brush
Brush attachment
Measuring beaker
Operating instructions

Description of the appliance

- ❶ Water tank
- ❷ Water fill opening
- ❸ Temperature regulator
- ❹ Unlocking device for the water tank
- ❺ Heating-up control lamp
- ❻ Suspension eye
- ❼ Power cable with power plug
- ❽ Steam blast button
- ❾ Stand
- ❿ Sole of the iron
- ⓫ Unlocking device for brush attachment
- ⓬ Brush attachment
- ⓭ Fluff brush
- ⓮ Clothes brush
- ⓯ Measuring beaker

Before the First Usage

- Remove the steam brush from the packaging.
- Remove all possible adhesive tags and protective foils from the steam iron.

⚠ Attention!

Plastic bags can be dangerous. To avoid fatalities through suffocation, keep plastic bags out of the reach of children.


- Fill the water tank **1** with water (See chapter "Filling with water").
- Insert the power plug **7** into a correctly installed and earthed mains power socket.
- Hold the steam brush horizontally.
- Place the temperature regulator **3** at the position "MAX".
- Heat the steam brush up at the highest setting for a few minutes. By doing this you will clear production residues from the sole **10** of the appliance.
- Activate the steam shot button **8** a few times, so that steam exits from the soleplate **10**.
- Then iron a redundant piece of material, this will remove any impurities that may possibly be on the sole of the iron **10**.

i Note:

On the first heating up of the appliance a small volume of smoke and smell may be generated, caused by production residues. This is completely normal and is not dangerous. Provide for sufficient ventilation, for example, open a window.

Operation

i Information

- Should the care instructions in the clothing item forbid ironing (Symbol ) , you may not use the steam brush on it. If you do so, the clothing item could be permanently damaged.
- Do NOT use the appliance on leather, velvet, impregnated furniture or steam sensitive materials. If you do, the material/furniture could become damaged.

Filling with water

⚠ Attention!

NEVER fill the water tank **1** with chemical substances, cleaning agents or fluids other than mains water (or a mix of mains and distilled water).

Do not use chemically distilled water. This would irreparably damage the appliance.

Should the mains water at your locality be rated as hard, it is recommended that you mix mains water with some distilled water. Otherwise, the jets for the steam blast function could calcify (become blocked) prematurely.

To extend the optimal steam blast function, mix mains water with distilled water according to the table.

Water hardness	Ratios - distilled water to mains water
very soft / soft	0
medium	1: 1
hard	2: 1
very hard	3: 1

The water hardness level can be queried at your local water works.

⚠ Attention!

Before refilling with water, ALWAYS remove the plug **7** from the mains power socket! There is a risk of electric shock!

- Lift the water tank **1** up vertically, in that you slide the release **4** for the water tank **1** to the rear until the water tank **1** allows itself to be lifted off. Grasp the water tank **1** with your thumb and index finger on the hatched markings to lift it vertically upwards. The temperature controller **3** remains on the appliance and is not lifted off.
- Open the water fill opening **2** to the water tank **1**.
- Using the measuring beaker **15**, fill the water tank **1** with mains water to the "Max" marking, but no further.

- Close the water fill opening **2** to the water tank **1**. Ensure that the lug on the water fill opening **2** sits in the indentation on the lid. Only in this way is the water tank **1** properly closed.
- Replace the water tank **1** back onto the appliance. The water tank **1** must audibly engage with the unlocking device for the water tank **4**.

Attaching/detaching the brush attachment

Attention!

NEVER attempt to attach or detach the brush attachment **12** when the appliance is heated up. Risk of Burns!

- To use the steam and brush function, place the brush attachment **12** onto the steam brush.
- To do this, slide the brush attachment **12** all the way along the guide to the end. The unlocking device of the brush attachment **11** must engage audibly.
- To be able to use the ironing function, remove the brush attachment **12** from the steam brush.
- To do this, press the unlocking device **11** downwards and, at the same time, pull the brush attachment **12** away to the front.

Steam brush function

- Place the brush attachment **12** onto the appliance. This must engage audibly with the unlocking device on the brush attachment **11**.
- Insert the power plug **7** into a correctly installed and earthed mains power socket.
- Position the temperature regulator **3** at •••. The heating-up control lamp **5** glows. As soon as the set temperature has been reached, the heating-up control lamp **5** goes out.

Information

When using the steam blast function, always place the temperature regulator **3** at the position ••• . At lower settings the temperature is not sufficient to generate a steam blast.

- By pressing the steam blast button **8** you can now produce jets of steam.

The appliance is now ready for use.

Notice:

To release the first steam blast after heating the appliance up, it can happen that you may need to press the steam blast button **8** several times in succession.

Attention!

The steam brush can be used with all clothing items. Caution is to be exercised with heat-sensitive materials such as synthetics, polyamides or artificial silk. With these materials you should first check at a concealed part (inside seam) that the hot steam will not cause any damage to the garment. Do not touch these materials directly with the hot sole of the iron **10**. Use only the steam blast.

Clothing care

- Suspend the crumpled garment from a coat hanger.
- With one hand pull the garment flat, then steam it from top to bottom. The combination of steam and clothes brush **14** will gently remove all creases.
- Use light pressure with the clothes brush **14** and guide the appliance from top to bottom over the garment. You can thereby press the steam blast button **8** in short intervals.

Notice:

You can repeatedly press the steam blast button **8** until the heating-up control lamp **5** glows or water drips from the sole of the iron **10**.

Then, wait until the heating-up control lamp **5** extinguishes before activating a further blast of steam.

- Should the heating-up control lamp **5** start to glow during the process, release the steam blast button **8** and wait a few seconds until the heating-up control lamp **5** extinguishes.

i Note:

Should you press the steam blast button **8** whilst the heating-up control lamp **5** is glowing the result will be condensed water instead of steam, and water will drip from the sole of the iron **10**.

- Leave the garment on the clothes hanger to cool down before putting it on.

Curtain and soft furnishing care




- Creases and wrinkles can be removed from draperies by hanging them over a pole.
- Then simply follow the directions given under "Clothing care".
- Always carry out a test first at a concealed part.
- If you are using the appliance horizontally, every now and then hold it upright so as to have the maximum steam performance.

Fluff brush

- Threads, fluff and hairs can be easily removed with the red fluff brush **13** by slowly brushing over the garment with it from left to right.
- You can clean the fluff brush **13** by brushing with it in the opposite direction (from right to left) over, for example, a remnant of material.

Ironing function

- Dismantle the brush attachment **12** from the appliance (see "Attaching/detaching the brush attachment").
- Connect the appliance to a correctly installed and earthed mains power socket.
- Adjust the temperature regulator **3** as per the international point symbols (Care Label) or the type of material. The heating-up control lamp **5** glows. As soon as the set temperature has been reached, the heating-up control lamp **5** goes out .

Washing label	Type of material	Temperature regulator 3
	Chemical fibres, e.g. viscose, polyester	• (low temperature)
	Silk, Wool	• • (medium temperature)
	Cotton, Linen	• • • (high temperature)

i Note:

If doubt exists, start with a low temperature and gradually increase it to a higher one. With sensitive materials we recommend carrying out an ironing test at a concealed part (inside seam).

- For heavily creased laundry, you can use the steam function by pressing the steam shot button **8**.
- Should the heating-up control lamp **5** glow during the process, release the steam blast button **8** and wait for a few moments until the heating-up control lamp **5** extinguishes.
- You can repeatedly press the steam blast button **8** until the heating-up control lamp **5** glows or water drips from the sole of the iron **10**. Then, wait until the heating-up control lamp **5** extinguishes before activating a further blast of steam.

i Note:

Should you press the steam blast button **8** whilst the heating-up control lamp **5** is glowing the result will be condensed water instead of steam, and water will drip from the sole of the iron **10**.

Should the water tank **1** become empty while the appliance is in use, remove the plug **7** from the power socket before refilling it.

- If you want to put the appliance down during use, fold out the stands ④ to the front and place the appliance on them. When you are ready to reuse the appliance, simply fold the stands ④ back to the rear.

After using the steam brush

- Place the temperature regulator ③ at the position "MIN".
- After use, ALWAYS remove the plug ⑦ from the power socket.
- Pour away any water remaining in the water tank ① to do this, open, the water fill opening ② of the water tank ①, turn the appliance upside down and lightly swivel it.

Cleaning and care

⚠ Risk of personal injury!

ALWAYS remove the plug ⑦ before cleaning the appliance.

There is a risk of electric shock! Allow the appliance to cool down. Risk of Burns!

⚠ CAUTION!

Never use aggressive cleansers. These can damage the surfaces.

- Clean the housing with a soft, dry cloth only.
- Clean the metal components with a lightly water-moistened cloth and a mild, non-aggressive cleaning agent.

Scale removal

Should the steam output diminish over a period of time, decalcify the steam brush.

- For decalcification use a standard commercial descaling agent based on citric acid. Proceed as detailed in the product instructions.

Storage

⚠ Attention!

Remove the plug ⑦ from the power socket and allow the appliance to cool down before putting it into storage.

Risk of fire!

Store the appliance at a dry location. You can also hang the appliance up by the suspension eye ⑥.

Troubleshooting

The steam brush ejects no or very little steam:

The supply of water in the steam brush is exhausted. Fill the water tank ① with water (See "Filling with water").

The steam brush does not heat itself up:

The appliance is not connected to mains power. Insert the plug ⑦ into a wall power socket and set the desired temperature with the temperature regulator ③.

The steam brush is defective. Arrange for the appliance to be repaired by a qualified specialist.

The power socket is defective. Try another wall socket.

Disposal



Do not dispose of the appliance in your normal domestic waste. This product is subject to the European guideline 2002/96/EC.

Dispose of the appliance through an approved disposal centre or at your community waste facility.

Observe the currently applicable regulations.

In case of doubt, please contact your waste disposal centre.



Dispose of all packaging materials in an environmentally responsible manner.

Warranty & Service

The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, but not for transport damage, for wearing parts or for damage to fragile components, e.g. buttons or batteries. This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty.

The warranty period will not be extended by repairs made under warranty. This applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment.

DES UK LTD

Tel.: 0871 5000 700 (£ 0.10 / minute)

e-mail: support.uk@kompernass.com

Kompernass Service Ireland

Tel.: 1850 930 412 (0,082 EUR/Min.)

Standard call rates apply. Mobile operators may vary.

e-mail: support.ie@kompernass.com

Importer

KOMPERNASS GMBH
BURGSTRASSE 21
44867 BOCHUM, GERMANY

www.kompernass.de

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>