

CD/MP3 Player

61



KH 2337



GB **CD/MP3 Player**
IE **Operating instructions**
CY



CONTENT	PAGE
Intended Usage	2
Contents	2
Technical Data	2
Safety instructions	3
Operating components	4
Start-up	4
Placing	4
Inserting the batteries	5
Providing mains power	5
General operation	5
Turning the device on/off, selecting sound source	5
Adjusting the volume.	5
Using headphones	5
Radio functions	6
CD/MP3 Functions	6
Inserting a CD	6
Removing the CD	6
Starting playback	6
Stopping playback	6
Pause/continue playback	6
Next/previous title	6
Selecting an album (MP3 only)	7
Title fast forward/backward	7
Repeat function (REPEAT)	7
Repeat album (MP3 only)	7
Random playback (RANDOM)	7
Programme playing order	7
Cleaning	8
Non-functionality	8
Disposal	8
Warranty & Service	9
Importer	9

CD/MP3 PLAYER KH 2337

Read the operating instructions carefully before using the appliance for the first time and preserve this booklet for later reference. Pass the manual on to whomsoever might acquire the appliance at a later date. This documentation is copyright protected. Every duplication resp. every copying, also as extracts, as well as any reproduction of images, even in an altered state, is only permitted with the written consent of the manufacturer.

Intended Usage

The CD/MP3 Player is designed exclusively for the playback of audio and MP3 CDs and for listening to radio programmes. The CD/MP3 Player is not intended for use in commercial or industrial environments. No warranty claims will be granted for damage resulting from improper use! Utilisation other than as described here is not permitted and it could lead to damages and injuries. No liability will be accepted for damages resulting from misuse or improper handling, the application of force or unauthorised modifications.

Contents


- 1 CD/MP3 Player
- 1 Operating instructions
- 1 Power cable

Before putting the device into use check to ensure that all of the items listed have been supplied and that there are no visible signs of damage.

Technical Data

This appliance fulfills, in regard to conformity with, the fundamental requirements and other relevant provisions of the EMC Directive 2004/108/EC, the Low Voltage Directive 2006/95/EC and the Ecodesign Directive 2009/125/EC (Commission Regulation 1275/2008 Annex II, No. 1).

MP3/CD Player with Radio

Rated voltage:	220-240 V ~ 50 Hz
Power consumption (in operation):	25 W
Power consumption (OFF mode):	< 1 W
Audio output power:	2 x 1.2 W RMS
Max. output voltage at the headphone socket:	60 mV
Battery operation:	6 x 1.5 V Type C/LR14 (Baby cells)
Protection class:	II 
Operating temperature range:	+5° - +35° C
Storage temperature range:	-20° - +50° C
Humidity:	5 - 90% (no condensation)
Dimensions:	290 x 218 x 147 mm
Weight:	1590 g approx.

Frequency range radio:

MW (AM):	526.5 - 1606.5 kHz
UHF (FM):	87.5 - 108 MHz

The technical details of the device allow for a settable frequency range outside of the permissible 87.5-108 MHz and/or 526.5-1606.5 kHz. In different countries various national regulations regarding the allocated radio frequency range can exist. Please note that information received outside of the assigned radio frequency ranges may not be used, passed on to third parties or otherwise misused.

CD drive

playable disc formats: CD, CD-R, CD-RW, MP3

Safety instructions

- This device is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the device is to be used.
- Children should be supervised to ensure that they do not play with the device.
- Do not permit small children to play with the plastic packaging. There is a risk of suffocation!
- Keep batteries away from children. Children can put batteries into their mouths and swallow them. If a battery is swallowed medical assistance must be sought immediately.

To avoid potentially fatal electric shocks:

- Connect the device only to correctly installed and earthed mains sockets. Ensure that the rating of the local power supply tallies completely with the details given on the rating plate of the device.

Caution with the power cable!

- Always grasp the power cable by the plug. Do not pull on the cable itself and never touch the power cable with wet hands, this could result in a short circuit or you receiving an electrical shock.
- Do not place the device, furniture or anything else on the power cable and ensure that it does not become clamped. Never tie knots in the power cable and do not tie it together with other cables. The power cable can cause a fire or an electrical shock.
- The power plug must always be easily accessible, so that the device can be quickly disconnected from the mains power supply in the event of an emergency.

- Arrange for defective power plugs and/or cables to be replaced at once by qualified technicians or our Customer Service Department.
- Arrange for customer service to repair or replace connecting cables and/or devices that are not functioning properly or have been damaged.
- Never immerse the device in water. Wipe it only with a slightly damp cloth.
- Do not expose the device to rain and never use it in a humid or wet environment.
- Make sure that the power cable does not become wet during operation.
- You must not open the housing or repair the device yourself. Should you do so, device safety can no longer be assured and the warranty will become void.
- Protect the device against drip and spray water. Do not place any water-filled vessels (e.g. flower vases) on the device.

Notice regarding disconnection from mains-power

The function switch RADIO, OFF, CD/MP3 of this device does not completely disconnect the device from the mains power. In addition the device draws power in the OFF mode. To completely disconnect the device from mains-power, the power plug MUST be removed from the wall socket.

Risk of fire!

- Do not use the device in the vicinity of hot surfaces.
- Do not place the device in locations that are exposed to direct sunlight, If you do, it may overheat and become irreparably damaged.
- Do not leave the device unattended when in use.
- Never cover the ventilation slots of the device while it is being used.
- Do not place any open sources of fire, like candles, on the device.

⚠ Risk of personal injury!

- Keep children away from the connecting cable and the device. Children frequently underestimate the dangers of electrical devices.
- Provide for a safe location for the device.
- Do not operate the device if it has sustained a fall or is damaged. Arrange for the device to be checked and/or repaired by qualified technicians.
- Keep batteries away from children. Children can put batteries into their mouths and swallow them. If a battery is swallowed, medical assistance must be sought immediately.

⚠ Danger! Laser radiation!

This device is fitted with a "Class 1 Laser".

- Never open the device.
- Never attempt to repair the device. There is invisible laser radiation inside the device.
- Avoid all direct optical contact with the laser beam, it could lead to serious eye injuries.

⚠ Thunderstorms!

*Equipment connected to a power supply can be damaged during a thunderstorm.
You should therefore always pull the power plug from the power socket when there is a storm.*

⚠ Information on surge voltage (EFT / rapid electrical transition process) and Electrostatic discharge:

In the case of malfunction due to an electrical fast transient (power surge) and/or electrostatic discharge, the device must be returned to default settings in order to re-establish normal operation. The power supply may have to be disconnected and then reconnected. The batteries (if present) must be removed and then reinserted.

ⓘ Note:

Take note that the rubber pads on the device could leave traces on painted, sensitive or treated surfaces. If possible place an anti-slip material under the feet of the device.

Operating components

- 1 Right and left speakers
- 2 Display
- 3 PLAY/PAUSE button
- 4 MODE button
- 5 SKIP - button
- 6 SKIP + button
- 7 Volume controller (VOLUME)
- 8 Function switch (RADIO, OFF, CD/MP3)
- 9 Carrying handle
- 10 Telescopic antenna
- 11 CD compartment knob
- 12 Tuning regulator
- 13 Band selection switch (FM ST./FM/AM)
- 14 Frequency scale
- 15 CD compartment
- 16 STOP button
- 17 PROGRAM button
- 18 ALBUM button
- 19 Power LED
- 20 FM ST. LED
- 21 Headset connection (3.5 mm stereo jack)
- 22 Battery compartment
- 23 Mains cable connection

Start-up

Placing

- Remove the CD/MP3 Player and accessories from the packaging.
- Remove all transport restraints and adhesive tape/films.

⚠ Important:

Do not permit small children to play with plastic packaging. There is a risk of suffocation!

- Place the CD/MP3 Player on a level horizontal surface. Place the CD/MP3 Player in such a way that the lid of the CD compartment is able to fully open. At the same time the carrying handle must be folded backwards.

Inserting the batteries

If you wish to operate the CD/MP3 Player with batteries you must disconnect the mains power cable from the device. For battery operation you will require 6 x 1.5 V batteries of the type C/LR (Batteries not supplied).

- Open the battery compartment on the rear panel of the device.
- Place the batteries into the battery compartment observing the polarity as depicted there.
- Carefully close the battery compartment cover again until the cover locks into place.

Interaction with batteries

Leaking batteries can cause damage to the CD/MP3 Player.

- If you do not intend to use the CD/MP3 Player for an extended period of time, remove the batteries.
- Always change all batteries at the same time and always use batteries of the same type.
- Do not attempt to recharge the batteries and always insert batteries/power pack with the correct polarity. The possibility of explosion exists if the batteries are not replaced properly.
- Should the batteries leak, wear protective gloves and clean the battery compartment with a dry cloth.

Providing mains power

- Insert the plug of the mains cable into the mains cable connection on the rear panel of the device.
- Insert the plug of the power cable into a wall power socket.

The CD/MP3 Player detects when the mains cable is connected to mains power and automatically switches to mains power operation.

General operation

Turning the device on/off, selecting sound source

You switch the device on by selecting, with the functions switch, a sound source:

- CD/MP3
 - RADIO
1. Slide the function switch to the position of your desired sound source. The power LED lights up.
 2. To switch the device off again slide the function switch to the "OFF" position. The power LED goes out.

Adjusting the volume.

You can adjust the sound volume with the volume regulator.

- To increase the volume turn the volume controller in a clockwise direction.
- To reduce the volume turn the volume controller in a counter clockwise direction.

Using headphones

You can connect to the MP3/CD player with radio headphones with a 3.5 mm stereo jackplug.

The headphones connection is located on the rear panel of the device. When you have connected the headphones, the loudspeakers are disconnected and you will only hear sound via the headphones.

- Insert the jack plug of the headphones into the headphone connection.



Important:

Listening to music with headsets for long periods and at high volume levels can lead to hearing damage!

Radio functions

1. Lift the telescopic antenna and pull apart. Adjust the antenna positioning so that radio reception is optimal.

A reception antenna for receiving MW (AM) transmissions is built into the unit. In radio operation, turn the whole device to a position where the best radio reception is obtained.

2. Set the reception range (**FM ST./FM/AM**) with the band selection switch. If you select the setting **FM ST** and the radio station is receivable in stereo the **FM ST**. LED lights up.
3. Set the desired radio station by rotating the tuning knob.

CD/MP3 Functions

Inserting a CD

- Select the CD/MP3 function with the function switch.
- Fold the carrying handle backwards.
- To open the CD compartment touch the knob of the CD compartment cover and lift the CD compartment cover upwards. In the display appears the indicator "OP".
- Insert the CD, with the printed side upwards, in the middle of the CD compartment, thereby ensuring that the CD lies with its hole in the middle of the turntable's cone.
- To close the CD compartment press the cover of the CD compartment, by the knob, downwards.

After a brief blinking of "--" the number of titles on the CD and "CD" will appear in the display.

With an MP3 CD the number of the title appears for a brief period and the indicator "MP3" is shown in the display.

Removing the CD

- Press the **STOP** button and wait until the CD is no longer turning.

⚠ *The CD must no longer be turning when you open the CD compartment. Otherwise it may be irreparably damaged.*

- To open the CD compartment touch the knob of the CD compartment cover and lift the CD compartment cover upwards.
- Remove the CD.
- You close the CD compartment by pressing the cover of the CD compartment, with the knob, downwards.

Starting playback

After a CD is inserted and the CD compartment has been closed, playback of the CD starts automatically.

- If you want to restart a stopped CD press the **PLAY/PAUSE** button.

In the display ▶ is shown and the first song is played.

Stopping playback

- Press the **STOP** button.

Pause/continue playback

- During playback press the **PLAY/PAUSE** button.

The indicator ▶ blinks in the display.

- To continue playback, press the button **PLAY/PAUSE** once again.

Next/previous title

- To playback one of the next titles of a CD, during playback, press repeatedly the **SKIP +** button until the number of the desired title is shown.
- To playback one of the previous titles on a CD, during playback, press repeatedly the **SKIP -** button until the number of the desired title is shown in the display.

Selecting an album (MP3 only)

With MP3 CDs you can select, if available, between the different albums.

- Press the **ALBUM** button repeatedly until the desired album number is shown in the display.
- Playback starts automatically with the first title of the selected album.

Title fast forward/backward

- During playback press one of the buttons **SKIP -** and **SKIP +**.
- Keep this button pressed until the desired point in the title has been reached.

Repeat function (REPEAT)

With the repeat function you can repeatedly playback individual titles of a CD or all of them.

- To repeat individual titles press the **MODE** button. In the display appears **REP**.
- To repeat all titles from a CD press the **MODE** button once more.

In the display appears **REP ALL**.

- To end repeat playback press the **MODE** button repeatedly until the notice **REP ALL** goes out.

Repeat album (MP3 only)

With MP3 CDs you can, if available, repeat playback albums.

- To repeat an entire album press repeatedly the **MODE** button until **REP ALBUM** appears in the display.
- Select, with the buttons **SKIP+** or **SKIP -**, the desired album number.
- Playback starts automatically with the first title of the selected album.
- To end repeat playback press the **MODE** button repeatedly until the notice **REP ALBUM** goes out.

Random playback (RANDOM)

With the random playback function you can playback individual titles on a CD in random order.

- To playback individual titles in any desired order press the **MODE** button repeatedly until **RAND** appears in the display.
- To end random playback press the **MODE** button repeatedly until the notice **RAND** goes out.

Programme playing order

You can programme a playback order for up to 20 titles of an audio CD and/or 99 titles of an MP3 CD, in which the titles of a CD are to be played back. This is only possible when the play function has been stopped

- Press the **PROGRAM** button. The notice **PROG** blinks.

In the display appears the notice **PO1** for the programme slot, whose title shall be the first to playback when playback starts.

- Select, with the buttons **SKIP -** and **SKIP +**, the desired title for the programme slot.
- To save the setting press the **PROGRAM** button.

In the display is shown the notice **PO2** for the programme slot 2.

- To programme in further tracks, repeat the steps described above.

When all programme slots are occupied **FUL** will be shown in the display.

- You start programmed playback by pressing the **PLAY/PAUSE** button. The notice **PROG** appears permanently.

The programmed title sequence is erased when...

- You, during playback, press the **STOP** button twice. The notice **PROG** goes out
- You open the CD compartment.
- The device is switched off and then back on.

Cleaning

Attention! **Risk of electric shock!**

Before cleaning the device:

- First pull the mains plug from the mains socket.
- Never open the casing of the device.
There are no user-serviceable components inside.
- Clean the housing exclusively with a soft damp cloth and a mild detergent. Ensure that moisture cannot permeate into the device during cleaning!
- If necessary, clean the inside of the disc compartment exclusively with a clean dry brush (e.g. a lens brush, obtainable at your local photo shop). Never use a wet or damp cloth to clean the inside of the CD compartment!

Warning!

Moisture penetrating into the device creates the risk of electric shock! Additionally, the device could become irreparably damaged!

- Store the device in a dry, dust free location.

Non-functionality

- Do not attempt to dismantle the device or to carry out repairs yourself. You could potentially damage the sensitive electronic components.
- Repairs to your device may only be carried out by qualified service personnel!
- No liability will be accepted for damage resulting from improper use and/or the opening of the device!
- In the event of a malfunction please get in touch with our service partner in your country.

Disposal



Do not dispose of the device in your normal domestic waste. This product is subject to the European directive 2002/96/EC.

Dispose of the device through an approved disposal facility or at your community waste centre. Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.

Disposal of batteries/power packs

Used batteries/power packs may not be disposed of in household waste. Every consumer is legally obliged to dispose of batteries at a collection site in his community / city district or at a retail store. The purpose of this obligation is to ensure that batteries are disposed of in a non-polluting manner. Only dispose of batteries when they are fully discharged.



Dispose of all packaging materials in an environmentally friendly manner.

Warranty & Service

The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, but not for transport damage, for wearing parts or for damage to fragile components, e.g. buttons or batteries. This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty.

The warranty period will not be extended by repairs made under warranty. This applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment.

Importer

KOMPERNASS GMBH
BURGSTRASSE 21
44867 BOCHUM, GERMANY

www.kompernass.com

DES UK LTD

Tel.: 0871 5000 700 (£ 0.10 / minute)

e-mail: support.uk@kompernass.com

Kompernass Service Ireland

Tel: 1 850 930 412 (0,082 EUR/Min.)

Standard call rates apply. Mobile operators may vary.

e-mail: support.ie@kompernass.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>