

### 2-Slice Toaster STOK 800 A1



**GB** **2-Slice Toaster**  
**IE** Operating instructions

STOK 800 A1

---



<b>CONTENT</b>	<b>PAGE</b>
Intended Application	2
Technical data	2
Important safety instructions	2
Items supplied	3
Tips on usage	3
Appliance description	3
Setup	3
Before taking into use	3
Adjusting the browning level	3
Toasting	4
Interrupting the toasting process	4
Warming function	4
Thaw function	4
Crumb tray	4
Bread roll holder	4
Cleaning and care	5
Storage	5
Disposal	5
Warranty and Service	6
Importer	6

Read these operating instructions carefully before using the appliance for the first time and preserve this manual for later reference. Pass this manual on to whoever might acquire the appliance at a future date.

# 2-SLICE TOASTER

---

## Intended Application

---

This appliance is intended for the toasting of slices of bread, rolls and waffles in domestic environment. It is not intended for use with other foodstuffs, other materials or for use in commercial or industrial environments. Any other use or modification is considered improper use and also involves significant accident risks.

## Technical data

---

Rated voltage: 220 - 240V ~ 50 Hz  
Power consumption: 800 W

## Important safety instructions

---

### **⚠ To avoid potentially fatal electric shocks:**

- NEVER insert cutlery or other metallic objects into the toaster slots.
- Ensure that the appliance never comes into contact with water when the power plug is inserted into a wall socket, especially if it is being used in a kitchen and close to the sink.
- Ensure that the power cable can never become wet or damp during operation. Lay the power cable in such a way that it cannot become caught or pinched or can be damaged in any other way.
- To avoid unnecessary risks, arrange for defective power plugs and/or cables to be replaced at once by qualified technicians or our Customer Service Department.

- After use, always remove the power plug from the mains power socket, this prevents an unintentional switching on of the appliance..
- The power plug must always be easily accessible, so that the appliance can be quickly separated from the mains power supply in the event of an emergency.

### **⚠ To avoid the risks of fire or injury:**

- The appliance can become hot when it is in use. Therefore, only touch the operating elements.
- Bakery products can burn! You should therefore NEVER locate the appliance close to or underneath inflammable objects, especially not under curtains or suspended cupboards.
- The appliance may not be used in close vicinity to flammable material.
- Never cover the toaster when it is in use.
- This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used.
- Children should be supervised to ensure that they do not play with the device.
- Operate the appliance only on a stable, non-slippery and level surface.
- Do not use an external timing switch or a separate remote control system to operate the appliance.
- Unwind the power cable completely from the cable winder before using the appliance.
- Never leave the appliance unsupervised whilst in use!

## Items supplied

---

Toaster  
Operating instructions

## Tips on usage

---

- Toast mixed-flour breads at higher browning levels than white bread. Matured, dry bread browns faster than fresh bread.
- Avoid using slices that are too big or too thick, as these can easily become jammed in the appliance.





### **Attention:**

In the event of a malfunction and when cleaning the appliance, remove the power plug from the wall socket. Risk of electrical shock!

- Loosen jammed slices of bread with a blunt wooden object (e.g. a wooden spatula or spoon). Do NOT touch the heater elements.
- Differences in bread sorts, moisture and the thickness of individual slices influence the browning of the toast. Therefore the bread for toasting should be kept in sealed packaging until required.

## Appliance description

---

- ① Bread roll holder
- ② Toasting slots
- ③ Operating button
- ④ Toasting dial
- ⑤ Stop button  
for interrupting the toasting process 
- ⑥ Button for the thaw function 
- ⑦ Button for the warm-up function 
- ⑧ Crumb tray
- ⑨ Button for the bread-roll attachment 

## Setup

---

- Unwrap the power cable from the cable winder on the underside of the appliance.
- Place the toaster on a dry and level surface.

## Before taking into use

---

- Heat the appliance up at least five times, at the maximum setting (7), without the insertion of bread slices. For details on cleaning the appliance, read the section "Cleaning and Care"..

### **Please take note:**

The operating button ③ only engages when the power cable is connected to a mains power socket. On the first usage, a slight odour can occur (minimal smoke development is also possible). This is normal and stops after a short time. Provide for sufficient ventilation.

## Adjusting the browning level

---

The desired level of browning, from "light" (1) to "dark" (7), can be adjusted infinitely with the toasting dial ④.

### **Please take note:**

Be aware that, depending on the loading of the toaster, the level of browning from a constant setting of the browning control ④ can vary!

The fewer the number of slices that are inserted, the higher their level of browning will be. Therefore, if the loading of the toaster is to be light, always set the browning control ④ a little lower.

## Toasting


---

### **Attention:**

When the appliance is in operation, do NOT cover the toasting slots **2**. There would be a risk of fire! The appliance could be irreparably damaged!

- After setting the desired browning level, place the bread into the toasting slots **2**.
- Press the operating button **3** downwards. The control lamp in the stop button **5** glows. The automatic bread aligner centres the inserted bread into the toasting slots **2**.

When the desired level of browning has been reached the toaster switches itself off automatically and the slices are ejected to the top.

-  This appliance has a lifting function, which makes it easier and safer for you to take the hot slices of toast from the toasting slots **2**. For this, slide the operating button **3** upwards.

## Interrupting the toasting process

---

If you wish to interrupt the toasting process, press the STOP button **5**. The toaster switches itself off. The control lamp extinguishes. The slices of bread are ejected.

## Warming function

---

The warming function **7** makes it possible for you to warm bread without browning it. For example, toast that has gone cold. The bread is only briefly warmed.


- Insert the bread and press the operator button **3** down.
- Activate the button for the warming function **7**. The control lamp integrated into the button for the warming function **7** glows.

- The toaster switches itself off automatically, the control lamp extinguishes and the bread slices are ejected.

## Thaw function

---

Through activation of the thaw function **6** frozen bread can also be thawed. With this, the toaster slowly warms the bread.

- Place the toasting dial **4** at setting 1.
  - Insert the bread and press the operator button **3** down.
  - Activate the button for the thaw function **6**. The control lamp integrated into the button for the defrosting function **6** glows.
  - The toaster switches itself off automatically, the control lamp extinguishes and the bread slices are ejected.
-  If you set the browning control **4** to a higher level than 1, it could happen that the bread becomes slightly browned.

## Crumb tray


---

When toasting, crumbs that fall from the bread are collected in the crumb tray **8**. To empty the crumb tray, simply pull it **8** out to the side.

## Bread roll holder

---

- NEVER lay bread rolls directly onto the toaster, ALWAYS use the bread roll holder **1**.
- Press the button for the bread roll holder **9** down. The bread roll holder **1** elevates itself.
- Lay the bread rolls on it and start the toasting procedure. Position the toasting dial **4** at level 4 - 5. To discover the positioning that best meets your personal preference, try out several settings. Subject to the desired level of browning, or the type of product to be toasted, the adjustment of the toasting dial **4** is variable.

-  Place the rolls onto the bread roll holder **1** so that they cannot fall through the holder rails.

 **Attention!**

After toasting, the rolls will be very hot.  
Risk of Burns!


- As soon as the toaster switches itself off, check the level of browning. Should the bread roll have the desired level of browning, turn it over to brown the other side.
- Switch the toaster back on.
- When you no longer require the bread roll holder **1**, push the bread roll holder button **9** upwards. The bread roll holder **1** folds itself away.

## Cleaning and care

---

 **Danger!**

Before cleaning, remove the power plug from the wall socket and allow the toaster to cool down.  
Risk of injury!

-  NEVER submerge the appliance in water or other liquids. The appliance could become damaged!

 **Warning about damage to the appliance!**

Do not use aggressive or abrasive cleaning agents. These can damage the upper surfaces of the appliance.

- Clean the appliance housing only with a dry or lightly moistened cloth.
- To avoid the risk of fire, empty the crumb tray **8** at regular intervals.

## Storage

---

- Store the toaster at a cool and dry location.
- Clean the appliance as described in the chapter "Cleaning and Care".
- Wrap the power cable around the cablewinder on the underside of the appliance.

## Disposal

---



**Do not dispose of the device in your normal domestic waste. This product is subject to the provisions of European Directive 2002/96/EC.**

Dispose of the appliance through an approved disposal centre or at your community waste facility. Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.



Dispose of the packaging materials in an environmentally responsible manner.

## Warranty and Service

---

The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, but not for transport damage, for wearing parts or for damage to fragile components, e.g. buttons or batteries. This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty.

The warranty period will not be extended by repairs made under warranty. This applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment.

## Importer

---

KOMPERNASS GMBH  
BURGSTRASSE 21  
44867 BOCHUM, GERMANY

[www.kompernass.com](http://www.kompernass.com)

### **GB** Service Great Britain

Tel.: 0871 5000 720 (0.10 £/Min.)

E-Mail: [kompernass@lidl.gb](mailto:kompernass@lidl.gb)

### **IE** Service Ireland

Tel.: 1890 930 034

(0,082 EUR/Min., (peak))

(0,064 EUR/Min., (off peak))

E-Mail: [kompernass@lidl.ie](mailto:kompernass@lidl.ie)



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>