


**OPERATOR'S MANUAL
EXTRA HYDRAULIC CYLINDER
MFG. NO. 1600207**

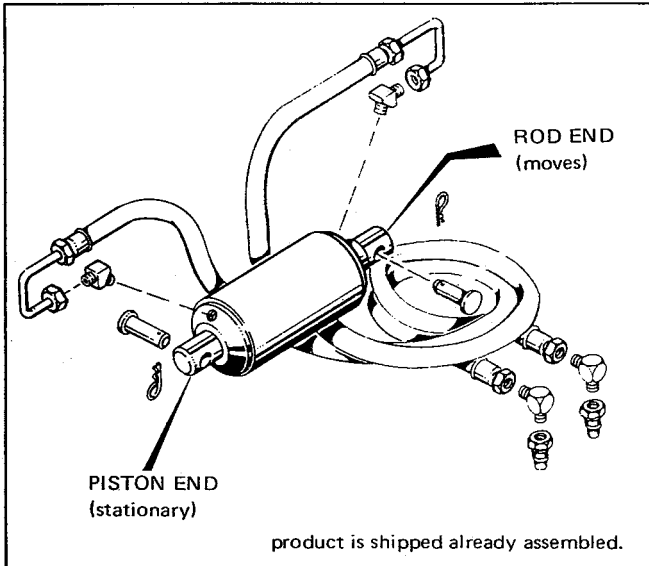

1. Attach the hose from the rod end of the cylinder * to the quick-coupler marked rod end .

2. Attach the hose from the piston end of the cylinder * to the quick coupler marked piston end.

Attach the piston end of the cylinder to the stationary portion of the tractor or attachment hitch, and the rod end of the cylinder to the moveable portion of the tractor or attachment hitch.

* Rod end of cylinder is the end of the cylinder that moves in and out while the piston end is stationary.

FORM - 1651494
PRINTED IN U.S.A.
7410

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>