

ASSEMBLY INSTRUCTIONS

1. Attach the axle support (5, figure 1) to body (1).
2. Insert drawbar (6) between ears on axle support (5) and insert pin (2).
3. Secure with drive caps (3).
4. Bolt angle latch holder (8) to body (1) as shown.
5. Insert axle (4) through wheels (7) and axle support (5).
6. Put drive caps (3) onto ends of axle.
7. Figure 2 shows the lawn cart assembled.
8. Use the pin (10) to attach cart to tractor drawbar.

OWNER'S GUIDE AND PARTS LIST

4 CUBIC FOOT LAWN CART
MFG. NO. 1690766

TO OBTAIN REPLACEMENT PARTS

Replacement parts may be obtained from either an authorized dealer or from the manufacturer, Ohio Steel Fabricators. When inquiring about prices of replacement parts, be sure to give the model number. Also give the part number and the name of the part as shown in the parts lists. Bolts and nuts can be purchased locally.

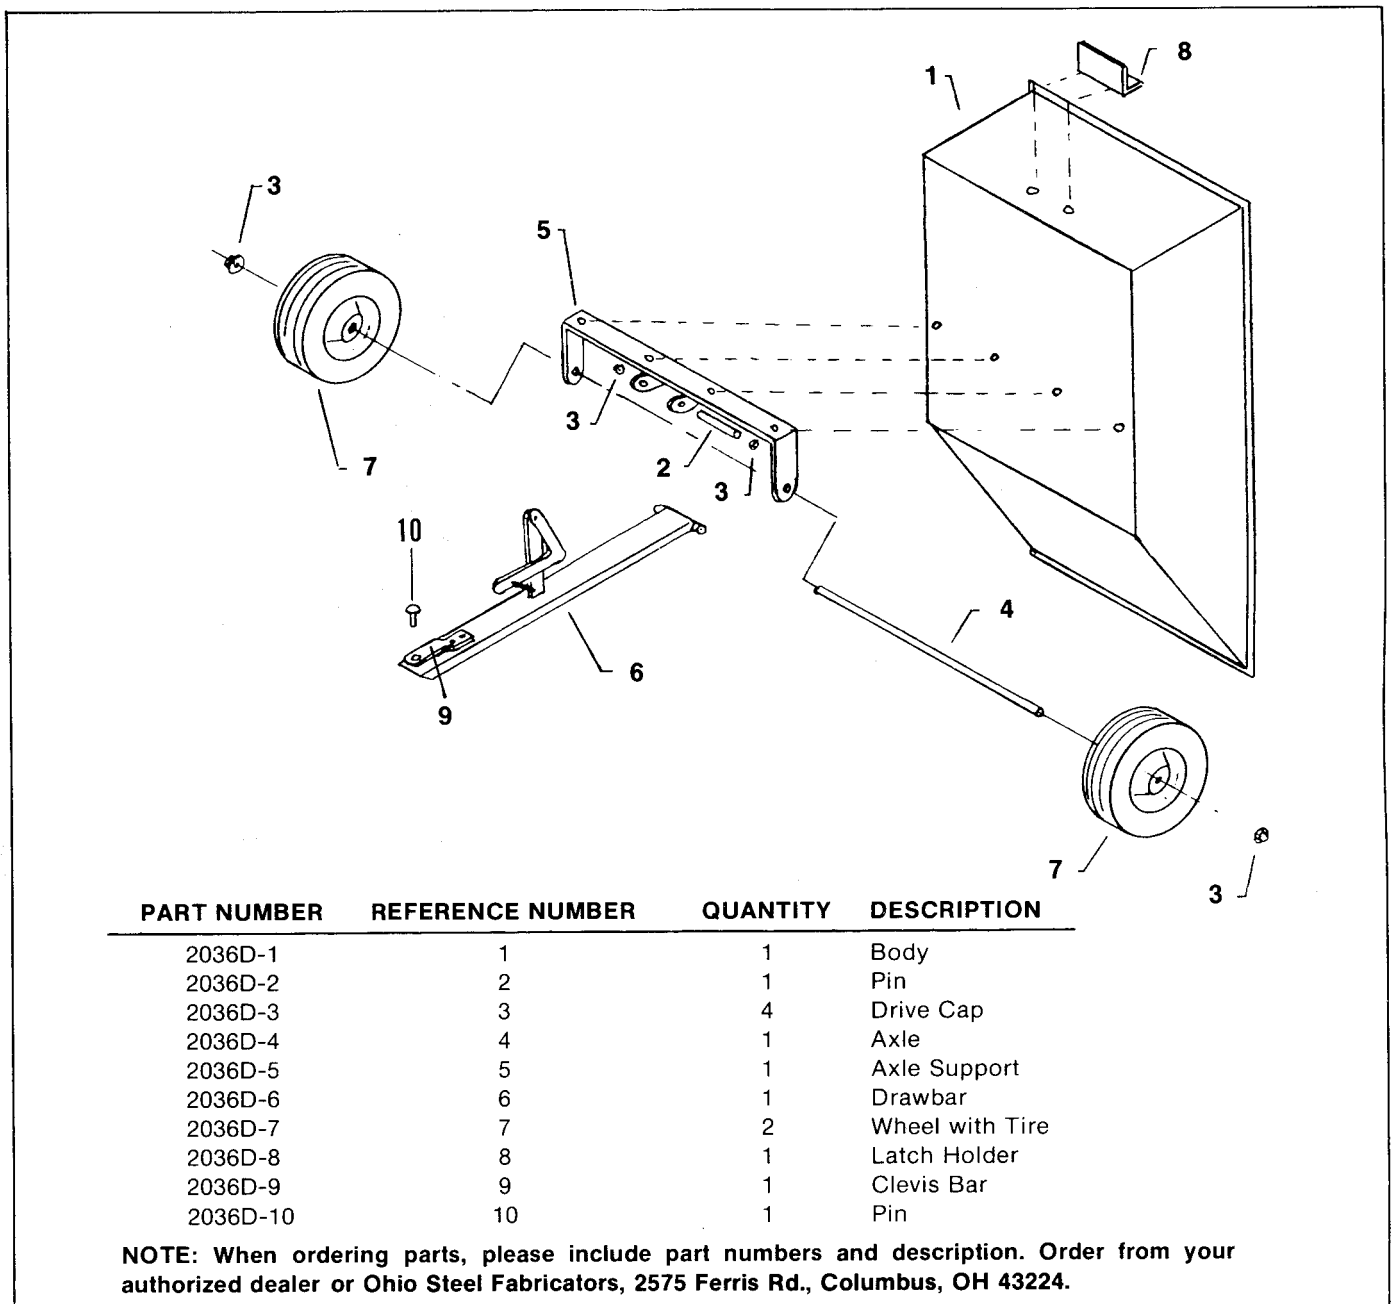


Figure 1. Exploded View

FORM - 1670863
PRINTED IN U.S.A.

821

OPERATION



WARNING

Never carry passengers in your cart.



WARNING

Do not drive too close to a creek or ditch and be aware of inclines due to your tractor - cart's inmanuverability.



WARNING

Read and follow the safety rules in your tractor Operator's Manual.

The trailer can be dumped from the tractor seat by gripping the latch bar and pulling up. This will release the box. The trailer box will pivot on the axle and dump. With the trailer empty it can be brought back to a latched position by hand.

NOTE: Weight Limit - 400 lbs. One cubic foot of dirt weighs approximately 150 lbs.

MAINTENANCE

Grease wheels occasionally. Use automotive wheel bearing type grease.

This product is manufactured specifically for Simplicity Manufacturing Company by Ohio Steel Fabricators. Parts service and warranty are handled directly by Ohio Steel.

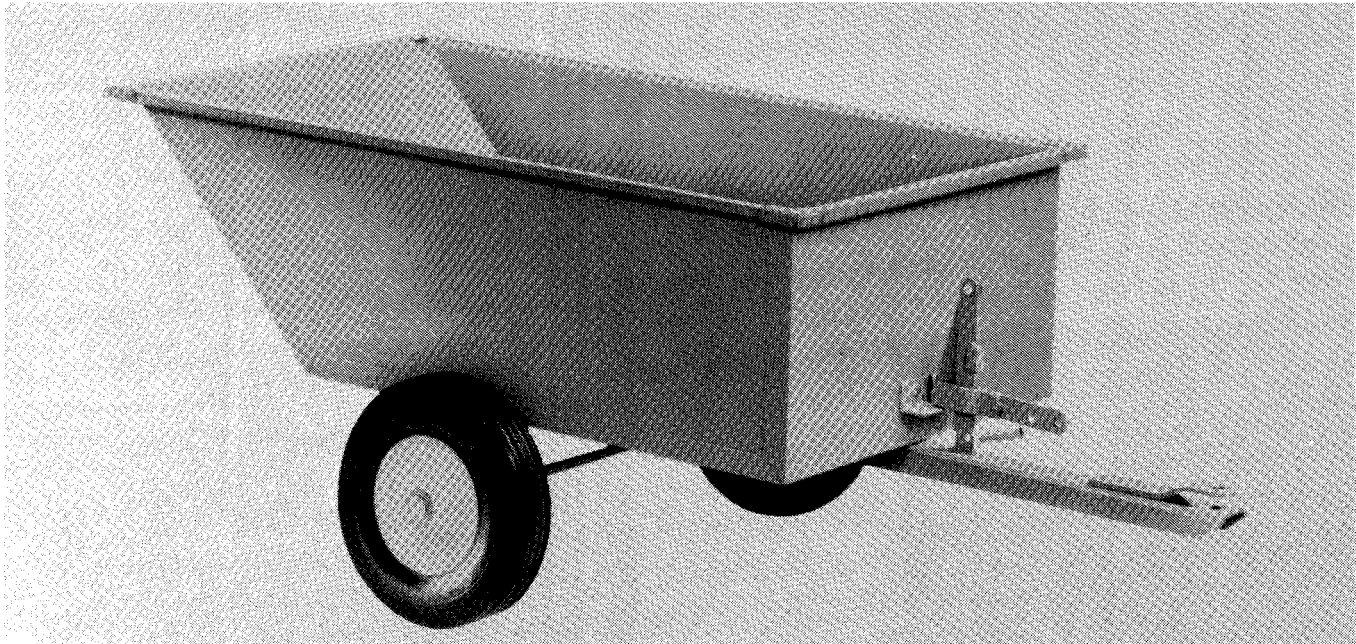


Figure 2. Lawn Cart

LIMITED WARRANTY Of Ohio Steel Fabricators

We warrant each new Ohio Steel Unit to be free from manufacturing defects in normal service for a period of one (1) year commencing with delivery of the attachments to the original user.

Our obligation under this warranty is expressly limited at our option to the replacement or repair at Ohio Steel Fabricators, 2575 Ferris Road, Columbus, Ohio 43224 or at a service facility designated by us, of such part or parts as inspection shall disclose to have been defective. This warranty does not apply to defects caused by damage or unreasonable use (including failure to provide reasonable and necessary maintenance) while in the possession of the customer.

We shall not be liable for consequential damages of any kind, including but not limited to, consequential labor costs or transportation charges in connection with the replacement or repair of defective parts.

Implied warranties, including those of merchantability and fitness for a particular purpose, are expressly limited to the duration of this written warranty.

We make no other warranty, nor is anyone authorized to make any on our behalf.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>