



HC4-15-20 Ceramic Tower Heater & Ultra Sonic Humidifier



3092402

HC4-15-20

© 2008 Soleus Air International

Thank you for choosing a Soleus Air Ceramic Tower Heater & Ultra Sonic Humidifier. This owner's manual will provide you with valuable information necessary for the proper care and maintenance of your new product. Please take a few moments to thoroughly read the instructions and familiarize yourself with all the operational aspects of your new heater.

For your own records, please attach a copy of your sales receipt to this manual. Also, write the store name/location, date purchased, and serial number below:

Store Name: _____

Location: _____

Date Purchased: _____

Serial Number (located on back of unit): _____

IMPORTANT INSTRUCTIONS

When using this electric unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:


1. Read ALL instructions before using this unit.
2. CAUTION: Risk of Electric Shock. DO NOT open or try to repair the heater yourself.
3. This heater may get hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater.
4. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 ft from the front of the heater and keep them away from the sides, top, and rear. DO NOT place towels or other objects on the heater.
5. Extreme caution is necessary when any heater is used by or near children or the disabled, or when the heater is left operating and unattended.
6. DO NOT operate any heater with a damaged cord or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. NEVER locate heater where it may fall into a bathtub or other water container. To protect against electrical hazards, DO NOT immerse in water or other liquids.
8. DO NOT touch the control panel or plug with a wet hand.
9. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
10. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
11. To prevent a possible fire, DO NOT block the air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
12. A heater has hot and arcing or sparking parts inside. DO NOT use in areas where gasoline, paint, explosive and/or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.
13. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No. 14 AWG minimum size and rated not less than 1875W.

14. To avoid fire or shock hazard, plug the unit directly into a 120 V AC electrical outlet.
15. To disconnect heater, turn controls to OFF, then remove plug from outlet. Pull firmly on the plug, DO NOT unplug by pulling on the cord.
16. Always unplug the unit before moving or cleaning, or whenever the heater is not in use.
17. Use only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by unauthorized dealers may cause hazards.
18. Always use on a dry, level surface. Use on floor only.
19. WARNING: To reduce the risk of fire or electric shock, DO NOT use this unit with any solid-state speed control device.
20. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. Qualified personnel should perform all servicing only.
21. SAVE THESE INSTRUCTIONS.

SPECIFICATIONS

Voltage Rating	120 V (60Hz)
Power Consumption	1500 Watts
Humidifier Output	6.6 Pints/day
Unit Size	7.6 in. (W) x 8.76 in. (D) x 25.02 in. (H)
Unit Weight	9.6 lbs.

PRODUCT DIAGRAM

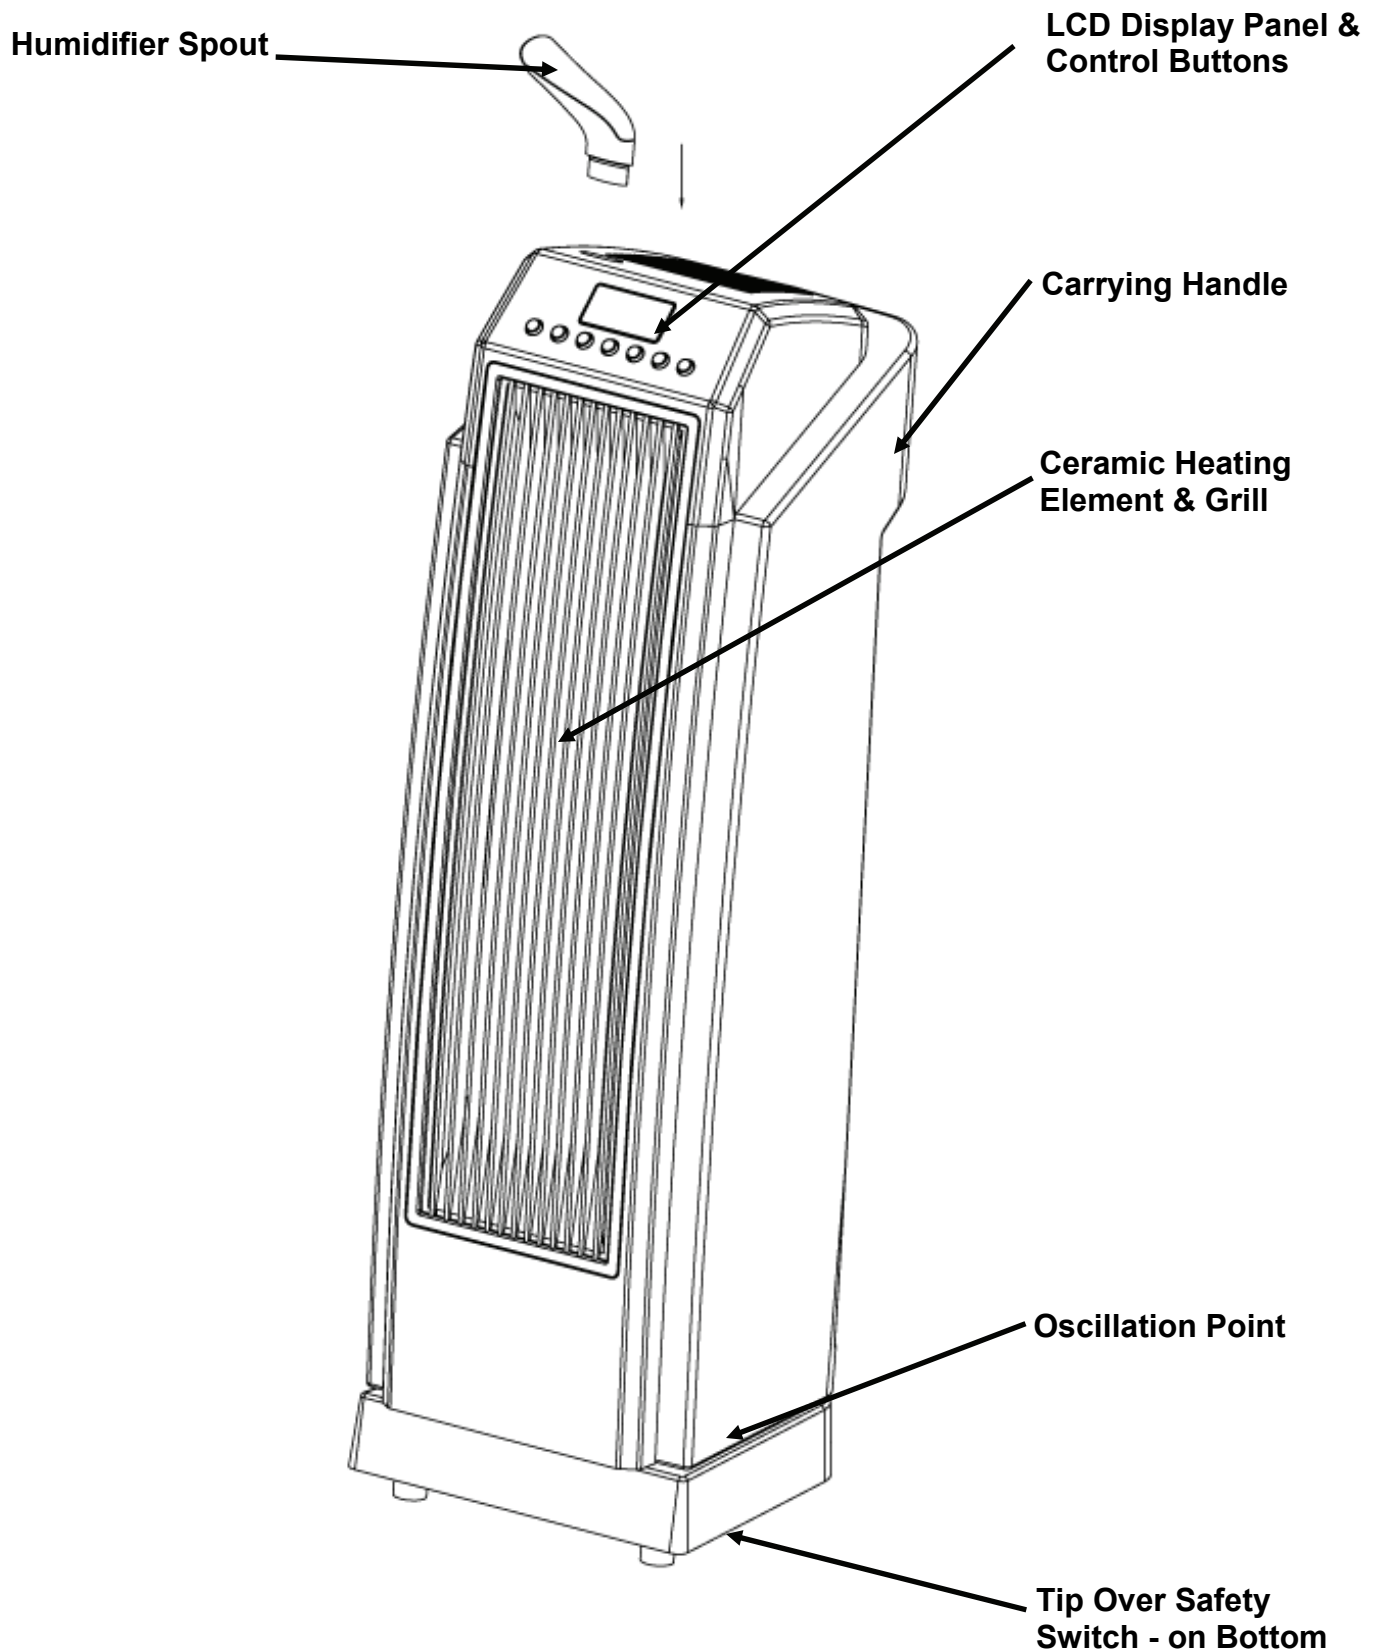

OPERATING INSTRUCTIONS

Place the heater on a firm, level surface and plug into a grounded 120V 60Hz power outlet. Only operate the heater when it is in the upright position.

1. **To operate as a HEATER:** Press the ON/OFF button on the control panel.
2. Once the heater is on, press the MODE button to choose the desired heat setting. The icon on the display showing three wavy vertical lines is HIGH (1500 Watts), the icon showing two wavy vertical lines is LOW (750 Watts), and the E icon is for ECO mode. In ECO mode, the heater will heat to the set thermostat temperature, and then decrease the power usage by 1/3 to save energy while still maintaining the set room temperature.
3. Press the ▲ & ▼ buttons to change the desired thermostat setting. The thermostat can be set from 59°F to 80°F. The heater will cycle on and off to maintain the set temperature in the room. Set the heater to 80°F for continuous heat (unless the room temp. is above 80°F).
4. Press the SWING button to enable the oscillation mode. The heater will rotate left to right to disperse heat throughout the room.
5. **To operate the HUMIDIFIER:** First, attach the humidifier spout to the hole on the top of the unit. Next, Remove the water container from the back of the unit (when the unit is off) and add water. Place the container back in the unit. Press the HUMID button to start/stop the humidifier. You can use this function while the unit is in heater mode, or when heater mode is off. **NOTE:** The ON/OFF button is for heater mode only.
6. Press the TIMER button to enact the Auto-off timer. This will automatically turn the unit off when the allotted time has passed. Each press of the TIMER button will add 1 hour to the

SAFETY FEATURES

Polarized Plug

Warning: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

DO NOT DEFEAT THE SAFETY PURPOSE OF THE POLARIZED PLUG.

Tip-Over Safety Switch

This heater equipped with tip-over safety switch located underneath the base of the heater (SEE ILLUSTRATION ON PAGE 4). This switch must be pressed inward for the heater to function properly. Some soft surfaces such as carpet may not be able to fully press in this switch. For some soft surfaces, a hard flat object will need to be placed underneath the heater for it to function properly.

PLEASE DO NOT TAPE OR GLUE THIS SWITCH.

MAINTENANCE

WARNING: ALWAYS UNPLUG THE CORD BEFORE MOVING OR SERVICING.

CLEANING: IMPORTANT! DO NOT IMMERSER HEATER IN WATER! Clean the heater grills using the vacuum brush attachment on your vacuum cleaner. This will remove lint and dirt from the inside of the heater.

DO NOT ATTEMPT TO TAKE HEATER APART. Clean the body of heater with a soft cloth.

CAUTION: Do not use gasoline, benzine, thinner, harsh cleaners, etc. as they will damage the heater. NEVER USE ALCOHOL OR SOLVENTS.

SAFETY FEATURES

1. A thermal overload protector is built in to prevent overheating.
2. When an overheat temperature is reached, the heater will be automatically shut off. It can only resume operation when the user resets the unit. (See **RESET INSTRUCTION** below)

RESET INSTRUCTION

Unplug the heater and wait 10 minutes for the unit to cool down.
After the 10 minutes, plug the unit in again and operate normally.

STORAGE

If the heater will not be used for a long period of time, store it in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

TROUBLESHOOTING

If your heater shuts off unexpectedly or fails to operate, one of the above-mentioned safety features may have activated to prevent overheating.

1. Be sure the power cord is plugged into a working electrical outlet.
2. Make sure the tip-over safety switch is engaged (pressed in). Make sure the heater is on a flat level surface.
3. There is no heat. Make sure thermostat temperature is set above the current room temperature. The heater will not turn on if the thermostat on the display is set below the current room temperature.
4. **If the Humidifier is not working, make sure the water container is full and properly placed inside the unit.**
5. Water may build up on the top of the unit when in Humidifier mode. This is completely normal. This water **will not** harm the heater or the electronics. To clean the water off, place the **heater and humidifier** in the OFF position and wipe down with a paper towel or rag.

WARRANTY

One Year Limited Warranty

Soleus International Inc. warrants the accompanying Soleus Air HC4-15-20 Ceramic Tower Heater to be free of defects in material and workmanship for the applications specified in its operation instruction for a period of ONE (1) year from the date of original retail purchase in the United States.

If the unit exhibits a defect in normal use, Soleus International Inc. will, at its option, either repair or replace it, free of charge within a reasonable time after the unit is returned during the warranty period.

As a condition to any warranty service obligation, the consumer must present this Warranty Certificate along with a copy of the original purchase invoice.

THIS WARRANTY DOES NOT COVER:

- Damage, accidental or otherwise, to the unit while in the possession of a consumer not caused by a defect in material or workmanship.
- Damage caused by consumer misuse, tampering, or failure to follow the care and special handling provisions in the instructions. This includes dents, accidental or otherwise, to the base and head of the unit.
- Damage to the finish of the case, or other appearance parts caused by wear.
- Damage caused by repairs or alterations of the unit by anyone other than those authorized by Soleus International Inc.
- Freight and Insurance cost for the warranty service.

ALL WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY ARE LIMITED TO ONE-YEAR DURATION OF THIS EXPRESS LIMITED WARRANTY. **SOLEUS INTERNATIONAL INC.** DISCLAIMS ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES AND IN NO EVENT SHALL SOLEUS INTERNATIONAL INC'S LIABILITY EXCEED THE RETAIL VALUE OF THE UNIT FOR BREACH OF ANY WRITTEN OR IMPLIED WARRANTY WITH RESPECT TO THIS UNIT.

This warranty covers only new products purchased from our authorized dealers or retailers. It does not cover used, salvaged, or refurbished products.

As some states do not allow the limitation or exclusion of incidental or consequential damages, or do not allow limitation on implied warranties, the above limitations and exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

For Technical Support or Warranty Service

Please Call (888) 876-5387

Or Write To:

Soleus International Inc.

20035 E. Walnut Dr. N.

City of Industry, CA 91789 USA

www.soleusair.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>