



The Lightning flash and arrowhead within the triangle is a warning sign alerting you of dangerous voltage inside the product.

CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE THE COVER (OR BACK) FROM THE PRODUCT. NO USER SERVICABLE PARTS INSIDE. REFER SERVICING TO YOUR SONIC ALERT DEALER.



The exclamation mark within the triangle is a warning sign alerting you of important instructions accompanying the product.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

SONIC ALERT'S 1 YEAR LIMITED WARRANTY

The Sonic Boom Alarm Clock / Telephone Signaler Model SBT425ss is warranted against manufacturing defects in materials and workmanship for one(1) year from the date of purchase. Within this period Sonic Alert will repair or replace at our option the SBT425ss without charge for parts and labor. Simply send the SBT425ss (postpaid) and a copy of your sales slip as proof of purchase to:

Sonic Alert Inc., 1050 E. Maple Road, Troy MI 48083



Made in China
Sonic Alert 1050 East Maple Rd. Troy, MI 48083
www.SonicAlert.com 1-800-566-3210 V/TTY



Sonic Alert
America's Leader in Visual Alerting Systems.

Sonic Boom Alarm Clock with Telephone Signaler & Bed Shaker Model SBT425ss



OPERATION INSTRUCTIONS


IMPORTANT- Please read these instructions carefully before use and retain for future reference. See operating instructions on back.

Warning: To prevent fire or shock hazard do not expose this appliance to rain or moisture. Before connecting, make sure that the requirements specified on the apparatus corresponds to the available power supply i.e. AC 110V/220-340V (50Hz/60Hz)

GENERAL DATA

Power: Consumption: 8w, 110v / 60 Hz
UL listed transformer (Underwriters Laboratories)

INSTRUCTIONS
ALARM CLOCK WITH BED SHAKER & TELEPHONE SIGNALER
MODEL SBT425ss

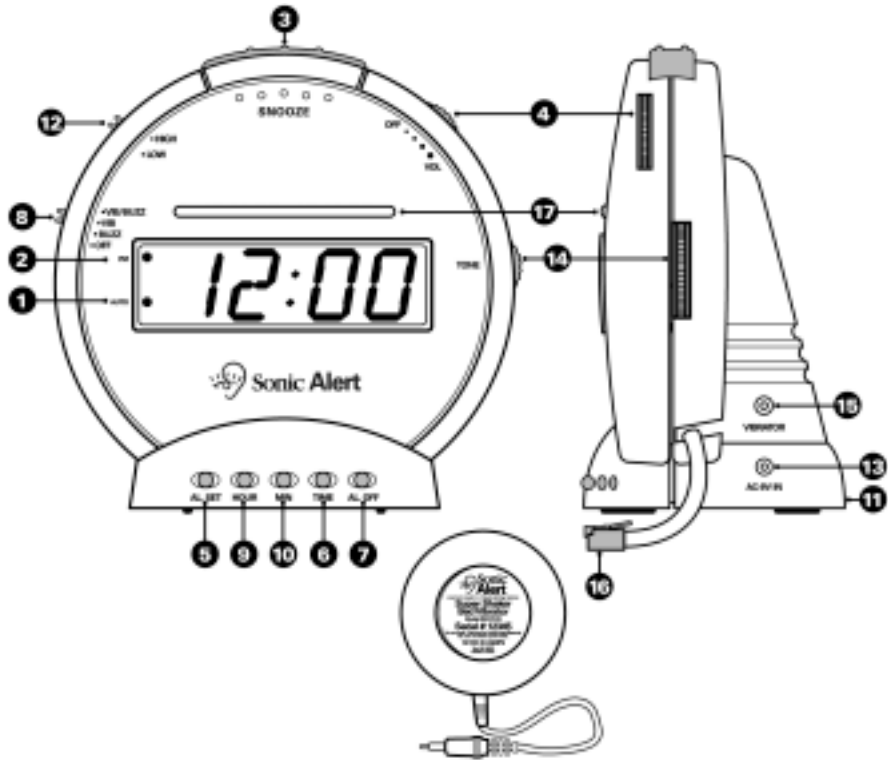

Features shown on diagrams above:

- | | | |
|--------------------|--------------------------|----------------------------|
| 1) Alarm Indicator | 7) Alarm off Button | 13) AC Power Cord |
| 2) P.M. Indicator | 8) Alarm Function Switch | 14) Tone Control Wheel |
| 3) Snooze Button | 9) Hour Button | 15) Vibrator Input |
| 4) Volume Wheel | 10) Minute Button | 16) Telephone Cord |
| 5) Alarm Set | 11) Battery Compartment | 17) Flashing Light Display |
| 6) Time Set Button | 12) Dimmer Switch | |

Setting the correct time-

- 1) Press and hold the Time Button (6) at the same time press the hour button (9) to advance the clock display rapidly until the hour is correct.
- 2) Press and hold the time button (6) at the same time press the MIN button (10) to advance the minute until the correct time is shown.
- 3) A lighted dot (2) in the upper left clock display indicates time is PM. For AM time indication, there is no lighted dot.

Setting the alarm time-

- 1) Simply follow the instructions mentioned under " Setting the correct time" except that you will have to press the Alarm Button (5) instead of the TIME Button.
- 2) Make sure the alarm time is correctly set for AM or PM lighted dot (2) indicates PM. Be sure to release the HOUR and MIN set buttons before releasing the ALARM button.

Waking To Alarm-

- 1) Set Function Switch (8) to choice of VIB/BUZZ or VIB or BUZZ.
- 2) Set desired volume (4) for Buzz sound.
- 3) Set alarm wake time per instructions for setting alarm time above.

Battery Backup-

To use battery backup, you can install a 9-volt alkaline battery in the back of the clock located under the battery cover (7). Battery not included. Note the LED display will not show during power failure but the clock will still be running and keeping proper time until the power comes back.

Sleep Timer Operation-

- 1) You may use the sleep function to have the radio on while you go to sleep. It will automatically shut itself off after the specified time.
- 2) Make sure the Function Switch (11) is NOT set to "ON" otherwise sleep function will not work and the radio will play continuously.
- 3) Press sleep button (5) and radio will play for an hour. You can also set sleep timer for other lengths of shut off time.
- 4) Press and hold the sleep timer button (5). It will start at 59 minutes and countdown to 1 minute. Release sleep timer button (5) once the desired sleep time is chosen.

Shutting Off Alarm-

Alarm can be shut off temporary for the day or permanently shut off.

- 1) When the alarm goes off, simply press the AL off button (9) the alarm will shut itself off for the day and come back on the next day at the same time if alarm setting has not changed
- 2) To shut the alarm off permanently, slide function switch (11) to off position. Alarm will not come on until Function Switch (11) is set to "AUTO" or "ALARM" position.

Snooze Operation-

SNOOZE button (3) - press after alarm has sounded. The alarm will be turned off for 9 minutes for extra sleep. The alarm will come back again after 9 minutes. You may repeat up to 59 minutes.

Alarm-

Set the alarm time you wish and slide the VIB / BUZZ / OFF (8) switch to the desired position. Set to VIB for bed shaker and BUZZ for sound, or VIB/BUZZ for both.

Tone-

Adjust the tone (14) by rotating the tone wheel located on the right hand side just below the volume wheel (4) until you reach desired level.

Volume-

To adjust the volume (4) rotate the wheel located on the upper right hand side.

Bed Shaker / Vibrator- Figure B

- 1) Attach the bed shaker jack to the back of clock at VIBRATOR input.
- 2) To turn on vibrator slide function switch (8) to VIB or VIB/BUZZ position.
- 3) Place vibrator under mattress or pillow.

AC-9V Power Input -

Attach the AC power supply input to the back of clock at AC-9V IN next to the VIBRATOR input, smaller input of the two. Important do not confuse input with vibrator input

OPERATION OF TELEPHONE SIGNALER

Your telephone signaler alerts you that your telephone is ringing by flashing the light above the clock display it will also set off the bed shaker and buzzer alarm sound automatically WHEN THE PHONE RINGS.

Telephone Signaler Installation-

- 1) Plug the modular phone plug from the back of the clock into a standard modular phone jack. (Use Jack type USOC RJ11C) the seven-foot cord is long enough to accommodate a variety of phone locations. However if the phone outlet is further away from the electrical outlet and you need a longer telephone line extension lines are available at Radio Shack or hardware stores.
- 2) Plug the clocks 110 plug into any standard electrical outlet.
- 3) Adjust the volume (4) with the volume wheel on the right hand side.
- 4) Adjust the tone (14) with the wheel on the right hand side just below the volume.
- 5) Set function switch (8) to desired position for BUZZ or VIB or both.
- 6) Use a phone 2 to 1 adapter (splitter) if you need to use the phone outlet with a telephone and the SBT425 Signaler.

Your SBT425ss complies with Part 68 of FCC Rules. You must, upon request, provide the FCC registration number and the REN to your local phone company. Both numbers are shown on the TR75's rating label.

Modifying or tampering with your TR75's internal components can cause a malfunction and invalidate the TR75' warranty and void your FCC authorization to operation it. If the TR75 is not operating, as it should, return it to Sonic Alert. If the problem is harming the phone lines, the phone company might ask that you disconnect the TR75 until the problem is resolved.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>