

# Blu-ray Disc/DVD Home Theatre System

**Operating Instructions**

## WARNING

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc. Do not place the naked flame sources such as lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

Do not expose batteries or apparatus with battery-installed to excessive heat such as sunshine, fire or the like.

To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

Indoor use only.

## CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this Blu-ray Disc / DVD Home Theatre System is harmful to eyes, do not attempt to disassemble the cabinet.

Refer servicing to qualified personnel only.

CAUTION	KLASS 3R VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EYE EXPOSURE.
VORSICHT	KLASSE 3R SICHTBARE UND UNSICHTBARE LASERSTRAHLUNG WENN GEÖFFNET. UNMITTELBARER AUGENKONTAKT VERMEIDEN.
ADVARSEL	SYNLIG OG USYNLIG LASERSTRÅLING AF KLASSE 3R VED ÅBNING. UNDGÅ AT SE DIREKTE PÅ STRÅLEN.
ADVARSEL	SYNLIG OG USYNLIG LASERSTRÅLING I KLASSE 3R NÄR DEKSEL ÅPNET. UNNGÅ DIREKTE EXPOSITIONER AV ÖGONEN.
WARNING	KLASS 3R SYNLIG OCH USYNLIG LASERSTRÅLNING NÄR ÖPPNINGEN ÄR ÖPPNAD. UNDVÄJ ATT DIREKT EXPONERA ÖGONEN FÖR STRÅLNINGEN.
VARO!	AVATTUNNA LUOKAN 3R NÄKYVÄÄ JA NÄKYMÄTÖNTÄ LASERSÄTELYÄ. VÄLTÄ KATSEEN SUORAAN AILTIKAMISTA.
警告	打开时有可见和不可见激光辐射，避免眼睛受到直射的照射
注意	打開時有類可視及不可視雷射輻射，避免眼睛直接暴露。

This appliance is classified as a CLASS 3R LASER product. Visible and invisible laser radiation is emitted when the laser protective housing is opened, so be sure to avoid direct eye exposure.

This marking is located on the laser protective housing inside the enclosure.



This appliance is classified as a CLASS 1 LASER product. This marking is located on the rear exterior.

## For the customers in Europe



**Disposal of Old Electrical & Electronic Equipment (Applicable in the European**

## Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.



**Disposal of waste batteries (applicable in the European Union and other**

## European countries with separate collection systems)

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste.

On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead.

By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources. In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only.

To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste

disposal service or the shop where you purchased the product.

Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives.

The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

### **For the customers in Australia**

This equipment should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).

### **For the main unit**

The nameplate is located on the rear exterior.

## **Precautions**

### **On power sources**

- The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.
- As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

## **On watching 3D video images**

Some people may experience discomfort (such as eye strain, fatigue, or nausea) while watching 3D video images. Sony recommends that all viewers take regular breaks while watching 3D video images. The length and frequency of necessary breaks will vary from person to person. You must decide what works best. If you experience any discomfort, you should stop watching the 3D video images until the discomfort ends; consult a doctor if you believe necessary. You should also review (i) the instruction manual and/or the caution message of any other device used with, or Blu-ray Disc contents played with this product and (ii) our website (<http://esupport.sony.com/>) for the latest information. The vision of young children (especially those under six years old) is still under development. Consult your doctor (such as a pediatrician or eye doctor) before allowing young children to watch 3D video images. Adults should supervise young children to ensure they follow the recommendations listed above.

### **For the wireless transceiver (EZW-RT50) and the Blu-ray Disc/DVD receiver (HBD-L800) (For the customers in Australia)**

This equipment should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).

## **For the wireless transceiver (EZW-RT50) and the Blu-ray Disc/DVD Home Theatre System (BDV-L600/BDV-L800/BDV-L800M) (For the customers in Europe)**

See "Wireless Product Compliance Information" (supplied).

## **Copy Protection**

Please be advised of the advanced content protection systems used in both Blu-ray Disc™ and DVD media. These systems, called AACS (Advanced Access Content System) and CSS (Content Scramble System), may contain some restrictions on playback, analog output, and other similar features. The operation of this product and the restrictions placed may vary depending on the date of purchase, as the governing board of the AACS may adopt or change its restriction rules after the time of purchase.

## **Copyrights and Trademarks**

- This system incorporates with Dolby\* Digital and the DTS\*\* Digital Surround System.
  - \* Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
  - \*\* Manufactured under license under U.S. Patent #s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,212,872; 7,333,929; 7,392,195; 7,272,567 & other U.S. and worldwide patents issued & pending. DTS, DTS-HD and the Symbol are registered trademarks, & DTS-HD Master Audio, and the DTS

logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

- This system incorporates High-Definition Multimedia Interface (HDMI™) technology. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- Java is a trademark of Oracle and/or its affiliates.
- “BD-LIVE” and “BONUSVIEW” are trademarks of Blu-ray Disc Association.
- “Blu-ray Disc” is a trademark.
- “Blu-ray Disc,” “DVD+RW,” “DVD-RW,” “DVD+R,” “DVD-R,” “DVD VIDEO,” and “CD” logos are trademarks.
- “Blu-ray 3D” and “Blu-ray 3D” logo are trademarks of Blu-ray Disc Association.
- “BRAVIA” is a trademark of Sony Corporation.
- “AVCHD” and the “AVCHD” logo are trademarks of Panasonic Corporation and Sony Corporation.
- ⋮, “XMB,” and “xross media bar” are trademarks of Sony Corporation and Sony Computer Entertainment Inc.
- “PLAYSTATION” is a trademark of Sony Computer Entertainment Inc.
- Music and video recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information, please visit [www.gracenote.com](http://www.gracenote.com). CD, DVD, Blu-ray Disc, and music and video-related data from Gracenote, Inc., copyright © 2000-present Gracenote. Gracenote Software, copyright © 2000-present Gracenote. One or more patents owned by Gracenote apply to this product and service.

See the Gracenote website for a nonexhaustive list of applicable Gracenote patents. Gracenote, CDDB, MusicID, MediaVOCS, the Gracenote logo and logotype, and the “Powered by Gracenote” logo are either registered trademarks or trademarks of Gracenote in the United States and/or other countries.



- The Wi-Fi CERTIFIED™ Logo is a certification mark of the Wi-Fi Alliance.
- The Wi-Fi Protected Setup™ Mark is a mark of the Wi-Fi Alliance.
- “Wi-Fi CERTIFIED™” and “Wi-Fi Protected Setup™” are trademarks of the Wi-Fi Alliance.
- “PhotoTV HD” and the “PhotoTV HD” logo are trademarks of Sony Corporation.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.



- “Made for iPod,” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.
- Windows Media is either a registered trademark or trademark

of Microsoft Corporation in the United States and/or other countries.

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device’s ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

- DLNA®, the DLNA Logo and DLNA CERTIFIED™ are trademarks, service marks, or certification marks of the Digital Living Network Alliance.
- All other trademarks are trademarks of their respective owners.
- Other system and product names are generally trademarks or registered trademarks of the manufacturers.™ and ® marks are not indicated in this document.

---

# About These Operating Instructions

- The instructions in these Operating Instructions describe the controls on the remote. You can also use the controls on the main unit if they have the same or similar names as those on the remote.
- In this manual, “disc” is used as a general reference for BDs, DVDs, Super Audio CDs, or CDs unless otherwise specified by the text or illustrations.
- The instructions in this manual are for BDV-L800, BDV-L800M, and BDV-L600. BDV-L600 is the model used for illustration purposes. Any difference in operation is clearly indicated in the text, for example, “BDV-L600 only.”
- Some illustrations are presented as conceptual drawings, and may be different from the actual products.
- The items displayed on the TV screen may vary depending on the area.
- The default setting is underlined.

# Table of Contents

About These Operating Instructions .....	5
Unpacking .....	7
Index to Parts and Controls .....	10

## Getting Started

<b>Step 1: Installing the System .....</b>	<b>16</b>
<b>Step 2: Connecting the System ...</b>	<b>18</b>
<b>Step 3: Performing the Easy Setup .....</b>	<b>32</b>
<b>Step 4: Selecting the Source .....</b>	<b>33</b>
<b>Step 5: Enjoying Surround Sound .....</b>	<b>34</b>

## Playback

Playing a Disc .....	36
Playing from a USB Device .....	37
Enjoying an iPod/iPhone .....	38
Playing via a Network .....	40
Available Options .....	42

## Sound Adjustment

Selecting the Effect to Suit the Source .....	45
Selecting the Audio Format, Multilingual Tracks, or Channel .....	45
Enjoying Multiplex Broadcast Sound ...	46

## Tuner

Listening to the Radio .....	47
Using the Radio Data System (RDS) .....	48

## Other Operations

Using the Control for HDMI Function for "BRAVIA" Sync .....	49
Setting the Speakers .....	50
Using the Sleep Timer .....	51
Deactivating the Buttons on the Main Unit .....	51
Controlling Your TV or Other Components with the Supplied Remote .....	52
Saving Power in Standby Mode .....	53
Browsing Websites .....	53
Further Settings for the Wireless System .....	55
Setting up the Network .....	56

## Settings and Adjustments

Using the Setup Display .....	60
[Remote Controller Setting Guide] .....	60
[Network Update] .....	61
[Screen Settings] .....	61
[Audio Settings] .....	62
[BD/DVD Viewing Settings] .....	63
[Parental Control Settings] .....	64
[Music Settings] .....	64
[System Settings] .....	64
[Network Settings] .....	66
[Easy Setup] .....	66
[Resetting] .....	66


## Additional Information

Precautions .....	67
Notes about the Discs .....	68
Troubleshooting .....	69
Playable Discs .....	75
Playable Types of Files .....	76
Supported Audio Formats .....	77
Specifications .....	78
Language Code List .....	80
Index .....	81


# Unpacking

## BDV-L800/BDV-L800M


- Main unit (1)

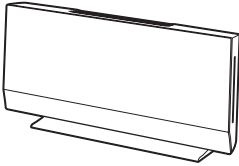


- Front speakers (2)

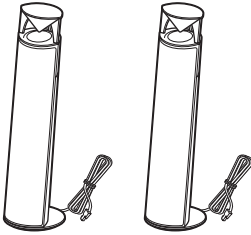

- Subwoofer (1)

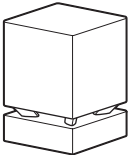

- FM wire antenna (aerial) (1)

 


- Remote commander (remote) (1)



- R6 (size AA) batteries (2)



 - Dock for iPod/iPhone (TDM-iP30) (1)




- Video cord for Dock for iPod/iPhone (1)




- USB cable (1)



 
- Stand cover (1)




- Wireless transceivers (EZW-RT50) (2)

 


- AC adapter (1)

 

- AC power cord (mains lead) (1)

 


- Speaker stands (2)

 

- Screws (silver) (2)



 - Wall mounting bracket A (1)




- Wall mounting bracket B (1)




- Operating Instructions (Australian models only)
- Quick Setup Guide
- Speaker Installation Guide
- Main Unit Installation Guide
- Software License Information
- Wireless Product Compliance Information
- Warranty
- Reference Guide (European models only)

## BDV-L600


- Main unit (1)

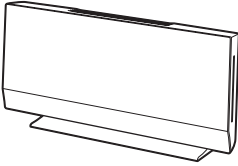


- Front speakers (2)

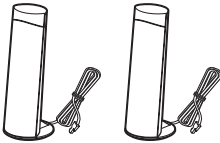


- Subwoofer (1)

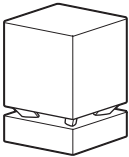

- FM wire antenna (aerial) (1)

 


- Remote commander (remote) (1)

 

- R6 (size AA) batteries (2)



 - Dock for iPod/iPhone (TDM-iP30) (1)




- Video cord for Dock for iPod/iPhone (1)



- USB cable (1)



 - Stand cover (1)




- Wireless transceivers (EZW-RT50) (2)



- AC adapter (1)



 - AC power cord (mains lead) (1)



- Operating Instructions (Australian models only)

- Quick Setup Guide

- Speaker Installation Guide

- Main Unit Installation Guide

- Software License

- Information

- Wireless Product Compliance Information


- Warranty

- Reference Guide (European models only)



## Preparing the remote


Insert two R6 (size AA) batteries (supplied) by matching the ⊕ and ⊖ ends on the batteries to the markings inside the compartment.

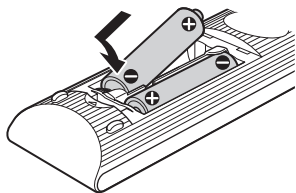

# Index to Parts and Controls

For more information, refer to the pages indicated in parentheses.

## Main unit

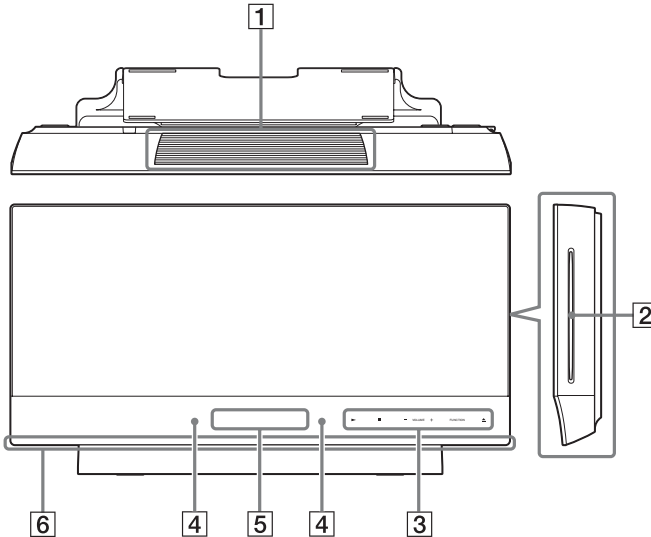

**1** Ventilation openings

**2** Disc slot (page 36)

**3** Soft-touch buttons/indicators

### ▶ (play)

Starts or re-starts playback (resume play).  
Plays a slideshow when a disc containing JPEG image files is inserted.

### ■ (stop)

Stops playback and remembers the stop point (resume point).  
The resume point for a title/track is the last point you played or the last photo for a photo folder.

### VOLUME +/-

Adjusts the system's volume.

### FUNCTION

Selects the playback source.

### ▲ (eject)

Ejects the disc.

**4** Remote sensor

**5** Front panel display

**6** Illumination LED (page 64)

## About soft-touch buttons/indicators

These buttons function when the soft-touch button indicators are lit.


You can turn on/off the indicators by setting [Illumination/Display] (page 64). When you set [Illumination/Display] to [Simple/Off], the indicators turn off. In this case, touch any soft-touch button. When the indicators light up, touch the desired button.

### Note

- These buttons work when you touch them lightly. Do not press on them with excessive force.

**Side view (without the panel cover)**

**Rear panel**

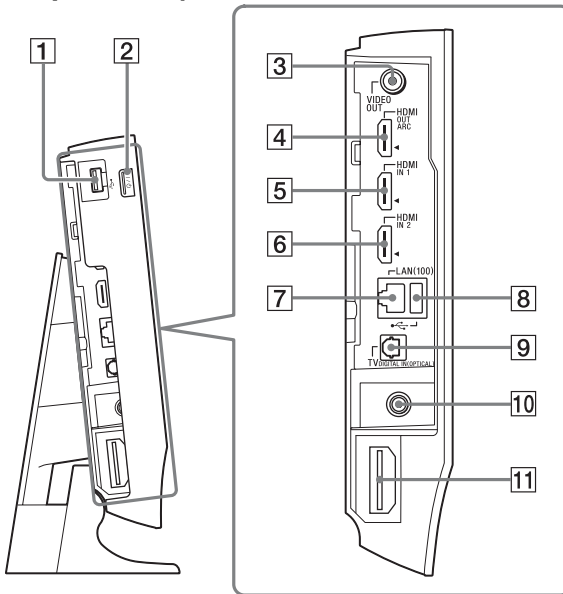

**1**  **(USB) port (left) (page 37)**

Used for connecting a USB device.

**2**  **(on/standby)**

Turns on the main unit, or sets it to standby mode.

**3** **VIDEO OUT jack (page 19)**

**4** **HDMI OUT jack (page 19)**

**5** **HDMI IN 1 jack (page 21)**

**6** **HDMI IN 2 jack (page 21)**

**7** **LAN(100) terminal (page 23)**

**8**  **(USB) port (rear) (page 37)**

Used for connecting a USB device.

**9** **TV DIGITAL IN (OPTICAL) jack (page 19)**


**10** **ANTENNA FM 75 Ω COAXIAL jack (page 22)**

**11** **Wireless transceiver (EZW-RT50/EZW-RT20) slot (page 25)**

EZW-RT50 is supplied with the system.

## Front panel display


### About the indications in the front panel display

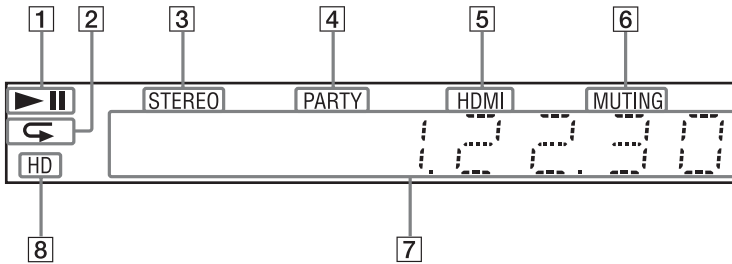

- 1 Displays the system's playing status.
- 2 Lights up when repeat play is activated.
- 3 Lights up when stereo sound is received. (Radio only)
- 4 Lights up when the system is playing via the PARTY STREAMING function.
- 5 Lights up when the HDMI OUT jack is correctly connected to an HDCP (High-bandwidth Digital Content Protection)-compliant device with HDMI or DVI (Digital Visual Interface) input.
- 6 Lights up when muting is on.
- 7 Displays the system's status, such as radio frequency, etc.
- 8 Lights up when outputting 720p/1080i/1080p video signals from the HDMI OUT jack.

# Subwoofer

## Front panel

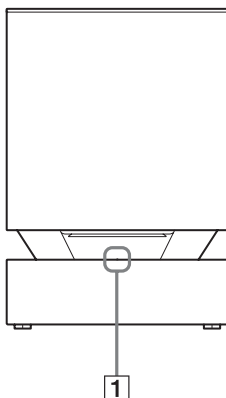


### 1 LINK/STANDBY indicator

You can check the status of wireless transmission between the main unit and subwoofer.

Indicator	Status
Turns green.	The system is turned on, wireless transmission is activated and sound signals are being received.
Turns orange.	The system is turned on, wireless transmission is activated with the Secure Link function, and sound signals are being received.
Flashes green quickly.	The wireless transceiver is not inserted correctly into the wireless transceiver slot.
Flashes green or orange slowly.	Wireless transmission is deactivated.
Turns red.	The subwoofer is in standby mode while the system is in standby mode or wireless transmission is deactivated.
Turns off.	The subwoofer is turned off.
Flashes red.	The subwoofer's protection is active.

## Rear panel

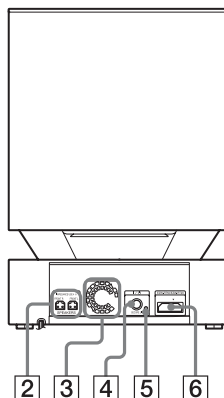

### 2 SPEAKERS jacks

### 3 Ventilation openings

### 4 I/O (Power) button

Turns the subwoofer on/off.

### 5 SECURE LINK button (page 55)


Starts the Secure Link function.

### 6 Wireless transceiver (EZW-RT50/EZW-RT20) slot (page 25)

EZW-RT50 is supplied with the system.

## Remote control

The buttons for system operation only are described below. See “Controlling Your TV or Other Components with the Supplied Remote” (page 52) for the buttons for operation of the connected components.

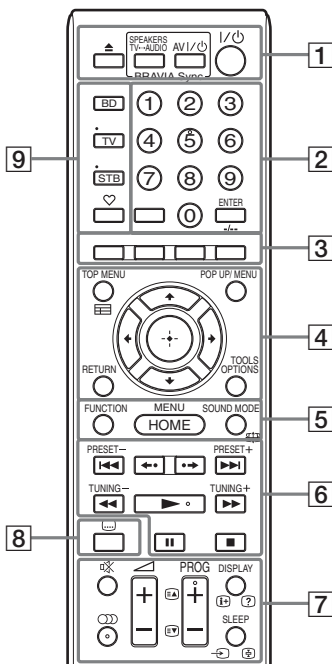

- Number 5, , , , and buttons have a tactile dot. Use the tactile dot as a reference when operating the remote.
- Names of buttons that work after pressing the TV or STB operation mode buttons are indicated with a yellow or green label.

### 1 (eject)

Ejects the disc.

### SPEAKERS TV ↔ AUDIO

Selects whether TV sound is output from the system's speakers or the TV's speaker(s). This function works only when you set [Control for HDMI] to [On] (page 65).

### AV (on/standby) (page 52)

Turns on the TV or other component, or sets the TV or other components to standby mode.

### (on/standby) (pages 32, 47)

Turns on the system or sets it to standby mode.

### 2 **Number buttons (pages 48, 52)**

Enters the title/chapter numbers, preset station number, etc.

### ENTER

Enters the selected item.

### 3 **Color buttons (red/green/yellow/blue)**

Short cut keys for selecting items on some BD menus (can also be used for Java interactive operations on BDs).

### 4 **TOP MENU**

Opens or closes the BD's or DVD's Top Menu.

### POP UP/MENU

Opens or closes the BD-ROM's Pop-up Menu, or the DVD's menu.

### OPTIONS (pages 34, 42, 54)

Displays the options menu on the TV screen or in the front panel display. (The location differs based on the selected function.)

### RETURN

Returns to the previous display.

### ←/↑/↓/→

Moves the highlight to a displayed item.

### (enter)

Enters the selected item.

**5 FUNCTION (pages 33, 47)**

Selects the playback source.

**HOME (pages 32, 47, 50, 53, 55, 56, 60)**

Enters or exits the system's home menu.

**SOUND MODE (page 45)**

Selects the sound mode.

**6 Playback operation buttons**

See "Playback" (page 36).

**◀◀/▶▶ (previous/next)**

Skip to the previous/next chapter, track, or file.

**◀•/•▶ (replay/advance)**

Briefly replay the current scenes for 10 seconds./Briefly fast forwards the current scenes for 15 seconds.

**◀◀/▶▶ (fast/slow/freeze frame)**

Fast reverse/fast forward the disc during playback. Each time you press the button, the search speed changes.

Activates slow-motion play when pressed for more than one second in pause mode. Plays one frame at a time when pressed in pause mode.

Slow-motion and single-frame playback are not available for Blu-ray 3D Discs.

**▶ (play)**

Starts or re-starts playback (resume play).

Activates One-Touch Play (page 49) when the system is on and set to the "BD/DVD" function.

**⏸ (pause)**

Pauses or re-starts playback.

**■ (stop)**

Stops playback and remembers the stop point (resume point). The resume point for a title/track is the last point you played or the last photo for a photo folder.

**Radio operation buttons**

See "Tuner" (page 47).

**PRESET +/-**

**TUNING +/-**

**7 ✖ (muting)**

Turns off the sound temporarily.

**⏮ (audio) (pages 45, 46)**

Selects the audio format/track.

**◀ (volume) +/- (page 47)**

Adjusts the volume.

**DISPLAY (pages 37, 40, 53)**

Displays playback and web browsing information on the TV screen.

Displays the preset radio station, frequency, etc., in the front panel display.

Displays the stream information in the front panel display when the function is set to other than "BD/DVD." When the system is set to the "HDMI1," "HDMI2," or "TV" function, the stream information appears only when a digital signal is input.

The stream information may not appear depending on the stream or item being decoded.

**SLEEP (page 51)**

Sets the sleep timer.

**8 ⋮ (subtitle) (page 63)**

Selects the subtitle language when multilingual subtitles are recorded on a BD-ROM/DVD VIDEO.

**9 Operation mode buttons (page 52)**

Changes the component to be operated on the remote.

BD: You can operate this Blu-ray Disc/DVD Home Theatre System.

TV: You can operate a TV.

STB: You can operate a cable box, digital satellite receiver, digital video receiver, etc.

**♥ (favorites)**

Displays the Internet contents added to the Favorites List. You can save 18 favorite Internet contents.

## Getting Started


## Step 1: Installing the System

You can select from one of three positions for installing the main unit: in a vertical position, in a horizontal position, or on a wall. For details, see “Selecting the installation position of the main unit” (page 27).

You can also install the front speakers on a wall. For details, refer to the supplied “Speaker Installation Guide.”


### How to position the system

Install the system by referring to the illustration below.

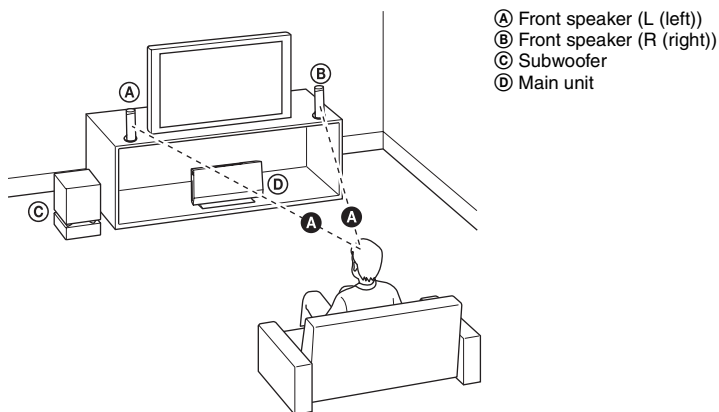

#### Note

- Use caution when placing the speakers and/or speaker stands attached to the speakers on a specially treated (waxed, oiled, polished, etc.) floor, as staining or discoloration may result.
- Leave a space for inserting/ejecting the disc (approximately 15 cm) to the right (disc slot) side of the main unit when placing an object nearby.

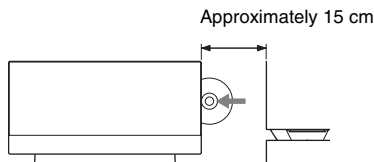


- Do not lean or hang on a speaker, as it may fall down.
- Image distortion on the TV screen may occur depending on the location of the subwoofer. In this case, place the subwoofer away from the TV.
- Do not block the ventilation openings of the main unit (page 10).
- Place both front speakers the same distance apart from the listening position (A).
- The front speakers should be placed at least 0.6 m apart.



- Place the front speakers forward from the TV. Make sure there are no obstacles in front of the speakers.
- Both front speakers should be pointed straight forward. Do not place the speakers at an angle.

### Note on handling the subwoofer

Do not hold the subwoofer by the middle opening when lifting it. The speaker driver may be damaged. When lifting the subwoofer, hold it from the bottom.

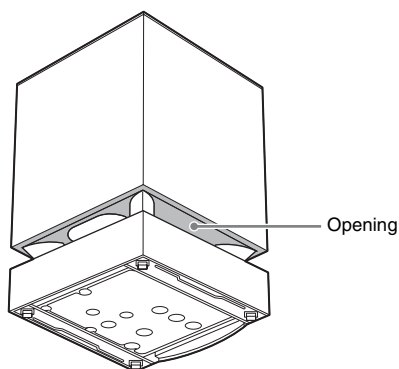

#### Tip

- It is recommended to place the subwoofer on a hard floor.
- You can place the subwoofer to the left or right of the main unit, facing the listening position.

## Step 2: Connecting the System

For connecting the system, read the information on the following pages.


Do not connect the AC power cords (mains leads) of the main unit and subwoofer to a wall outlet (mains) until all the other connections are made.

### Note

- When you connect another component with a volume control, turn down the volume of the other components to a level where sound is not distorted.


### Connecting the speakers to the subwoofer

Connect the speaker cords to match the color of the SPEAKERS jacks of the subwoofer. When connecting to the subwoofer, insert the connector until it clicks.

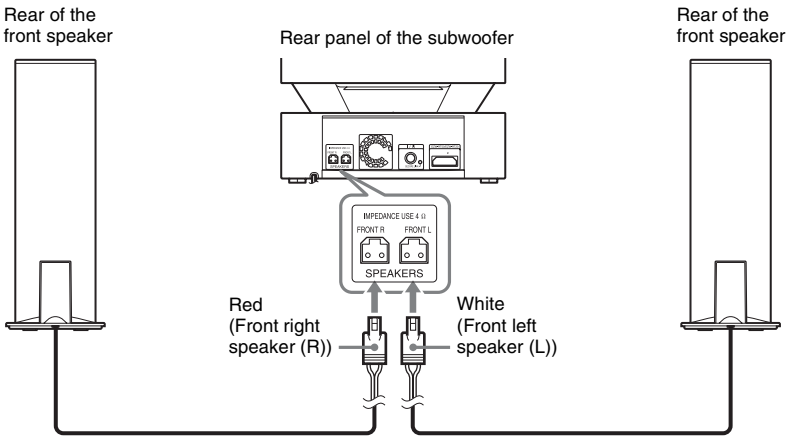

### Removing the panel cover of the main unit

Before connecting the cables, remove the panel cover from the main unit.

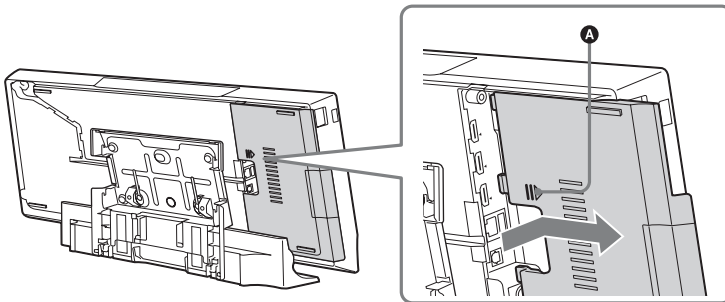

Press the panel cover at (A) gently, then slide it out to the side.


## Connecting the TV

Connect the system to your TV to display the image of the system on your TV, and listen to TV sound via the system's speakers.


Depending on the jacks and functions on your TV, select the connection method.

- When your TV has an HDMI jack that is marked "ARC\*\*": Connection (A)
- When your TV has an HDMI jack: Connections (A) and (C)
- When your TV does not have HDMI jacks: Connections (B) and (C)


### Video connections

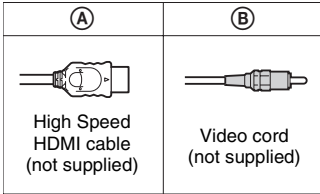

### Audio connection

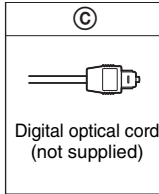

Rear panel of the main unit

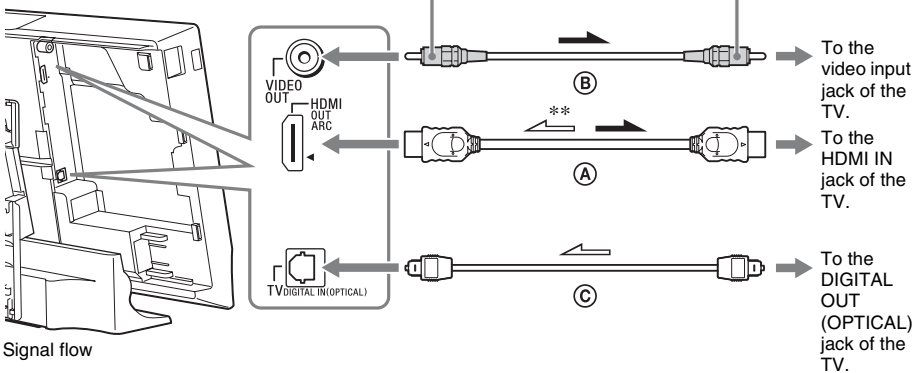

\* Audio Return Channel. For details, see "About Audio Return Channel" (page 20).

\*\* Available only when your TV is compatible with the Audio Return Channel function.

### Ⓐ **HDMI cable connection**

If your TV has an HDMI jack, connect to the TV with a High Speed HDMI cable. This will provide better image quality compared to other types of connections.

When connecting with a High Speed HDMI cable, you need to select the type of output signal when performing the Easy Setup (page 32).

For further HDMI settings, see “[HDMI Settings]” (page 65).

#### **About Audio Return Channel**

If your TV is compatible with the Audio Return Channel function, a High Speed HDMI cable connection also sends a digital audio signal from the TV. You do not need to make a separate audio connection for listening to TV sound. For setting the Audio Return Channel function, see [Audio Return Channel] (page 65).

### Ⓑ **Video cord connection**

If your TV does not have an HDMI jack, make this connection.

### Ⓒ **Digital optical cord connection**

This connection sends an audio signal to the system from the TV. To listen to TV sound via the system, perform this connection. With this connection, the system receives a Dolby Digital multiplex broadcast signal and you can enjoy multiplex broadcast sound.


#### **Note**

- You can enjoy the TV sound by selecting the “TV” function (page 33).

## Connecting the other components with an HDMI (OUT) jack

You can connect a component that has an HDMI (OUT) jack such as a set-top box/digital satellite receiver or PLAYSTATION®3, etc., with a High Speed HDMI cable. A High Speed HDMI cable connection can send both video and audio signals. By connecting the system and the component using a High Speed HDMI cable, you can enjoy high-quality digital picture and sound via the HDMI IN 1 or HDMI IN 2 jack.

Rear panel of the main unit

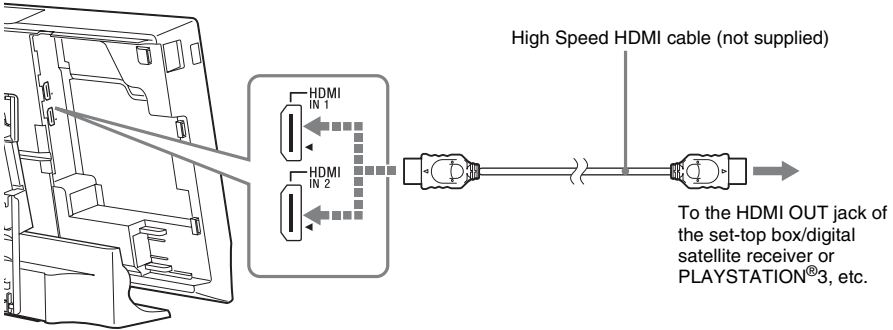


### Note

- Video signals from the HDMI IN 1/2 jacks are sent to the HDMI OUT jack only when the “HDMI1” or “HDMI2” function is selected.
- To send an audio signal from the HDMI IN 1/2 jacks to the HDMI OUT jack, you may need to change the audio output setting. For details, see [Audio Output] in [Audio Settings] (page 62).
- You can change the audio input of a component that is connected to the HDMI IN 1 jack to the TV DIGITAL IN (OPTICAL) jack. For details, see [HDMI1 Audio Input mode] in [HDMI Settings] (page 65). (European models only.)

## Connecting the antenna (aerial)

Rear panel of the main unit

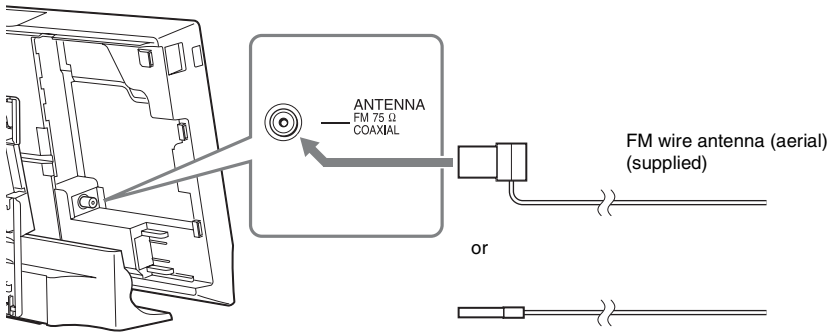

### Note

- Be sure to fully extend the FM wire antenna (aerial).
- After connecting the FM wire antenna (aerial), keep it as horizontal as possible.

### Tip

- If you have poor FM reception, use a 75-ohm coaxial cable (not supplied) to connect the main unit to an outdoor FM antenna (aerial).

## Connecting to the network

### Note

- To connect the system to your network, you need to make network settings that suit your usage environment and components. For details, see “Setting up the Network” (page 56) and “[Network Settings]” (page 66).

### For BDV-L800/BDV-L800M


Select the method based on your LAN (Local Area Network) environment.

- If you use a wireless LAN

The system has built-in Wi-Fi, and you can connect the system to the network by making the network settings.

- If you use other than a wireless LAN

Connect to the network by making a LAN cable connection as follows.

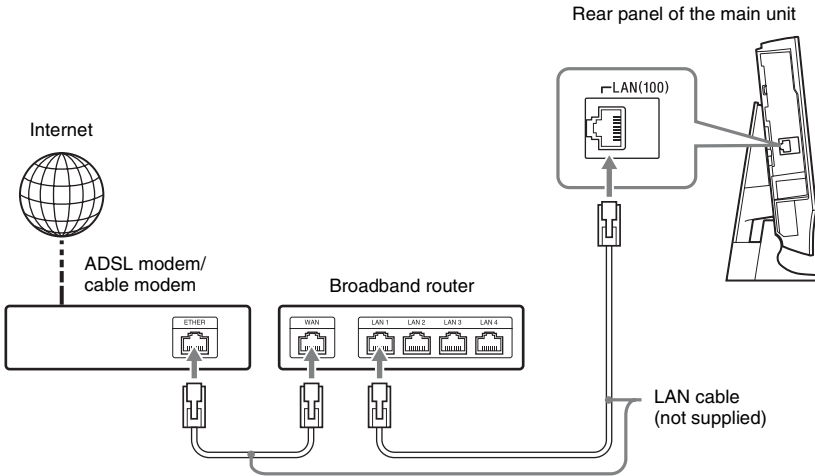

### Note

- The placement distance between the main unit and your wireless LAN router differs based on your usage environment. If the system cannot connect to the network or the network connection is unstable, place the main unit and the wireless LAN router closer to each other. When you cannot place the main unit and the wireless LAN router closer to each other, use the optional USB Wireless LAN Adapter (Sony UWA-BR100\* only).
- To connect to a wireless LAN using a 5 GHz frequency band, you need the optional USB Wireless LAN Adapter (Sony UWA-BR100\* only).
  - \* As of March 2011. The USB Wireless LAN Adapter may not be available in some regions/countries.
- You can also get information for network settings from the following Sony support page:

For customers in Europe:


<http://support.sony-europe.com>

For customers in other countries/regions:

<http://www.sony-asia.com/support>

## For BDV-L600

Select the method based on your LAN (Local Area Network) environment.

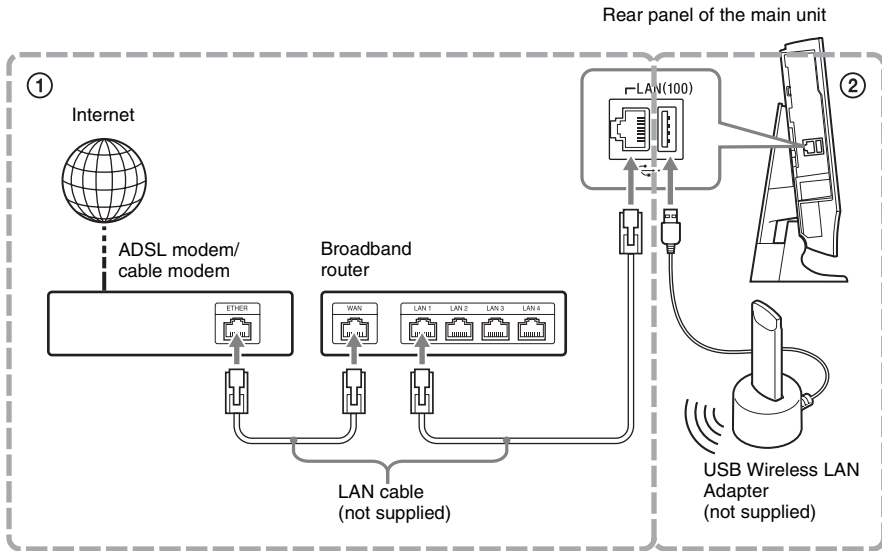

### ① Wired Setup

Use a LAN cable to connect to the LAN(100) terminal on the main unit.

### ② USB Wireless Setup

Use a wireless LAN via the USB Wireless LAN Adapter (Sony UWA-BR100\* only).

The USB Wireless LAN Adapter may not be available in some regions/countries.

\* As of March 2011.

Turn the main unit off before connecting the extension cable or inserting the USB Wireless LAN Adapter. After inserting the USB Wireless LAN Adapter to the base and connecting the extension cable to the ⚡ (USB) port (rear or left) (page 11), turn the main unit on again.

#### Note

- The placement distance between the USB Wireless LAN Adapter and your wireless LAN router differs based on your usage environment. If the system cannot connect to the network or the network connection is unstable, move the USB Wireless LAN Adapter to a different position or place the USB Wireless LAN Adapter and the wireless LAN router closer to each other.
- You can also get information for network settings from the following Sony support page:

For customers in Europe:

<http://support.sony-europe.com>

For customers in other countries/regions:

<http://www.sony-asia.com/support>




## Inserting the wireless transceivers

The main unit transmits sound to the subwoofer that is connected to the front speakers. To activate wireless transmission, perform the following Steps.


- 1 Insert a wireless transceiver into the main unit by matching the markings on the rear panel.**

Rear panel of the main unit

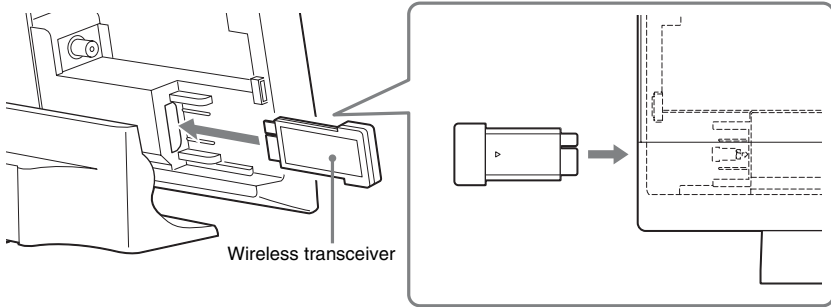

- 2 Insert a wireless transceiver into the subwoofer.**

Rear panel of the subwoofer

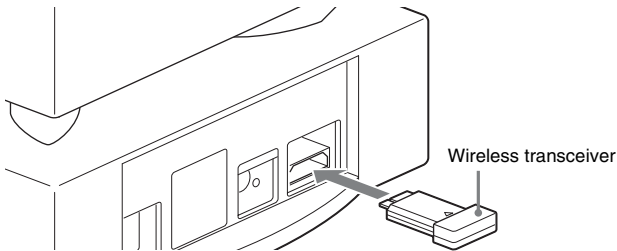


### Note

- Wireless transmission will activate after turning the main unit and subwoofer on (page 31).


## Connecting the AC power cord (mains lead) to the main unit

Do not plug the AC power cord (mains lead) for the main unit into a wall outlet (mains) until you have made all other connections.

### 1 Connect the AC power cord (mains lead) to the AC adapter.

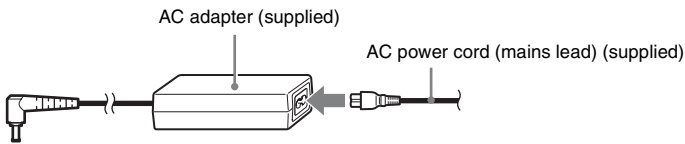


### 2 Plug the connector of the AC adapter into the DC IN 14V connector on the rear of the main unit.

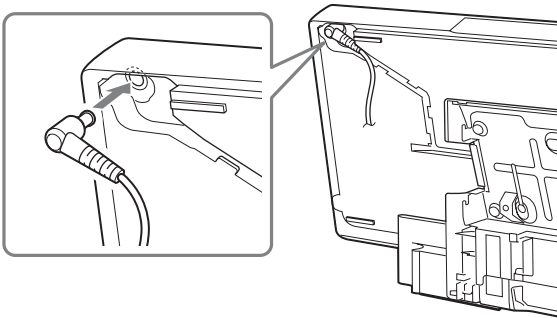

### To unplug the AC adapter cord

Lift (A) of the connector of the AC adapter out gently to remove it from the gap on the main unit (①), turn the connector counterclockwise by 90 degrees (②), and then pull it out from the main unit (③).

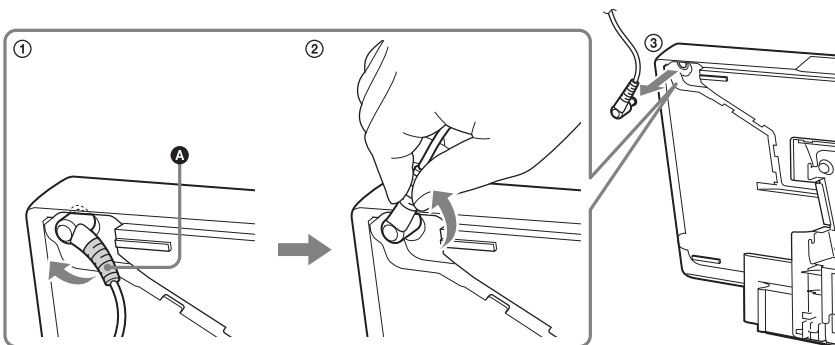


#### Note

- Do not pull by the cord when you unplug the AC adapter cord.

## Selecting the installation position of the main unit

You can select from one of three positions for installing the main unit: in a vertical position, in a horizontal position, or on a wall.

### To install the main unit in a vertical position

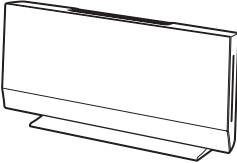


See “Attaching the covers” (page 28).

### To install the main unit in a horizontal position



Refer to the supplied “Main Unit Installation Guide.”

### To install the main unit on a wall

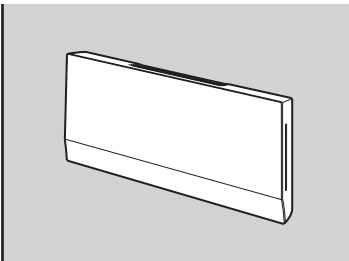

Refer to the supplied “Main Unit Installation Guide.”  
Contact an installer to install the main unit on a wall.

#### Note

- To install the main unit on a wall, you need the wall mounting brackets A and B. These are not supplied with BDV-L600, so purchase the brackets (WS-L100) if necessary.

## Attaching the covers

After you have made all the connections, organize the cables and attach the panel cover and the stand cover by following the Steps below.


### 1 Place the main unit on its face.

#### Note


- Make sure to place the main unit on a soft thick cloth to prevent damaging the main unit.

### 2 Bring together the cables (except the FM wire antenna (aerial)), guide them through the slot at the right of the main unit, behind the clamp (A), and through the slot at the bottom of the main unit.

Thread the FM wire antenna (aerial) through the small indentation at the rear of the main unit.

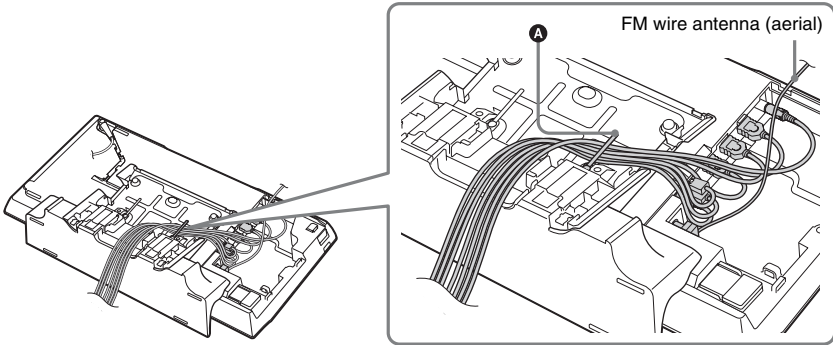


### 3 Thread the AC power cord (mains lead) through the gap on the main unit by securing it behind the tabs, guide it through the slot at the left of the main unit, behind the clamp (B), and through the slot at the bottom of the main unit.

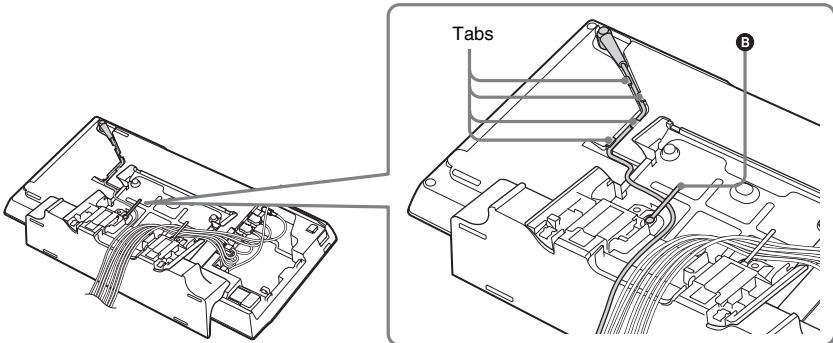


#### 4 Attach the panel cover to the rear of the main unit.

Put the left edge of the lower part of the panel cover on (C), align the bottom projection of the panel cover with (D), and then slide it inward until it clicks into place.

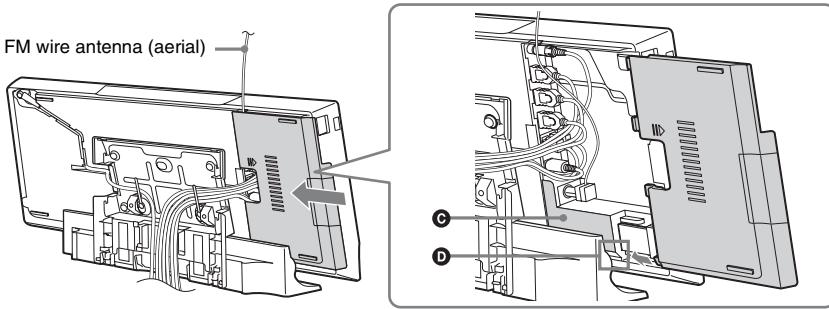


##### Note

- Be sure to fully extend the FM wire antenna (aerial).
- After attaching the panel cover, keep the FM wire antenna (aerial) as horizontal as possible.
- If a USB device (such as a USB memory) that has a long, thin body to the side panel, use the  (USB) port on the left side of the main unit.

#### 5 Attach the stand cover to the rear of the main unit.


Align both edges of lower part of the stand cover with the guides on the stand (E), and then slide the stand cover down gently.

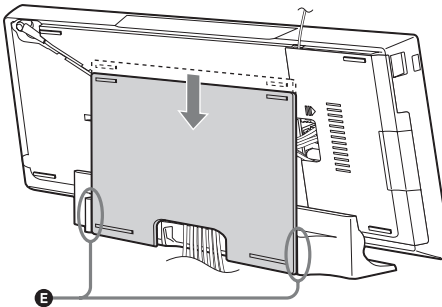

#### To remove the stand cover


Place the main unit on its face.

Press the catches on the stand down and slide the stand cover in the direction of the arrow in the illustration below.

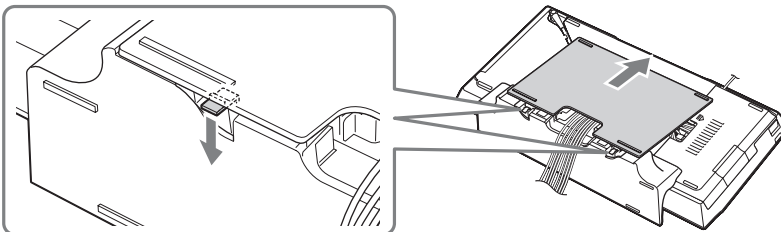

## To open the hatch of the panel cover


To arrange the cables to the left side of the main unit, open the hatch of the panel cover before you attach the panel cover. Be sure not to lose the hatch.

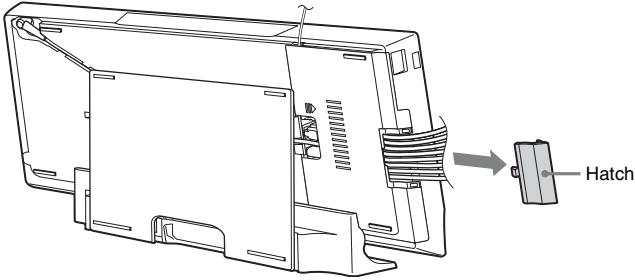


To open the hatch, remove the panel cover, hold the hatch, and then pull it up and outward.

To close the hatch, align the projection of the hatch with the projection opening on the panel cover, and then gently push in and down on the hatch until it clicks.

To open the hatch

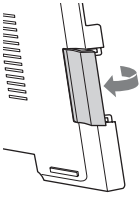


To close the hatch

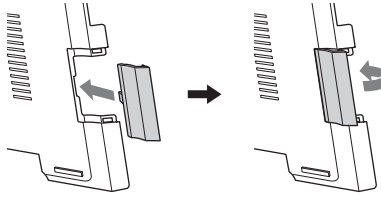

## Turning on the system


After you have made all connections in “Step 2: Connecting the System” (page 18), turn the system on.

- 1 Press I/⏻ to turn the main unit on.

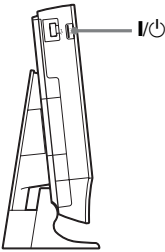

- 2 Connect the AC power cord (mains lead) of the subwoofer into the wall outlet (mains).

After the subwoofer turns on, the LINK/STANDBY indicator turns green and the wireless transmission is activated.

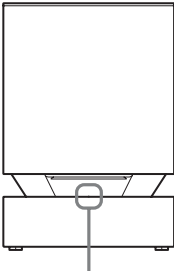

LINK/STANDBY indicator

### Note

- If the LINK/STANDBY indicator does not turn on, see “Subwoofer” (page 13) and “Sound” (page 71).

### About the standby mode

The subwoofer enters standby mode automatically (the LINK/STANDBY indicator turns red) when the main unit is in standby mode or wireless transmission is deactivated.


The subwoofer turns on automatically (the LINK/STANDBY indicator turns green) when the main unit is turned on and wireless transmission is activated.

### To specify the wireless connection

If you use multiple wireless products or your neighbors use wireless products, interference may occur. To prevent this, you can specify the wireless connection to link the main unit to the subwoofer (Secure Link function). For details, see “Further Settings for the Wireless System” (page 55).


## Step 3: Performing the Easy Setup

Follow the Steps below to make the basic adjustments for using the system.  
Displayed items vary depending on the country model.

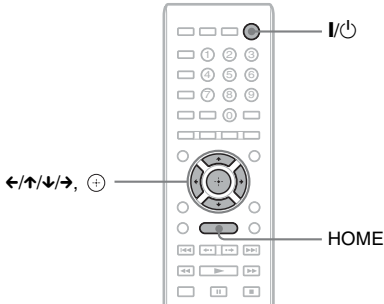

- 1 Turn on the TV.
- 2 Press I/Power.
- 3 Switch the input selector on your TV so that the signal from the system appears on the TV screen.

The Easy Setup Display for OSD language selection appears.

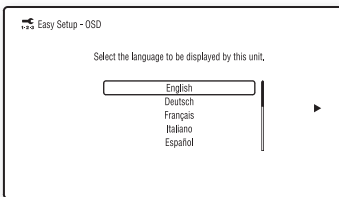

- 4 Perform the [Easy Setup]. Follow the on-screen instructions to make the basic settings using ←/↑/↓/→ and (+).

Depending on the connection method (page 19), perform the following setting.

- HDMI cable connection: Follow the instructions that are displayed on the TV screen.
- Video cord connection: Select [16:9] or [4:3] so that the picture is displayed correctly.


### To recall the Easy Setup Display

- 1 Press HOME.  
The home menu appears on the TV screen.
- 2 Press ←/→ to select [Setup].
- 3 Press ↑/↓ to select [Easy Setup], then press (+).
- 4 Press ←/→ to select [Start], then press (+).  
The Easy Setup Display appears.



## Step 4: Selecting the Source

You can select the playback source.

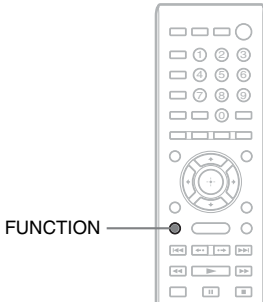

**Press FUNCTION repeatedly until the desired function appears in the front panel display.**


Each time you press FUNCTION, the function changes as follows.

“BD/DVD” → “FM” → “HDMI1” →  
 “HDMI2” → “TV” → “BD/DVD” → ...

Function	Source
“BD/DVD”	Disc, USB device, iPod/iPhone, or network device to be played by the system
“FM”	FM radio (page 47)
“HDMI1”/ “HDMI2”	Component that is connected to the HDMI IN 1 or HDMI IN 2 jack on the rear panel (page 21)
“TV”	Component (TV, etc.) that is connected to the TV DIGITAL IN (OPTICAL) jack on the rear panel, or a TV compatible with the Audio Return Channel function that is connected to the HDMI OUT jack on the rear panel (page 19)

## Step 5: Enjoying Surround Sound

After performing the previous Steps and starting playback, you can easily enjoy surround sound. You can also select pre-programmed surround settings that are tailored to different kinds of sound sources. They bring the exciting and powerful sound of movie theaters into your home.

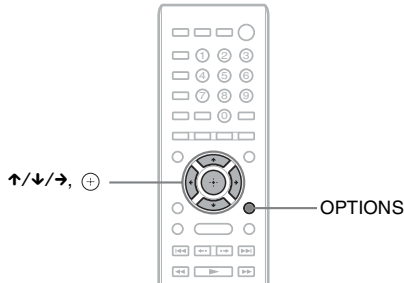

### Selecting surround settings based on your listening preference

The setting method differs depending on the function.

#### When playing via the “BD/DVD”\* or “FM” function

##### 1 Press **OPTIONS**.

The option menu appears on the TV screen.

##### 2 Press **↑/↓** to select [Surround Setting], then press **⊕**.

##### 3 Press **↑/↓** repeatedly until the surround setting you want appears on the TV screen.

See the table below for surround sound setting descriptions.

##### 4 Press **⊕**.

The setting is made.

\* Surround sound settings do not apply to Internet content.

#### When playing via the “HDMI1,” “HDMI2,” or “TV” function

##### 1 Press **OPTIONS**.

The option menu appears in the front panel display.

##### 2 Press **↑/↓** repeatedly until “SUR. SET” appears in the front panel display, then press **⊕** or **→**.

##### 3 Press **↑/↓** repeatedly until the surround setting you want appears in the front panel display.

See the table below for surround sound setting descriptions.

##### 4 Press **⊕**.

The setting is made.

##### 5 Press **OPTIONS**.

The option menu in the front panel display turns off.

## About speaker output

The default setting is [Auto] (“AUTO”).

Surround setting	Effect
[Auto] “AUTO”	The system outputs the sound with suitable effect automatically depending on the source. <ul style="list-style-type: none"><li>• 2 channel source: Outputs 2 channel sound as it is.</li><li>• Multi-channel source: Simulates 7.1 or 5.1 surround sound with two front speakers and a subwoofer.</li></ul>
[2ch Stereo] “2CH ST.”	The system outputs 2 channel sound regardless of sound format or number of channels. Multi-channel surround formats are downmixed to 2 channels.

### Note

- Depending on the input stream, the surround settings may not be effective.
- When you play a Super Audio CD, surround settings are not activated.


### Tip

- You can also select the surround setting in [Surround Setting] of [Audio Settings] (page 63).

## Playing a Disc

For playable discs, see “Playable Discs” (page 75).

- 1 Switch the input selector on your TV so that the signal from the system appears on your TV screen.
- 2 Load a disc.

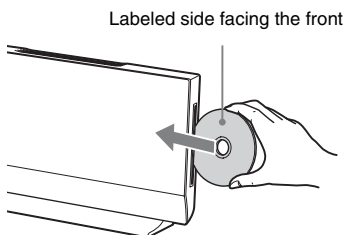

● appears on the home menu and playback starts.

If playback does not start automatically, select ● in the [Video], [Music], or [Photo] category, and press ⊕.

**Note**

- Do not load a disc while the main unit is in standby mode.
- Do not load a disc while the illumination LED is flashing just after you turn on the main unit.
- Insert the disc straight into the disc slot.

## Enjoying BONUSVIEW/BD-LIVE

Some BD-ROMs with “BD-LIVE Logo\*” have bonus content and other data that can be downloaded for enjoyment.


\* BD-LIVE™

- 1 Connect the USB device to the USB port on the rear of the main unit.

For using BONUSVIEW only, skip to Step 3.

For local storage, use a 1 GB or larger USB memory.

Rear panel

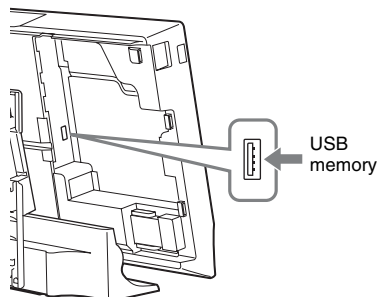

- 2 Prepare for BD-LIVE (BD-LIVE only).

- Connect the system to a network (page 23).
- Set [BD Internet Connection] to [Allow] (page 63).

- 3 Insert a BD-ROM with BONUSVIEW/BD-LIVE.

The operation method differs depending on the disc. Refer to the operating instructions of the disc.

**Tip**

- To delete data in the USB memory, select [Erase BD Data] in [Video], and press ⊕. All data stored in the buda folder will be deleted.

## Enjoying Blu-ray 3D

You can enjoy Blu-ray 3D Discs with the 3D logo\*.



- 1 Prepare for Blu-ray 3D Disc playback.

- Connect the system to your 3D-compatible TV using a High Speed HDMI cable (not supplied).
- Set [3D Output Setting] and [TV Screen Size Setting for 3D] in [Screen Settings] (page 61).

## 2 Insert a Blu-ray 3D Disc.

The operation method differs depending on the disc. Refer to the operating instructions supplied with the disc.

### Tip


- Refer also to the operating instructions of your 3D-compatible TV.

## Displaying the play information

You can check the playback information, etc., by pressing DISPLAY.

The displayed information differs depending on the disc type and system status.

Example: when playing a BD-ROM

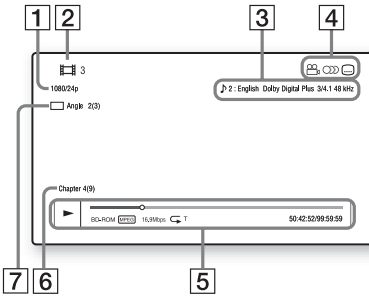

- 1 Output resolution/Video frequency
- 2 Title number or name
- 3 The currently selected audio setting
- 4 Available functions (Angle, Audio, Subtitle)
- 5 Playback information  
Displays play mode, playing status bar, disc type, video codec, bit rate, repeat type, elapsed time, total playing time
- 6 Chapter number
- 7 The currently selected angle

## Playing from a USB Device


You can play video/music/photo files on the connected USB device.

For playable types of files, see “Playable Types of Files” (page 76).

### 1 Connect the USB device to the (USB) port on the main unit.

Refer to the operating instructions of the USB device before connecting.

Rear panel/left side of the main unit

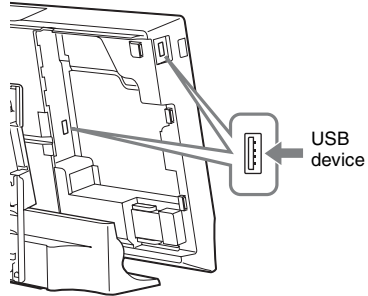

### 2 Press HOME.

The home menu appears on the TV screen.

### 3 Press ←/→ to select [Video], [Music], or [Photo].

### 4 Press ↑/↓ to select [USB device (rear)] or [USB device (left)], then press +.

#### Note

- Do not remove the USB device during operation. To avoid data corruption or damage to the USB device, turn the system off when connecting or removing the USB device.

# Enjoying an iPod/iPhone


You can enjoy the music/video/photo and charge the battery of an iPod/iPhone via the system.

## Compatible iPod/iPhone models


The compatible iPod/iPhone models are as follows. Update your iPod/iPhone with the latest software before using with the system.

Made for iPod touch 4th generation, iPod touch 3rd generation, iPod touch 2nd generation, iPod touch 1st generation, iPod nano 6th generation, iPod nano 5th generation (video camera), iPod nano 4th generation (video), iPod nano 3rd generation (video), iPod nano 2nd generation (aluminum), iPod nano 1st generation, iPod classic, iPhone 4, iPhone 3GS, iPhone 3G, iPhone

## To enjoy an iPod/iPhone via the system



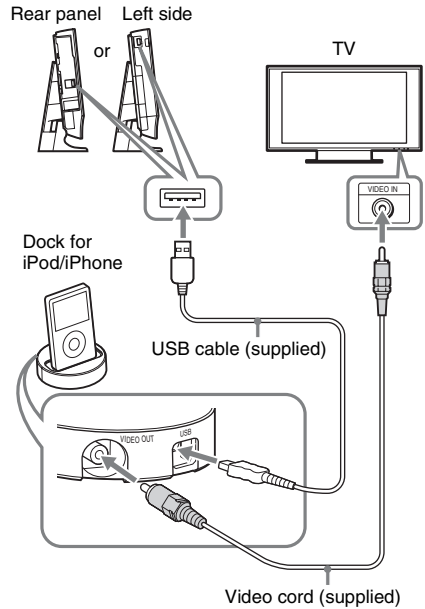


- 1** Connect the Dock for iPod/iPhone (supplied) to the rear or left  (USB) port on the main unit, then place the iPod/iPhone onto the Dock for iPod/iPhone.





 
When you play a video/photo file, connect the video out jack of the Dock for iPod/iPhone to the video input jack of your TV with a video cord (supplied) before placing the iPod/iPhone onto the Dock for iPod/iPhone.



- 2** Press HOME.

The home menu appears on the TV screen.

- 3** Press  or  to select  [Video],  [Music], or  [Photo].

- 4** Press  or  to select  [iPod (rear)] or  [iPod (left)], then press .

■ If you selected [Video] or [Music] in Step 3

The video/music files are listed on the TV screen. Go to the next Step.

■ If you selected [Photo] in Step 3

[Please change the TV input to the video input...] appears on the TV screen. Switch the input selector on your TV so that the signal from the iPod/iPhone appears on your TV screen. Then, start the slideshow by operating the iPod/iPhone directly.

- 5** Press  or  and  to select the file that you want to play.

The sound from the iPod/iPhone is played on the system.

When you play a video file, switch the input selector on your TV so that the signal from the iPod/iPhone appears on your TV screen.

You can operate the iPod/iPhone using the buttons on the remote.

For operation details of the iPod/iPhone, also refer to the operating instructions of the iPod/iPhone.








**Note**

- To change a system setting, such as the surround setting, while viewing images from your iPod/iPhone on your TV, select the input on your TV for this system before operating the system.









 
## To operate the iPod/iPhone using the remote

You can operate the iPod/iPhone using the buttons on the remote. The following table shows an example of buttons that can be used. (Depending on the iPod/iPhone model, operation may be different.)



### For [Video] / [Music]

Press	Operation
	Starts play.
	Pauses play.
	Stops play.
 or 	Fast reverses or forwards.
 or 	Goes to the previous/next file or chapter (if any).

### For [Photo]

Press	Operation
	Starts/pauses play. When you press and hold either of these buttons for several seconds, the connected iPod/iPhone enters sleep mode.
	Pauses play.
 or 	Fast reverses or forwards.
 or 	Goes to the previous/next file. When you press and hold either of these buttons, the connected iPod/iPhone fast reverses or fast forwards.
DISPLAY	Turns the backlight on (or extends it for 30 seconds).
OPTIONS, 	Returns to previous display/folder hierarchy.
	Selects the previous/next item.
	Enters the selected item.

**Note**

- The iPod/iPhone is charged when connected to the system while the system is turned on.
- When [Auto Standby] is set to [On], the system may turn off automatically while you are using an iPod/iPhone.
- You cannot transfer songs onto the iPod/iPhone from this system.
- Sony cannot accept responsibility in the event that data recorded to iPod/iPhone is lost or damaged when using an iPod/iPhone connected to this main unit.
- This product has been designed specifically to work with iPod/iPhone and has been certified to meet Apple performance standards.
- Do not remove the iPod/iPhone during operation. To avoid data corruption or damage to the iPod/iPhone, turn the system off when connecting or removing the iPod/iPhone.
- The system only recognizes iPods/iPhones that have previously been connected to the system.
- The System Audio Control function does not work while playing video/photo files via the iPod/iPhone.
- When you connect an iPod that is not compatible with the video output function and select  [iPod (rear)] or  [iPod (left)] in [Video] or [Photo], an alert message appears on the TV screen.
- The system can recognize up to 3,000 files (including folders).

# Playing via a Network

## Streaming BRAVIA Internet Video

BRAVIA Internet Video serves as a gateway delivering selected Internet content and a variety of on-demand entertainment straight to your main unit.

### Tip

- Some Internet content requires registration via a PC before it can be played.

### 1 Prepare for BRAVIA Internet Video.

Connect the system to a network (page 23).


### 2 Press $\leftarrow/\rightarrow$ to select $\text{[Video]}$ , $\text{[Music]}$ , or $\text{[Photo]}$ .

### 3 Press $\uparrow/\downarrow$ to select an Internet content provider icon, then press $\oplus$ .

If the Internet content list has not been retrieved, it will be represented by an unacquired icon or a new icon.

## To use the control panel

The control panel appears when the video file starts playing. The displayed items may differ depending on Internet content providers. To display again, press DISPLAY.

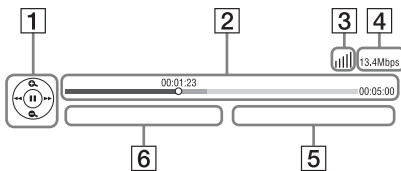

- 1** Control display  
Press  $\leftarrow/\uparrow/\downarrow/\rightarrow$  or  $\oplus$  for playback operations.
- 2** Playing status bar  
Status bar, cursor indicating the current position, playing time, duration of the video file
- 3** Network condition indicator  
 Indicates signal strength for a wireless connection.  
 Indicates a wired connection.


- 4** Network transmission speed
- 5** The next video file name
- 6** The currently selected video file name

## Playing files on a Home Network (DLNA)

You can play video/music/photo files on other DLNA-certified components by connecting them to your home network.

This main unit can be used as a player and renderer.

- Server: Stores and sends files
- Player: Receives and plays files from the server
- Renderer: Receives and plays files from the server, and can be operated by another component (controller)
- Controller: Operates the renderer component

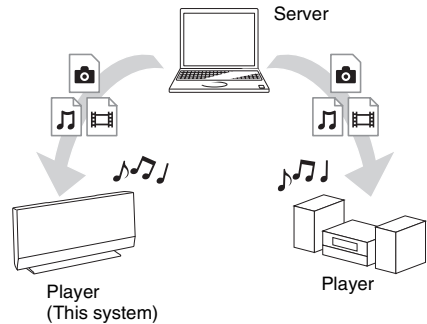




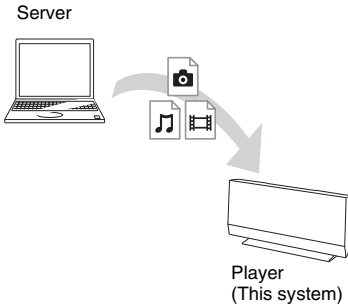
### Prepare for using the DLNA function.

- Connect the system to a network (page 23).
- Prepare other DLNA-certified components. For details, see the operating instructions of the components.




## To play files stored on a DLNA server via the system (DLNA Player)

Select the DLNA server icon from  [Video],  [Music], or  [Photo] in the home menu, then select the file that you want to play.



## To play remote files by operating the system (Renderer) via a DLNA controller

You can operate the system with a DLNA-certified controller, such as iPhone, when playing files stored on a DLNA server.

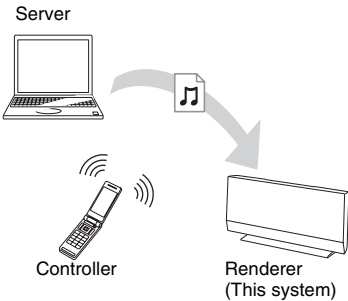

Control this system using a DLNA controller. For details of operation, see the operating instructions of the DLNA controller.

### Note

- Do not operate the system with the supplied remote and a DLNA controller at the same time.
- For details about the DLNA controller, refer to the operating instructions of the DLNA controller.

### Tip

- The system is compatible with the “Play To” function of Windows Media® Player 12 that comes standard with Windows 7.


## Playing the same music in different rooms (PARTY STREAMING)

You can play the same music at the same time across all Sony components which are compatible with the PARTY STREAMING function and connected to your home network.

There are two kinds of PARTY STREAMING-compatible components.

- PARTY host: Sends and plays files
- PARTY guest: Receives and plays files


This main unit can be used as a PARTY host or PARTY guest.

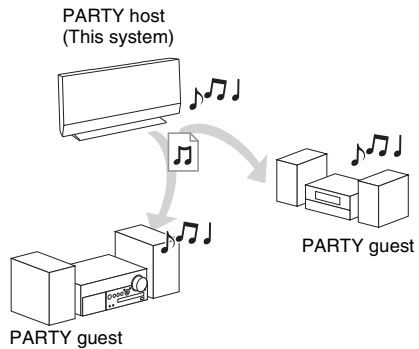

### Prepare for PARTY STREAMING.

- Connect the system to a network (page 23).
- Connect components which are compatible with the PARTY STREAMING function.

### To use the system as PARTY host

Select a track in  [Music], then select [Start Party] from the options menu to start a PARTY. To close the PARTY, press HOME.

### To use the system as PARTY guest

Select  [Party] in  [Music], then select the PARTY host device icon.

To leave the PARTY, press OPTIONS, then select [Leave Party].

To close the PARTY, press OPTIONS, then select [Close Party].

**Note**

- The sale and product lineup of products that are compatible with the PARTY STREAMING function differ depending on the area.

## Searching for video/music information


You can acquire content information using Gracenote technology and search for related information.

- 1 Connect the system to a network (page 23).**
- 2 Insert a disc or connect a USB device with content about which you want to search.**

You can perform a video search from a BD-ROM or DVD-ROM, and a music search from a CD-DA (music CD) or USB device.

- 3 Press </> to select [Video] or [Music].**
- 4 Press ↑/↓ to select [Video Search] or [Music Search].**

The content information is displayed.

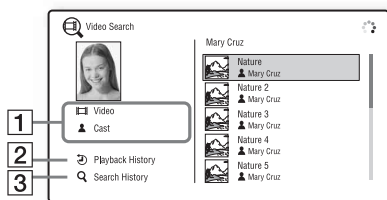

- 1 Content details**  
Displays a list of related information, such as title, cast, track, or artist.
- 2 [Playback History]**  
Displays a list of previously played BD-ROM/DVD-ROM/CD-DA (music CD) titles. Select a title to acquire content information.
- 3 [Search History]**  
Displays a list of previous searches performed via the [Video Search] or [Music Search] function.

## To search for further related information

Select an item in the lists, and then select the service for searching.

## Available Options

Various settings and playback operations are available by pressing OPTIONS. The available items differ depending on the situation.

### Common options

Items	Details
[Surround Setting]	Changes the surround setting (page 34).
[Repeat Setting]	Sets repeat playback.
[3D Menu]	[3D Depth Adjustment]: Adjusts the depth of 3D images.
[Favourites List]	Displays the Favorites List.
[Play/Stop]	Starts or stops playback.
[Play from start]	Plays the item from the beginning.
[Add to Favourites]	Adds an Internet content item to the Favorites List.
[Remove from Favourites]	Erases an Internet content item from the Favorites List.
[Start Party]	Starts a party with the selected source. This item may not appear depending on the source.
[Leave Party]	Leaves from a party which the system is participating in. The PARTY STREAMING function continues among other participating devices.
[Close Party]	Closes a party which the system is participating in. The PARTY STREAMING function ends for all other participating devices.

## [Video] only

Items	Details
[A/V SYNC]	Adjusts the gap between picture and sound. For details, see “Adjusting the delay between the picture and sound” (page 44).
[3D Output Setting]	Sets whether or not to output 3D video automatically. <b>Note</b> <ul style="list-style-type: none"><li>• 3D video from the HDMI IN 1 or HDMI IN 2 jack is output regardless of this setting.</li></ul>
[Video Settings]	<ul style="list-style-type: none"><li>• [Picture Quality Mode]: Selects the picture settings for different lighting environments.</li><li>• [FNR]: Reduces the random noise appearing in the picture.</li><li>• [BNR]: Reduces the mosaic-like block noise in the picture.</li><li>• [MNR]: Reduces minor noise around the picture outlines (mosquito noise).</li></ul>
[Pause]	Pauses playback.
[Top Menu]	Displays the BD’s or DVD’s Top Menu.
[Menu/Popup Menu]	Displays the BD-ROM’s Pop-up Menu or DVD’s menu.
[Title Search]	Searches for a title on BD-ROMs/DVD VIDEOS and starts playback from the beginning.
[Chapter Search]	Searches for a chapter and starts playback from the beginning.
[Angle]	Switches to other viewing angles when multi-angles are recorded on BD-ROMs/DVD VIDEOS.
[IP Content Noise Reduction]	Adjusts the video quality for Internet content.
[Video Search]	Displays information on the BD-ROM/DVD-ROM based on Gracenote technology.

## [Music] only

Items	Details
[Add Slideshow BGM]	Registers music files in the USB memory as slideshow background music (BGM).
[Music Search]	Displays information on the audio CD (CD-DA) based on Gracenote technology.
[Shuffle Setting] (iPod/iPhone only)	Sets shuffle playback.

## [Photo] only

Items	Details
[Slideshow]	Starts a slideshow.
[Slideshow Speed]	Changes the slideshow speed.
[Slideshow Effect]	Sets the effect when playing a slideshow.
[Slideshow BGM]	<ul style="list-style-type: none"><li>• [Off]: Turns off the function.</li><li>• [My Music from USB]: Sets the music files registered in [Add Slideshow BGM].</li><li>• [Play from Music CD]: Sets the tracks on CD-DAs (music CDs).</li></ul>
[Rotate Left]	Rotates the photo counterclockwise by 90 degrees.
[Rotate Right]	Rotates the photo clockwise by 90 degrees.
[View Image]	Displays the selected picture.

## Adjusting the delay between the picture and sound

### (A/V SYNC)

When the sound does not match the pictures on the TV screen, you can adjust the delay between the picture and sound.

The setting method differs depending on the function.

#### Note

- Depending on the input stream, A/V SYNC may not be effective.

### When playing via the “BD/DVD” function


- 1 Press OPTIONS.**  
The option menu appears on the TV screen.
- 2 Press  $\uparrow/\downarrow$  to select [A/V SYNC], then press  $\oplus$ .**
- 3 Press  $\leftarrow/\rightarrow$  to adjust the delay between the picture and sound.**  
You can adjust from 0 ms to 300 ms in 25 ms increments.
- 4 Press  $\oplus$ .**  
The setting is made.

### When playing via the “HDMI1,” “HDMI2,” or “TV” function

- 1 Press OPTIONS.**  
The option menu appears in the front panel display.
- 2 Press  $\uparrow/\downarrow$  repeatedly until “A/V SYNC” appears in the front panel display, then press  $\oplus$  or  $\rightarrow$ .**
- 3 Press  $\uparrow/\downarrow$  to adjust the delay between the picture and sound.**  
You can adjust from 0 ms to 300 ms in 25 ms increments.
- 4 Press  $\oplus$ .**  
The setting is made.
- 5 Press OPTIONS.**  
The option menu in the front panel display turns off.

## Selecting the Effect to Suit the Source

You can select a suitable sound mode for movies or music.

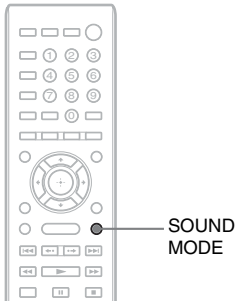

**Press SOUND MODE repeatedly during playback until the desired mode appears in the front panel display.**

- **“AUTO”**: The system selects “MOVIE” or “MUSIC” automatically to produce the sound effect depending on the disc or sound stream.
- **“MOVIE”**: The system provides the sound for movies.
- **“MUSIC”**: The system provides the sound for music.
- **“SPORTS”**: The system adds reverberation for sports programs.
- **“GAME ROCK”**: The system provides the sound for music/rhythm games.


**Note**

- Depending on the disc or source, when you select “AUTO,” the beginning of the sound may be cut off as the system selects the optimum mode automatically. To avoid cutting the sound, select other than “AUTO.”
- Depending on the input stream, the sound mode may not be effective.
- When you play a Super Audio CD, this function does not work.

## Selecting the Audio Format, Multilingual Tracks, or Channel

When the system is playing a BD/DVD VIDEO recorded in multiple audio formats (PCM, Dolby Digital, MPEG audio, or DTS) or multilingual tracks, you can change the audio format or language.

With a CD, you can select the sound from the right or left channel and listen to the sound of the selected channel through both the right and left speakers.

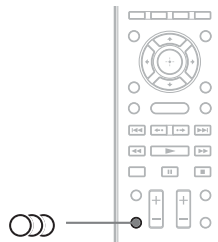

**Press <img alt="audio channel icon" style="vertical-align: middle;"/> repeatedly during playback to select the desired audio signal.**

The audio information appears on the TV screen.

### ■ BD/DVD VIDEO

Depending on the BD/DVD VIDEO, the choice of language varies.

When 4 digits are displayed, they indicate a language code. See “Language Code List” (page 80) to confirm which language the code represents. When the same language is displayed two or more times, the BD/DVD VIDEO is recorded in multiple audio formats.

### ■ DVD-VR

The types of sound tracks recorded on a disc are displayed.

Example:

- [♪ Stereo]
- [♪ Stereo (Audio1)]
- [♪ Stereo (Audio2)]
- [♪ Main]
- [♪ Sub]
- [♪ Main/Sub]

**Note**

- [♪ Stereo (Audio1)] and [♪ Stereo (Audio2)] do not appear when only one audio stream is recorded on the disc.

**■ CD**

- [♪ Stereo]: The standard stereo sound.
- [♪ 1/L]: The sound of the left channel (monaural).
- [♪ 2/R]: The sound of the right channel (monaural).
- [♪ L+R]: The sound of both the left and right channels output from each individual speaker.

---


## Enjoying Multiplex Broadcast Sound


### *(DUAL MONO)*

You can enjoy multiplex broadcast sound when the system receives or plays a Dolby Digital multiplex broadcast signal.

**Note**

- To receive the Dolby Digital signal, you need to connect a TV or other component to the main unit with a digital optical cord (page 19). If your TV is compatible with the Audio Return Channel function (pages 20, 65), you can receive a Dolby Digital signal via a High Speed HDMI cable.


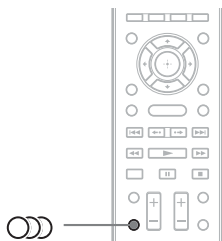


Press  repeatedly until the desired signal appears in the front panel display.

- “MAIN”: Sound of the main language will be output.
- “SUB”: Sound of the sub language will be output.
- “MAIN/SUB”: Mixed sound of both the main and sub languages will be output.

# Listening to the Radio

You can enjoy radio sound with the system's speakers.

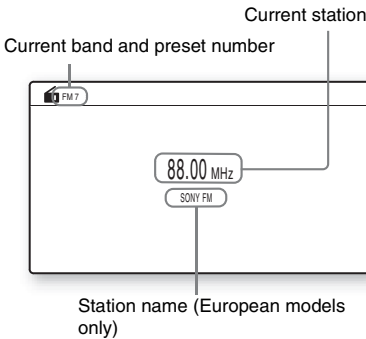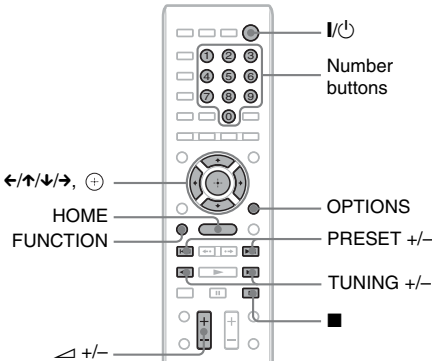

- 1 Press **FUNCTION** repeatedly until "FM" appears in the front panel display.
- 2 Select the radio station.

## Automatic tuning

Press and hold **TUNING +/-** until the auto scanning starts.

[Auto Tuning] appears on the TV screen. Scanning stops when the system tunes in a station.

To stop the automatic tuning manually, press **TUNING +/-** or ■.

## Manual tuning

Press **TUNING +/-** repeatedly.

- 3 Adjust the volume by pressing **+/-**.

## If an FM program is noisy

If an FM program is noisy, you can select monaural reception. There will be no stereo effect, but reception will improve.

- 1 Press **OPTIONS**.  
The option menu appears on the TV screen.
- 2 Press **↑/↓** to select [FM Mode], then press **+**.
- 3 Press **↑/↓** to select [Monaural].
  - [Stereo]: Stereo reception.
  - [Monaural]: Monaural reception.
- 4 Press **+**.  
The setting is made.

## To turn off the radio

Press **I/Power**.

## Presetting radio stations

You can preset up to 20 stations. Before tuning, make sure to turn down the volume to minimum.

- 1 Press **FUNCTION** repeatedly until "FM" appears in the front panel display.
- 2 Press and hold **TUNING +/-** until the auto scanning starts.  
Scanning stops when the system tunes in a station.
- 3 Press **OPTIONS**.  
The option menu appears on the TV screen.
- 4 Press **↑/↓** to select [Preset Memory], then press **+**.
- 5 Press **↑/↓** to select the preset number you want, then press **+**.
- 6 Repeat Steps 2 to 5 to store other stations.

## To change the preset number

Select the desired preset number by pressing PRESET +/-, then perform the procedure from Step 3.

### Selecting the preset station

#### 1 Press FUNCTION repeatedly until "FM" appears in the front panel display.

The last received station is tuned in.

#### 2 Press PRESET +/- repeatedly to select the preset station.

The preset number and frequency appear on the TV screen and front panel display.

Each time you press the button, the system tunes in one preset station.

##### Tip

- You can select the preset station number directly by pressing the number buttons.

- \* If an RDS broadcast is not received, the station name may not appear in the front panel display.

##### Note

- RDS may not work properly if the station you are tuned to is not transmitting the RDS signal properly, or if the signal strength is weak.
- Not all FM stations provide RDS service, nor do they provide the same type of services. If you are not familiar with the RDS system, check with your local radio stations for details on RDS services in your area.

##### Tip

- While receiving an RDS broadcast, each time you press DISPLAY, the display in the front panel display changes as follows:  
Station name → Frequency → Preset number → Stream information → Station name → ...

---

## Using the Radio Data System (RDS)

*(European models only)*

### What is the Radio Data System?

The Radio Data System (RDS) is a broadcasting service that allows radio stations to send additional information along with the regular program signal. This tuner offers convenient RDS features, such as station name display. The station name appears on the TV screen as well.

### Receiving RDS broadcasts

**Simply select a station from the FM band.**

When you tune in a station that provides RDS services, the station name\* appears in the front panel display.



# Using the Control for HDMI Function for “BRAVIA” Sync

This function is available on TVs with the “BRAVIA” Sync function.

By connecting Sony components that are compatible with the Control for HDMI function via a High Speed HDMI cable, operation is simplified.

### Note

- Some functions can only be used if the connected TV is compatible, and require prior setting via the TV. Refer to the operating instructions of the TV.
- To use the System Audio Control function, you need to make an audio connection between the system and TV (page 19).
- To use the Position Control function, your TV must have a sensor that can detect the listening position. In this case, the sound level and/or picture quality of all the components connected to the TV are also adjusted according to the signal from your TV.

## Using “BRAVIA” Sync

### Control for HDMI - Easy Setting

You can set the system’s [Control for HDMI] function automatically by enabling the corresponding setting on the TV.

For details about the Control for HDMI function, see “[HDMI Settings]” (page 65)

### System Power Off

You can turn the system off in sync with the TV.

### Note

- The system does not turn off automatically while playing music or when set to the “FM” function.

### One-Touch Play

When you press **▶** on the remote, the system and your TV turn on, and your TV’s input is set to the HDMI input to which the system is connected.

## System Audio Control

You can simplify operation to enjoy sound from the TV or other components.

You can use the System Audio Control function as follows:

- When the system is turned on, the sound of the TV or other components can be output from the speakers of the system.
- When sound from the TV or other components is output via the speakers of the system, you can change the speakers to which TV sound is output by pressing **SPEAKERS TV ↔ AUDIO**.
- When sound from the TV or other components is output via the speakers of the system, you can adjust the volume and turn off the sound of the system by operating the TV.

### Note

- While the TV is in PAP (picture and picture) mode, or the system is playing video/photo files from the iPod/iPhone, the System Audio Control function will not work.
- Depending on the TV, when you adjust the main unit’s volume, the volume level appears on the TV screen. In this case, the volume level that appears on the TV screen and the main unit’s front panel display may differ.

## Audio Return Channel

You can enjoy TV sound via the system by using just one High Speed HDMI cable. For details of the setting, see “Connecting the TV” (page 19).

## Remote Easy Control

You can control the basic functions of the system via the TV remote when the system’s video output is displayed on the TV screen.

## Language Follow

When you change the language for the on-screen display of the TV, the system’s on-screen display language is also changed after turning the system off and on.

## Routing Control

When you perform One-Touch Play on the connected component, the system turns on and sets the system's function to "HDMI1" or "HDMI2" (depending on the HDMI input jack in use), and your TV's input is automatically set to the HDMI input to which the system is connected.

### Note

- Make sure that the component is connected to the system via a High Speed HDMI cable, and the Control for HDMI function of the connected component is set to on.


## Position Control

This system adjusts the sound level of the right and left front speakers automatically if your TV is compatible with the External Device Control of Position Control function. In this case, other components connected to the TV are also adjusted. For details, refer to the operating instructions of your TV.

# Setting the Speakers

## [Speaker Settings]

To obtain the best possible surround sound, set connection of the speakers and their distance from your listening position. Then use the test tone to adjust the level and the balance of the speakers to the same level.


- 1 Press HOME.**  
The home menu appears on the TV screen.
- 2 Press  $\leftarrow/\rightarrow$  to select  [Setup].**
- 3 Press  $\uparrow/\downarrow$  to select [Audio Settings], then press  $\oplus$ .**
- 4 Press  $\uparrow/\downarrow$  to select [Speaker Settings], then press  $\oplus$ .**  
The [Speaker Settings] display appears.
- 5 Press  $\uparrow/\downarrow$  to select the item, then press  $\oplus$ .**  
Check the following settings.

## ■ [Distance]

When you move the speakers, be sure to set the parameters of the distance (A) from the listening position to the speakers. You can set the parameters from 0.0 to 7.0 meters.

The speakers in the illustration correspond to the following:

- ① Front left speaker (L)
- ② Front right speaker (R)
- ③ Subwoofer

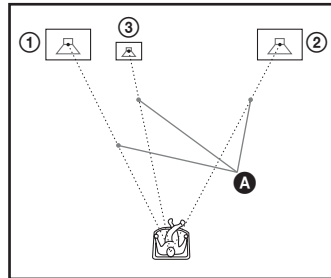

[Front Left/Right] 3.0 m: Set the front speaker distance.

[Subwoofer] 3.0 m: Set the subwoofer distance.

### Note

- Depending on the input stream, [Distance] may not be effective.

## ■ [Level]

You can adjust the sound level of the speakers. You can set the parameters from -6.0 dB to +6.0 dB. Be sure to set [Test Tone] to [On] for easy adjustment.

[Front Left/Right] 0.0 dB: Set the front speaker level.

[Subwoofer] 0.0 dB: Set the subwoofer level.

## ■ [Test Tone]

The speakers will emit a test tone to adjust [Level].

[Off]: The test tone is not emitted from the speakers.

[On]: The test tone is emitted from each speaker in sequence while adjusting level. When you select one of the [Speaker Settings] items, the

test tone is emitted from each speaker in sequence.

Adjust the sound level as follows.

- 1** Set [Test Tone] to [On].
- 2** Press  $\uparrow/\downarrow$  to select [Level], then press  $\oplus$ .
- 3** Press  $\uparrow/\downarrow$  to select the desired speaker type, then press  $\oplus$ .
- 4** Press  $\leftarrow/\rightarrow$  to select the left or right speaker, then press  $\uparrow/\downarrow$  to adjust the level.
- 5** Press  $\oplus$ .
- 6** Repeat Steps 3 to 5.
- 7** Press RETURN.  
The system returns to the previous display.
- 8** Press  $\uparrow/\downarrow$  to select [Test Tone], then press  $\oplus$ .
- 9** Press  $\uparrow/\downarrow$  to select [Off], then press  $\oplus$ .

**Note**

- The test tone signals are not output from the HDMI OUT jack.

**Tip**

- To adjust the volume of all the speakers at one time, press  $\triangleleft$  +/-.

## Using the Sleep Timer

You can set the system to turn off at a preset time, so you can fall asleep listening to music. The time can be preset in intervals of 10 minutes.

### Press SLEEP.

Each time you press SLEEP, the minutes display (the remaining time) in the front panel display changes by 10 minutes.

When you set the sleep timer, the remaining time appears every 5 minutes.

When the remaining time is less than 2 minutes, "SLEEP" flashes in the front panel display.

### To check the remaining time

Press SLEEP once.

### To change the remaining time

Press SLEEP repeatedly to select the desired time.

## Deactivating the Buttons on the Main Unit

### (Child Lock)

You can deactivate the buttons on the main unit (except for  $\mathbb{I}/\text{⏻}$ ) for preventing misoperation, such as child mischief (child lock function).

### Press $\blacksquare$ on the main unit for more than 5 seconds.

"LOCKED" appears in the front panel display. The child lock function is activated and the buttons on the main unit are locked. (You can operate the system by using the remote.)

To cancel, press  $\blacksquare$  for more than 5 seconds so that "UNLOCK" appears in the front panel display.

**Note**

- When you operate the buttons on the main unit while the child lock function is on, "LOCKED" flashes in the front panel display.

# Controlling Your TV or Other Components with the Supplied Remote

You can control your TV and other components such as a cable box or digital satellite receiver with the supplied remote. The remote is initially set to control Sony components.

You can control non-Sony components by changing the preset code of the remote. For operation, see “Changing the preset code of the remote (Preset mode)” (page 52).

## Note

- When you replace the batteries of the remote, the remote setting may be reset to the default (SONY) setting.

## Controlling your components with the supplied remote

- 1 Press the TV or STB operation mode button that matches the component you want to control.
- 2 Press the appropriated buttons listed in the following table.
  - ●: The button can be used with the default setting of the remote.
  - ○: The button can be used when you change the preset code of the remote.

Button	Remote's mode	
	TV	STB
AV I/⏻	●	●
Number buttons	●	●
	●	●
ENTER (-/-)	●	○
	●	○
	●	●
SLEEP (⏻/⏻)	●	●
Color buttons (red/green/yellow/blue)	●	●

Button	Remote's mode	
	TV	STB
TOP MENU	●	●
	●	●
POP UP/MENU	○	○
←/↑/↓/→, ⊕	●	●
RETURN	●	●
HOME (MENU)	●	●
OPTIONS (TOOLS)	●	○
SOUND MODE	●	○
	●	○
←•/•→	●	○
	●	○
	●	○
	●	○
■	●	○
	●	●
△ +/-	●	●
PROG +/-	●	●
DISPLAY	●	●

## Note

- In TV or STB mode, if you press any of the buttons above, the TV or STB operation mode button lights up. (However, depending on the code setting, some buttons may not work, and the TV or STB operation mode button may not light up.)
- If you press other than the buttons above when the remote is in TV or STB mode, the TV or STB operation mode button does not light up.
- Depending on the TV or component, you may not be able to use some of the buttons.

## Changing the preset code of the remote (Preset mode)

- 1 Press HOME.  
The home menu appears on the TV screen.
- 2 Press ←/→ to select [Setup].
- 3 Press ↑/↓ to select [Remote Controller Setting Guide], then press ⊕.

- 4** Press **↑/↓** to select [Preset Mode], then press **+**.
- 5** Press **↑/↓** to select the component type that you want to operate with the supplied remote, then press **+**.
- 6** Press **↑/↓** to select the device's manufacturer, then press **+**.
- 7** Press **POP UP/MENU** while pressing the operation mode button **TV** (for a TV) or **STB** (for a cable box, digital satellite receiver, digital video recorder, etc.).
- 8** When the TV or STB operation mode button starts flashing, enter the code on the TV screen using the number buttons, then press **ENTER**.

The remote enters Preset mode. The TV or STB operation mode button (whichever button you pressed) starts flashing.

If you successfully set the code, the TV or STB operation mode button will flash twice slowly. If the setting is unsuccessful, the TV or STB operation mode button will flash five times quickly.

#### Note

- You can quit Preset mode by pressing the TV or STB operation mode button (whichever button is flashing).
- If you do not operate the remote for more than 10 seconds during presetting mode, the remote exits from presetting mode.

## Clearing the preset code from the remote's memory

- 1** Press and hold **AV II/⏏** first, then press **←**, then press **CH ←**.  
The BD, TV, and STB operation buttons light up.
- 2** Release all buttons.  
The BD, TV, and STB operation mode buttons turn off and the preset code is cleared. The remote returns to its default settings.

## Saving Power in Standby Mode

Check that the following settings are both made:

- [Control for HDMI] in [HDMI Settings] is set to [Off] (page 65).
- [Quick Start Mode] is set to [Off] (page 65).

## Browsing Websites

You can connect to the Internet and enjoy websites like the Sony homepage using the system.

- 1** Prepare for Internet browsing.  
Connect the system to a network (page 23).
- 2** Press **HOME**.  
The home menu appears on the TV screen.
- 3** Press **←/→** to select **🌐 [Network]**.
- 4** Press **↑/↓** to select **[Internet Browser]**, then press **+**.  
The [Internet Browser] display appears.

#### Note

- Some websites may not display correctly, or not function.

### To enter a URL

Select [URL entry] from the options menu. Enter the URL using the software keyboard, then select [Enter].

### To set the default start page

While the page you want to set is displayed, select [Set as start page] from the options menu.

### To return to the previous page


Select [Previous page] from the options menu. If the previous page does not appear even if you select [Previous page], select [Window List] from the options menu and select the page you want to return to from the list.

### To quit Internet Browser

Press **HOME**.

## Internet Browser display

You can check website information by pressing DISPLAY. The display information differs depending on the website and page status.

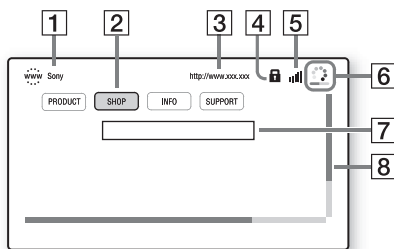

- 1 Page title
- 2 Cursor  
Move by pressing  $\leftarrow/\uparrow/\downarrow/\rightarrow$ . Place the cursor on the link you want to view, then press  $\odot$ . The linked website is displayed.
- 3 Page address
- 4 SSL icon  
Appears when the linked URL is secured.
- 5 Signal strength indicator  
Appears when the system is connected to a wireless network.
- 6 Progress bar/Loading icon  
Appears when the page is being read, or during file download/transfer.
- 7 Text input field  
Press  $\odot$ , then choose [Input] from the options menu to open the software keyboard.
- 8 Scroll bar  
Press  $\leftarrow/\uparrow/\downarrow/\rightarrow$  to move the page display left, up, down, or right.

## Available options

Various settings and operations are available by pressing OPTIONS. The available items differ depending on the situation.

Items	Details
[Browser Setup]	Displays the Internet Browser settings. <ul style="list-style-type: none"> <li>• [Zoom]: Increases or decreases the size of the displayed contents.</li> <li>• [JavaScript Setup]: Sets whether to enable or disable JavaScript.</li> <li>• [Cookie Setup]: Sets whether or not to accept browser cookies.</li> <li>• [SSL Alarm Display]: Sets whether to enable or disable SSL.</li> </ul>
[Input]	Displays the software keyboard to enter characters while browsing a website.
[Break]	Moves the cursor to the next line in the text input field.
[Delete]	Erases one character on the left side of the cursor during text input.
[Window List]	Displays a list of all currently opened websites. Allows you to return to a previously displayed website by selecting the window.
[Bookmark List]	Displays the bookmark list.
[Character encoding]	Sets the character code.
[Previous page]	Moves to a previously displayed page.
[Next page]	Moves to the previously displayed next page.
[Cancel loading]	Stops loading a page.
[Reload]	Reloads the same page.
[URL entry]	Allows you to enter a URL when the software keyboard is displayed.
[Add to Bookmark]	Adds the currently displayed website to the bookmark list.
[Set as start page]	Sets the currently displayed website as the default start page.
[Open in new window]	Opens a link in a new window.
[Display certificate]	Displays server certificates sent from pages that support SSL.


# Further Settings for the Wireless System


## Activating wireless transmission between specific units

### [Secure Link]

You can specify the wireless connection to link the main unit to the subwoofer using the Secure Link function.

This function can help prevent interference if you use multiple wireless products or your neighbors use wireless products.

- 1 Press HOME.**  
The home menu appears on the TV screen.
- 2 Press  $\leftarrow/\rightarrow$  to select  [Setup].**
- 3 Press  $\uparrow/\downarrow$  to select [System Settings], then press  $\oplus$ .**
- 4 Press  $\uparrow/\downarrow$  to select [Wireless Sound Connection], then press  $\oplus$ .**  
The [Wireless Sound Connection] display appears.

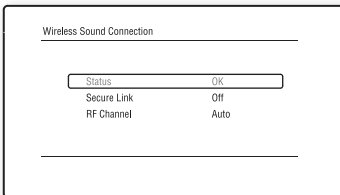

- 5 Press  $\uparrow/\downarrow$  to select [Secure Link], then press  $\oplus$ .**
- 6 Press  $\uparrow/\downarrow$  to select [On], then press  $\oplus$ .**  
To cancel the Secure Link function, select [Off].
- 7 Press SECURE LINK on the rear of the subwoofer.**  
Proceed to the next Step within a few minutes.

- 8 Press  $\leftarrow/\rightarrow$  to select [Start], then press  $\oplus$ .**  
To return to the previous display, select [Cancel].

- 9 After the message [Secure Link setting is complete.] appears, press  $\oplus$ .**  
The subwoofer is linked to the main unit and the LINK/STANDBY indicator turns orange.  
If the message [Cannot set Secure Link.] appears, follow the on-screen messages.

### To cancel the Secure Link function

#### For the main unit

Select [Off] on Step 6 above.


#### For the subwoofer

Press and hold SECURE LINK on the rear of the subwoofer until the LINK/STANDBY indicator turns green or flashes green.

## If wireless transmission is unstable

### [RF Channel]

If you use multiple wireless systems, such as a wireless LAN (Local Area Network) or Bluetooth, the wireless signals may be unstable. In this case, the transmission may be improved by changing the following [RF Channel] setting.

- 1 Press HOME.**  
The home menu appears on the TV screen.
- 2 Press  $\leftarrow/\rightarrow$  to select  [Setup].**
- 3 Press  $\uparrow/\downarrow$  to select [System Settings], then press  $\oplus$ .**
- 4 Press  $\uparrow/\downarrow$  to select [Wireless Sound Connection], then press  $\oplus$ .**  
The [Wireless Sound Connection] display appears.
- 5 Press  $\uparrow/\downarrow$  to select [RF Channel], then press  $\oplus$ .**
- 6 Press  $\uparrow/\downarrow$  to select the desired setting, then press  $\oplus$ .**

- [Auto]: Normally select this. The system automatically selects the better channel for transmission.
- [1], [2], [3]: The system transmits sound by fixing the channel for transmitting. Select the channel with the better transmission.

**Note**

- The transmission may be improved by changing the transmission channel (frequency) of the other wireless system(s). For details, refer to the operating instructions of the other wireless system(s).


## Setting up the Network

### [Internet Settings]


Before setting, connect the system to the network. For details, see “Connecting to the network” (page 23).


### To open the setting display

- 1 Press HOME.

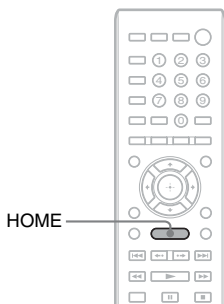


The home menu appears on the TV screen.

- 2 Press  $\leftarrow/\rightarrow$  to select  [Setup].

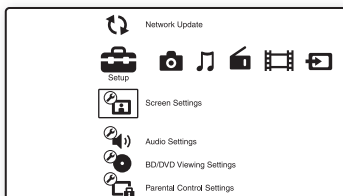


- 3 Press  $\uparrow/\downarrow$  to select [Network Settings], then press  $\oplus$ .

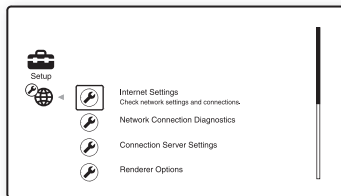


- 4 Press  $\uparrow/\downarrow$  to select [Internet Settings], then press  $\oplus$ .

The [Internet Settings] display appears.

#### For BDV-L800/BDV-L800M

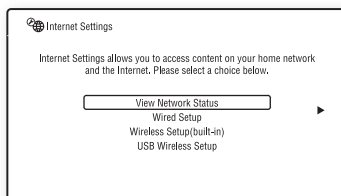

#### For BDV-L600

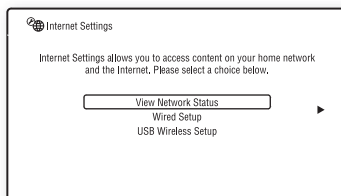

**Note**

- The [Internet Settings] items are necessary to connect to the Internet. Enter the respective (alphanumeric) values for your broadband router or Wireless LAN router. The items that need to be set may differ, depending on the Internet service provider or the router. For details, refer to the instruction manuals that have been provided by your Internet service provider or supplied with the router.
- For more information, go to the following URL.

For customers in Europe:  
<http://support.sony-europe.com>

For customers in other countries/regions:  
<http://www.sony-asia.com/support>



## When connecting to the LAN with a LAN cable

Follow the Steps below for connecting to a LAN (Local Area Network).

### Auto setting

- 1** Press **↑/↓** to select **[Wired Setup]** on the **[Internet Settings]** display, then press **⊕**.
- 2** Press **↑/↓** to select **[Auto]**, then press **⊕**.  
The system performs the network setting automatically, and internet settings appear on the TV screen.
- 3** Press **→**.
- 4** Press **↑/↓** to select **[Save & Connect]**, then press **⊕**.  
The system starts checking the network connection.
- 5** Check that the message **[Internet Settings is now complete.]** appears, then press **⊕**.  
The setup is finished. If the message does not appear, follow the on-screen messages.

### Manual setting

- 1** Press **↑/↓** to select **[Wired Setup]** on the **[Internet Settings]** display, then press **⊕**.
- 2** Press **↑/↓** to select **[Custom]**, then press **⊕**.
- 3** Press **↑/↓** to select the network setting type, then press **⊕**.
  - **[Auto]**: The system sets the IP address automatically, and the **[DNS Settings]** display appears.  
When you select **[Auto]** and press **⊕**, the system sets the DNS setting automatically.
  - When you select **[Specify IP address]** and press **⊕**, enter the DNS settings manually.  
Press **←/↑/↓/→** and the number buttons to set the following items, then press **⊕**.

- **[Primary DNS]**
- **[Secondary DNS]**
- **[Specify IP address]**: Enter the network settings manually according to your network environment.  
Press **←/↑/↓/→** and the number buttons to set the following items, then press **⊕**.
  - **[IP Address]**
  - **[Subnet Mask]**
  - **[Default Gateway]**
  - **[Primary DNS]**
  - **[Secondary DNS]**

- 4** Press **↑/↓** to select the proxy server setting, then press **⊕**.

- **[No]**: A proxy server is not used.
- **[Yes]**: Enter the proxy server setting.  
Press **←/↑/↓/→** and the number buttons, then press **⊕**.

The value of the internet settings appears on the TV screen.

- 5** Press **→**.

- 6** Press **↑/↓** to select **[Save & Connect]**, then press **⊕**.

The system starts checking the network connection.

- 7** Check that the message **[Internet Settings is now complete.]** appears, then press **⊕**.

The setup is finished. If the message does not appear, follow the on-screen messages.

## When connecting to the wireless LAN with the system's built-in Wi-Fi or the USB Wireless LAN Adapter

Follow the Steps below for connecting to a wireless LAN (Local Area Network).

## When your wireless router is compatible with the WPS function

- 1 Press **↑/↓** to select [Wireless Setup(built-in)]\* or [USB Wireless Setup] on the [Internet Settings] display, then press **⊕**.
- 2 Press **↑/↓** to select [Wi-Fi Protected Setup (WPS)], then press **⊕**.
- 3 Activate the WPS function of your wireless router, press **↑/↓** to select [Start], then press **⊕**.

\* BDV-L800/BDV-L800M only.

For details about activating the WPS function, see the operating instructions of your router.

- 4 Check that the message [Wi-Fi Protected Setup was successful.] appears, then press **→**.

Setup of wireless LAN connectivity and the IP address is finished.

Next, enter the proxy server setting. Follow Steps 4 to 7 of “Manual setting” in “When connecting to the LAN with a LAN cable” above.

## When your wireless router is not compatible with the WPS function

- 1 Press **↑/↓** to select [Wireless Setup(built-in)]\* or [USB Wireless Setup] on the [Internet Settings] display, then press **⊕**.
- 2 Press **↑/↓** to select [Scan], then press **⊕**.
- 3 Press **↑/↓** to select the wireless LAN name, then press **⊕**.

### ■ When the selected wireless LAN is unsecured

Setup of wireless LAN connectivity is finished. Next, enter the IP address settings by following the Steps of “Auto setting” or

“Manual setting” in “When connecting to the LAN with a LAN cable” above.

### ■ When the selected wireless LAN is secured

The display for entering a WEP or WPA key appears. Go to Step 5.

### ■ To specify the wireless LAN name

Select [Manual Entry].

The input display appears. Enter the wireless LAN name by following the on-screen messages, then press **→**.

- 4 Press **↑/↓** to select the security mode, then press **⊕**.

- [None]: Select this if the wireless LAN is unsecured. Setup of wireless LAN connectivity is finished. Next, enter the IP address settings by following the Steps of “Auto setting” or “Manual setting” in “When connecting to the LAN with a LAN cable” above.
- [WEP]: The wireless LAN is protected by a WEP key.
- [WPA/WPA2-PSK]: The wireless LAN is protected by a WPA-PSK or WPA2-PSK.
- [WPA2-PSK]: The wireless LAN is protected by a WPA2-PSK.

- 5 Enter the WEP key/WPA key by following the on-screen messages, then press **→**.

Setup of wireless LAN connectivity is finished. Next, enter the IP address settings by following the Steps of “Auto setting” or “Manual setting” in “When connecting to the LAN with a LAN cable” above.

## About wireless LAN security

Since communication via the wireless LAN function is established by radio waves, the wireless signal may be susceptible to interception. To protect wireless communication, this system supports various security functions. Be sure to correctly configure the security settings in accordance with your network environment.

## No Security

Although you can easily make settings, anyone can intercept wireless communication or intrude into your wireless network, even without any sophisticated tools. Keep in mind that there is a risk of unauthorized access or interception of data.

## WEP

WEP applies security to communications to prevent outsiders from intercepting communications or intruding into your wireless network. WEP is a legacy security technology that enables older device which do not support TKIP/AES to be connected.

## WPA-PSK (TKIP), WPA2-PSK (TKIP)

TKIP is a security technology developed in response to the deficiencies of WEP. TKIP assures a higher security level than WEP.


## WPA-PSK (AES), WPA2-PSK (AES)

AES is a security technology that uses an advanced security method distinct from WEP and TKIP.

AES assures a higher security level than WEP or TKIP.

# Using the Setup Display

You can make various adjustments of items such as picture and sound.

Select  (Setup) on the home menu when you need to change the settings of the system.

The default settings are underlined.


### Note

- Playback settings stored in the disc take priority over the Setup Display settings and not all the functions described may work.

## 1 Press HOME.


The home menu appears on the TV screen.

## 2 Press $\leftarrow/\rightarrow$ to select [Setup].

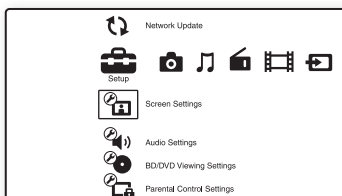





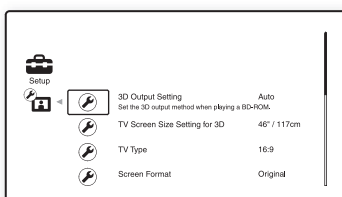






## 3 Press $\uparrow/\downarrow$ to select the setup category icon to change, then press $\oplus$ .

Example: [Screen Settings]



You can setup the following options.

Icon	Explanation
	<b>[Remote Controller Setting Guide] (page 60)</b> Makes the remote settings for operating the TV or other components.
	<b>[Network Update] (page 61)</b> Updates the software of the system.


Icon	Explanation
	<b>[Screen Settings] (page 61)</b> Makes the screen settings according to the type of connecting jacks.
	<b>[Audio Settings] (page 62)</b> Makes the audio settings according to the type of connecting jacks.
	<b>[BD/DVD Viewing Settings] (page 63)</b> Makes detailed settings for BD/DVD playback.
	<b>[Parental Control Settings] (page 64)</b> Makes detailed settings for the Parental Control function.
	<b>[Music Settings] (page 64)</b> Makes detailed settings for Super Audio CD playback.
	<b>[System Settings] (page 64)</b> Makes the system-related settings.
	<b>[Network Settings] (page 66)</b> Makes detailed settings for Internet and network.
	<b>[Easy Setup] (page 66)</b> Re-runs the Easy Setup to make the basic settings.
	<b>[Resetting] (page 66)</b> Resets the system to the factory settings.

## ? [Remote Controller Setting Guide]

### ■ [Preset Mode]

You can change the preset code of the remote for controlling non-Sony components. For details, see “Changing the preset code of the remote (Preset mode)” (page 52).

## [Network Update]

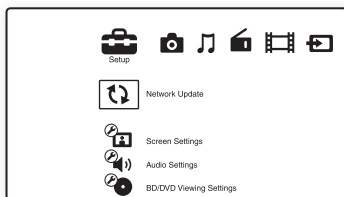

You can update and improve the functions of the system.

For information about update functions, refer to the following website:

For customers in Europe:

<http://support.sony-europe.com>

For customers in other countries/regions:

<http://www.sony-asia.com/support>

During a software update, “UPDATING” appears in the front panel display. After the update completes, the main unit automatically turns off. Please wait for the software update to complete; do not turn the main unit on or off, or operate the main unit or TV.

## [Screen Settings]

### ■ [3D Output Setting]

[Auto]: Normally select this.

[Off]: Select this to display all contents in 2D.

#### Note

- 3D video from the HDMI IN 1 or HDMI IN 2 jack is output regardless of this setting.

### ■ [TV Screen Size Setting for 3D]

Sets the screen size of your 3D compatible TV.

#### Note

- This setting does not apply to 3D video from the HDMI IN 1 or HDMI IN 2 jack.

### ■ [TV Type]

[16:9]: Select this when connecting to a wide-screen TV or a TV with a wide-mode function.

[4:3]: Select this when connecting to a 4:3 screen TV without a wide-mode function.

### ■ [Screen Format]

[Original]: Select this when connecting to a TV with a wide-mode function. Displays a 4:3 screen picture in 16:9 aspect ratio even on a wide-screen TV.

[Fixed Aspect Ratio]: Changes the picture size to fit the screen size with the original picture aspect ratio.

### ■ [DVD Aspect Ratio]

[Letter Box]: Displays a wide picture with black bands on the top and bottom.



[Pan & Scan]: Displays a full-height picture on the entire screen, with trimmed sides.



### ■ [Cinema Conversion Mode]

[Auto]: Normally select this. The main unit automatically detects whether the material is video-based or film-based, and switches to the appropriate conversion method.

[Video]: The conversion method suited for video-based material will always be selected regardless of the material.

### ■ [Output Video Format]

[HDMI]: Normally select [Auto]. Select [Original Resolution] to output the resolution recorded on the disc. (When the resolution is lower than SD resolution, it is scaled up to SD resolution.)

[Video]: Automatically sets the lowest resolution.

**Note**

- When connecting the HDMI OUT jack and the video output jack at the same time, select [Video].
- If no picture appears when setting [HDMI] resolution, select [Video].

**■ [BD/DVD-ROM 1080/24p Output]**

[Auto]: Outputs 1920 × 1080p/24 Hz video signals only when connecting a 1080/24p-compatible TV using the HDMI OUT jack.  
 [Off]: Select this when your TV is not compatible with 1080/24p video signals.

**■ [YCbCr/RGB (HDMI)]**

[Auto]: Automatically detects the type of external device, and switches to the matching color setting.  
 [YCbCr (4:2:2)]: Outputs YCbCr 4:2:2 video signals.  
 [YCbCr (4:4:4)]: Outputs YCbCr 4:4:4 video signals.  
 [RGB]: Select this when connecting to a device with an HDCP-compliant DVI jack.

**■ [HDMI Deep Colour Output]**

[Auto]: Normally select this.  
 [16bit], [12bit], [10bit]: Outputs 16bit/12bit/10bit video signals when the connected TV is compatible with Deep Colour.  
 [Off]: Select this when the picture is unstable or colors appear unnatural.

**■ [Pause Mode] (BD/DVD VIDEO/DVD-R/DVD-RW only)**

[Auto]: The picture, including subjects that move dynamically, is output with no jitter. Normally select this position.  
 [Frame]: The picture, including subjects that do not move dynamically, is output in high resolution.

**🔊 [Audio Settings]****■ [BD Audio MIX Setting]**

[On]: Outputs the audio obtained by mixing the interactive audio and secondary audio to the primary audio.  
 [Off]: Outputs the primary audio only.

**■ [DTS Neo:6]**

Simulates multi-channel surround sound from 2 channel sources according to the capability of the connected device, and outputs the sound via the HDMI OUT jack.

[Cinema]: Outputs simulated multi-channel sound from 2 channel sources using DTS Neo:6 Cinema mode.

[Music]: Outputs simulated multi-channel sound from 2 channel sources using DTS Neo:6 Music mode.

[Off]: Outputs sound with its original number of channels.

**■ [Audio DRC]**

You can compress the dynamic range of the sound track.

[Auto]: Performs playback at the dynamic range specified by the disc (BD-ROM only).

[On]: The system reproduces the sound track with the kind of dynamic range that the recording engineer intended.

[Off]: No compression of dynamic range.

**■ [Audio Output]**

You can select the output method where the audio signal is output.

[Speaker]: Outputs sound from the system's speakers only.

[Speaker + HDMI]: Outputs sound from the system's speakers and 2-channel linear PCM signals from the HDMI OUT jack.

[HDMI]: Outputs sound from the HDMI OUT jack only. Sound format depends on the connected component.

**Note**

- When [Control for HDMI] is set to [On] (page 65), [Audio Output] is set to [Speaker + HDMI] automatically and this setting cannot be changed.
- Audio signals are not output from the HDMI OUT jack when [Audio Output] is set to [Speaker + HDMI] and [HDMI1 Audio Input Mode] (page 65) is set to [TV]. (European models only.)
- When [Audio Output] is set to [HDMI], the output signal format for the “TV” function is 2-channel linear PCM. (European models only.)

**■ [Sound Effect]**

You can set the system’s sound effects (SOUND MODE and [Surround Setting]) to on/off.

[On]: Enables all of the system’s sound effects. The upper limit of sampling frequency is set to 48 kHz.

[Off]: The sound effects are disabled. Select this when you do not want to set the upper limit of sampling frequency.

**■ [Surround Setting]**

You can select the surround setting. For details, see “Step 5: Enjoying Surround Sound” (page 34)

**■ [Speaker Settings]**

To obtain the best possible surround sound, set the speakers. For details, see “Setting the Speakers” (page 50).



## [BD/DVD Viewing Settings]

You can make detailed settings for BD/DVD playback.

**■ [BD/DVD Menu]**

You can select the default menu language for BD-ROMs or DVD VIDEOS. When you select [Select Language Code], the display for entering the language code appears. Enter the code for your language by referring to “Language Code List” (page 80).

**■ [Audio]**

You can select the default track language for BD-ROMs or DVD VIDEOS. When you select [Original], the language given priority in the disc is selected. When you select [Select Language Code], the display for entering the language code appears. Enter the code for your language by referring to “Language Code List” (page 80).

**■ [Subtitle]**

You can select the default subtitle language for BD-ROMs or DVD VIDEOS. When you select [Select Language Code], the display for entering the language code appears. Enter the code for your language by referring to “Language Code List” (page 80).

**■ [BD Hybrid Disc Playback Layer]**

[BD]: Plays BD layer.  
[DVD/CD]: Plays DVD or CD layer.

**■ [BD Internet Connection]**

[Allow]: Normally select this.  
[Do not allow]: Prohibits Internet connection.

---



## [Parental Control Settings]

---

### ■ [Password]

Set or change the password for the Parental Control function. A password allows you to set a restriction on BD-ROM, DVD VIDEO, or Internet video playback. If necessary, you can differentiate the restriction levels for BD-ROMs and DVD VIDEOS.

---

### ■ [Parental Control Area Code]

Playback of some BD-ROMs or DVD VIDEOS can be limited according to the geographic area. Scenes may be blocked or replaced with different scenes. Follow the on-screen instructions and enter your four-digit password.

---

### ■ [BD Parental Control]

Playback of some BD-ROMs can be limited according to the age of the users. Scenes may be blocked or replaced with different scenes. Follow the on-screen instructions and enter your four-digit password.

---

### ■ [DVD Parental Control]

Playback of some DVD VIDEOS can be limited according to a predetermined level such as the age of the users. Scenes may be blocked or replaced with different scenes. Follow the on-screen instructions and enter your four-digit password.

---

### ■ [Internet Video Parental Control]

Playback of some Internet videos can be limited according to the age of the users. Scenes may be blocked or replaced with different scenes. Follow the on-screen instructions and enter your four-digit password.

---

### ■ [Internet Video Unrated]

[Allow]: Allows the playback of unrated Internet videos.

[Block]: Blocks the playback of unrated Internet videos.

---



## [Music Settings]

---

You can make detailed settings for Super Audio CD playback.

---

### ■ [Super Audio CD Playback Layer]

[Super Audio CD]: Plays the Super Audio CD layer.

[CD]: Plays the CD layer.

---

### ■ [Super Audio CD Playback Channels]

[DSD 2ch]: Plays the 2ch area.

[DSD Multi]: Plays the multi-channel area.

---

---



## [System Settings]

---

You can make the system-related settings.

---

### ■ [OSD]

You can select your language for the system on-screen displays.

---

### ■ [Wireless Sound Connection]

You can make further settings for the wireless system. For details, see “Further Settings for the Wireless System” (page 55).

Also, you can check the wireless transmission status. When wireless transmission is activated, [OK] appears to the right of [Status].

---

### ■ [Illumination/Display]

You can select the status of the soft-touch buttons (page 10), front panel display (page 12), and illumination LED (page 10).

#### **For BDV-L800/BDV-L800M**

[All Sync/On]: The illumination LED moves to match all audio. The soft-touch buttons and the front panel display stay illuminated.

[Music Sync/On]: The illumination LED moves to match the music or the radio only. The soft-touch buttons and the front panel display stay illuminated.

[Music Sync/Off]: The illumination LED moves to match the music or the radio only. The soft-touch buttons and the front panel display turn off when the system is not being operated.



[Simple/Off]: The soft-touch buttons and the front panel display turn off when the system is not being operated.

 
#### For BDV-L600

[Standard/On]: The soft-touch buttons and the front panel display stay illuminated.

[Simple/Off]: The soft-touch buttons and the front panel display turn off when the system is not being operated.

#### ■ [Remote Sensor]

You can select the remote sensor to be used according to the installation position of the main unit.



In a vertical position



In a horizontal position

[Vertical/Horizontal]: Both the remote sensors are active. The one in the vertical position has priority.

[Vertical]: Only the remote sensor in the vertical position is active.

[Horizontal]: Only the remote sensor in the horizontal position is active.

#### ■ [HDMI Settings]

[Control for HDMI]

[On]: On. You can operate mutually between components that are connected with a High Speed HDMI cable.

[Off]: Off.

[Audio Return Channel]

This function is available when you connect the system and TV that is compatible with the Audio Return Channel function.

[Auto]: The system can receive the digital audio signal of the TV automatically via a High Speed HDMI cable.

[Off]: Off.

#### Note

- This function is available only when [Control for HDMI] is set to [On].

[HDMI1 Audio Input Mode] (European models only)

You can select the audio input of the component that is connected to the HDMI IN 1 jack.

[HDMI1]: The sound of the component that is connected to the HDMI IN 1 jack is input from the HDMI IN 1 jack.

[TV]: The sound of the component that is connected to the HDMI IN 1 jack is input from the TV DIGITAL IN (OPTICAL) jack.

#### ■ [Quick Start Mode]

[On]: Shortens the startup time from standby mode. You can operate the system quickly after turning it on.

[Off]: The default setting.

#### ■ [Auto Standby]

[On]: Turns on the [Auto Standby] function.

When you do not operate the system for about 30 minutes, the system enters standby mode automatically.

[Off]: Turns off the function.

#### ■ [Auto Display]

[On]: Automatically displays information on the screen when changing the viewing titles, picture modes, audio signals, etc.

[Off]: Displays information only when you press DISPLAY.

#### ■ [Screen Saver]

[On]: Turns on the screen saver function.

[Off]: Off.

#### ■ [Software Update Notification]

[On]: Sets the system to inform you of newer software version information (page 61).

[Off]: Off.

#### ■ [Gracenote Settings]

[Auto]: Automatically downloads disc information when you stop playback of the disc. To download, the system must be connected to the network.

[Manual]: Downloads disc information when [Video Search] or [Music Search] is selected.

---

### ■ [System Information]

You can display the system's software version information and the MAC address.

---



## [Network Settings]

You can make detailed settings for Internet and network.

---

### ■ [Internet Settings]

Connect the system to the network beforehand. For details, see "Connecting to the network" (page 23).

---

### ■ [Network Connection Diagnostics]

You can run the network diagnostic to check if the network connection has been made properly.

---

### ■ [Connection Server Settings]

Sets whether or not to display the connected DLNA server.

---

### ■ [Renderer Set-up]

[Automatic Access Permission]: Sets whether or not to allow automatic access from newly detected DLNA controller.

[Smart Select]: Allows a Sony DLNA controller to find the system as the target component to operate by using the infrared ray. You can set this function to on or off.

[Renderer Name]: Displays the system's name as it is listed on other DLNA devices on the network.

---

### ■ [Renderer Access Control]

Sets whether or not to accept commands from DLNA controllers.

---

### ■ [Party Auto Start]

[On]: Starts a PARTY or joins an existing PARTY at the request of a networked device compatible with the PARTY STREAMING function.

[Off]: Off.

---

---

### ■ [Media Remote Device Registration]

Registers your "Media remote" device.

---

### ■ [Registered Media Remote Devices]

Displays a list of your registered "Media remote" devices.

---



## [Easy Setup]

Re-runs the Easy Setup to make the basic settings. Follow the on-screen instructions.

---



## [Resetting]

---

### ■ [Reset to Factory Default Settings]

You can reset the system settings to the factory default by selecting the group of settings. All the settings within the group will be reset.

---

### ■ [Initialize Personal Information]

You can erase your personal information stored in the system.

---

# Precautions

### On safety

- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the system, or place the system near water, such as near a bathtub or shower room. Should any solid object or liquid fall into the cabinet, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not touch the AC power cords (mains leads) with wet hands. Doing so may cause an electric shock.

### On power sources

- Unplug the main unit from the wall outlet (mains) if you do not intend to use it for an extended period of time. To disconnect the cord, pull it out by the plug, never by the cord.

### On placement

- Place the system in a location with adequate ventilation to prevent heat build-up in the system.
- At high volume, over long periods of time, the cabinet becomes hot to the touch. This is not a malfunction. However, touching the cabinet should be avoided. Do not place the system in a confined space where ventilation is poor as this may cause overheating.
- Do not block the ventilation openings by putting anything on the system. The system is equipped with a high power amplifier. If the ventilation openings are blocked, the system can overheat and malfunction.
- Do not place the system on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation openings.
- Do not install the system in a confined space, such as a bookshelf or similar unit.
- Do not install the system near heat sources such as radiators, air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration, or shock.
- Do not install the system in an inclined position. It is designed to be operated in a horizontal position only.
- Keep the system and discs away from components with strong magnets, such as microwave ovens, or large loudspeakers.
- Do not place heavy objects on the system.
- Do not place metal objects in front of the front panel. They may limit reception of radio waves.

- Do not place the system in a place where medical equipment is in use. It may cause a malfunction of medical equipment.
- If you use a pacemaker or other medical device, consult your physician or the manufacturer of your medical device before using the wireless LAN function.

### On operation

- If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the main unit. Should this occur, the system may not operate properly. In this case, remove the disc and leave the system turned on for about half an hour until the moisture evaporates.
- When you move the system, take out any disc. If you do not, the disc may be damaged.
- If anything falls into the cabinet, unplug the main unit and have it checked by qualified personnel before operating it any further.

### On adjusting volume

- Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, the speakers may be damaged when a peak level section is suddenly played.

### On cleaning

- Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.  
If you have any questions or problems concerning your system, please consult your nearest Sony dealer.
- To remove fingerprints on the front panel of the main unit, wipe it with a slightly moistened, well-wrung soft cloth (BDV-L800 only).

### On cleaning discs, disc/lens cleaners

- **Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction.**

### On replacement of parts

- In the events that this system is repaired, repaired parts may be collected for reuse or recycling purposes.

## On AC adapter

- Use the supplied AC adapter (AC-BD100) for this player, as other adapters may cause a malfunction.
- Do not disassemble or reverse-engineer.
- Do not confine the AC adapter in a closed place such as a bookshelf or an AV cabinet.
- Do not connect the AC adapter to a traveler's electric transformer, which may generate heat and cause a malfunction.
- Do not drop or apply shock.
- The equipment shall not be exposed to dripping or splashing.
- The appliance coupler/inlet shall be easily accessible and readily operable.

## On your TV's color

- If the speakers should cause the TV screen to have color irregularity, turn off the TV then turn it on after 15 to 30 minutes. If color irregularity should persist, place the speakers further away from the TV set.

### IMPORTANT NOTICE

Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Projection televisions are especially susceptible to this.

## On moving the system

- Before moving the system, make sure that there is no disc inserted, and remove the AC power cords (mains leads) from the wall outlet (mains).

# Notes about the Discs

## On handling discs

- To keep the disc clean, handle the disc by its edge. Do not touch the surface.
- Do not stick paper or tape on the disc.



- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.
- After playing, store the disc in its case.

## On cleaning

- Before playing, clean the disc with a cleaning cloth. Wipe the disc from the center out.



- Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.

This system can only play a standard circular disc. Using neither standard nor circular discs (e.g., card, heart, or star shape) may cause a malfunction.

Do not use a disc that has a commercially available accessory attached, such as a label or ring.


 
 
# Troubleshooting

If you experience any of the following difficulties while using the system, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer.



Note that if service personnel changes some parts during repair, these parts may be retained.

In the event of a problem with the wireless sound function, have a Sony dealer check the entire system together (main unit and subwoofer).

## General

 Symptom	Problems and solutions
The power is not turned on.	<ul style="list-style-type: none"><li>• Check that the AC power cords (mains leads) for the main unit and subwoofer are connected securely.</li><li>• Check that the AC power cord (mains lead) of the main unit is connected securely to the AC adapter.</li><li>• Check that the connector of the AC adapter is connected securely to the DC IN 14V connector on the rear of the main unit.</li></ul>
The remote does not function.	<ul style="list-style-type: none"><li>• The distance between the remote and the main unit is too far.</li><li>• The batteries in the remote are weak.</li></ul>
The disc does not eject and you cannot remove the disc even after you press  .	<ul style="list-style-type: none"><li>• Try the following: ① Press and hold  and  on the main unit for more than 5 seconds to eject the disc. ② Remove the disc. ③ Disconnect the AC power cord (mains lead) from the wall outlet (mains), then reconnect after several minutes.</li></ul>
The system does not work normally.	<ul style="list-style-type: none"><li>• Disconnect the AC power cord (mains lead) from the wall outlet (mains), then reconnect after several minutes.</li></ul>

## Messages

Symptom	Problems and solutions
[A new software version is available. Please go to the “Setup” section of the menu and select “Network Update” to perform the update.] appears on the TV screen.	<ul style="list-style-type: none"><li>• See [Network Update] (page 61) to update the system to a newer software version.</li></ul>
“PROTECTOR” and “PUSH PWR” appear alternately in the front panel display.	<p>Press  to turn off the system, and check the following items after “STANDBY” disappears.</p> <ul style="list-style-type: none"><li>• Is anything blocking the ventilation openings of the system?</li><li>• After checking the above items and fixing any problems, turn on the system. If the cause of the problem cannot be found even after checking all the above items, consult your nearest Sony dealer.</li></ul>
“LOCKED” appears in the front panel display.	<ul style="list-style-type: none"><li>• Set the child lock function to off (page 51).</li></ul>
“DEMO LOCK” appears in the front panel display.	<ul style="list-style-type: none"><li>• Contact your nearest Sony dealer or local authorized Sony service facility.</li></ul>
“Exxxx” appears in the front panel display.	<ul style="list-style-type: none"><li>• Contact your nearest Sony dealer or local authorized Sony service facility and give the error code.</li></ul>
 appears without any messages on the entire TV screen.	<ul style="list-style-type: none"><li>• Contact your nearest Sony dealer or local authorized Sony service facility.</li></ul>

## Picture

Symptom	Problems and solutions
There is no picture.	<ul style="list-style-type: none"> <li>• Check the output method on your system (page 19).</li> </ul>
There is no picture when you make an HDMI cable connection.	<ul style="list-style-type: none"> <li>• The main unit is connected to an input device that is not HDCP (High-bandwidth Digital Content Protection) compliant (“HDMI” on the front panel does not light up) (page 19).</li> <li>• Check that the HDMI OUT jack of the main unit and the HDMI IN jack of your TV are connected via a High Speed HDMI cable.</li> </ul>
3D images from the HDMI IN 1 or HDMI IN 2 jack do not appear on the TV screen.	<ul style="list-style-type: none"> <li>• Depending on the TV or video component, 3D images may not appear.</li> <li>• The TV may take time to detect 3D signals.</li> </ul>
No picture appears when the video output resolution selected in [Output Video Format] is incorrect.	<ul style="list-style-type: none"> <li>• Press and hold <b>▶</b> and <b>VOL -</b> on the main unit for more than 5 seconds to reset the video output resolution to the lowest resolution.</li> </ul>
The dark area of the picture is too dark/the bright area is too bright or unnatural.	<ul style="list-style-type: none"> <li>• Set [Picture Quality Mode] to [Standard] (default) (page 43).</li> </ul>
The picture is not output correctly.	<ul style="list-style-type: none"> <li>• Check the [Output Video Format] settings in [Screen Settings] (page 61).</li> <li>• If the analog and digital signals are output at the same time, set [BD/DVD-ROM 1080/24p Output] in [Screen Settings] to [Off] (page 62).</li> <li>• For BD-ROMs, check the [BD/DVD-ROM 1080/24p Output] settings in [Screen Settings] (page 62).</li> </ul>
Picture noise appears.	<ul style="list-style-type: none"> <li>• Clean the disc.</li> <li>• If the picture output from your system goes through your VCR to get to your TV, the copy-protection signal applied to some BD/DVD programs could affect picture quality. If you still experience problems even when you connect your main unit directly to your TV, try connecting your main unit to the other input jacks.</li> </ul>
An image is not displayed on the entire TV screen.	<ul style="list-style-type: none"> <li>• Check the setting of [TV Type] in [Screen Settings](page 61).</li> <li>• The aspect ratio on the disc is fixed.</li> </ul>
Color irregularity occurs on the TV screen.	<ul style="list-style-type: none"> <li>• If the speakers are used with a CRT-based TV or projector, install the speakers at least 0.3 meters from the TV set.</li> <li>• If the color irregularity persists, turn off the TV set once, then turn it on after 15 to 30 minutes.</li> <li>• Make sure that no magnetic object (magnetic latch on a TV stand, health care device, toy, etc.) is placed near the speakers.</li> </ul>
There is no picture after playing a video/photo file on the iPod/iPhone.	<ul style="list-style-type: none"> <li>• Select the input on your TV for this system.</li> </ul>

## Sound

Symptom	Problems and solutions
There is no sound or wireless transmission is not activated.	<ul style="list-style-type: none"> <li>• The speaker cord is not connected securely.</li> <li>• Check that the AC power cord (mains lead) of the subwoofer is connected securely.</li> <li>• Check that the volume of the main unit is other than “0.”</li> <li>• Check the status of the LINK/STANDBY indicator on the subwoofer.               <ul style="list-style-type: none"> <li>– Turns off.                   <ul style="list-style-type: none"> <li>– Check that the AC power cord (mains lead) of the subwoofer is connected securely.</li> <li>– Turn the subwoofer on by pressing <b>I/⏻</b> on the subwoofer.</li> </ul> </li> <li>– Flashes green quickly.                   <ul style="list-style-type: none"> <li>– ① Press <b>I/⏻</b> on the subwoofer. ② Insert the wireless transceiver into the subwoofer correctly. ③ Press <b>I/⏻</b> on the subwoofer.</li> </ul> </li> <li>– Flashes red.                   <ul style="list-style-type: none"> <li>– Press <b>I/⏻</b> to turn off the subwoofer, and check the following items.                       <ul style="list-style-type: none"> <li>① Are the + and – speaker cords short-circuited?</li> <li>② Is anything blocking the ventilation openings of the subwoofer?</li> </ul> </li> </ul> </li> </ul> </li> </ul> <p>After checking the above items and fixing any problems, turn on the subwoofer. If the cause of the problem cannot be found even after checking all the above items, consult your nearest Sony dealer.</p> <ul style="list-style-type: none"> <li>– Flashes green or orange slowly or turns red.               <ul style="list-style-type: none"> <li>– Make sure that the wireless transceiver is inserted correctly into the main unit.</li> <li>– Make the [Secure Link] setting again (page 55).</li> <li>– Sound transmission is poor. Move the subwoofer so that the LINK/STANDBY indicator turns green or orange.</li> <li>– Move the system away from other wireless devices.</li> <li>– Avoid using any other wireless devices.</li> </ul> </li> <li>– Turns green or orange.               <ul style="list-style-type: none"> <li>– Check the speaker connections.</li> </ul> </li> </ul>
The Super Audio CD sound of a component that is connected to the HDMI IN 1 or HDMI IN 2 jack is not output.	<ul style="list-style-type: none"> <li>• HDMI IN 1 and HDMI IN 2 does not support an audio format that contains copy protection.</li> </ul>
There is no sound from the TV via the HDMI OUT jack when using the Audio Return Channel function.	<ul style="list-style-type: none"> <li>• Set [Control for HDMI] in [HDMI Settings] of [System Settings] to [On] (page 65). Also, set [Audio Return Channel] in [HDMI Settings] of [System Settings] to [Auto] (page 65).</li> <li>• Make sure that your TV is compatible with the Audio Return Channel function.</li> <li>• Make sure that a High Speed HDMI cable is connected to a jack on your TV that is compatible with the Audio Return Channel function.</li> </ul>
The system does not output sound correctly when connected to a set-top box.	<ul style="list-style-type: none"> <li>• Set [Audio Return Channel] in [HDMI Settings] of [System Settings] to [Off] (page 65).</li> </ul>
Severe hum or noise is heard.	<ul style="list-style-type: none"> <li>• Move your TV away from the audio components.</li> <li>• Clean the disc.</li> </ul>
The sound loses stereo effect when you play a CD.	<ul style="list-style-type: none"> <li>• Select stereo sound by pressing <b>⏮</b> (page 45).</li> </ul>
The left and right sounds are unbalanced or reversed.	<ul style="list-style-type: none"> <li>• Check that the speakers and components are connected correctly and securely.</li> </ul>

Symptom	Problems and solutions
Sound is unstable.	<ul style="list-style-type: none"> <li>• The Position Control function of your TV is enabled. For details on disabling the function, refer to the operating instructions of your TV.</li> </ul>
Noise is heard from front speakers or sound from the front speakers skips.	<ul style="list-style-type: none"> <li>• Wireless transmission is unstable. Change the [RF Channel] setting in [Wireless Sound Connection] (page 55).</li> <li>• Install the main unit and subwoofer closer to each other.</li> <li>• Do not install the main unit and subwoofer in a closed rack, on a metal rack, or under a table.</li> </ul>

## Tuner

 
Symptom	Problems and solutions
Radio stations cannot be tuned in.	<ul style="list-style-type: none"> <li>• Check that the antenna (aerial) is connected securely. Adjust the antenna (aerial) or connect an external antenna (aerial) if necessary.</li> <li>• The signal strength of the stations is too weak (when tuning in with automatic tuning). Use direct tuning.</li> </ul>

## Playback


Symptom	Problems and solutions
The disc does not play.	<ul style="list-style-type: none"> <li>• The region code on the BD/DVD does not match the system.</li> <li>• Moisture has condensed inside the main unit and may cause damage to the lenses. Remove the disc and leave the main unit turned on for about half an hour.</li> <li>• The system cannot play a recorded disc that is not correctly finalized (page 75).</li> </ul>
File names are not displayed correctly.	<ul style="list-style-type: none"> <li>• The system can only display ISO 8859-1-compliant character formats. Other character formats may be displayed differently.</li> <li>• Depending on the writing software used, the input characters may be displayed differently.</li> </ul>
A disc does not start playing from the beginning.	<ul style="list-style-type: none"> <li>• Resume play has been selected. Press <b>OPTIONS</b> and select [Play from start], then press <b>⊕</b>.</li> </ul>
Playback does not start from the resume point where you last stopped playing.	<ul style="list-style-type: none"> <li>• The resume point may be cleared from memory depending on the disc when <ul style="list-style-type: none"> <li>– you eject the disc.</li> <li>– you disconnect the USB device.</li> <li>– you play other content.</li> <li>– you turn off the main unit.</li> </ul> </li> </ul>
The language for the soundtrack/subtitle or angles cannot be changed.	<ul style="list-style-type: none"> <li>• Try using the BD's or DVD's menu.</li> <li>• Multi-lingual tracks/subtitles or multi-angles are not recorded on the BD or DVD being played.</li> </ul>
Bonus contents or other data that are contained in a BD-ROM cannot be played.	<ul style="list-style-type: none"> <li>• Try the following: ① Remove the disc. ② Turn the system off. ③ Remove and reconnect the USB device (page 37). ④ Turn the system on. ⑤ Insert the BD-ROM with BONUSVIEW/BD-LIVE.</li> </ul>



## USB device

Symptom	Problems and solutions
The USB device is not recognized.	<ul style="list-style-type: none"><li>• Try the following: ① Turn the system off. ② Remove and reconnect the USB device. ③ Turn the system on.</li><li>• Make sure that the USB device is securely connected to the  (USB) port.</li><li>• Check if the USB device or a cable is damaged.</li><li>• Check if the USB device is on.</li><li>• If the USB device is connected via a USB hub, disconnect it and connect the USB device directly to the main unit.</li></ul>

## BRAVIA Internet Video

Symptom	Problems and solutions
The picture/sound is poor/certain programs display with a loss of detail, especially during fast-motion or dark scenes.	<ul style="list-style-type: none"><li>• Picture/sound quality may be poor depending on Internet content providers.</li><li>• Picture/sound quality may be improved by changing the connection speed. Sony recommends a connection speed of at least 2.5 Mbps for standard-definition video and 10 Mbps for high-definition video.</li><li>• Not all videos contain sound.</li></ul>
The picture is small.	<ul style="list-style-type: none"><li>• Press  to zoom in.</li></ul>

## “BRAVIA” Sync ([Control for HDMI])

Symptom	Problems and solutions
The [Control for HDMI] function does not work (“BRAVIA” Sync).	<ul style="list-style-type: none"><li>• Check that [Control for HDMI] is set to [On] (page 65).</li><li>• If you change the HDMI connection, turn the system off and on again.</li><li>• If power failure occurs, set [Control for HDMI] to [Off], then set [Control for HDMI] to [On] (page 65).</li><li>• Check the following and refer to the operating instructions supplied with the component.<ul style="list-style-type: none"><li>– the connected component is compatible with the [Control for HDMI] function.</li><li>– the connected component’s setting for the [Control for HDMI] function is correct.</li></ul></li></ul>

## Network connection

Symptom	Problems and solutions
The system cannot connect to the network.	<ul style="list-style-type: none"><li>• Check the network connection (page 23) and the network settings (page 66).</li></ul>

## Built-in/USB wireless LAN connection

Symptom	Problems and solutions
You cannot connect your PC to the Internet after [Wi-Fi Protected Setup (WPS)] is performed.	<ul style="list-style-type: none"><li>• The wireless settings of the router may change automatically if you use the Wi-Fi Protected Setup function before adjusting the settings of the router. In this case, change the wireless settings of your PC accordingly.</li></ul>
You cannot connect the system to your wireless LAN router.	<ul style="list-style-type: none"><li>• Check if the wireless LAN router is on.</li><li>• Depending on the usage environment, including the wall material, radio wave reception conditions, or obstacles between the system and the wireless LAN router, the possible communication distance may be shortened. Move the system and the wireless LAN router closer to each other.</li><li>• Devices that use a 2.4 GHz frequency band, such as a microwave, Bluetooth, or digital cordless device, may interrupt the communication. Move the main unit away from such devices, or turn off such devices.</li></ul>
The desired wireless router is not detected even if [Scan] is performed.	<ul style="list-style-type: none"><li>• Press RETURN to return to the previous screen, and try [Scan] again. If the desired wireless router is still not detected, press RETURN to select [Manual registration].</li></ul>
The system cannot connect to the network or the network connection is unstable.	<ul style="list-style-type: none"><li>• The distance between the main unit and the wireless LAN router is too far (page 23).</li></ul>

# Playable Discs

<b>Blu-ray Disc</b>	BD-ROM <sup>1)</sup> BD-R/BD-RE <sup>2)</sup>
<b>DVD<sup>3)</sup></b>	DVD-ROM DVD-R/DVD-RW DVD+R/DVD+RW
<b>CD<sup>3)</sup></b>	CD-DA (Music CD) CD-ROM CD-R/CD-RW Super Audio CD

<sup>1)</sup>Since the Blu-ray Disc specifications are new and evolving, some discs may not be playable depending on the disc type and the version. Also, the audio output differs depending on the source, connected output jack, and selected audio settings.

<sup>2)</sup>BD-RE: Ver.2.1  
BD-R: Ver.1.1, 1.2, 1.3 including organic pigment type BD-R (LTH type)  
BD-Rs recorded on a PC cannot be played if postscripts are recordable.

<sup>3)</sup>A CD or DVD disc will not play if it has not been correctly finalized. For more information, refer to the operating instructions supplied with the recording device.

## Discs that cannot be played

- BDs with cartridge
- BDXLs
- DVD-RAMs
- HD DVDs
- DVD Audio discs
- PHOTO CDs
- Data part of CD-Extras
- Super VCDs
- Audio material side on DualDiscs

## Notes on discs

This product is designed to play back discs that conform to the Compact Disc (CD) standard. DualDiscs and some music discs encoded with copyright protection technologies do not conform to the Compact Disc (CD) standard. Therefore, these discs may not be compatible with this product.


## Note on playback operations of a BD/DVD

Some playback operations of a BD/DVD may be intentionally set by software producers. Since this system plays a BD/DVD according to the disc contents the software producers designed, some playback features may not be available.

## Note about double-layer BDs/DVDs

The playback picture and sound may be momentarily interrupted when the layers switch.

## Region code (BD-ROM/DVD VIDEO only)

Your system has a region code printed on the rear of the main unit and will only play a BD-ROM/DVD VIDEO (playback only) labeled with identical region codes or .

# Playable Types of Files

## Video<sup>1)</sup>

File format	Extensions
MPEG-1 Video/PS <sup>2)5)</sup>	“.mpg,” “.mpeg,” “.m2ts,”
MPEG-2 Video/PS, TS <sup>2)6)</sup>	“.mts”
Xvid	“.avi”
MPEG4/AVC <sup>2)5)</sup>	“.mkv,” “.mp4,” “.m4v,” “.m2ts,” “.mts”
WMV9 <sup>2)5)</sup>	“.wmv,” “.asf”
AVCHD	3)5)

## Music

File format	Extensions
MP3 (MPEG-1 Audio Layer III)	“.mp3”
AAC <sup>2)4)5)</sup>	“.m4a”
WMA9 Standard <sup>2)4)</sup>	“.wma”
LPCM	“.wav”

## Photo<sup>1)</sup>

File format	Extensions
JPEG	“.jpg,” “.jpeg”
GIF	“.gif”
PNG	“.png”

<sup>1)</sup>The system does not play these files via the renderer function.

<sup>2)</sup>The system does not play files encoded with DRM.

<sup>3)</sup>The system plays AVCHD-format files that are recorded via a digital video camera, etc. To watch AVCHD-format files, the disc with AVCHD-format files on it must be finalized.

 
<sup>4)</sup>The system does not play files encoded with Lossless, etc.

<sup>5)</sup>The system does not play these files via the DLNA function.

<sup>6)</sup>The system plays SD resolution only via the DLNA function.

### Note

- Some files may not play depending on the file format, the file encoding, the recording condition, or DLNA server condition.
- Some files edited on a PC may not play.
- The system can recognize the following files or folders in BDs, DVDs, CDs and USB devices:
  - up to folders in the 3rd tree

- up to 500 files in a single tree
- The system can recognize the following files or folders stored in the DLNA server:
  - up to folders in the 18th tree
  - up to 999 files in a single tree
- Some USB devices may not work with this system.
- The system can recognize Mass Storage Class (MSC) devices (such as flash memory or an HDD), Still Image Capture Devices (SICDs), and 101-key keyboards (front  (USB) port only).
- To avoid data corruption or damage to USB memory or other devices, turn the system off before connecting or removing USB memory or other devices.
- The system may not play high bit rate video files from a DATA CD smoothly. It is recommended to play high bit rate video files using a DATA DVD.

# Supported Audio Formats

Audio formats supported by this system are as follows.

Function	Format							
	LPCM 2ch	LPCM 5.1ch LPCM 7.1ch	Dolby Digital	Dolby TrueHD, Dolby Digital Plus	DTS	DTS-ES Discrete 6.1, DTS-ES Matrix 6.1, DTS96/24	DTS-HD High Resolution Audio	DTS-HD Master Audio
“BD/DVD”	○	○	○	○	○	○	○	○
“HDMI1” “HDMI2”	○	–	○	–	○	–	–	–
“TV” (DIGITAL IN)	○	–	○	–	○	–	–	–

○: Supported format.

–: Unsupported format.

### Note

- HDMI IN 1 and HDMI IN 2 jacks do not input sound in the case of an audio format that contains copy protections such as Super Audio CD or DVD-Audio.
- For the LPCM 2ch format, the supported sampling frequency of the digital signal is up to 96 kHz when using the “HDMI1” or “HDMI2” function, and 48 kHz when using the “TV” function.

# Specifications

## Amplifier Section

POWER OUTPUT (reference)

Subwoofer: 120 W (at 4 ohms, 80 Hz)

BDV-L800/BDV-L800M:

POWER OUTPUT (rated)

Front L/Front R: 85 W + 85 W (at 4 ohms,  
1 kHz, 1% THD)

POWER OUTPUT (reference)

Front L/Front R: 130 W (per channel at  
4 ohms, 1 kHz)

BDV-L600:

POWER OUTPUT (rated)

Front L/Front R: 80 W + 80 W (at 4 ohms,  
1 kHz, 1% THD)

POWER OUTPUT (reference)

Front L/Front R: 115 W (per channel at  
4 ohms, 1 kHz)

Inputs (Digital)

TV (Audio Return Channel/OPTICAL)

Supported formats: LPCM  
2CH (up to 48 kHz), Dolby  
Digital, DTS

HDMI IN 1/HDMI IN 2

Supported formats: LPCM  
2CH (up to 96 kHz), Dolby  
Digital, DTS

## Video Section

Outputs VIDEO: 1 Vp-p 75 ohms

## HDMI Section

Connector Type A (19pin)

## BD/DVD/Super Audio CD/CD System

Signal format system NTSC/PAL

## USB Section

↔ (USB) port: Type A (For connecting  
USB memory, memory  
card reader, digital still  
camera, and digital video  
camera)

## LAN Section

LAN(100) terminal 100BASE-TX Terminal

## Wireless LAN Section

BDV-L800/BDV-L800M

Standards Compliance IEEE 802.11 b/g/n  
Frequency and Channel 2.4 GHz - 2.4835 GHz  
[CH1 -13]

## FM Tuner Section

System PLL quartz-locked digital  
synthesizer

Tuning range 87.5 MHz - 108.0 MHz (50  
kHz step)

Antenna (aerial) FM wire antenna (aerial)  
Antenna (aerial) terminals 75 ohms, unbalanced  
Intermediate frequency 250 kHz/300 kHz/  
350 kHz/400 kHz

## General (Main Unit, AC Adapter (AC-BD100))

Power requirements (AC Adapter)

Input: 110 V - 240 V AC,  
50/60 Hz

Output: 14 V DC, 3.3 A

Operating Temperature:  
40 °C (MAX)

Power consumption

On: 30 W

Standby: 0.3 W (at the  
Power Saving mode)

Dimensions (approx.)

AC Adapter 122 mm × 37 mm × 64 mm  
(w/h/d)

Main Unit 480 mm × 46 mm × 232

mm (w/h/d)

480 mm × 259 mm × 103

mm (w/h/d) (with stand)

480 mm × 105 mm × 231

mm (w/h/d) (in a  
horizontal position)

Mass (approx.)

AC Adapter 0.3 kg

Main Unit

L800: 3.2 kg

4.2 kg (with stand)

L800M: 3.3 kg

4.3 kg (with stand)

L600: 3.0 kg

4.0 kg (with stand)

## Speakers

### Front Speaker (SS-TSL800) for BDV-L800/ BDV-L800M

Speaker system 2-Way 2-Driver Speaker  
system

Speaker unit Tweeter: 25 mm dome  
type

Full range: 65 mm cone  
type

Rated impedance 4 ohms

Dimensions (approx.) 123 mm × 475 mm × 137  
mm (w/h/d)

Mass (approx.) 1.3 kg

### Front Speaker (SS-TSL600) for BDV-L600

Speaker system 2-Way 2-Driver Speaker  
system Bass reflex

Speaker unit Tweeter: 25 mm dome  
type

Full range: 50 mm cone  
type

Rated impedance 4 ohms

Dimensions (approx.)	112 mm × 320 mm × 112 mm (w/h/d)
Mass (approx.)	0.9 kg

### Active Subwoofer (SA-WSL600)

Speaker system	Subwoofer
Speaker unit	160 mm cone type
Rated impedance	4 ohms
Dimensions (approx.)	275 mm × 395 mm × 290 mm (w/h/d)
Mass (approx.)	9 kg

### General (Subwoofer)

Power requirements	220 V - 240 V AC, 50/60 Hz
Power consumption	On: 70 W Standby: Approx. 0.6 W Off: 0.3 W

### Wireless transceiver (EZW-RT50)

Communication system	Wireless sound Specification version 1.0
Output	23 mW (EIRP)
Frequency band	5.725 GHz - 5.875 GHz
Modulation method	DSSS
Power requirements	DC 3.3 V, 300 mA
Dimensions (approx.)	30 mm × 9 mm × 60 mm (w/h/d)
Mass (approx.)	10 g

Design and specifications are subject to change without notice.

- Standby power consumption 0.3 W (main unit), 0.3 W (subwoofer).
- Over 85% power efficiency of amplifier block is achieved with the full digital amplifier, S-Master.

# Language Code List

The language spellings conform to the ISO 639: 1988 (E/F) standard.

Code Language	Code Language	Code Language	Code Language
1027 Afar	1183 Irish	1347 Maori	1507 Samoan
1028 Abkhazian	1186 Scots Gaelic	1349 Macedonian	1508 Shona
1032 Afrikaans	1194 Galician	1350 Malayalam	1509 Somali
1039 Amharic	1196 Guarani	1352 Mongolian	1511 Albanian
1044 Arabic	1203 Gujarati	1353 Moldavian	1512 Serbian
1045 Assamese	1209 Hausa	1356 Marathi	1513 Siswati
1051 Aymara	1217 Hindi	1357 Malay	1514 Sesotho
1052 Azerbaijani	1226 Croatian	1358 Maltese	1515 Sundanese
1053 Bashkir	1229 Hungarian	1363 Burmese	1516 Swedish
1057 Byelorussian	1233 Armenian	1365 Nauru	1517 Swahili
1059 Bulgarian	1235 Interlingua	1369 Nepali	1521 Tamil
1060 Bihari	1239 Interlingue	1376 Dutch	1525 Telugu
1061 Bislama	1245 Inupiak	1379 Norwegian	1527 Tajik
1066 Bengali;	1248 Indonesian	1393 Occitan	1528 Thai
Bangla	1253 Icelandic	1403 (Afan)Oromo	1529 Tigrinya
1067 Tibetan	1254 Italian	1408 Oriya	1531 Turkmen
1070 Breton	1257 Hebrew	1417 Punjabi	1532 Tagalog
1079 Catalan	1261 Japanese	1428 Polish	1534 Setswana
1093 Corsican	1269 Yiddish	1435 Pashto;	1535 Tonga
1097 Czech	1283 Javanese	Pushto	1538 Turkish
1103 Welsh	1287 Georgian	1436 Portuguese	1539 Tsonga
1105 Danish	1297 Kazakh	1463 Quechua	1540 Tatar
1109 German	1298 Greenlandic	1481 Rhaeto-	1543 Twi
1130 Bhutani	1299 Cambodian	Romance	1557 Ukrainian
1142 Greek	1300 Kannada	1482 Kirundi	1564 Urdu
1144 English	1301 Korean	1483 Romanian	1572 Uzbek
1145 Esperanto	1305 Kashmiri	1489 Russian	1581 Vietnamese
1149 Spanish	1307 Kurdish	1491 Kinyarwanda	1587 Volapük
1150 Estonian	1311 Kirghiz	1495 Sanskrit	1613 Wolof
1151 Basque	1313 Latin	1498 Sindhi	1632 Xhosa
1157 Persian	1326 Lingala	1501 Sangho	1665 Yoruba
1165 Finnish	1327 Laothian	1502 Serbo-Croatian	1684 Chinese
1166 Fiji	1332 Lithuanian	1503 Singhalese	1697 Zulu
1171 Faroese	1334 Latvian; Lettish	1505 Slovak	
1174 French	1345 Malagasy	1506 Slovenian	
1181 Frisian			1703 Not specified

## Parental Control/Area Code List

Code Area	Code Area	Code Area	Code Area
2044 Argentina	2109 Germany	2362 Mexico	2499 Sweden
2047 Australia	2200 Greece	2376 Netherlands	2086 Switzerland
2046 Austria	2219 Hong Kong	2390 New Zealand	2543 Taiwan
2057 Belgium	2248 India	2379 Norway	2528 Thailand
2070 Brazil	2238 Indonesia	2427 Pakistan	2184 United Kingdom
2090 Chile	2239 Ireland	2424 Philippines	
2092 China	2254 Italy	2428 Poland	
2093 Colombia	2276 Japan	2436 Portugal	
2115 Denmark	2304 Korea	2489 Russia	
2165 Finland	2333 Luxembourg	2501 Singapore	
2174 France	2363 Malaysia	2149 Spain	



# Index

## Numerics

3D 36  
3D Output Setting 61

## A

A/V SYNC 44  
Audio 63  
Audio DRC 62  
Audio Output 62  
Audio Return Channel 65  
Audio Settings 62  
Auto Display 65  
Auto Standby 65

## B

BD Audio MIX Setting 62  
BD Hybrid Disc Playback  
Layer 63  
BD Internet Connection 33  
BD Parental Control 64  
BD/DVD Menu 63  
BD/DVD Viewing Settings 63  
BD/DVD-ROM 1080/24p  
Output 62  
BD-LIVE 36  
BONUSVIEW 36  
BRAVIA Internet Video 40  
BRAVIA Sync 49

## C

CD 75  
Child Lock 51  
Cinema Conversion Mode 61  
Connection Server Settings 66  
Control for HDMI 49, 65

## D

DLNA 40, 66  
Dolby Digital 45  
DTS 45  
DTS Neo:6 62  
DVD 75  
DVD Aspect Ratio 61  
DVD Parental Control 64

## E

Easy Setup 32, 66

## F

FM MODE 47  
Front panel display 12

## G

Gracenote Settings 65

## H

HDMI  
YCbCr/RGB (HDMI) 62  
HDMI Deep Colour Output 62

## I

Illumination/Display 64  
Initialize Personal Information  
66  
Internet content 40  
Internet Settings 56, 66  
Internet Video Parental Control  
64  
Internet Video Unrated 64

## L

Language Code List 80

## M

Main unit 10  
Media Remote Device  
Registration 66  
Multiplex broadcast sound 46  
Music Settings 64

## N

Network Connection  
Diagnostics 66  
Network Settings 66  
Network Update 61

## O

OSD 64  
Output Video Format 61

## P

Parental Control Area Code 64  
Parental Control Settings 64  
Party Auto Start 66  
Password 64  
Pause Mode 62  
Play information 37  
Playable discs 75  
Preset Mode 60

## Q

Quick Start Mode 65

## R

RDS 48  
Region code 75  
Registered Media Remote  
Devices 66  
Remote control 14  
Remote Controller Setting  
Guide 60  
Remote Sensor 65  
Renderer Access Control 66  
Renderer Set-up 66  
Reset to Factory Default  
Settings 66  
Resetting 66

## S

Screen Format 61  
Screen Saver 65  
Screen Settings 61  
SLEEP 51  
Slideshow 43  
Sound Effect 63  
Speaker Settings 50, 63  
Distance 50  
Level 50  
Subtitle 63  
Subwoofer 13  
Super Audio CD Playback  
Channels 64  
Super Audio CD Playback  
Layer 64  
Surround Setting 63  
System Information 66

## T

Test Tone 50  
TV Screen Size Setting for 3D  
61  
TV Type 61

## U

Update 61  
USB 37

## W

WEP 58  
Wireless Sound Connection 64  
WPA2-PSK (AES) 58  
WPA2-PSK (TKIP) 58  
WPA-PSK (AES) 58  
WPA-PSK (TKIP) 58





The software of this system may be updated in the future. To find out details on any available updates, please visit the following URL.

For customers in Europe:  
<http://support.sony-europe.com>

For customers in other countries/regions:  
<http://www.sony-asia.com/support>



<http://www.sony.net/>



\* 4 2 7 9 0 6 7 1 1 \* (2)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>