

Quick Setup Guide

For further information, see the operating instruction supplied with the TV. Please retain this guide for your future reference.

Please follow the steps to setup your TV:

- 1 Connecting Your TV (See reverse side)
- 2 Running Initial Setup
- 3 Programming the Remote Control

For service and technical assistance, call our Customer Information Service Center (Toll Free):
US residents: 1-800-222-SONY (7669) or visit <http://www.sonystyle.com/tv/>
Canadian residents: 1-877-899-SONY (7669) or visit <http://www.sonystyle.ca/tv/>
DO NOT RETURN TO THE STORE

Sony Corporation © 2005 Printed in U.S.A.



1 Connecting Your TV

Making Audio/Video Connections


Your new TV includes various types of video inputs and two types of audio jacks; composite-RCA type and digital audio (optical). Use the outputs/inputs that are available on your components that provide the best video/audio performances:

| Best Audio/Video Performance | |
|---|---|
| Connector type | Connector type |
| Digital Optical | HDMI (High-Definition Multimedia Interface) |
| Digital Coaxial Will require an adapter to connect to this TV's digital audio input. | DVI (Digital Video Interface) Will require an adapter to connect to this TV. |
| Analog Audio | Component video |
| | S VIDEO |
| | Composite video |
| | RF/Coaxial |

Activating CableCARD™ Service

Before you can use CableCARD service, you need to insert the CableCARD device (supplied by your cable provider) and activate the service.

- Inserting the CableCARD incorrectly may result in permanent damage to the card and the TV.
- The connection diagrams shown in the reverse side are recommendations only; other possible solutions may exist. Connections that include an AV receiver can often be complex, so check your AV receiver's instruction manual for additional details.
- See the "Cables Required" chart that appears with the diagram to determine which cables you'll need. Depending on the components you plan to connect, you may need to purchase extra cables.

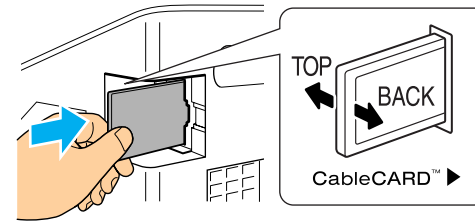

Review the following chart to determine which diagram to use to connect the components in your system: Turn off and unplug all components before making connections.

| For these components | See reverse side | CableCARD Tuning Digital and Analog Signals | Antenna Tuning ATSC 5.0mp & ATSC-S | Television Settings | Other Components |
|---|---|--|---------------------------------------|---|---|
| Cable, Antenna, CableCARD (optional) | VCR, DVD Player, PC | A | | Video 1 - VCR, Video 4 - DVD Player, PC IN 7 - PC | Line OUT (480i/480p) - TV |
| Cable/SAT, Antenna, Cable Box, Satellite Receiver | VCR, DVD Player, PC, AV Receiver | B | | Video 1 - AV Receiver, Video 4 - DVD Player, PC IN 7 - PC | Line OUT (VCR on at all times), Line IN (Recording) Cable/SAT Box |
| Cable/SAT, Antenna, Cable Box, Satellite Receiver | VCR, DVD Player | C | | Video 1 - Cable Box, Video 3 - VCR, Video 4 - DVD Player, Video 6 - SAT Box | Line OUT (Recording) - SAT Box (SD) |
| Cable/SAT, Antenna, HD Cable Box, HD Sat Receiver | DVD Player, AV Receiver (use component), Digital Recorder | D | | Video 4 - AV Receiver, Video 5 - HD Cable Box / HD SAT Box, Video 6 - Digital Rec. | Line OUT (480i/480p) - AV Receiver |
| Cable/SAT, Antenna, HD Cable Box, HD Sat Receiver, HD DVR | VCR, DVD Player | E | | Video 1 - VCR, Video 4 - DVD Player, Video 6 - HD Cable Box | Line OUT (480i/480p) - TV, Line IN (Recording) - SAT Box or DVR (Recording) |
| Cable/SAT, Antenna, Cable Box, Satellite Receiver | VCR, Sony Dream System | F | | Video 1 - Sony Dream System (Composite or S-Video), Digital Audio Out - Sony Dream System | Line OUT - Sony Dream System, Line IN - Cable Box (VCR on at all times) |


2 Running Initial Setup

- 1 Press **POWER** to turn on the TV. The Initial Setup screen appears.



- 2 Press **▲** or **▼** to highlight the on-screen display language. Then press **+**. The message "First please connect cable and/or antenna" appears. This may require 50+ minutes for completion and "Start auto program now?" appears.

- 3 Press **+** (Yes) to start Initial Setup.

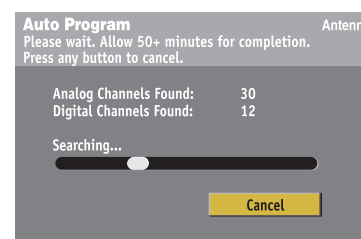

Initial Setup automatically creates a list of receivable channels from both VHF/UHF antenna and cable TV channels if both sources are connected.

When Initial Setup is complete, the TV will display the total number of analog channels and the total number of digital channels found.

- 4 Press **+** to exit this screen.

To run Auto Program again at a later time

Refer to the manual on "Initial Setup" and "Auto Program" sections.

3 Programming the Remote Control

The remote control is preset to operate Sony brand video equipment.

| Sony Equipment | Programmable Code Number |
|----------------|-------------------------------|
| DVR | 772 |
| DVD/VCR | 601 (Sony Dream System) |
| SAT/CABLE | 801 (Sony Satellite Receiver) |

Follow the steps below to program your TV's remote control to operate the non-Sony video equipment.

Find the three-digit code for your equipment from the "Manufacturer's Codes" listed on right. If more than one code number is listed, try entering from the code listed first.

- 1 Press and hold the **VIDEO**, **DVD**, or **SAT** FUNCTION button you want to program on the remote control and press the **FUNCTION** button simultaneously.
- 2 The selected FUNCTION button (**VIDEO**, **DVD**, or **SAT**) will flash.
- 3 Enter the three-digit manufacturer's code number using the 0-9 buttons while the button is lit. If code is not entered within 10 seconds, you must perform the step 1 again.
- 4 Press **+** button.

When programmed correctly, the selected FUNCTION button will flash twice, and when not, it flashes five times.

To check if the code works

Aim your TV's remote control at the equipment, and press the green **POWER** button. If the equipment responds, the programming is completed. If not, try the next code listed.

- If no code is input within the above specified time, or an invalid or incorrect code number is input, the remote control automatically goes back to the previous setting.
- In some cases, you may not be able to program your remote control to operate other equipment. In such cases, use the equipment's own remote control.
- Removing the batteries or dead batteries may cause the programmed codes to be lost and revert back to the factory setting. Reprogramming the codes may be necessary.

Manufacturer's codes

DVD Players

| Manufacturer | Code |
|------------------|----------|
| Sony | 751 |
| General Electric | 755 |
| Hitachi | 758 |
| JVC | 756 |
| Magnavox | 757 |
| Mitsubishi | 761 |
| Panasonic | 753 |
| Philips | 757 |
| Pioneer | 752, 778 |
| RCA/PROSCAN | 755 |
| Go Video | 758 |
| Samsung | 758 |
| Toshiba | 754 |
| Zenith | 760 |

DVD Changers

| Manufacturer | Code |
|--------------|------|
| Sony | 765 |
| Panasonic | 766 |

DVD/VCR Combo Units

| Manufacturer | Code |
|--------------|------|
| Sony | 767 |
| Broksonic | 776 |
| Marta | 332 |
| JVC | 775 |
| Panasonic | 777 |
| Samsung | 774 |
| Toshiba | 773 |
| Zenith | 768 |

HDD/DVD Combo Units

| Manufacturer | Code |
|--------------|---------------|
| Sony | 772, 771, 770 |

5.1ch DVD AV System

| Manufacturer | Code |
|--------------|--------------------|
| Sony (DAV) | 601, 602, 603, 604 |

AV Receivers

| Manufacturer | Code |
|--------------|------|
| Sony | 764 |

VCRs

| Manufacturer | Code |
|-------------------|---------------|
| Sony | 301, 302, 303 |
| Admiral (M. Ward) | 327 |
| Aiwa* | 338, 344 |
| Audio Dynamic | 314, 337 |

Manufacturer Code

| | |
|-------------------------|---|
| Broksonic | 319, 317 |
| Canon | 309, 308 |
| Citizen | 332 |
| Craig | 302, 332 |
| Curtis Mathes | 304, 338, 309 |
| Daewoo | 341, 312, 309 |
| DBX | 314, 336, 337 |
| Dimensia | 304 |
| Emerson | 319, 320, 316, 317, 318, 341 |
| Fisher | 330, 335 |
| Funai | 338 |
| General Electric | 329, 304, 309 |
| Go Video | 322, 339, 340 |
| Goldstar | 332 |
| Hitachi | 306, 304, 305, 338 |
| Instant Replay | 309, 308 |
| JC Penney | 309, 305, 304, 330, 314, 336, 337 |
| JVC | 314, 336, 337, 345, 346, 347 |
| Kenwood | 314, 336, 332, 337 |
| LG | 332 |
| LXI (SEARS) | 332, 305, 330, 335, 338 |
| Magnavox | 308, 309, 310 |
| Marantz | 314, 336, 337 |
| Marta | 332 |
| Memorex | 309, 335 |
| Minolta | 305, 304 |
| Mitsubishi/MGA | 323, 324, 325, 326 |
| Multitech | 325, 338, 321 |
| NEC | 314, 336, 337 |
| Olympic | 309, 308 |
| Optimus | 327 |
| Orion | 317 |
| Panasonic | 308, 309, 306, 307 |
| Pentax | 305, 304 |
| Philco | 308, 309 |
| Philips | 308, 309, 310 |
| Pioneer | 308 |
| Quasar | 308, 309, 306 |
| RCA/PROSCAN | 304, 305, 308, 309, 311, 312, 313, 310, 329 |
| Realistic | 309, 330, 328, 335, 324, 338 |
| Sansui | 314 |
| Samsung | 322, 313, 321 |
| Sanyo | 330, 335 |
| Scott | 312, 313, 321, 335, 323, 324, 325, 326 |
| Sharp | 327, 328 |
| Signature 2000 (M.Ward) | 338, 327 |
| SV 2000 | 338 |

Manufacturer Code

| | |
|-----------|-------------------------|
| Sylvania | 308, 309, 338, 310 |
| Symphonic | 338 |
| Tashiro | 332 |
| Tatung | 314, 336, 337 |
| Teac | 314, 336, 338, 337 |
| Technics | 309, 308 |
| Toshiba | 312, 311 |
| Wards | 327, 328, 335, 331, 332 |
| Yamaha | 314, 330, 336, 337 |
| Zenith | 331 |

Cable Boxes

| Manufacturer | Code |
|--------------------------------|--|
| Sony | 230 |
| Hamlin/Regal | 222, 223, 224, 225, 226 |
| Jerrold/General Inst./Motorola | 201, 202, 203, 204, 205, 206, 207, 208, 218, 222 |
| Oak | 227, 228, 229 |
| Panasonic | 219, 220, 221 |
| Pioneer | 211, 214, 215 |
| Scientific Atlanta | 209, 210, 211 |
| Tocom | 216, 217 |
| Zenith | 212, 213 |

Satellite Receivers

| Manufacturer | Code |
|------------------|----------|
| Sony | 801 |
| Dish Network | 810 |
| EchoStar | 810 |
| General Electric | 802 |
| Hitachi | 805 |
| Hughes | 804 |
| Mitsubishi | 809 |
| Panasonic | 803 |
| Philips | 811 |
| RCA/PROSCAN | 802, 808 |
| Toshiba | 806, 807 |
| Samsung | 812 |

* If an Aiwa VCR does not work even though you enter the code for Aiwa, enter the code for Sony instead.

Notes on your new TV

- Projection Lamp:** Periodic replacement of the projection lamp will maintain the picture quality. See *Replacement Lamp section of the manual.*
- Wide Mode:** Selecting appropriate screen mode will increase enjoyment of your TV viewing.

When watching a Standard Definition source (4:3 aspect ratio) on this TV, you will see bars on both the left and right sides of the screen. Press the WIDE button on your remote to cycle through different screen modes to fill the screen in various ways. (Wide Zoom enlarges the center, Normal is how your TV receives the signal, Full stretches horizontally and Zoom enlarges the image proportionately to fill the screen.)

When watching a High Definition source (16:9 aspect ratio) on this TV, you will see screen filled with an image. Press the WIDE button on your remote to toggle through different screen modes, especially zooming in to the center of the screen. (Wide Zoom enlarges the center, Full displays the image at its original size, Zoom enlarges the image proportionately to fill the screen.)

When the TV receives a 720p or 1080i formatted signal, the Normal mode is not available. See *Using WIDE Button section of the manual.*

- If you feel the images on the screen is stretched, press the WIDE button to select a different screen mode.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>