

HISTORY INFORMATION FOR THE FOLLOWING MANUAL:

SERVICE MANUAL

AZ1-L Chassis

ORIGINAL MANUAL ISSUE DATE: 1/2010

| Version | Date | Subject |
|----------------|-------------|--|
| 1.0 | 1/25/2010 | No revisions or updates |
| 2.0 | 1/29/2010 | Corrected part information for Lens. Replaced pages i, 16-18. |
| 3.0 | 3/17/2010 | Corrected Disassembly/Part Number Information section. Replaced pages 12-20. Corrected Service Adjustment Information. Reissue entire manual. |

LCD Digital Color TV

SONY®

9-888-268-03

SERVICE MANUAL

AZ1-L Chassis

LCD Digital Color TV

SONY®

9-888-268-03

MODEL LIST

| <i>MODEL</i> | <i>COMMANDER</i> | <i>DESTINATION</i> |
|--------------------|------------------|--------------------|
| KDL-32EX700 | <i>RM-YD033</i> | <i>US</i> |
| KDL-32EX700 | <i>RM-YD055</i> | <i>CND/MX</i> |
| KDL-40EX700 | <i>RM-YD033</i> | <i>US</i> |
| KDL-40EX700 | <i>RM-YD055</i> | <i>CND/MX</i> |
| KDL-40EX703 | <i>RM-YD055</i> | <i>CND</i> |
| KDL-46EX700 | <i>RM-YD033</i> | <i>US</i> |
| KDL-46EX700 | <i>RM-YD055</i> | <i>CND/MX</i> |
| KDL-46EX701 | <i>RM-YD033</i> | <i>US</i> |
| KDL-46EX701 | <i>RM-YD055</i> | <i>CND</i> |
| KDL-46EX703 | <i>RM-YD055</i> | <i>CND</i> |

| <i>MODEL</i> | <i>COMMANDER</i> | <i>DESTINATION</i> |
|--------------------|------------------|--------------------|
| KDL-52EX700 | <i>RM-YD033</i> | <i>US</i> |
| KDL-52EX700 | <i>RM-YD055</i> | <i>CND/MX</i> |
| KDL-52EX701 | <i>RM-YD033</i> | <i>US</i> |
| KDL-52EX701 | <i>RM-YD055</i> | <i>CND</i> |
| KDL-52EX703 | <i>RM-YD055</i> | <i>CND</i> |
| KDL-60EX700 | <i>RM-YD033</i> | <i>US</i> |
| KDL-60EX700 | <i>RM-YD055</i> | <i>CND/MX</i> |
| KDL-60EX701 | <i>RM-YD033</i> | <i>US</i> |
| KDL-60EX701 | <i>RM-YD055</i> | <i>CND</i> |
| KDL-60EX703 | <i>RM-YD055</i> | <i>CND</i> |

TABLE OF CONTENTS

| | |
|--|-----------|
| Specifications | 1 |
| Warnings and Cautions | 3 |
| Safety-Related Warning | 5 |
| Safety Check-Out | 6 |
| Self Diagnosis Functions | 8 |
| SEC 1. Disassembly/Part Number Information | 12 |
| 1-1. Table-Top Stand Assembly Removal..... | 12 |
| 1-2. Rear Cover, Switch Unit, and Power Switch Removal..... | 13 |
| 1-2-1. KDL-32EX700 and KDL-40EX700/40EX703..... | 13 |
| 1-2-2. KDL-46EX700/46EX701/46EX703 and KDL-52EX700/52EX701/52EX703..... | 14 |
| 1-2-3. KDL-60EX700/60EX701/60EX703..... | 14 |
| 1-3. Speakers, HLR Board, and LCD Panel Brackets Removal..... | 15 |
| 1-4. GE3-A/GE2-A/GE2-B (Power) Boards, BAL Board, HMS2 Board, and LCD Panel Removal..... | 16 |
| 1-4-1. KDL-32EX700/40EX700/40EX703..... | 16 |
| 1-4-2. KDL-46EX700/46EX701/46EX703..... | 17 |
| 1-4-3. KDL-52EX700/52EX701/52EX703..... | 17 |
| 1-4-4. KDL-60EX700/60EX701/60EX703..... | 18 |
| 1-5. Cleaning the LCD Panel..... | 18 |
| 1-6. Screw Legend..... | 18 |
| 1-6-1. KDL-32EX700..... | 18 |
| 1-6-2. KDL-40EX700/40EX703..... | 18 |
| 1-6-3. KDL-46EX700/46EX701/46EX703..... | 18 |
| 1-6-4. KDL-52EX700/52EX701/52EX703..... | 18 |
| 1-6-5. KDL-60EX700/60EX701/60EX703..... | 18 |

TABLE OF CONTENTS

| | |
|--|-----------|
| 1-7. Connectors | 19 |
| 1-7-1. KDL-32EX700 | 19 |
| 1-7-2. KDL-40EX700/40EX703 | 19 |
| 1-7-3. KDL-46EX700/46EX701/46EX703 | 20 |
| 1-7-4. KDL-52EX700/52EX701/52EX703 | 20 |
| 1-7-5. KDL-60EX700/60EX701/60EX703 | 20 |
| 1-8. Accessories and Packaging | 21 |
| 1-9. Miscellaneous | 21 |
| 1-10. Remote Commander | 21 |
| SEC 2. Service Adjustments | 22 |
| 2-1. Accessing Service Adjustment Mode | 22 |
| 2-1-1. Viewing the Service Menus | 23 |
| 2-1-2. Using the Remote Commander to View or Change Service Data | 23 |
| 2-2. Adjustments After Replacing the BAL Board or LCD Panel | 24 |
| 2-2-1. Updating the Software | 24 |
| 2-2-2. Selecting the Model | 24 |
| 2-2-3. Setting the Destination | 25 |
| 2-2-4. Verifying the Model and Panel Information | 26 |
| 2-2-5. Reconnecting All Cables | 27 |
| 2-3. White Balance Adjustments | 28 |
| 2-4. Resetting the TV to Factory Condition | 29 |
| 2-4-1. Resetting the TV to Factory Condition Using Service Mode | 29 |

TABLE OF CONTENTS

| | |
|--|-----------|
| SEC 3. Diagrams | 30 |
| 3-1. Circuit Boards Location | 30 |
| 3-1-1. KDL-32EX700 | 30 |
| 3-1-2. KDL-40EX700/40EX703 | 31 |
| 3-1-3. KDL-46EX700/46EX701/46EX703 | 32 |
| 3-1-4. KDL-52EX700/52EX701/52EX703 | 33 |
| 3-1-5. KDL-60EX700/60EX701/60EX703 | 34 |
| 3-2. Block Diagram | 35 |

SPECIFICATIONS

| Model name KDL- | 60EX703 60EX701 60EX700 | 52EX703 52EX701 52EX700 | 46EX703 46EX701 46EX700 | 40EX703 40EX700 | 32EX700 |
|-----------------------------|--|-------------------------------|-------------------------------|--------------------|---------|
| System | | | | | |
| Television system | NTSC: American TV standard ATSC (8VSB terrestrial): ATSC compliant 8VSB QAM on cable: ANSI/SCTE 07 2000 (Does not include CableCARD functionality) | | | | |
| Channel coverage | Analog terrestrial: 2 - 69 / Digital terrestrial: 2 - 69 Analog Cable: 1 - 135 / Digital Cable: 1 - 135 | | | | |
| Panel system | LCD (Liquid Crystal Display) Panel | | | | |
| Speaker output | 10 W + 10 W | | | | |
| Input/Output jacks | | | | | |
| CABLE/ANTENNA | 75-ohm external terminal for RF inputs | | | | |
| VIDEO IN 1/2 | VIDEO / AUDIO | | | | |
| COMPONENT IN 1/2 | YPBPR (Component Video) / Signal format: 480i, 480p, 720p, 1080i, 1080p / AUDIO | | | | |
| HDMI IN 1/2/3/4 | HDMI: Video: 480i, 480p, 720p, 1080i, 1080p, 1080/24p Audio: Two channel linear PCM 32, 44.1 and 48 kHz, 16, 20 and 24 bits, Dolby Digital AUDIO (HDMI IN 4) | | | | |
| AUDIO OUT | 500 mVrms (typical) | | | | |
| DIGITAL AUDIO OUT (OPTICAL) | PCM/Dolby Digital optical signal | | | | |
| PC IN | D-sub 15-pin, analog RGB | | | | |
| PC/HDMI 4 AUDIO IN | Stereo mini jack | | | | |
| LAN | 10BASE-T/100BASE-TX connector (Connection speed may differ depending on the network environment. 10BASE-T/100BASE-TX communication rate and communication quality are not guaranteed for this TV.)*1 | | | | |
| USB/DLNA | Refer to the i-Manual for supported format. | | | | |

*1 For LAN connections, use a Category 7 10BASE-T/100BASE-TX cable (not supplied).

Licensing Information

Macintosh is a trademark of Apple Inc., registered in the U.S. and other countries.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.

Ferguson Patent Properties, LLC:
U.S. Patent No. 5,717,422
U.S. Patent No. 6,816,141

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.


In the United States, TV Guide and TV Guide On Screen are registered trademarks of TV Guide Entertainment Group, Inc. and/or its subsidiaries or affiliates, and are used under a license by Gemstar-TV Guide International, Inc. and/or its subsidiaries. In Canada, TV Guide is a registered mark of Transcontinental Inc., and is used under a license by Gemstar-TV Guide International, Inc. and/or its subsidiaries.

The TV Guide On Screen system is manufactured under license from Gemstar-TV Guide International, Inc. and/or its subsidiaries.

The TV Guide On Screen system is protected by one or more of the following United States patents 6,498,895; 6,850,693; 6,396,546; 5,940,073; 6,239,794 to Gemstar-TV Guide International, Inc. and/or its subsidiaries.

Gemstar-TV Guide International, Inc. and/or its related affiliates are not in any way liable for the accuracy or availability of the program schedule information or other data in the TV Guide On Screen system and cannot guarantee service availability in your area. In no event shall Gemstar-TV Guide International, Inc. and/or its related affiliates be liable for any damages in connection with the accuracy or availability of the program schedule information or other data in the TV Guide On Screen system.

Blu-ray Disc is a trademark.

“BRAVIA” and BRAVIA, S-Force, Motionflow, BRAVIA Sync, and  are trademarks or registered marks of Sony Corporation.

“XrossMediaBar” is a trademark of Sony Corporation. “XMB” is a trademark of Sony Corporation and Sony Computer Entertainment Inc.

“PlayStation” is a registered trademark and “PS3” is a trademark of Sony Computer Entertainment Inc.

DLNA®, the DLNA Logo and DLNA CERTIFIED™ are trademarks, service marks, or certification marks of the Digital Living Network Alliance.



Your BRAVIA TV is ENERGY STAR® qualified in the “Home” mode. It meets strict energy efficiency guidelines set by the U.S. Environmental Protection Agency and Department of Energy. ENERGY STAR is a joint program of these government agencies, designed to promote energy efficient products and practices.

Changes to certain features, settings, and functionalities of this TV (i.e. TV Guide, Picture/Sound, Light Sensor, Power Savings) can increase or change the power consumption.

Depending upon such changed settings, the power consumption may exceed the limits required for the ENERGY STAR qualification in the “Home” mode.

The 32 class has a 31.5 inch viewable image size (measured diagonally).

SPECIFICATIONS

| Model name KDL- | 60EX703 60EX701 60EX700 | 52EX703 52EX701 52EX700 | 46EX703 46EX701 46EX700 | 40EX703 40EX700 | 32EX700 |
|--|--|---|--|---|--|
| Power and others | | | | | |
| Power requirement | 110-240 V AC, 50/60 Hz (U.S.A./Canada 120 V AC, 60 Hz) | | | | |
| Power consumption in use | 208 W | 142 W | 125 W | 107 W | 91 W |
| in DAM*2 | 15 W (You may hear a clicking noise during the download but this is normal.) | | | | |
| in standby | less than 0.17 W with 120 V AC and less than 0.23 W with 240 V AC | | less than 0.13 W with 120 V AC and less than 0.2 W with 240 V AC | | |
| Screen size (inches measured diagonally) | 60 inches | 52 inches | 46 inches | 40 inches | 31.5 inches (32 class) |
| Display resolution | 1,920 dots (horizontal) × 1,080 lines (vertical) | | | | |
| Speaker Full range with speaker box (2) (inches) | 34 × 160 1 3/8 × 6 3/8 | | | | |
| Dimensions withstand (mm) (inches) | 1,431 × 909 × 386 56 3/8 × 35 7/8 × 15 1/4 | 1,252 × 805 × 350 49 3/8 × 31 3/4 × 13 7/8 | 1,118 × 730 × 280 44 1/8 × 28 3/4 × 11 1/8 | 985 × 655 × 280 38 7/8 × 25 7/8 × 11 1/8 | 811 × 539 × 250 32 × 21 1/4 × 9 7/8 |
| without stand (mm) (inches) | 1,431 × 877 × 66 56 3/8 × 34 3/8 × 2 5/8 | 1,252 × 775 × 65 49 3/8 × 30 5/8 × 2 5/8 | 1,118 × 698 × 65 44 1/8 × 27 1/2 × 2 5/8 | 985 × 623 × 64 38 7/8 × 24 5/8 × 2 5/8 | 811 × 507 × 65 32 × 20 × 2 5/8 |
| wall-mount hole pattern (mm) | 400 × 300 | 300 × 300 | | | 200 × 200 |
| wall-mount screw size (mm) | M6 (length: refer to diagram on page 13.) | | | | |
| Mass with stand (kg)/(lb.) | 38.1/84.0 | 27.0/59.5 | 21.3/47.0 | 17.8/39.3 | 12.7/28.0 |
| without stand (kg)/(lb.) | 31.3/69.0 | 22.7/50.0 | 18.4/40.6 | 14.9/32.9 | 10.7/23.6 |
| Supplied accessories | AC power cord (1) / Table-Top Stand (1) *1 (except KDL-60EX700/60EX701/60EX703 / models) / Stand Rear Cover (1) *2 / Fixing screws for Table-Top Stand (M5 × 16) (4) (except KDL-60EX700/60EX701/60EX703 models) / Assembling Screws for Table-Top Stand (M5 × 16) (4) (for KDL-40EX700/40EX703/32EX700 models) / Remote control (1) *3 / Size AAA batteries (2) / USB Wireless LAN Adapter UWA-BR100 (1) (for KDL-60EX701/52EX701/46EX701 models) | | | | |
| Optional accessories | Connecting cables / Support Belt Kit / Wall-Mount Bracket | | | | |

*1 The 32" and 40" models require assembling. Refer to other leaflet to assemble the Table-Top Stand.

*2 The Stand Rear Cover is attached to the Table-Top Stand for 46, 52 and 60 inch models.

*3 Please refer to the model name printed on the remote control.

- Optional accessories availability depends on its stock.
- Design and specifications are subject to change without notice.


WARNINGS AND CAUTIONS

CAUTION

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

CARRYING THE TV


- Carry the TV with the adequate number of people; larger size TVs require two or more people.
- Correct hand placement while carrying the TV is very important for safety and to avoid damage.

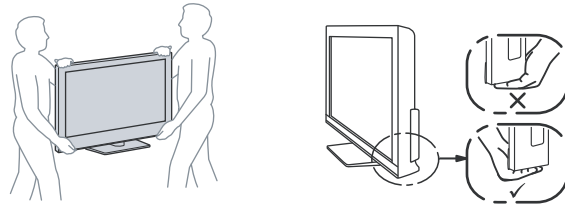

WARNING!!

An isolation transformer should be used during any service to avoid possible shock hazard, because of live chassis. The chassis of this receiver is directly connected to the AC power line.

SAFETY-RELATED COMPONENT WARNING!!

Components identified by shading and  mark on the exploded views are critical for safe operation. Replace all components with Sony parts whose part numbers appear as shown in this manual or in supplements published by Sony. It is essential that all critical parts be replaced only with the part number specified in this manual to prevent electric shock, fire, or other hazard. Circuit adjustments that are critical for safe operation are identified in this manual. Follow these procedures whenever critical components are replaced or improper operation is suspected.

NOTE: Do not modify the original design without obtaining written permission from the manufacturer or you will void the original parts and labor guarantee.


WARNING AND CAUTIONS

ATTENTION!!

Ces instructions de service sont à l'usage du personnel de service qualifié seulement. Pour prévenir le risque de choc électrique, ne pas faire l'entretien autre que celui contenu dans le Mode d'emploi à moins que vous soyez qualifié faire ainsi.

POUR TRANSPORTER LE TÉLÉVISEUR

- Transportez le téléviseur avec le nombre de personnes approprié ; un téléviseur de grande taille doit être transporté par au moins deux personnes.
- Lors du transport du téléviseur, l'emplacement des mains est très important pour votre sécurité, ainsi que pour éviter de causer des dommages.

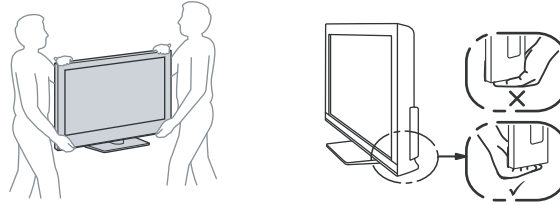

ALERTE!!

Afin d'éviter tout risque d'électrocution provenant d'un châssis sous tension, un transformateur d'isolement doit être utilisé lors de tout dépannage. Le châssis de ce récepteur est directement raccordé à l'alimentation du secteur.

⚠ ATTENTION AUX COMPOSANTS RELATIFS A LA SECURITE!!

Les composants identifiés par une trame et par une marque ⚠ sur les schémas de principe, les vues explosées et les listes de pièces sont d'une importance critique pour la sécurité du fonctionnement. Ne les remplacer que par des composants Sony dont le numéro de pièce est indiqué dans le présent manuel ou dans des suppléments publiés par Sony. Les réglages de circuit dont l'importance est critique pour la sécurité du fonctionnement sont identifiés dans le présent manuel. Suivre ces procédures lors de chaque remplacement de composants critiques, ou lorsqu'un mauvais fonctionnement suspecte.


SAFETY-RELATED WARNING

USE CAUTION WHEN HANDLING THE LCD PANEL

When repairing the LCD panel, be sure you are grounded by using a wrist band.

When installing the LCD panel on a wall, the LCD panel must be secured using the 4 mounting holes on the rear cover.

- 1) Do not press on the panel or frame edge to avoid the risk of electric shock.
- 2) Do not scratch or press on the panel with any sharp objects.
- 3) Do not leave the module in high temperatures or in areas of high humidity for an extended period of time.
- 4) Do not expose the LCD panel to direct sunlight.
- 5) Avoid contact with water. It may cause a short circuit within the module.
- 6) Disconnect the AC power when replacing the inverter circuit.
(High voltage occurs at the inverter circuit at 650Vrms.)
- 7) Always clean the LCD panel with a soft cloth material.
- 8) Use care when handling the wires or connectors of the inverter circuit. Damaging the wires may cause a short.
- 9) Protect the panel from ESD to avoid damaging the electronic circuit (C-MOS).
- 10) During the repair, DO NOT leave the Power On for more than 1 hour while the TV is face down on a cloth.

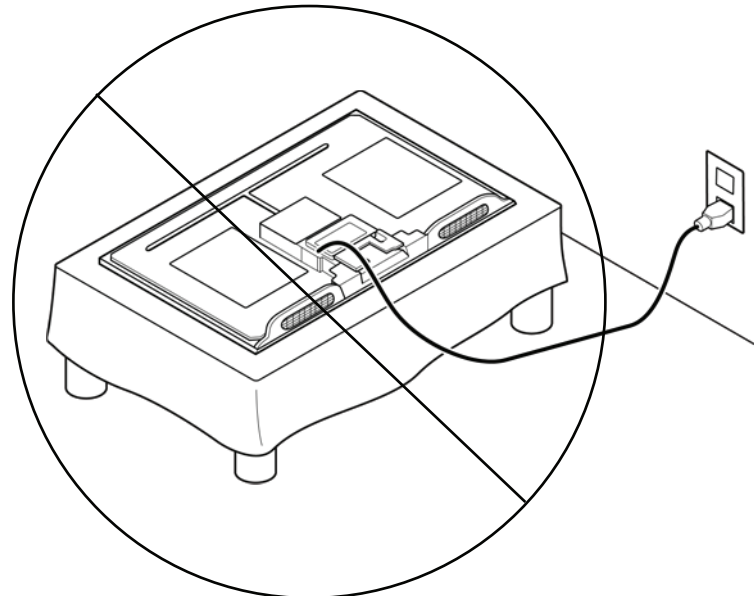

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are “pinched” or touching high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

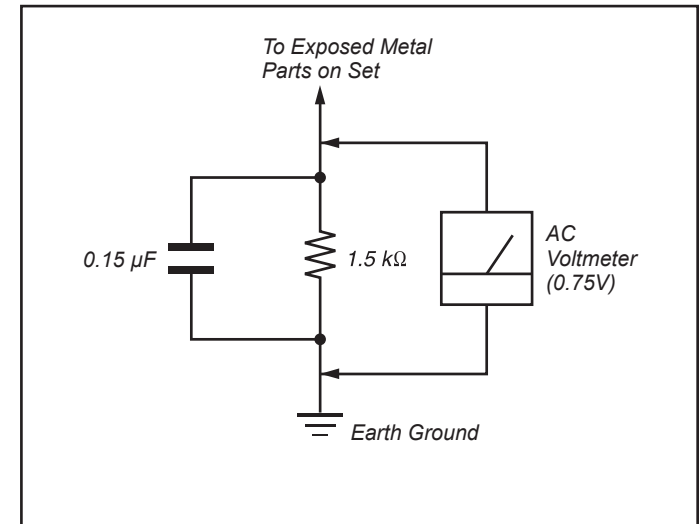


Figure A. Using an AC voltmeter to check AC leakage.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instructions.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low voltage scale.

The Simpson's 250 and Sanwa SH-63TRD are examples of passive VOMs that are suitable. Nearly all battery-operated digital multimeters that have a 2 VAC range are suitable (see Figure A).

HOW TO FIND A GOOD EARTH GROUND

A cold-water pipe is a guaranteed earth ground; the cover-plate retaining screw on most AC outlet boxes is also at earth ground.

If the retaining screw is to be used as your earth ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe with an ohmmeter. The reading should be zero ohms.

If a cold-water pipe is not accessible, connect a 60-to 100-watt trouble-light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side on the line; the lamp should light at normal brilliance if the screw is at ground potential (see Figure B).

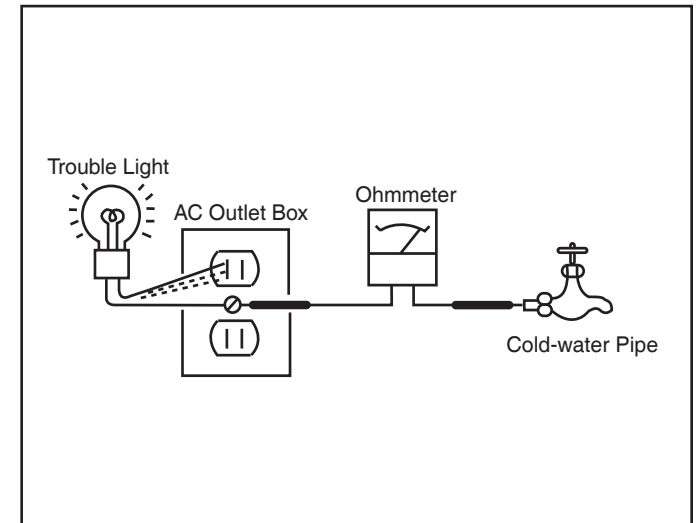


Figure B. Checking for earth ground.

SELF DIAGNOSIS FUNCTIONS



SELF DIAGNOSIS FUNCTION

The units in this manual contain a self-diagnostic function. If an error occurs, the STANDBY LED will automatically begin to flash. The number of times the LED flashes translates to a probable source of the problem. A definition of the STANDBY LED flash indicators is listed in the instruction manual for the user's knowledge and reference. If an error symptom cannot be reproduced, the remote commander can be used to review the failure occurrence data stored in memory to reveal past problems and how often these problems occur.

DIAGNOSTIC TEST INDICATORS

When an error occurs, the STANDBY LED will flash a set number of times to indicate the possible cause of the problem. If there is more than one error, the LED will identify the first of the problem areas.



Result for all of the following diagnostic items are displayed on screen.

If the screen displays a "0", no error has occurred .

| Diagnostic Item | Diagnostic Item Description | Number of times Standby LED blinks | Possible Location |
|-----------------|---|------------------------------------|--|
| RGB_SEN | RGB Sensor ACK Error | NA | NA |
| MAIN_POWER | Main Power Over Voltage Protection | 2 | GE3A (Power) BOARD (KDL-32EX700/40EX700/40EX703 Only) GE2B (Power) BOARD (KDL-46EX700/46EX701/46EX703/52EX700/52EX701/52EX703 Only) GE2A (Power) BOARD (KDL-60EX700/60EX701/60EX703 Only) BAL Board |
| DC_ALERT | DC Alert | 3 | BAL Board |
| DTT-WDT | DTT Error | | GE3A (Power) BOARD (KDL-32EX700/40EX700/40EX703 Only) |
| AUD_PROT | Audio Error Detection | | GE2B (Power) BOARD (KDL-46EX700/46EX701/46EX703/52EX700/52EX701/52EX703 Only) GE2A (Power) BOARD (KDL-60EX700/60EX701/60EX703 Only) |
| BALANCER | Panel Balancer Error | 4 | BAL Board |
| TCON_ERR | TCON Error | 5 | BAL Board |
| HFR_ERR | HFR Error | | LCD Panel |
| P_ID_ERR | Panel ID NVM Error | | TCON Control MT Board |
| BACKLITE | Backlight Error | 6 | BAL Board |
| TEMP_ERR | Temperature Error | 7 | BAL Board |
| FAN_ERR | Fan Error (Not Used in these models) | | NA |

SELF DIAGNOSIS FUNCTIONS

STANDBY LED FLASH COUNT

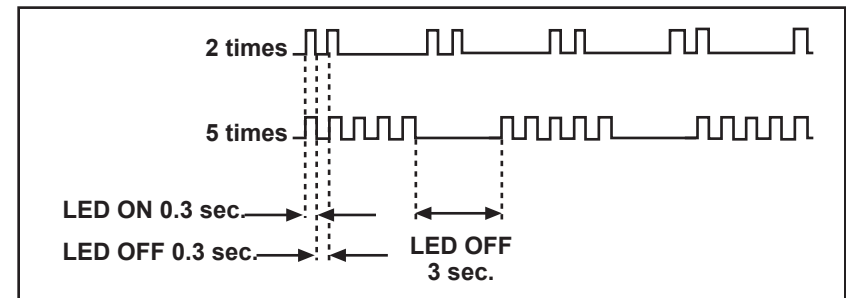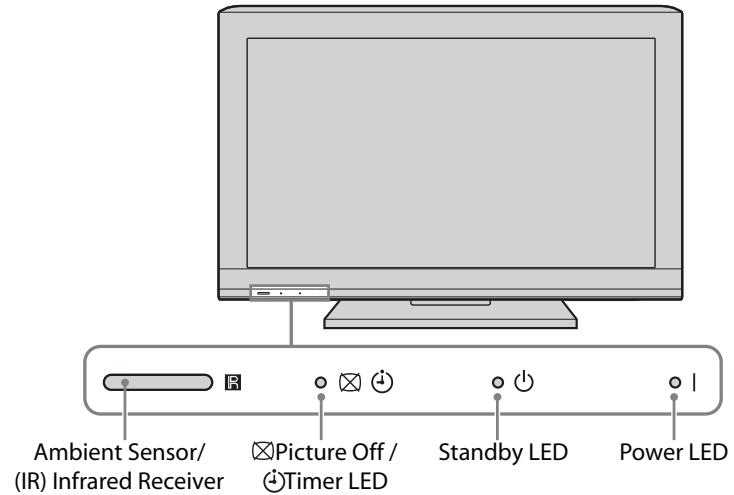

SELF DIAGNOSIS FUNCTIONS

VIEWING THE SELF CHECK DIAGNOSTIC LIST

For errors with symptoms such as “power sometimes shuts off” or “screen sometimes goes out” that cannot be confirmed, it is possible to bring up past occurrences of a failure for confirmation on the Self Check diagnostic screen:

1. TV must be in standby mode. (Power off).
2. Press the following buttons on the Remote Commander within a second of each other:

DISPLAY → Channel 5 → Volume - → POWER.

↑ * NOTE: This differs from accessing Service Adjustments Mode (Volume +)

The screenshot shows the 'SELF CHECK' menu with the following data:

| Diagnostic Item | Error history (Most recent time the failure occurred) | Error history (Failure time before the last occurrence) | Error history (Failure time before the 2 nd to last occurrence) | Error Count (00-99) |
|-----------------|---|---|--|---------------------|
| 000 RGB_SEN | | | | 00 |
| 002 MAIN_POWE | 0501210811 | 0412311234 | 0311111825 | 00 |
| 003 DC_ALERT1 | | | | 00 |
| 003 AUD_PROT | | | | 00 |
| 003 DTT_WDT | | | | 00 |
| 004 BALANCER | | | | 00 |
| 005 HFR_ERR | | | | 00 |
| 005 TCON_ERR | | | | 00 |
| 005 P_ID_ERR | | | | 00 |
| 006 BACKLITE | | | | 00 |
| 007 TEMP_ERR | | | | 00 |
| 007 FAN_ERR | | | | 00 |
| 010 RESERVED | | | | 00 |
| 011 RESERVED | | | | 00 |

| | | |
|-------|-------|-------|
| 12345 | 00333 | 06789 |
|-------|-------|-------|

Explanatory text on the right side of the image:

- StandBy LED Flash Count
- Diagnostic Item
- Error history (Most recent time the failure occurred)
- Error history (Failure time before the last occurrence)
- Error history (Failure time before the 2nd to last occurrence)
- Error Count (00-99)
- Panel operation time by hour (MAX:65535)
- Boot count (MAX:65535)
- Total operation time by hour (MAX:65535)

SELF DIAGNOSIS FUNCTIONS

CLEARING THE SELF CHECK DIAGNOSTIC LIST

Since the diagnostic results displayed on the screen are not automatically cleared, always check the self-diagnostic screen after you have completed the repairs to be sure you have cleared the result display to "0".

1. To clear the Error history and Error count: Press the Channel **8** → Channel **0**.
2. To clear the Panel operation time: Press the Channel **7** → Channel **0**.


EXITING THE SELF CHECK DIAGNOSTIC SCREEN

1. To exit the Self Diagnostic screen, turn off the power to the TV by pressing the POWER button on the remote or the POWER button on the TV.


SEC 1. DISASSEMBLY/PART NUMBER INFORMATION

1-1. TABLE-TOP STAND ASSEMBLY REMOVAL

- Ⓐ Remove 4 screws from Table-Top Stand Assembly
- Ⓑ Lift up TV set to detach from Table-Top Stand Assembly

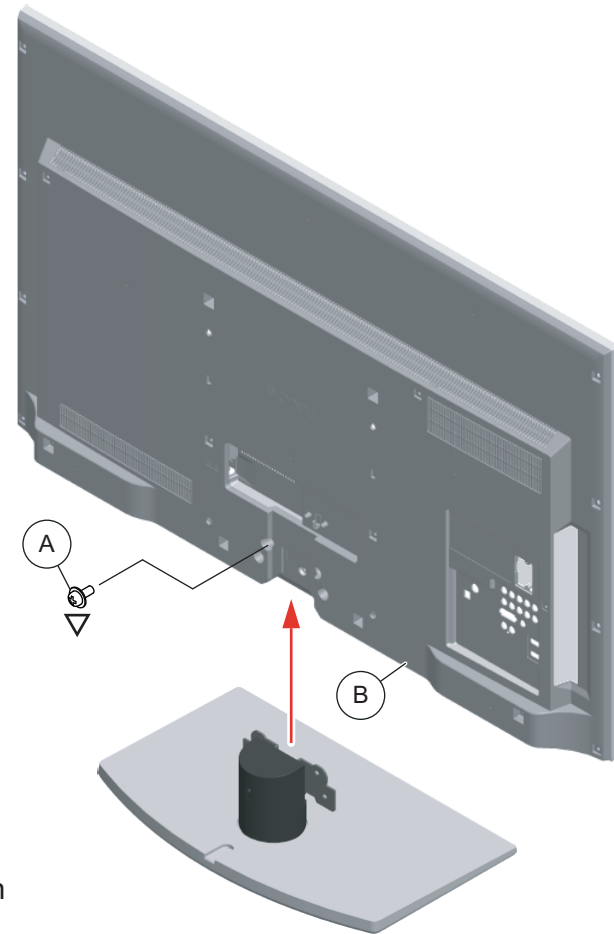

- Ⓒ Gently place the TV set face down onto a soft cloth

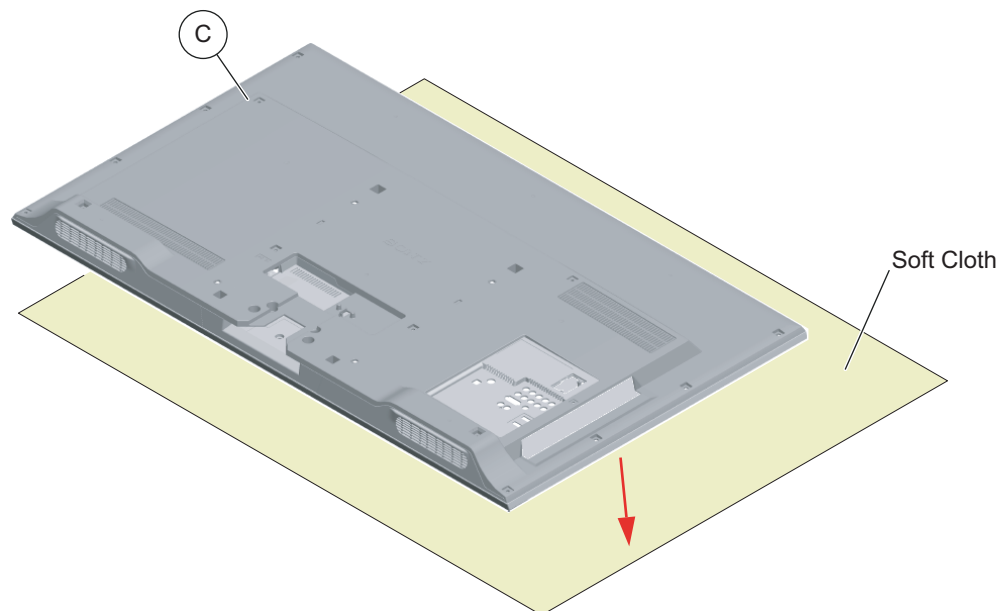

Components not identified by a part number or description are not stocked because they are seldom required for routine service.

The component parts of an assembly are indicated by the reference numbers in the far right column of the parts list and within the dotted lines of the diagram.

* Items marked with an asterisk are not stocked since they are seldom required for routine service. Expect some delay when ordering these components.


NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE: The components identified by a red outline and a \triangle mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.

(Check the [Sony Electronics Service Information](#) website for any additional service related issues for this model.)

| | | |
|---|--------------|-------------------|
| ▽ | 2-580-608-01 | SCREW, +PSW M5X16 |
|---|--------------|-------------------|

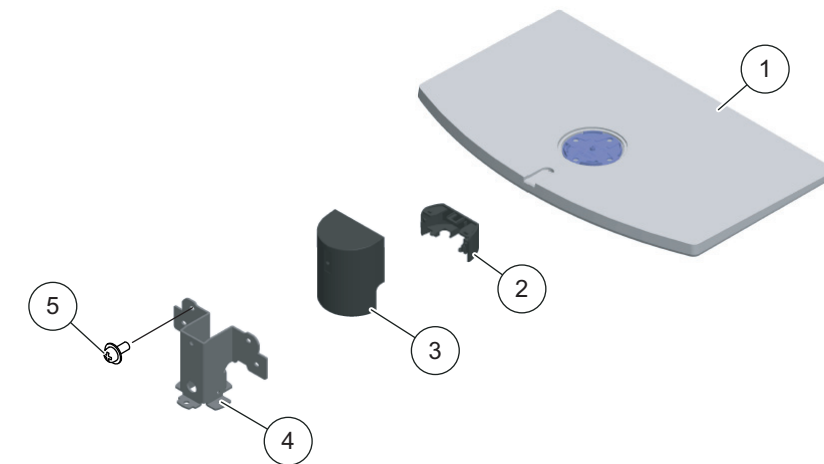

| REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] | REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] |
|----------|--------------|---|---------------------|----------|--------------|---|---|
| 1 | X-2547-875-1 | BASE (M3A) ASSY (KDL-32EX700 ONLY) | | 4 | 4-170-449-01 | NECK (M3A) (KDL-32EX700 ONLY) | |
| 1 | X-2547-876-1 | BASE (ML3A) ASSY (KDL-40EX700/40EX703/46EX700/46EX701/46EX703 ONLY) | | 4 | 4-170-450-01 | NECK (ML3A) (KDL-40EX700/40EX703/46EX700/46EX701/46EX703 ONLY) | |
| 1 | X-2547-877-1 | BASE (LL3A) ASSY (KDL-52EX700/52EX701/52EX703 ONLY) | | 4 | 4-170-451-01 | NECK (LL3A) (KDL-52EX700/52EX701/52EX703 ONLY) | |
| 1 | X-2546-099-1 | BASE (LLL3A) ASSY (KDL-60EX700/60EX701/60EX703 ONLY) | | 4 | 4-170-452-01 | NECK (LLL3A) (KDL-60EX700/60EX701/60EX703 ONLY) | |
| 2 | 4-170-477-01 | COVER, NECK (M3A FRONT) (KDL-32EX700/40EX700/40EX703/46EX700/46EX701/46EX703 ONLY) | | 5 | 2-580-608-01 | SCREW, +PSW M5X16 (SCREWS TO ATTACH TABLE-TOP STAND TO LCD TV) | For product protection and safety reasons, Sony strongly recommends that you use the screws provided with the TV CAUTION: These screws cannot be used to secure the TV to the Wall Mount Brackets |
| 2 | 4-170-479-01 | COVER, NECK (LL3A FRONT) (KDL-52EX700/52EX701/52EX703 ONLY) | | | | | |
| 2 | 4-170-476-01 | COVER, NECK (LLL3A FRONT) (KDL-60EX700/60EX701/60EX703 ONLY) | | | | | |
| 3 | 4-170-485-01 | COVER, NECK (M3A REAR) (KDL-32EX700/40EX700/40EX703/46EX700/46EX701/46EX703 ONLY) | | | | | |
| 3 | 4-170-487-01 | COVER, NECK (LL3A REAR) (KDL-52EX700/52EX701/52EX703 ONLY) | | | | | |
| 3 | 4-170-488-01 | COVER, NECK (LLL3A REAR) (KDL-60EX700/60EX701/60EX703 ONLY) | | | | | |


DISASSEMBLY/PART NUMBER INFORMATION

1-2. REAR COVER, SWITCH UNIT, AND POWER SWITCH REMOVAL

(A) Remove screws from Rear Cover to detach from Bezel

10 from KDL-32EX700/40EX700/40EX703/46EX700/46EX701/46EX703 Only
12 from KDL-52EX700/52EX701/52EX703/60EX700/60EX701/60EX703 Only

CAUTION: The Rear Covers on the models listed have sharp edges. Use caution when handling the Rear Cover to avoid injury. Areas marked with Yellow in Figure 1 have sharp edges. The self-tapping screws used to secure the Rear Cover to the unit are shorter than those normally used on Sony televisions. Using a longer screw will cause a penetration of the front bezel assembly.

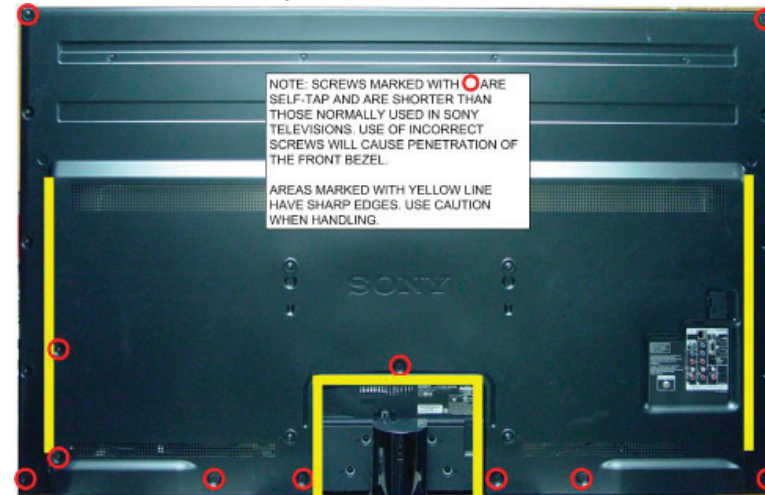

(B) Remove screws from Rear Cover to detach from Panel Bracket

2 from KDL-32EX700/40EX700/40EX703 Only
4 from KDL-46EX700/46EX701/46EX703/52EX700/52EX701/52EX703 Only
6 from KDL-60EX700/60EX701/60EX703 Only

(C) Remove screws from Rear Cover to detach from Panel

3 from KDL-32EX700/40EX700/40EX703/46EX700/46EX701/46EX703 Only
4 from KDL-52EX700/52EX701/52EX703/60EX700/60EX701/60EX703 Only

(D) Remove 4 screws from Rear Cover to detach from Vesa Bracket position

(E) Remove 1 screw from Rear Cover to detach from Terminal position

(F) Lift Hook Cover to detach from Under Cover

(G) Remove 1 screw to detach AC Inlet from Bottom Frame (KDL-60EX700/60EX701/60EX703 Only)

(H) Slide-out AC Inlet to remove from Under Cover (All Except KDL-60EX700/60EX701/60EX703)


(I) Remove screws from Under Cover to detach from Bottom Frame

2 from KDL-32EX700 Only
5 from KDL-40EX700/40EX703/46EX700/46EX701/46EX703/52EX700/52EX701/52EX703 Only
4 from KDL-60EX700/60EX701/60EX703 Only

(J) Lift up Switch Unit and disconnect 1 connector to remove from Panel

(K) Slide out Power Switch and disconnect 1 connector to remove from Switch unit

(L) Remove 2 screws to detach Vesa Brackets from Panel

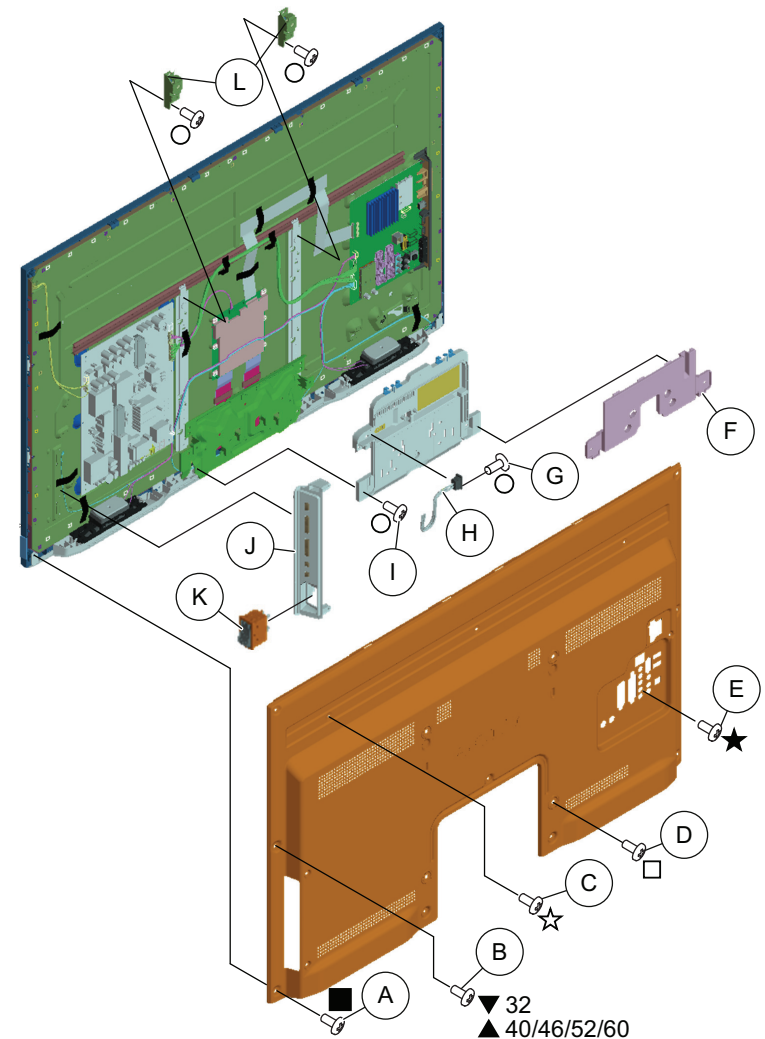

NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.


NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE: The components identified by a red outline and a \triangle mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.

(Check the [Sony Electronics Service Information](http://www.sony.com/electronics/service) website for any additional service related issues for this model.)


1-2-1. KDL-32EX700 AND KDL-40EX700/40EX703


| | | |
|---|--------------|------------------------------|
| ■ | 2-580-639-01 | SCREW, +BVTP 4X12 TYPE2 IT-3 |
| □ | 2-580-611-01 | SCREW, +PSW M6X16 |
| ▼ | 2-580-600-01 | SCREW, +PSW M4X8 |
| ○ | 4-159-298-01 | SCREW, +PSW M4X10 |
| ☆ | 2-580-591-01 | SCREW, +PSW M3X5 |
| ★ | 7-685-646-79 | SCREW, +BVTP 3X8 TYPE2 IT-3 |
| ▲ | 2-580-603-01 | SCREW, +PSW M4X16 |

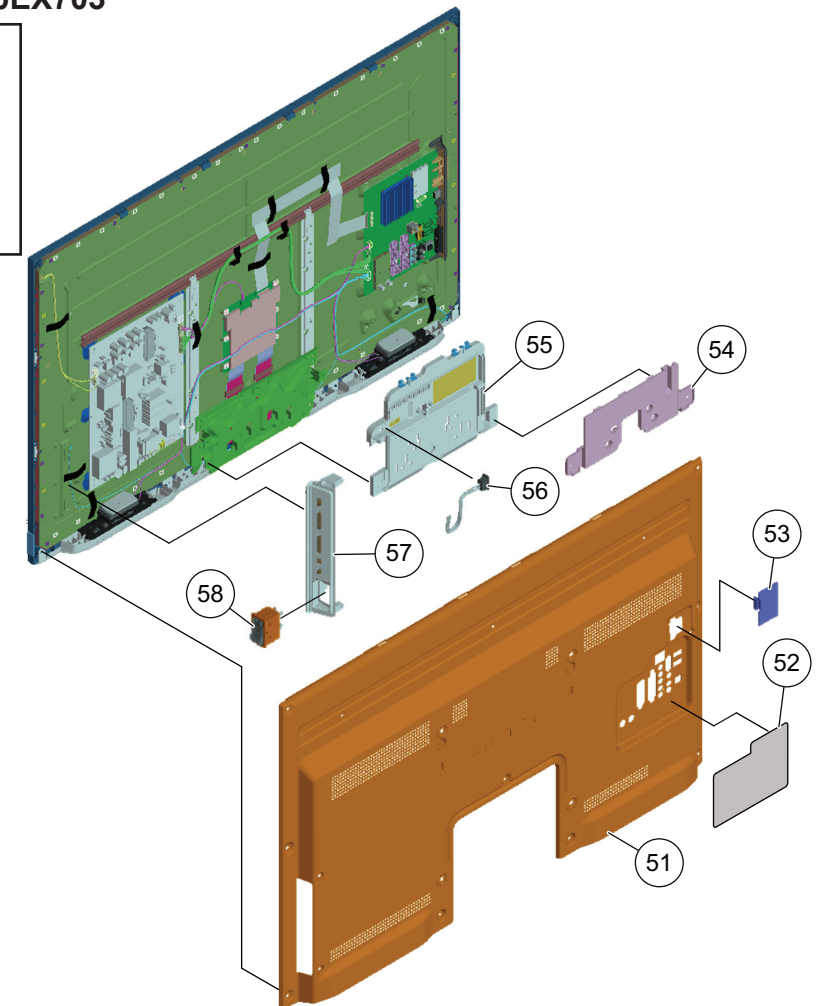


| REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] | REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] |
|----------|--------------|--|---------------------|----------------|--------------|---|---------------------|
| 51 | X-2541-871-1 | REAR COVER(32) ASSY (KDL-32EX700 ONLY) | | 54 | 4-169-437-01 | COVER, HOOK (32) (KDL-32EX700 ONLY) | |
| 51 | X-2541-872-1 | REAR COVER(40) ASSY (KDL-40EX700/40EX703 ONLY) | | 54 | 4-171-125-01 | COVER, HOOK (40/46) (KDL-40EX700/40EX703 ONLY) | |
| 52 | 4-164-917-01 | LABEL, REAR TERMINAL (US/CND MODELS ONLY) | | 55 | 4-169-434-01 | COVER, UNDER (32) (KDL-32EX700 ONLY) | |
| 52 | 4-164-917-11 | LABEL, REAR TERMINAL (MX MODELS ONLY) | | 55 | X-2547-768-1 | COVER, UNDER (40/46/52) ASSY (KDL-40EX700/40EX703 ONLY) | |
| 53 | 3-297-324-02 | COVER, ECS | | \triangle 56 | 1-842-031-11 | AC INLET (2P) | |
| | | | | 57 | 1-487-804-11 | SWITCH UNIT | |
| | | | | 58 | 1-798-309-11 | POWER SWITCH | |

DISASSEMBLY/PART NUMBER INFORMATION

 
NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


NOTE: The components identified by a red outline and a  mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.


(Check the [Sony Electronics Service Information](http://www.sony.com/electronics/service) website for any additional service related issues for this model.)


1-2-2.KDL-46EX700/46EX701/46EX703 AND KDL-52EX700/52EX701/52EX703

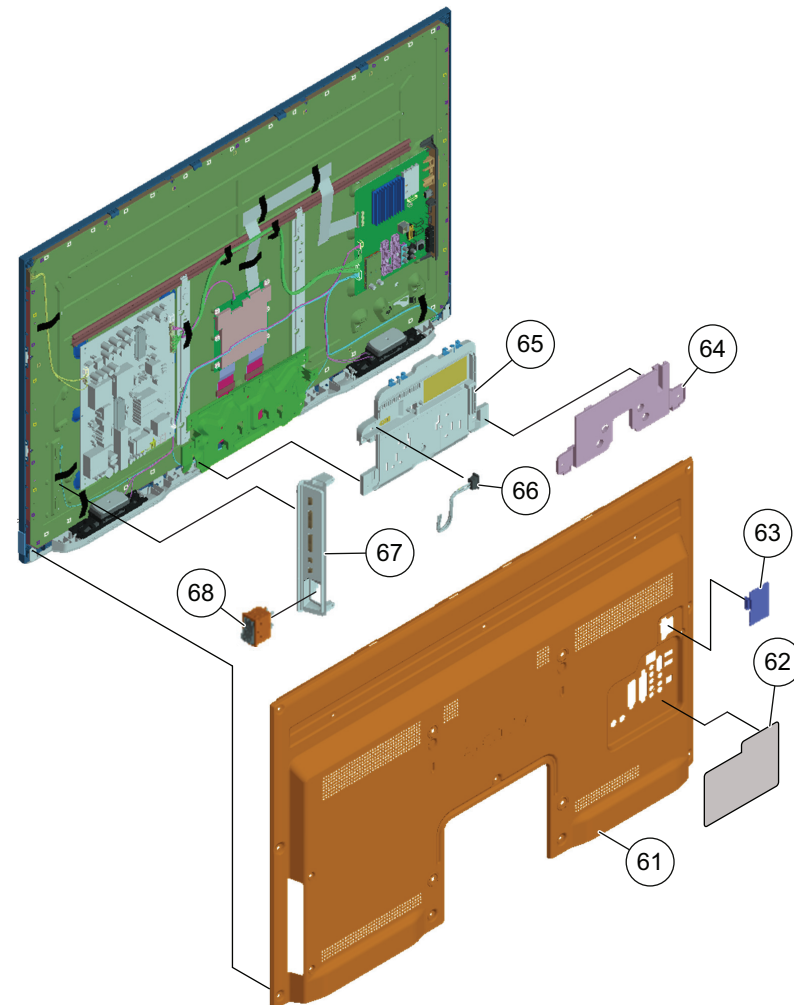

1-2-3.KDL-60EX700/60EX701/60EX703

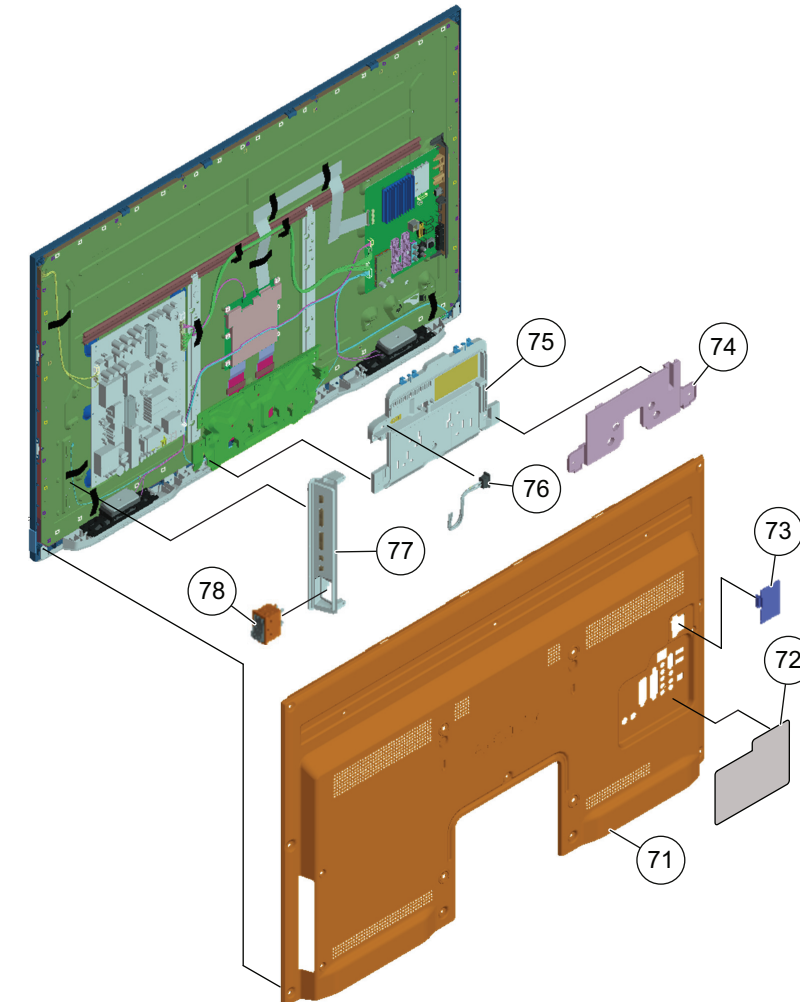


| REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] | REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] |
|----------|--------------|--|---------------------|---|--------------|---|---------------------|
| 61 | X-2541-873-1 | REAR COVER (46) ASSY (KDL-46EX700/46EX701/46EX703 ONLY) | | 63 | 3-297-324-02 | COVER, ECS | |
| 61 | X-2541-874-1 | REAR COVER(52) ASSY (KDL-52EX700/52EX701/52EX703 ONLY) | | 64 | 4-171-125-01 | COVER, HOOK (40/46) (KDL-46EX700/46EX701/46EX703 ONLY) | |
| 62 | 4-164-917-01 | LABEL, REAR TERMINAL (US/CND MODELS ONLY) | | 64 | 4-169-439-01 | COVER, HOOK (52) (KDL-52EX700/52EX701/52EX703 ONLY) | |
| 62 | 4-164-917-11 | LABEL, REAR TERMINAL (MX MODELS ONLY) | | 65 | X-2547-768-1 | COVER, UNDER (40/46/52) ASSY | |
| | | | |  | 1-842-031-11 | AC INLET (2P) | |
| | | | | 67 | 1-487-804-11 | SWITCH UNIT | |
| | | | | 68 | 1-798-309-11 | POWER SWITCH | |

| REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] | REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] |
|----------|--------------|--|---------------------|---|--------------|--------------|---------------------|
| 71 | X-2541-875-1 | REAR COVER(60) ASSY | |  | 1-842-104-31 | AC INLET | |
| 72 | 4-164-917-01 | LABEL, REAR TERMINAL (US/CND MODELS ONLY) | | 77 | 1-487-804-11 | SWITCH UNIT | |
| 72 | 4-164-917-11 | LABEL, REAR TERMINAL (MX MODELS ONLY) | | 78 | 1-798-309-11 | POWER SWITCH | |
| 73 | 3-297-324-02 | COVER, ECS | | | | | |
| 74 | 4-169-440-01 | COVER, HOOK (60) | | | | | |
| 75 | 4-169-436-01 | COVER, UNDER (60) | | | | | |

DISASSEMBLY/PART NUMBER INFORMATION

1-3. SPEAKERS, HLR BOARD, AND LCD PANEL BRACKETS REMOVAL

- Ⓐ Lift right-side Panel Bracket to detach from Panel
 - 1 from KDL-32EX700/40EX700/40EX703 Only
 - 2 from KDL-46EX700/46EX701/46EX703/52EX700/52EX701/52EX703 Only
 - 3 from KDL-60EX700/60EX701/60EX703 ONLY
- Ⓑ Remove 2 screws from Speaker Bracket Right (KDL-60EX700/60EX701/60EX703 Only)
- Ⓒ Lift up Speaker Bracket Right to detach from Bezel
- Ⓓ Remove screws from Speaker to detach from Speaker Bracket Right
 - 4 from KDL-32EX700 Only
 - 2 from all except KDL-32EX700
- Ⓔ Remove 2 screws from Bottom Frame to detach from Bezel
- Ⓕ Remove screws from Bottom Frame to detach from Panel
 - 1 from all except KDL-60EX700/60EX701/60EX703
 - 2 from KDL-60EX700/60EX701/60EX703 Only
- Ⓖ Remove 2 screws from Speaker Bracket Left (KDL-60EX700/60EX701/60EX703 Only)
- Ⓗ Lift up Speaker Bracket Left to detach from Bezel
- Ⓘ Remove screws from Speaker to detach from Speaker Bracket Left
 - 4 from KDL-32EX700 Only
 - 2 from all except KDL-32EX700
- Ⓝ Disconnect 1 connector from HLR Board and release from LED Guide
- Ⓚ Lift left-side Panel Bracket to detach from Panel
 - 1 from KDL-32EX700/40EX700/40EX703 Only
 - 2 from KDL-46EX700/46EX701/46EX703/52EX700/52EX701/52EX703 ONLY
 - 3 from KDL-60EX700/60EX701/60EX703 Only

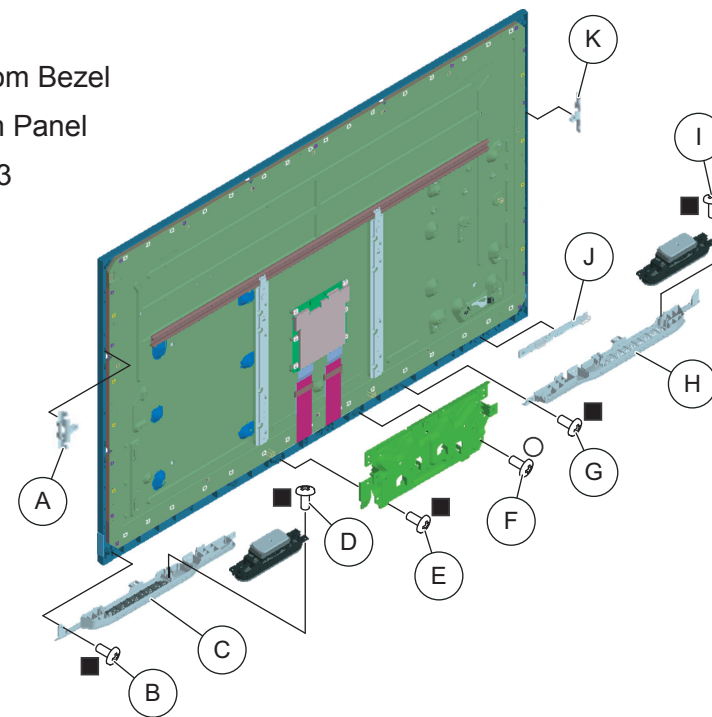


NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE: The components identified by a red outline and a \triangle mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.

(Check the [Sony Electronics Service Information](http://www.sony.com/electronics/service) website for any additional service related issues for this model.)

| | | |
|---|--------------|------------------------------|
| ■ | 2-580-639-01 | SCREW, +BVTP 4X12 TYPE2 IT-3 |
| ○ | 4-159-298-01 | SCREW, +PSW M4X10 |

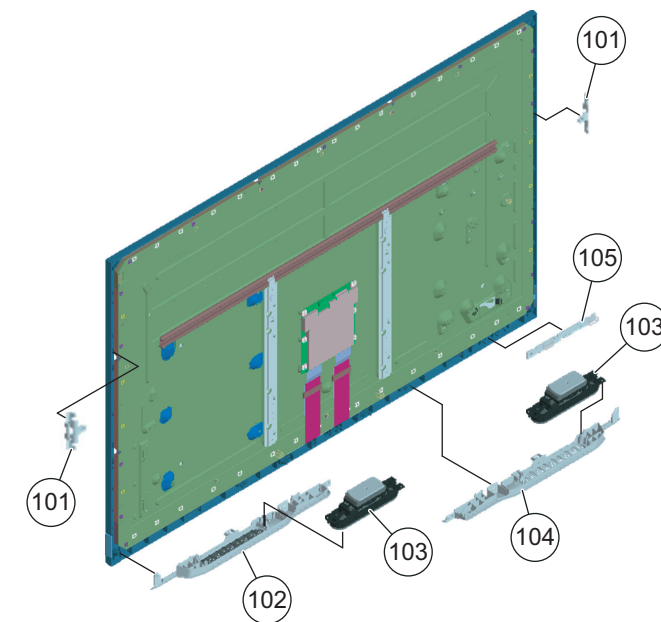


| REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] | REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] |
|----------|--------------|--|---------------------|----------|--------------|--|---------------------|
| 101 | 4-169-442-01 | BRACKET, PANEL(B) (KDL- 32EX700 ONLY) | | 103 | 1-826-873-41 | LOUDSPEAKER (3.4X17.5CM) | |
| 101 | 4-171-196-01 | BRACKET, PANEL(A) (ALL EXCEPT KDL- 32EX700)) | | 104 | X-2547-773-1 | BRACKET,SP(32L) ASSY (KDL- 32EX700 ONLY) | |
| 102 | X-2547-771-1 | BRACKET,SP(32R) ASSY (KDL- 32EX700 ONLY) | | 104 | X-2547-777-1 | BRACKET,SP(40L) ASSY (KDL- 40EX700/40EX703 ONLY) | |
| 102 | X-2547-775-1 | BRACKET,SP(40R) ASSY (KDL- 40EX700/40EX703 ONLY) | | 104 | X-2547-782-1 | BRACKET,SP(46L) ASSY (KDL-46EX700/46EX701/46EX703 ONLY) | |
| 102 | X-2547-779-1 | BRACKET,SP(46R) ASSY (KDL-46EX700/46EX701/46EX703 ONLY) | | 104 | X-2547-786-1 | BRACKET,SP(52L) ASSY (KDL-52EX700/52EX701/52EX703 ONLY) | |
| 102 | X-2547-785-1 | BRACKET,SP(52R) ASSY (KDL-52EX700/52EX701/52EX703 ONLY) | | 104 | X-2547-788-1 | BRACKET,SP(60L) ASSY (KDL-60EX700/60EX701/60EX703 ONLY) | |
| 102 | X-2547-787-1 | BRACKET,SP(60R) ASSY (KDL-60EX700/60EX701/60EX703 ONLY) | | 105 | A-1744-405-A | HLR BOARD, MOUNTED | |

DISASSEMBLY/PART NUMBER INFORMATION

1-4. GE3-A/GE2-A/GE2-B (POWER) BOARDS, BAL BOARD, HMS2 BOARD, AND LCD PANEL REMOVAL

- (A) Remove screws from Power Boards
 - 4 from GE3-A Board (KDL-32EX700/40EX700/40EX703 Only)
 - 4 from GE2-B Board (KDL-46EX700/46EX701/46EX703/52EX700/52EX701/52EX703 Only)
 - 5 from GE2-A Board (KDL-60EX700/60EX701/60EX703 Only)
- (B) Disconnect 5 connectors from Power Boards
- (C) Remove 4 screws from BAL Board
- (D) Disconnect 5 connectors from BAL Board
- (E) Slide Side Jack Bracket to right-side to remove from BAL Board
- (F) Lift HMS2 Board to detach from Bezel
- (G) Slide-out Lens to detach from Bezel
- (H) Carefully Lift up Panel to remove from Bezel

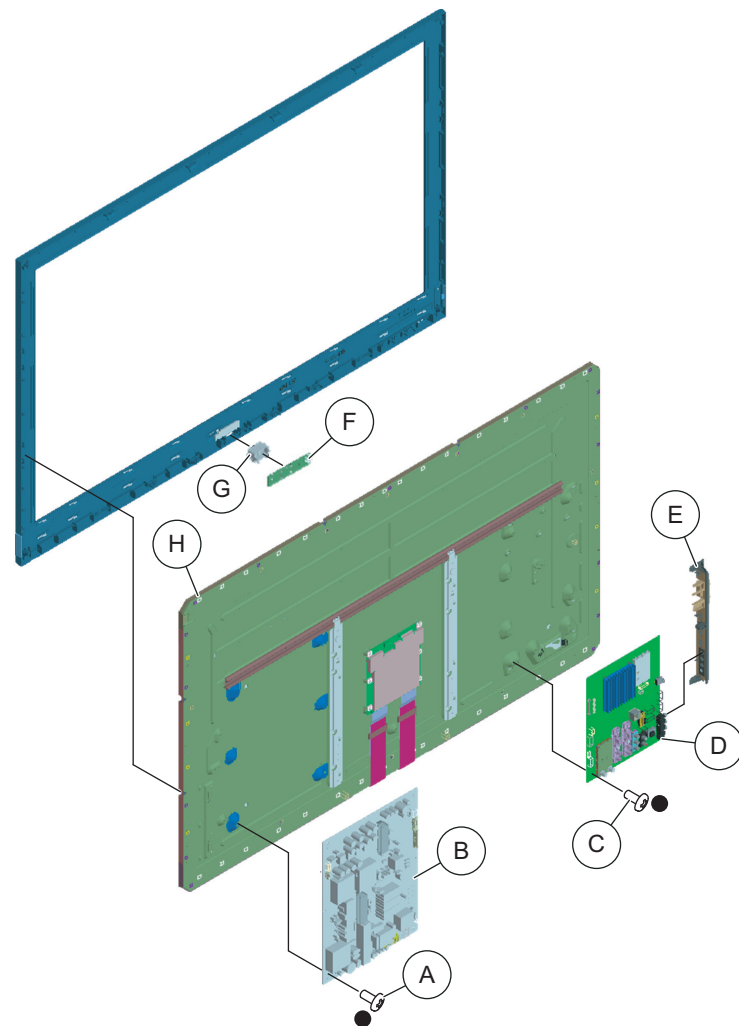

NOTE: The components identified by shading and mark are critical for safety. Replace only with part number specified.


NOTE: Les composants identifiés par un trame et une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE: The components identified by a red outline and a mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.

(Check the [Sony Electronics Service Information](http://www.sony.com/electronics/service) website for any additional service related issues for this model.)


1-4-1. KDL-32EX700/40EX700/40EX703


● 2-580-592-01 SCREW, +PSW M3X8

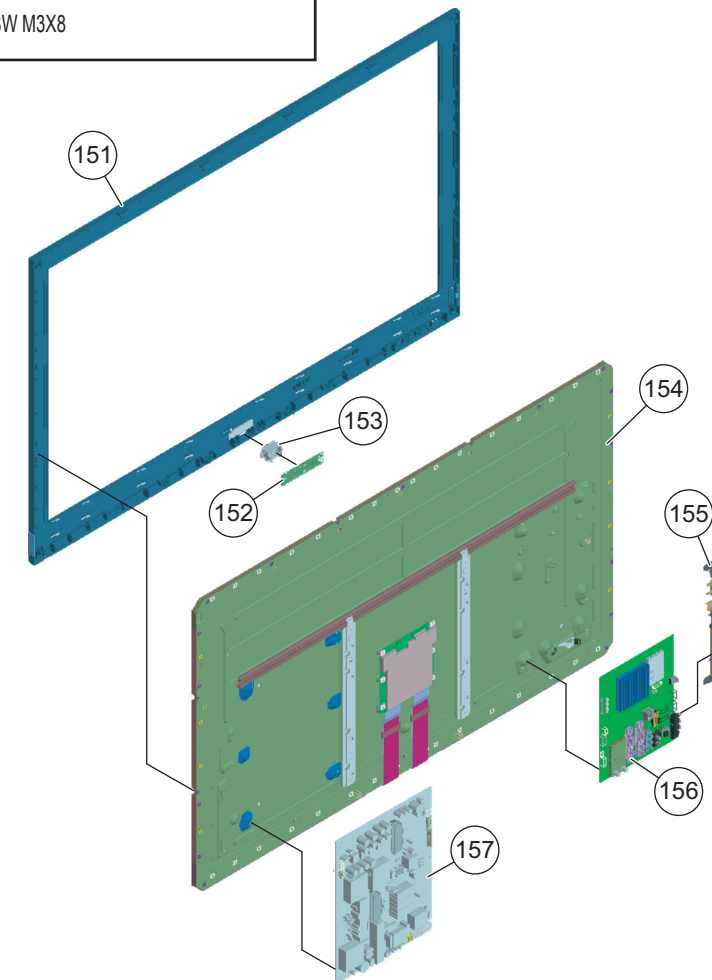


| REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] | REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] |
|----------|--------------|------------------------------------|---------------------|---|--------------|-------------------------------|---------------------|
| 151 | X-2541-866-1 | BEZEL(32) ASSY (KDL- 32EX700 ONLY) | | 153 | 1-856-068-11 | LENS | |
| 151 | X-2541-867-1 | BEZEL(40) ASSY (KDL- 40EX700 ONLY) | | 154 | N/A | LCD PANEL | |
| 151 | X-2547-169-1 | BEZEL(40) ASSY (KDL- 40EX703 ONLY) | | FOR ALL LCD PANEL PART NUMBER INFORMATION REFER TO THE LCD PANELS SERVICE MANUAL | | | |
| 152 | A-1736-860-A | HMS2 BOARD, MOUNTED | | 155 | 4-171-117-01 | BRACKET, SIDE JACK M | |
| | | | | | 156 | A-1763-462-A | BAL BOARD, COMPLETE |
| | | | | NOTE: For BAL Board replacement, please refer to section 2-2. Setting the Destination after Replacing the BAL Board or LCD Panel. | | | |
| | | | | NOTE: Final software is not installed on this BAL Board. Install the update after replacing this board using the instructions provided with the software. | | | |
| | | | | 157 | 1-474-213-11 | GE3-A (POWER) BOARD, COMPLETE | |

DISASSEMBLY/PART NUMBER INFORMATION

 
NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

 
NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE: The components identified by a red outline and a  mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.


(Check the [Sony Electronics Service Information](http://www.sony.com/electronics/service) website for any additional service related issues for this model.)


1-4-2. KDL-46EX700/46EX701/46EX703

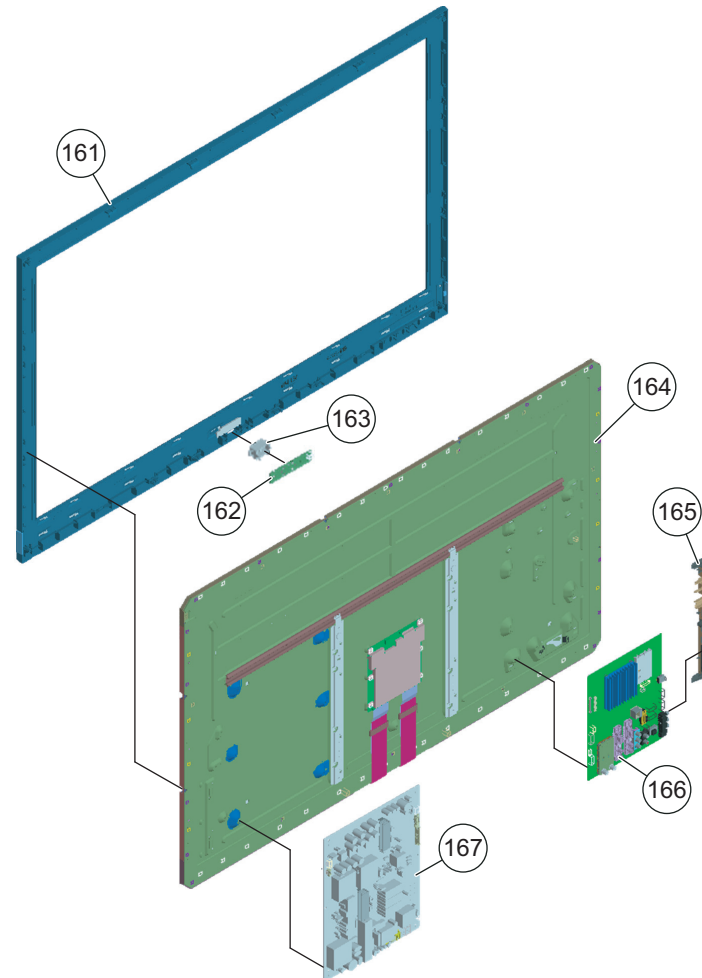

| REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] | REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] |
|----------|--------------|--------------------------------------|---------------------|--|--------------|--|---------------------|
| 161 | X-2541-868-1 | BEZEL(46) ASSY (KDL-46EX700 ONLY) | | 164 | N/A | LCD PANEL FOR ALL LCD PANEL PART NUMBER INFORMATION REFER TO THE LCD PANELS SERVICE MANUAL | |
| 161 | X-2548-036-1 | BEZEL(46) ASSY (KDL-46EX701 ONLY) | | 165 | 4-171-117-01 | BRACKET, SIDE JACK M | |
| 161 | X-2547-170-1 | BEZEL(46) ASSY (KDL-46EX703 ONLY) | |  166 | A-1763-462-A | BAL BOARD, COMPLETE | |
| 162 | A-1736-860-A | HMS2 BOARD, MOUNTED | | NOTE: For BAL Board replacement, please refer to section 2-2. Setting the Destination after Replacing the BAL Board or LCD Panel. NOTE: Final software is not installed on this BAL Board. Install the update after replacing this board using the instructions provided with the software. | | | |
| 163 | 1-856-068-11 | LENS | | 167 | 1-474-212-11 | GE2-B (POWER) BOARD, COMPLETE | |

1-4-3. KDL-52EX700/52EX701/52EX703

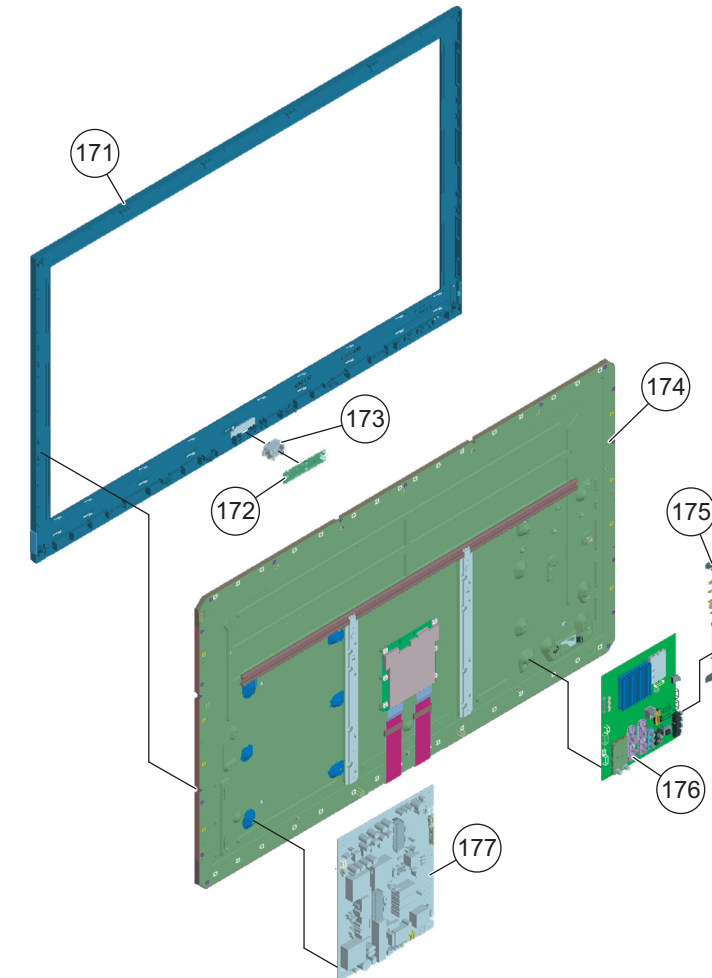

| REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] | REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] |
|----------|--------------|--------------------------------------|---------------------|--|--------------|--|---------------------|
| 171 | X-2541-869-1 | BEZEL(52) ASSY (KDL-52EX700 ONLY) | | 174 | N/A | LCD PANEL FOR ALL LCD PANEL PART NUMBER INFORMATION REFER TO THE LCD PANELS SERVICE MANUAL | |
| 171 | X-2547-166-1 | BEZEL(52) ASSY (KDL-52EX701 ONLY) | | 175 | 4-171-117-01 | BRACKET, SIDE JACK M | |
| 171 | X-2547-171-1 | BEZEL(52) ASSY (KDL-52EX703 ONLY) | |  176 | A-1763-462-A | BAL BOARD, COMPLETE | |
| 172 | A-1736-860-A | HMS2 BOARD, MOUNTED | | NOTE: For BAL Board replacement, please refer to section 2-2. Setting the Destination after Replacing the BAL Board or LCD Panel. NOTE: Final software is not installed on this BAL Board. Install the update after replacing this board using the instructions provided with the software. | | | |
| 173 | 1-856-068-11 | LENS | | 177 | 1-474-212-11 | GE2-B (POWER) BOARD, COMPLETE | |

DISASSEMBLY/PART NUMBER INFORMATION


1-4-4.KDL-60EX700/60EX701/60EX703

NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE: The components identified by a red outline and a \triangle mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.

(Check the [Sony Electronics Service Information](http://www.sony.com/electronics/service) website for any additional service related issues for this model.)

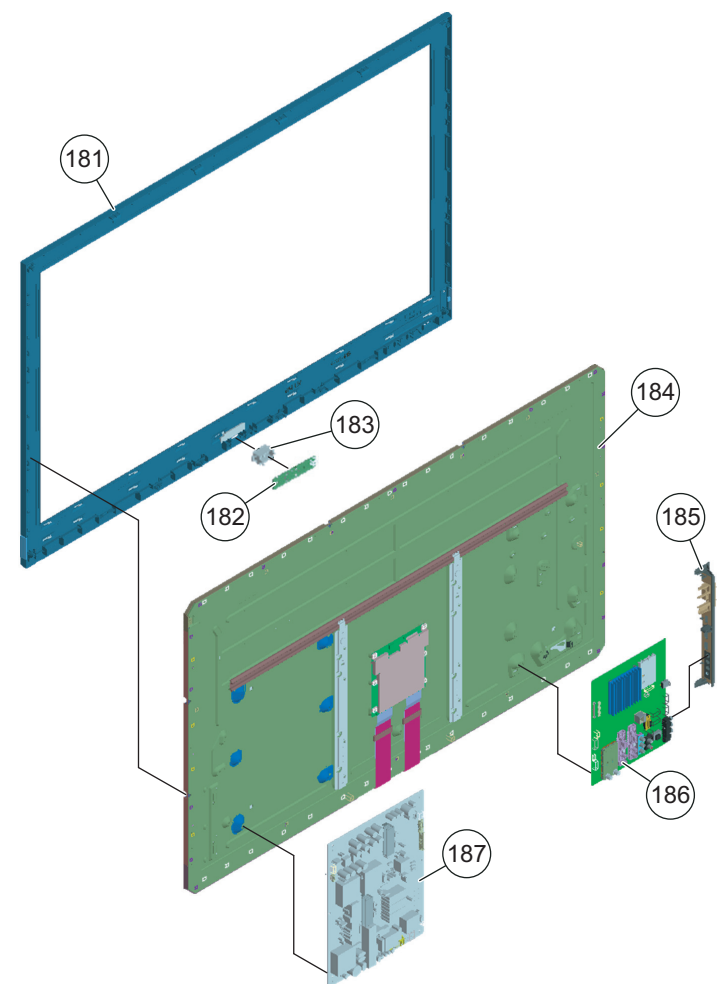

| REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] |
|---|--------------|--------------------------------------|---------------------|
| 181 | X-2541-870-1 | BEZEL(60) ASSY (KDL-60EX700 ONLY) | |
| 181 | X-2547-167-1 | BEZEL(60) ASSY (KDL-60EX701 ONLY) | |
| 181 | X-2547-172-1 | BEZEL(60) ASSY (KDL-60EX703 ONLY) | |
| 182 | A-1736-860-A | HMS2 BOARD, MOUNTED | |
| 183 | 1-856-068-11 | LENS | |
| 184 | N/A | LCD PANEL | |
| FOR ALL LCD PANEL PART NUMBER INFORMATION REFER TO THE LCD PANELS SERVICE MANUAL | | | |
| 185 | 4-171-117-01 | BRACKET, SIDE JACK M | |
| \triangle 186 | A-1763-462-A | BAL BOARD, COMPLETE | |
| NOTE: For BAL Board replacement, please refer to section 2-2. Setting the Destination after Replacing the BAL Board or LCD Panel. | | | |
| NOTE: Final software is not installed on this BAL Board. Install the update after replacing this board using the instructions provided with the software. | | | |
| 187 | 1-474-211-11 | GE2-A (POWER) BOARD, COMPLETE | |

1-6. SCREW LEGEND

1-6-1.KDL-32EX700

| P/N | DESCRIPTION | REMARKS | TOTAL |
|----------------|------------------------------|---|-------|
| ■ 2-580-639-01 | SCREW, +BVTP 4X12 TYPE2 IT-3 | RC(10), BTM FRM to BEZ(2), SPKR to SPKR BRKT-L(4), SPKR to SPKR BRKT-R(4) | 20 |
| □ 2-580-611-01 | SCREW, +PSW M6X16 | RC to VESA BRKT(4) | 4 |
| ▼ 2-580-600-01 | SCREW, +PSW M4X8 | RC to PNL to PNL BRKT(2) | 2 |
| ▽ 2-580-608-01 | SCREW, +PSW M5X16 | TABLE-TOP STAND(4) | 4 |
| ● 2-580-592-01 | SCREW, +PSW M3X8 | BAL(4), GE3-A(4) | 8 |
| ○ 4-159-298-01 | SCREW, +PSW M4X10 | BTM FRM to PNL(2), VESA BRKT to PNL(2) | 4 |
| ★ 2-580-591-01 | SCREW, +PSW M3X5 | RC to PNL(3) | 3 |
| ★ 7-685-646-79 | SCREW, +BVTP 3X8 TYPE2 IT-3 | RC to TRMNL AREA(1) | 1 |
| ▲ 2-580-603-01 | SCREW, +PSW M4X16 | NOT IN THIS MODEL | 0 |

1-6-2.KDL-40EX700/40EX703

| P/N | DESCRIPTION | REMARKS | TOTAL |
|----------------|------------------------------|---|-------|
| ■ 2-580-639-01 | SCREW, +BVTP 4X12 TYPE2 IT-3 | RC(10), BTM FRM to BEZ(2), SPKR to SPKR BRKT-L(2), SPKR to SPKR BRKT-R(2) | 16 |
| □ 2-580-611-01 | SCREW, +PSW M6X16 | RC to VESA BRKT(4) | 4 |
| ▼ 2-580-600-01 | SCREW, +PSW M4X8 | NOT IN THIS MODEL | 0 |
| ▽ 2-580-608-01 | SCREW, +PSW M5X16 | TABLE-TOP STAND(4) | 4 |
| ● 2-580-592-01 | SCREW, +PSW M3X8 | BAL(4), GE3-A(4) | 8 |
| ○ 4-159-298-01 | SCREW, +PSW M4X10 | BTM FRM to PNL(1), UC to BTM FRM(5), VESA BRKT to PNL(2) | 8 |
| ★ 2-580-591-01 | SCREW, +PSW M3X5 | RC to PNL(3) | 3 |
| ★ 7-685-646-79 | SCREW, +BVTP 3X8 TYPE2 IT-3 | RC to TRMNL AREA(1) | 1 |
| ▲ 2-580-603-01 | SCREW, +PSW M4X16 | RC to PNL to PNL BRKT(2) | 2 |

1-6-3.KDL-46EX700/46EX701/46EX703

| P/N | DESCRIPTION | REMARKS | TOTAL |
|----------------|------------------------------|---|-------|
| ■ 2-580-639-01 | SCREW, +BVTP 4X12 TYPE2 IT-3 | RC(10), BTM FRM to BEZ(2), SPKR to SPKR BRKT-L(2), SPKR to SPKR BRKT-R(2) | 16 |
| □ 2-580-611-01 | SCREW, +PSW M6X16 | RC to VESA BRKT(4) | 4 |
| ▼ 2-580-600-01 | SCREW, +PSW M4X8 | NOT IN THIS MODEL | 0 |
| ▽ 2-580-608-01 | SCREW, +PSW M5X16 | TABLE-TOP STAND(4) | 4 |
| ● 2-580-592-01 | SCREW, +PSW M3X8 | BAL(4), GE2-B(4) | 8 |
| ○ 4-159-298-01 | SCREW, +PSW M4X10 | BTM FRM to PNL(1), UC to BTM FRM(5), VESA BRKT to PNL(2) | 8 |
| ★ 2-580-591-01 | SCREW, +PSW M3X5 | RC to PNL(3) | 3 |
| ★ 7-685-646-79 | SCREW, +BVTP 3X8 TYPE2 IT-3 | RC to TRMNL AREA(1) | 1 |
| ▲ 2-580-603-01 | SCREW, +PSW M4X16 | RC to PNL to PNL BRKT(4) | 4 |

1-6-4.KDL-52EX700/52EX701/52EX703

| P/N | DESCRIPTION | REMARKS | TOTAL |
|----------------|------------------------------|---|-------|
| ■ 2-580-639-01 | SCREW, +BVTP 4X12 TYPE2 IT-3 | RC(12), BTM FRM to BEZ(2), SPKR to SPKR BRKT-L(2), SPKR to SPKR BRKT-R(2) | 18 |
| □ 2-580-611-01 | SCREW, +PSW M6X16 | RC to VESA BRKT(4) | 4 |
| ▼ 2-580-600-01 | SCREW, +PSW M4X8 | NOT IN THIS MODEL | 0 |
| ▽ 2-580-608-01 | SCREW, +PSW M5X16 | TABLE-TOP STAND(4) | 4 |
| ● 2-580-592-01 | SCREW, +PSW M3X8 | BAL(4), GE2-B(4) | 8 |
| ○ 4-159-298-01 | SCREW, +PSW M4X10 | BTM FRM to PNL(1), UC to BTM FRM(5), VESA BRKT to PNL(2) | 8 |
| ★ 2-580-591-01 | SCREW, +PSW M3X5 | RC to PNL(4) | 4 |
| ★ 7-685-646-79 | SCREW, +BVTP 3X8 TYPE2 IT-3 | RC to TRMNL AREA(1) | 1 |
| ▲ 2-580-603-01 | SCREW, +PSW M4X16 | RC to PNL to PNL BRKT(4) | 4 |

1-6-5.KDL-60EX700/60EX701/60EX703

| P/N | DESCRIPTION | REMARKS | TOTAL |
|----------------|------------------------------|--|-------|
| ■ 2-580-639-01 | SCREW, +BVTP 4X12 TYPE2 IT-3 | RC(12), BTM FRM to BEZ(2), SPKR to SPKR BRKT-L(2), SPKR to SPKR BRKT-R(2), SPKR BRKT to BEZ(4) | 22 |
| □ 2-580-611-01 | SCREW, +PSW M6X16 | RC to VESA BRKT(4) | 4 |
| ▼ 2-580-600-01 | SCREW, +PSW M4X8 | NOT IN THIS MODEL | 0 |
| ▽ 2-580-608-01 | SCREW, +PSW M5X16 | TABLE-TOP STAND(4) | 4 |
| ● 2-580-592-01 | SCREW, +PSW M3X8 | BAL(4), GE2-A(5), AC INLET to BTM FRM(1) | 10 |
| ○ 4-159-298-01 | SCREW, +PSW M4X10 | BTM FRM to PNL(2), UC to BTM FRM(4), VESA BRKT to PNL(2) | 8 |
| ★ 2-580-591-01 | SCREW, +PSW M3X5 | RC to PNL(4) | 4 |
| ★ 7-685-646-79 | SCREW, +BVTP 3X8 TYPE2 IT-3 | RC to TRMNL AREA(1) | 1 |
| ▲ 2-580-603-01 | SCREW, +PSW M4X16 | RC to PNL to PNL BRKT(6) | 6 |

1-5. CLEANING THE LCD PANEL

CAUTION: When cleaning the TV, be sure to unplug the power cord to avoid any chance of electric shock.

Clean the cabinet of the TV with a dry soft cloth.

Wipe the LCD screen gently with a soft cloth.

- ◆ Stubborn stains may be removed with a cloth slightly moistened with a solution of mild soap and warm water.
- ◆ If using a chemically pretreated cloth, please follow the instruction provided on the package.
- ◆ Never use strong solvents such as a thinner, alcohol or benzene for cleaning.
- ◆ Periodic vacuuming of the ventilation openings is recommended to ensure the proper ventilation.

DISASSEMBLY/PART NUMBER INFORMATION

NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.


NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE: The components identified by a red outline and a \triangle mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.


(Check the [Sony Electronics Service Information](http://www.sony.com/electronics/service) website for any additional service related issues for this model.)

1-7. CONNECTORS

1-7-1.KDL-32EX700

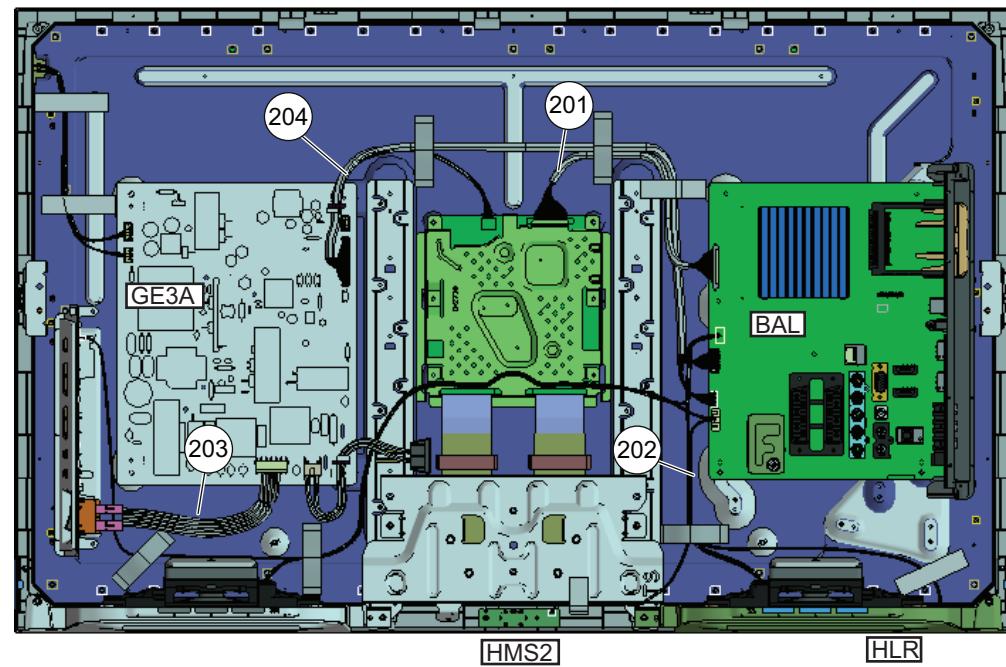


1-7-2.KDL-40EX700/40EX703

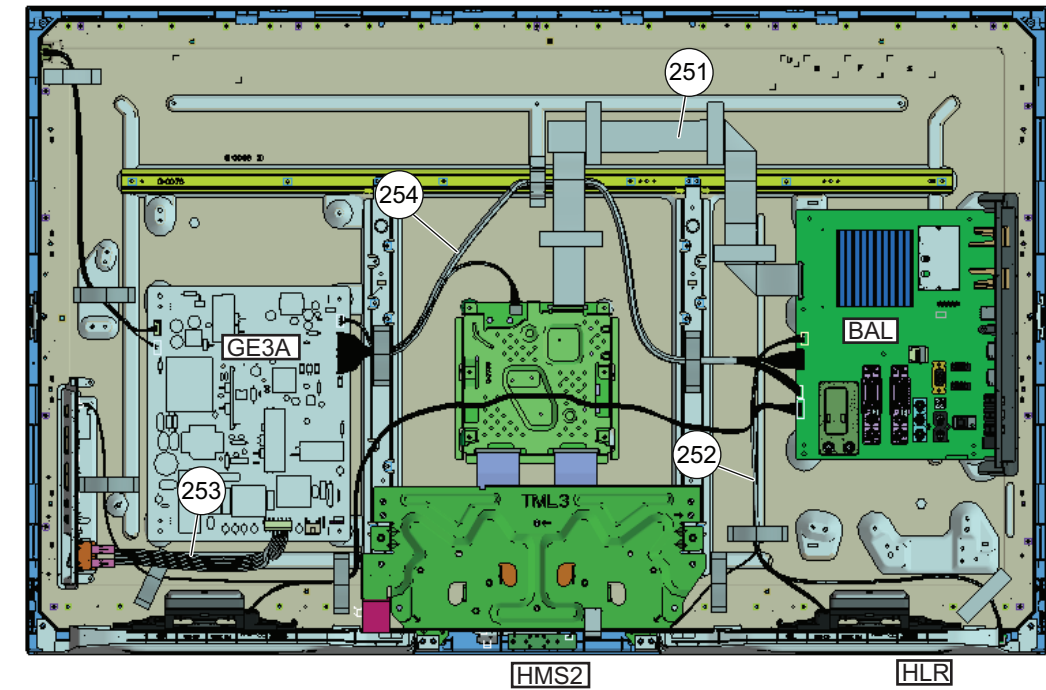



| REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] | REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] |
|----------|--------------|---------------------------------|---------------------|----------|--------------|------------------|---------------------|
| 201 | 1-837-790-11 | (LVDS) LEAD WIRE WITH CONNECTOR | | 203 | 1-837-663-12 | CONNECTOR ASSY | |
| 202 | 1-910-100-16 | HARNESS ASSY (1) | | 204 | 1-910-100-17 | HARNESS ASSY (2) | |

| REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] | REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] |
|----------|--------------|--------------------------------|---------------------|----------|--------------|------------------|---------------------|
| 251 | 1-837-704-11 | (LVDS) FLEXIBLE FLAT CABLE 51P | | 253 | 1-837-665-12 | CONNECTOR ASSY | |
| 252 | 1-910-100-18 | HARNESS ASSY (1) | | 254 | 1-910-100-19 | HARNESS ASSY (2) | |

DISASSEMBLY/PART NUMBER INFORMATION

 
NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


NOTE: The components identified by a red outline and a  mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.

(Check the [Sony Electronics Service Information](http://www.sonyelectronics.com) website for any additional service related issues for this model.)


1-7-3.KDL-46EX700/46EX701/46EX703

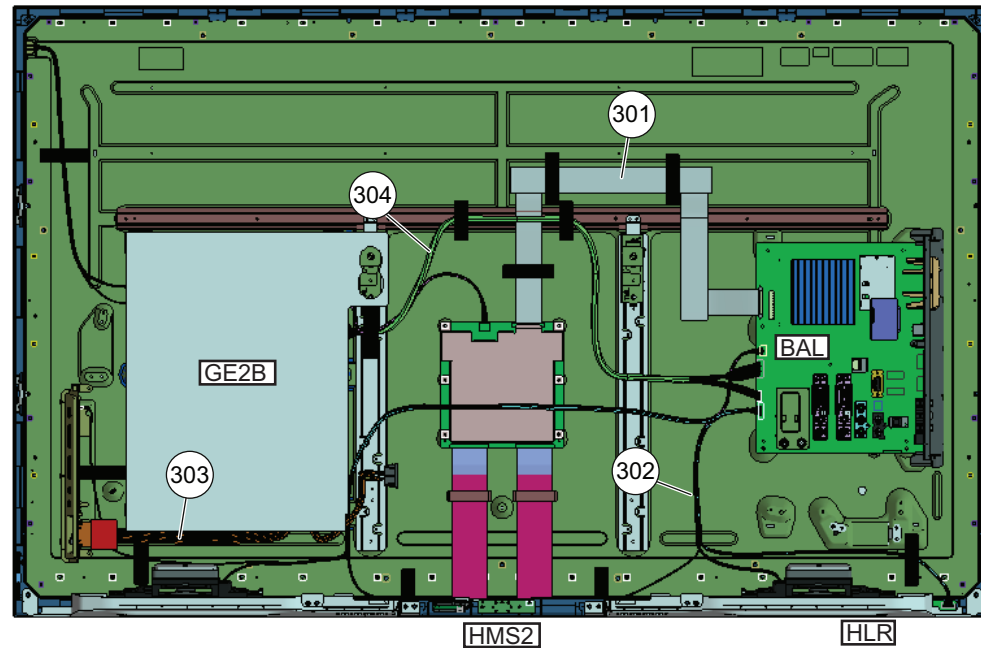

1-7-4.KDL-52EX700/52EX701/52EX703

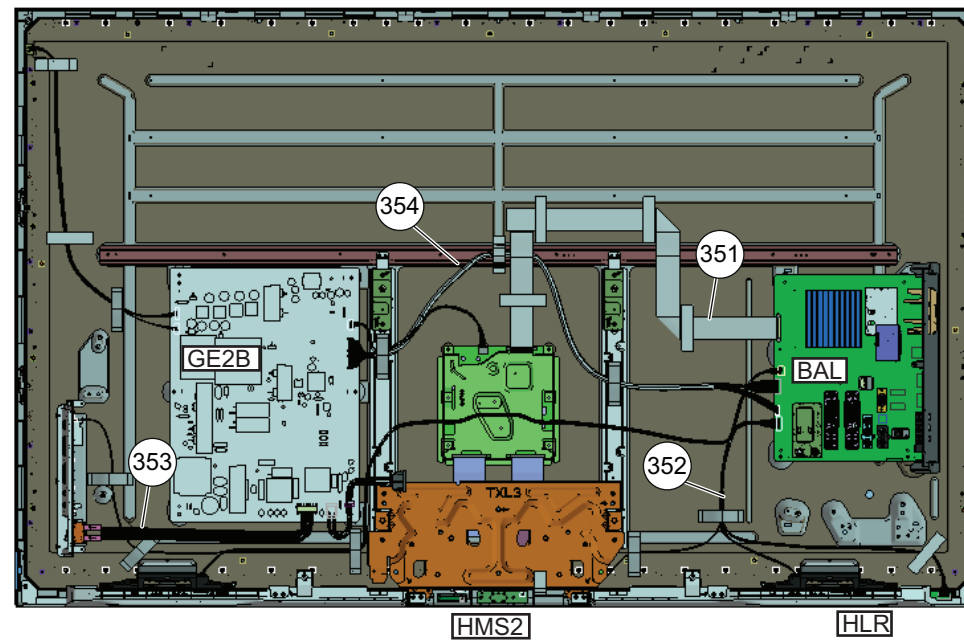

1-7-5.KDL-60EX700/60EX701/60EX703

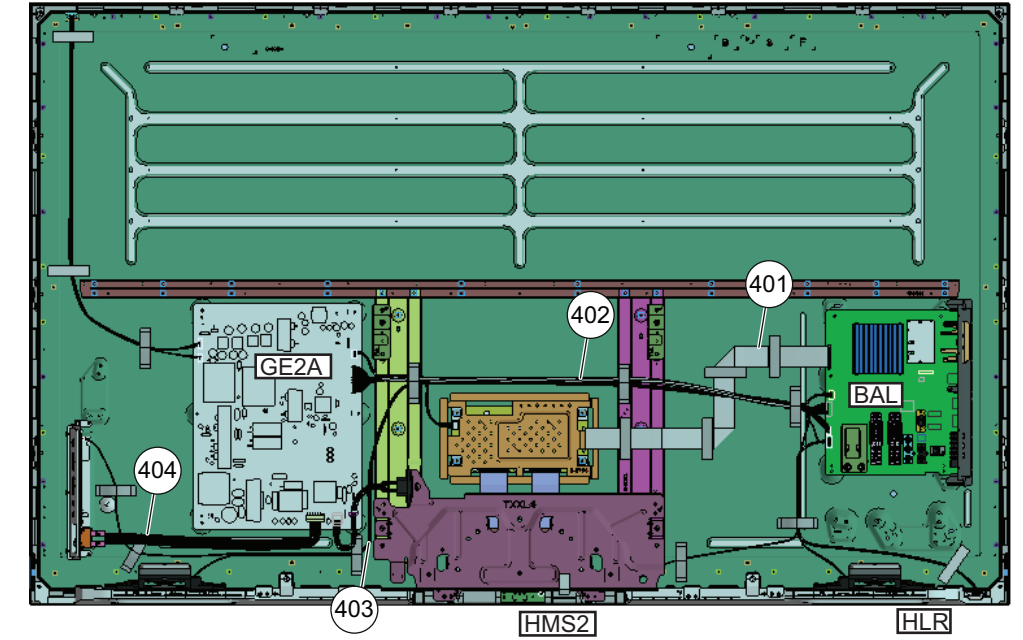

| REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] |
|----------|--------------|--------------------------------|---------------------|
| 301 | 1-837-705-11 | (LVDS) FLEXIBLE FLAT CABLE 51P | |
| 302 | 1-910-100-20 | HARNESS ASSY (1) | |
| 303 | 1-837-666-12 | CONNECTOR ASSY | |
| 304 | 1-910-100-21 | HARNESS ASSY (2) | |



| REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] |
|----------|--------------|--------------------------------|---------------------|
| 351 | 1-837-706-11 | (LVDS) FLEXIBLE FLAT CABLE 51P | |
| 352 | 1-910-100-22 | HARNESS ASSY (1) | |
| 353 | 1-837-667-12 | CONNECTOR ASSY | |
| 354 | 1-910-100-23 | HARNESS ASSY (2) | |

| REF. NO. | PART NO. | DESCRIPTION | [ASSEMBLY INCLUDES] |
|----------|--------------|--------------------------------|---------------------|
| * 401 | 1-837-710-11 | (LVDS) FLEXIBLE FLAT CABLE 51P | |
| * 402 | 1-910-100-24 | HARNESS ASSY (1) | |
| * 403 | 1-910-100-25 | HARNESS ASSY (2) | |
| * 404 | 1-837-532-12 | CONNECTOR ASSY | |

DISASSEMBLY/PART NUMBER INFORMATION

1-8. ACCESSORIES AND PACKAGING

| | |
|--------------|---|
| 3-299-071-03 | FLYER, SAFETY |
| 4-178-827-12 | MANUAL, INSTRUCTION (ENGLISH VERSION) |
| 4-178-827-22 | MANUAL, INSTRUCTION (FRENCH VERSION) |
| 4-178-827-32 | MANUAL, INSTRUCTION (SPANISH VERSION) (KDL-32EX700/40EX700/46EX700/52EX700/60EX700 ONLY) |
| 4-171-791-12 | MANUAL, INSTRUCTION (ENGLISH VERSION) (KDL-46EX701/52EX701/60EX701 ONLY) |

| | | |
|---|--------------|---|
|  | 1-837-633-11 | POWER-SUPPLY CORD (KDL-60EX700/60EX701/60EX703 ONLY) |
|  | 1-837-644-11 | POWER-SUPPLY CORD SET (KDL-32EX700/40EX700/40EX703/46EX700/46EX701/46EX703/52EX700/52EX701/52EX703 ONLY) |

| | | |
|---|--------------|---|
| * | 4-180-033-11 | SUPPLEMENT(STAND INSTALLATION) |
| | 1-837-549-12 | UWA-BR100 EXTENTION CABLE (KDL-46EX701/52EX701/60EX701 ONLY) |
| | 1-487-779-11 | UWA-BR100U UNIT (KDL-46EX701/52EX701/60EX701 ONLY) |

1-9. MISCELLANEOUS

| | |
|--------------|---|
| 4-182-211-01 | GASKET |
| X-2348-140-3 | SUPPORT BELT KIT |
| 4-182-212-01 | SPACER (ALL EXCEPT KDL-32EX700) |
| 4-186-417-01 | SPACER, PANEL (KDL-40EX700/40EX703/46EX700/46EX701/46EX703 ONLY) |
| 7-632-452-24 | TAPE (NO.303) 18MMX35M YEL |
| 4-187-297-01 | WASHER (LCD) |

1-10. REMOTE COMMANDER


| | |
|--------------|---|
| 1-487-767-11 | REMOTE COMMANDER (RM-YD033) (US MODELS ONLY) |
| 1-487-832-11 | REMOTE COMMANDER (RM-YD055) (ALL EXCEPT US MODELS) |

SEC 2. SERVICE ADJUSTMENTS

2-1. ACCESSING SERVICE ADJUSTMENT MODE

1. TV must be in Standby Mode. (POWER off).
2. Press the following buttons on the Remote Commander within a second of each other:

DISPLAY → Channel 5 → Volume + → POWER

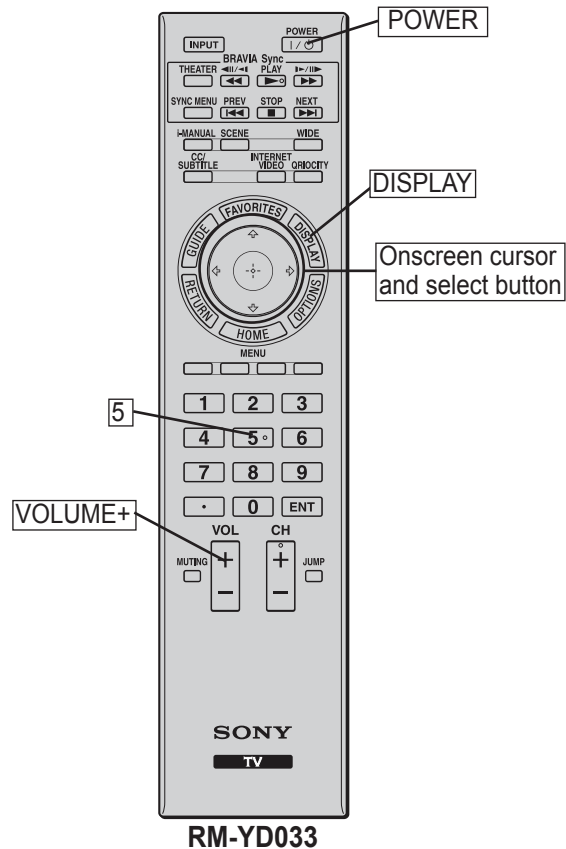

| DIGITAL | SERVICE |
|----------------|---------------|
| 001 OP | |
| 000 VERS | --- |
| <MAIN> | <SUB> |
| DM1.301J00AA | SM1.010W00AA |
| M2.105C | SB1.000W00AA |
| DD1.016J00AA | SD1.010 W00AA |
| (DM13 01J00AA) | RF01.05 |
| WP00.521J00AA | ID1C117081 |
| ID1C117081 | LTY320AB01 |
| PID04020000 | |
| WF:2.0.0.99 | <BEM> |
| WF:0B | BM1.012W00LU |
| Camera FW | BB1.000W00LU |
| Camera FW | BD1.011J46LUX |
| | ----- |


Sample Service Menu

SERVICE ADJUSTMENTS



2-1-1. VIEWING THE SERVICE MENUS

Use the Remote Commander to view the **Digital**, **Chassis** and **Sub Service** Menus and their options.


- To display the **Service Menu** that contains the Category you want to adjust, press **JUMP** or **OPTIONS** on the Remote Commander.

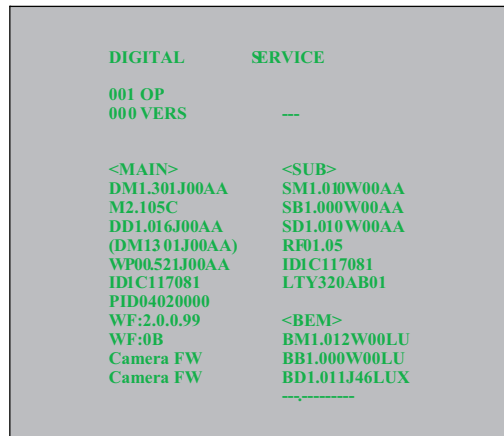

Sample Digital Service Menu

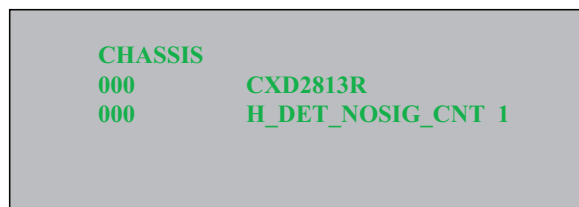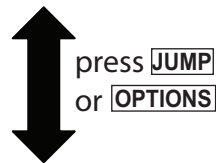

Within each Service Menu are Categories and data information.

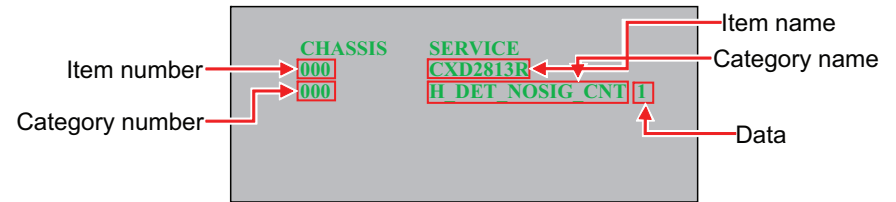

Sample Chassis Service Menu

2-1-2. USING THE REMOTE COMMANDER TO VIEW OR CHANGE SERVICE DATA

Use the buttons on the Remote Commander to access the Service Menu items and adjust the Data Values.



- To change the **Category**, press **2** to move to the Next Category or press **5** to go back to the Previous Category.
Note: Pressing **2** or **5** only changes the Categories within the Service Menu displayed.
- To change the **adjustment item**, press **1** to move to the Next Item or **4** to go back to the Previous Item.
- To change the **Data Value**, press **3** to increase the Data Value or **6** to decrease the Data Value.
- Press **MUTING** then press **0** to Write the changes.
- To exit service mode, press **HOME** or turn the TV power off.

SERVICE ADJUSTMENTS

2-2. ADJUSTMENTS AFTER REPLACING THE BAL BOARD OR LCD PANEL

The following procedures must be completed after replacing the BAL Board or the LCD panel.

- Update the TV to the latest software version
- Select the Model
- Select the Destination
- Verify model and panel information are correct
- Reconnect all cables

2-2-1. UPDATING THE SOFTWARE

After replacing the BAL Board or the LCD Panel, you must update the software to the latest version.

Before you begin

- Disconnect all cables (RF, External input, Ethernet, etc.) from the TV

Instructions for updating the software are included with the software package. After completing the software update, proceed to “Selecting the Model”.


2-2-2. SELECTING THE MODEL

After replacing the BAL Board or LCD Panel, go into Service Mode to set the Model data value.

1. TV must be in standby mode. (Power off).
2. Access Service Mode.
Press the following buttons on the Remote Commander within a second of each other:


DISPLAY → Channel **5** → Volume **+** → **POWER**

3. Display the **DIGITAL Service Menu**.
NOTE: There are 3 Service Menus for this model, DIGITAL, CHASSIS, and SUB. If the DIGITAL Service Menu is not displayed, press **JUMP** or **OPTIONS** on the Remote Commander.

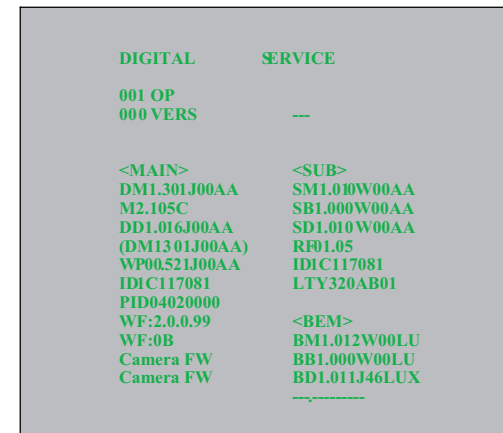


4. Press **2** to move to the **002 MODEL** (Next) category.

SERVICE ADJUSTMENTS

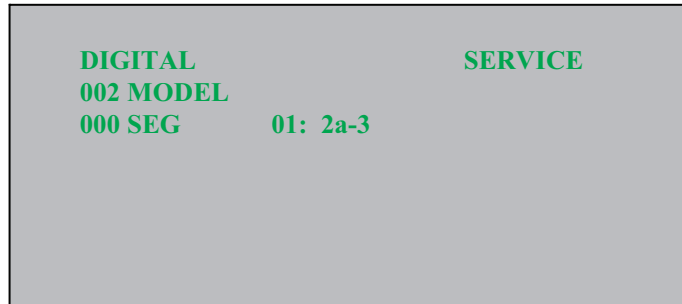

5. Using the table, press **3** to increase the data value or **6** to decrease the data value, to match the model of the TV.

| Chassis | Model Name | Data Value | Code Name |
|---------|-------------|------------|-----------|
| AZ1-L | KDL-32EX700 | 10 | 3a-0 |
| AZ1-L | KDL-40EX700 | 10 | 3a-0 |
| AZ1-L | KDL-40EX703 | 10 | 3a-0 |
| AZ1-L | KDL-40EX707 | 10 | 3a-0 |
| AZ1-L | KDL-46EX700 | 10 | 3a-0 |
| AZ1-L | KDL-46EX701 | 10 | 3a-0 |
| AZ1-L | KDL-46EX703 | 10 | 3a-0 |
| AZ1-L | KDL-46EX707 | 10 | 3a-0 |
| AZ1-L | KDL-52EX700 | 10 | 3a-0 |
| AZ1-L | KDL-52EX701 | 10 | 3a-0 |
| AZ1-L | KDL-52EX703 | 10 | 3a-0 |
| AZ1-L | KDL-52EX707 | 10 | 3a-0 |
| AZ1-L | KDL-60EX700 | 10 | 3a-0 |
| AZ1-L | KDL-60EX701 | 10 | 3a-0 |
| AZ1-L | KDL-60EX703 | 10 | 3a-0 |

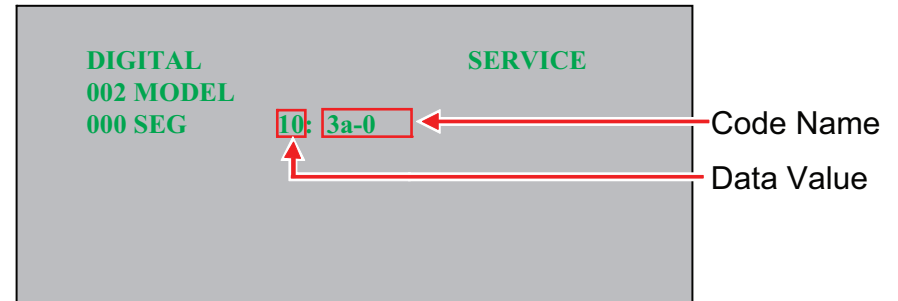


6. Proceed to "Selecting the Destination".

2-2-3. SETTING THE DESTINATION


After replacing the BAL Board or the LCD Panel, the destination location must be set.

CAUTION: Selecting the incorrect destination may require replacing the BAL Board.

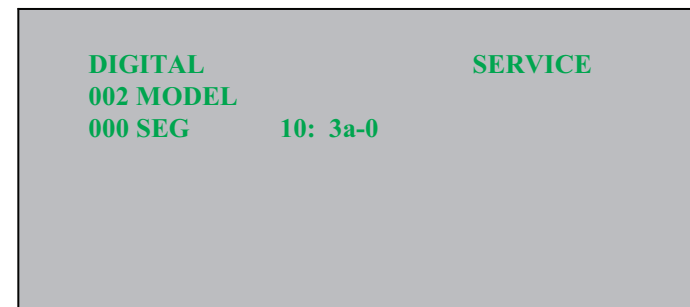


7. Press **1** to move to "001 DEST" sub Category.

SERVICE ADJUSTMENTS

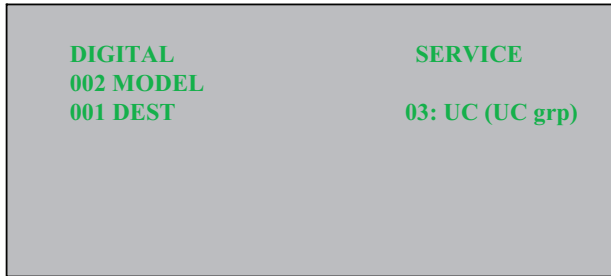

8. Using the table, press **3** to increase the data value or **6** to decrease the data value, to select the destination of the TV.

| GROUP | DESTINATION CODE | DATA VALUE | DESTINATION |
|--------|------------------|------------|------------------|
| UC grp | UC | 3 | US/CND |
| | LTN-D | 16 | MX/LATIN AMERICA |

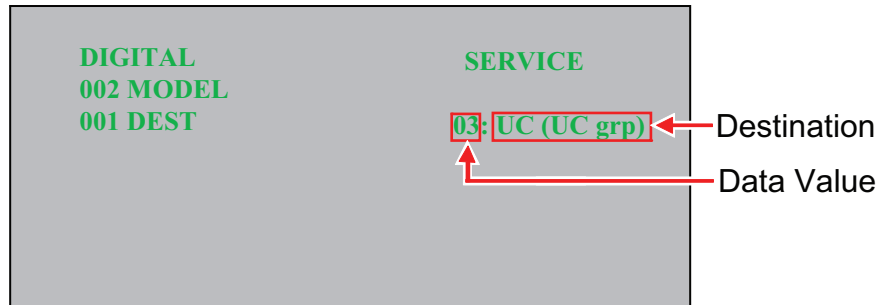

CAUTION: Verify the DESTINATION is set correctly before proceeding to the next step. If another destination Data Value is selected, it may possibly corrupt the software which would require a BAL Board replacement.

9. After verifying the destination data value displays, press **0** to save (Write) the changes.
 10. Exit Service Mode by pressing **HOME** or turn the TV power off.
 11. Proceed to "Verifying the Model and Panel Information".


2-2-4. VERIFYING THE MODEL AND PANEL INFORMATION

After saving the changes to the service data, verify the information.

- TV must be in standby mode. (Power off).
- Access Service Mode.
Press the following buttons on the Remote Commander within a second of each other:

DISPLAY → Channel **5** → Volume **+** → **POWER**

- Display the **DIGITAL Service Menu**.
NOTE: There are 3 Service Menus for this model, DIGITAL, CHASSIS, and SUB. If the DIGITAL Service Menu is not displayed, press **JUMP** or **OPTIONS** on the Remote Commander.

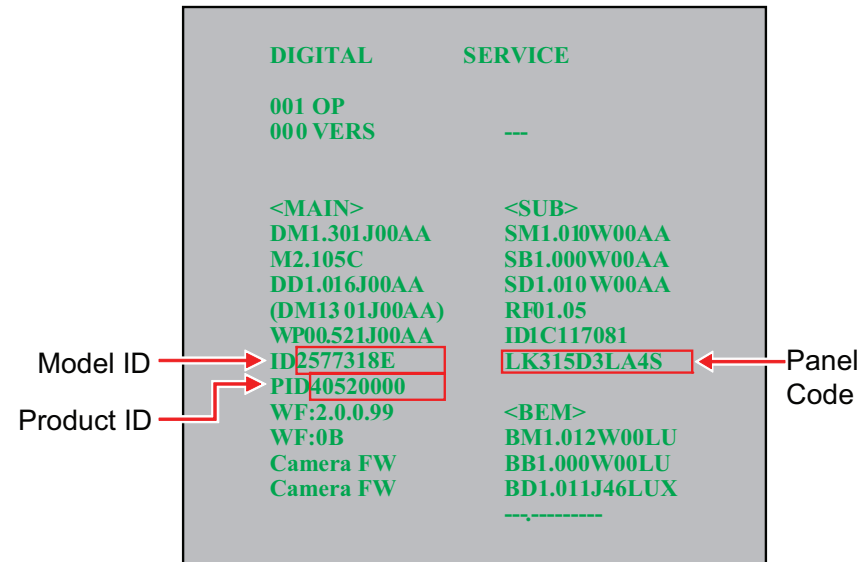

- Using the table, verify the Model ID and the Product ID match the information in the Service Menu.

SERVICE ADJUSTMENTS

| Model Name | Model ID | Product ID | Panel ID |
|-------------|----------|------------|----------------|
| KDL-32EX700 | 2577318E | 40520000 | LK315D3LA4S |
| KDL-32EX700 | 2577318E | 40520000 | LK320D3LEDE120 |
| KDL-32EX700 | 2577318E | 0C520000 | LK315D3LA4S |
| KDL-32EX700 | 2577318E | 0C520000 | LK320D3LEDE120 |
| KDL-40EX700 | 2577361B | 30520000 | LK400D3LA4S |
| KDL-40EX700 | 2577361B | 30520000 | LK400D3LEDE120 |
| KDL-40EX700 | 2577319B | 40520000 | LK400D3LA4S |
| KDL-40EX700 | 2577319B | 40520000 | LK400D3LA4T |
| KDL-40EX700 | 2577319B | 40520000 | LK400D3LEDE120 |
| KDL-40EX700 | 2577319B | 0C520000 | LK400D3LA4S |
| KDL-40EX700 | 2577319B | 0C520000 | LK400D3LA4T |
| KDL-40EX700 | 2577319B | 0C520000 | LK400D3LEDE120 |
| KDL-40EX703 | 2577319B | 0C520000 | LK400D3LA4S |
| KDL-40EX703 | 2577319B | 0C520000 | LK400D3LA4T |
| KDL-40EX703 | 2577319B | 0C520000 | LK400D3LEDE120 |
| KDL-46EX700 | 2577361C | 30520000 | LK460D3LA8S |
| KDL-46EX700 | 2577361C | 30520000 | LK460D3LA8T |
| KDL-46EX700 | 2577361C | 30520000 | LK460D3LEDE120 |
| KDL-46EX700 | 25773626 | 30520000 | LTY(Z)460HJ02 |
| KDL-46EX700 | 2577319C | 40520000 | LK460D3LA8S |
| KDL-46EX700 | 2577319C | 40520000 | LK460D3LA8T |
| KDL-46EX700 | 2577319C | 40520000 | LK460D3LEDE120 |
| KDL-46EX700 | 257731A6 | 40520000 | LTY(Z)460HJ02 |
| KDL-46EX700 | 2577319C | 0C520000 | LK460D3LA8S |
| KDL-46EX700 | 2577319C | 0C520000 | LK460D3LA8T |
| KDL-46EX700 | 2577319C | 0C520000 | LK460D3LEDE120 |
| KDL-46EX700 | 257731A6 | 0C520000 | LTY(Z)460HJ02 |
| KDL-46EX701 | 2577319C | 0C520000 | LK460D3LA8S |
| KDL-46EX701 | 2577319C | 0C520000 | LK460D3LA8T |
| KDL-46EX701 | 2577319C | 0C520000 | LK460D3LEDE120 |
| KDL-46EX701 | 257731A6 | 0C520000 | LTY(Z)460HJ02 |

| Model Name | Model ID | Product ID | Panel ID |
|-------------|----------|------------|----------------|
| KDL-46EX703 | 2577319C | 0C520000 | LK460D3LA8S |
| KDL-46EX703 | 2577319C | 0C520000 | LK460D3LA8T |
| KDL-46EX703 | 2577319C | 0C520000 | LK460D3LEDE120 |
| KDL-46EX703 | 257731A6 | 0C520000 | LTY(Z)460HJ02 |
| KDL-52EX700 | 2577361D | 30520000 | LK520D3LB1S |
| KDL-52EX700 | 2577361D | 30520000 | LK520D3LEDE120 |
| KDL-52EX700 | 2577319D | 40520000 | LK520D3LB1S |
| KDL-52EX700 | 2577319D | 40520000 | LK520D3LEDE120 |
| KDL-52EX700 | 2577319D | 0C520000 | LK520D3LB1S |
| KDL-52EX700 | 2577319D | 0C520000 | LK520D3LEDE120 |
| KDL-52EX701 | 2577319D | 0C520000 | LK520D3LB1S |
| KDL-52EX701 | 2577319D | 0C520000 | LK520D3LEDE120 |
| KDL-52EX703 | 2577319D | 0C520000 | LK520D3LB1S |
| KDL-52EX703 | 2577319D | 0C520000 | LK520D3LEDE120 |
| KDL-60EX700 | 2577361A | 30520000 | LK600D3LA5S |
| KDL-60EX700 | 2577319A | 40520000 | LK600D3LA5S |
| KDL-60EX700 | 2577319A | 0C520000 | LK600D3LA5S |
| KDL-60EX701 | 2577319A | 0C520000 | LK600D3LA5S |
| KDL-60EX703 | 2577319A | 0C520000 | LK600D3LA5S |

- Exit Service Mode by pressing **HOME** or turn the TV power off.
- Proceed to "Reconnecting All Cables".

2-2-5. RECONNECTING ALL CABLES

After completing the changes to service mode, reconnect all the cables (RF, External input, Ethernet, etc.) to the TV then verify the TV set picture. If necessary, proceed to "White Balance Adjustments".

SERVICE ADJUSTMENTS

2-3. WHITE BALANCE ADJUSTMENTS


White Balance adjustment data is located on the Digital Service Menu.

1. TV must be in Standby Mode. (POWER off).
2. Press the following buttons on the Remote Commander within a second of each other:

DISPLAY → Channel **5** → Volume **+** → **POWER**


NOTE: If the **Digital Service Menu** is not displayed, press **JUMP** or **OPTIONS**.

3. Press **2** to move to "006 WB" Category.

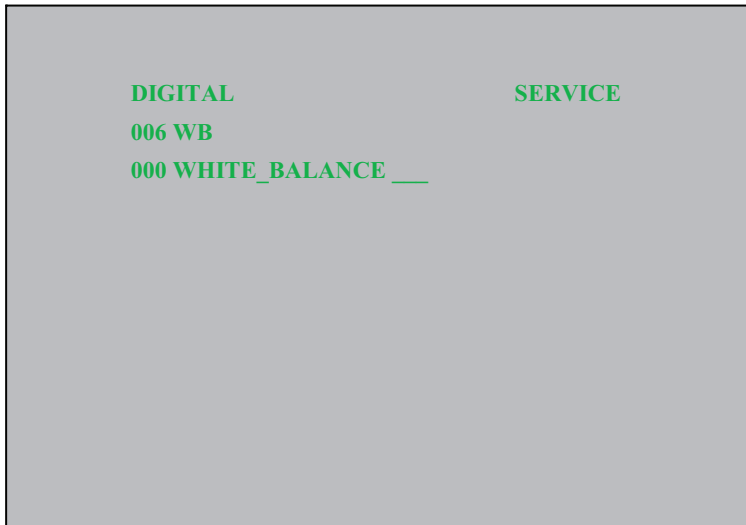

4. Press **0** to enter White Balance Adjustment mode.

5. To select the White Balance Adjustment setting that needs to be changed, do the following:
 - a. To select R_DRV, press **1**.
 - b. To select G_DRV, press **2**.
 - c. To select B_DRV, press **3**.
 - d. To select R_BKG, press **4**.
 - e. To select G_BKG, press **5**.
 - f. To select B_BKG, press **6**.
6. After selecting the White Balance setting, press **ENT** to display the edit screen. The screen displays a "Please input WB items" message.

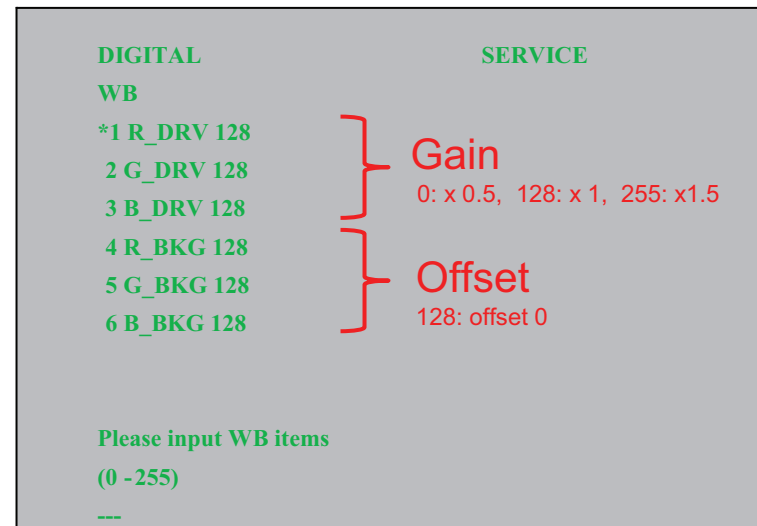


7. Using the numbers buttons on the remote, enter the Data Value for the White Balance setting (value must be between 1 and 255).
8. Press **ENT** to WRITE (save) the changes.
9. To exit White Balance Adjustment, press **JUMP** or **OPTIONS**.

SERVICE ADJUSTMENTS

2-4. RESETTING THE TV TO FACTORY CONDITION

Use the following instructions to restore the User Adjustments and Channel Memory settings to the preset factory conditions.






1. While holding down the  on the Remote Commander, press the POWER button on the TV Switch Unit of the set.


The set restarts and displays the Initial Setup screen. This may take several minutes.

2-4-1. RESETTING THE TV TO FACTORY CONDITION USING SERVICE MODE

1. TV must be in Standby Mode. (POWER off).
2. Press the following buttons on the Remote Commander within a second of each other:

 → Channel  → Volume  → .

3. If necessary, press  or  to go to DIGITAL mode.
4. Press .
5. Press .
6. Press .
7. When the process is complete the green SERVICE text displays and the LED display as shown below:

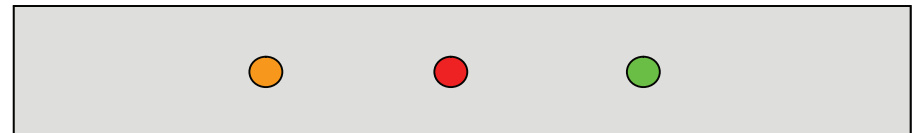

TIMER

Standby


POWER

8. Cycle AC Power (Unplug and Plug AC Cord from the AC Outlet).
9. The set restarts and displays the Initial Setup screen. This may take several minutes.


SEC 3. DIAGRAMS

3-1. CIRCUIT BOARDS LOCATION


3-1-1. KDL-32EX700

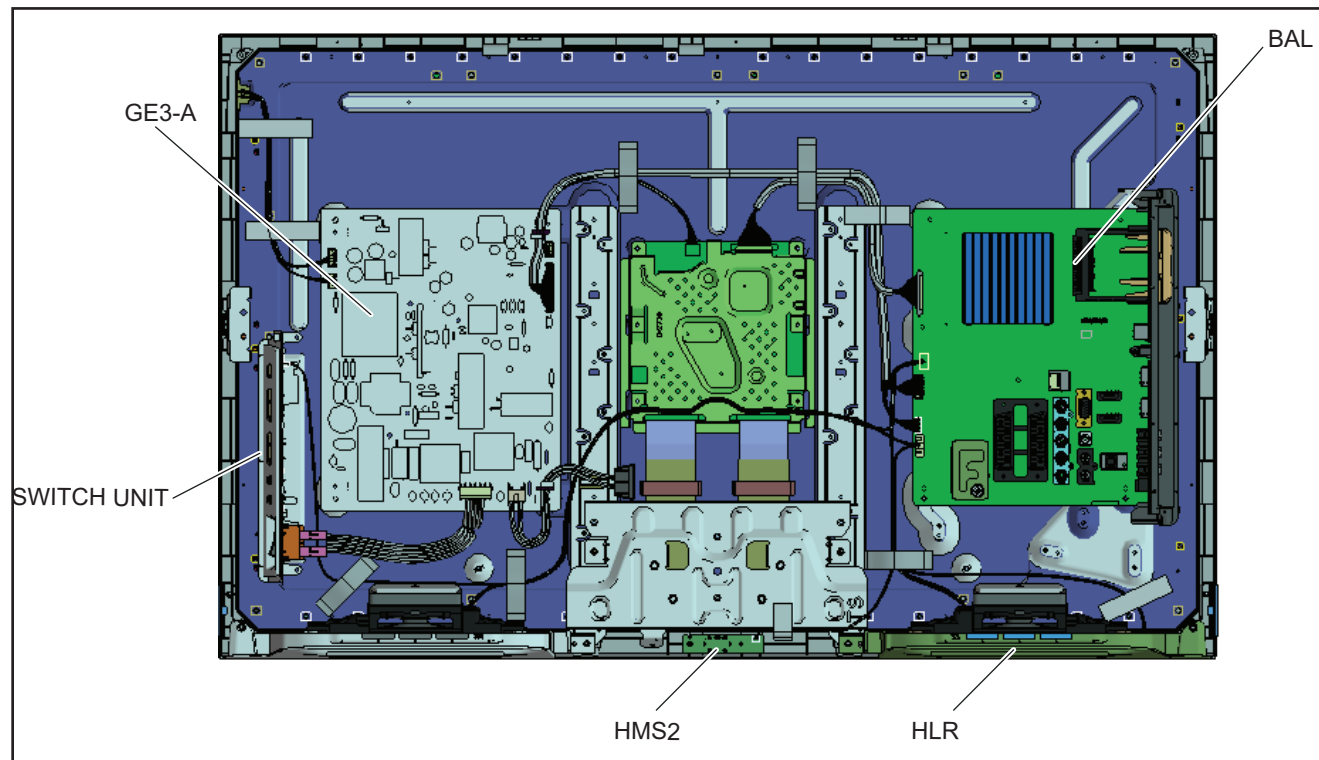


3-1-2. KDL-40EX700/40EX703

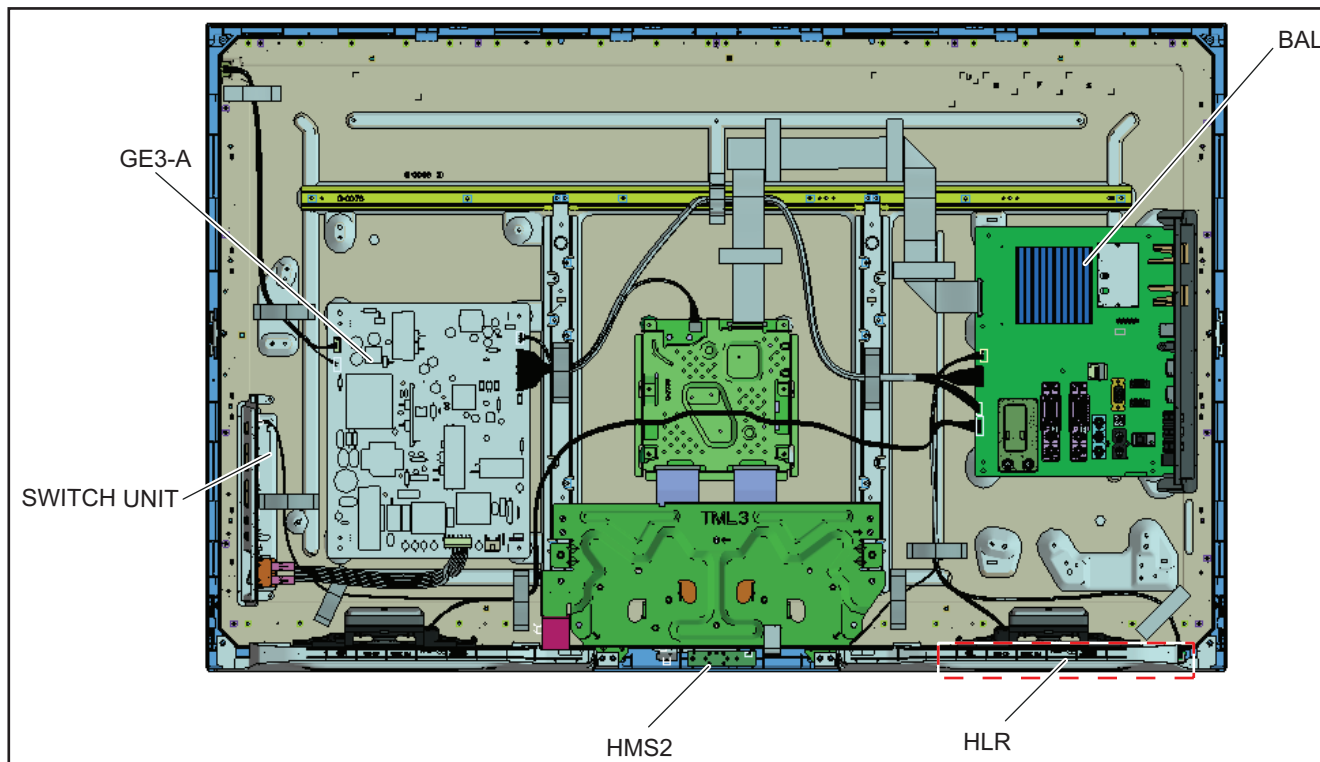


3-1-3. KDL-46EX700/46EX701/46EX703

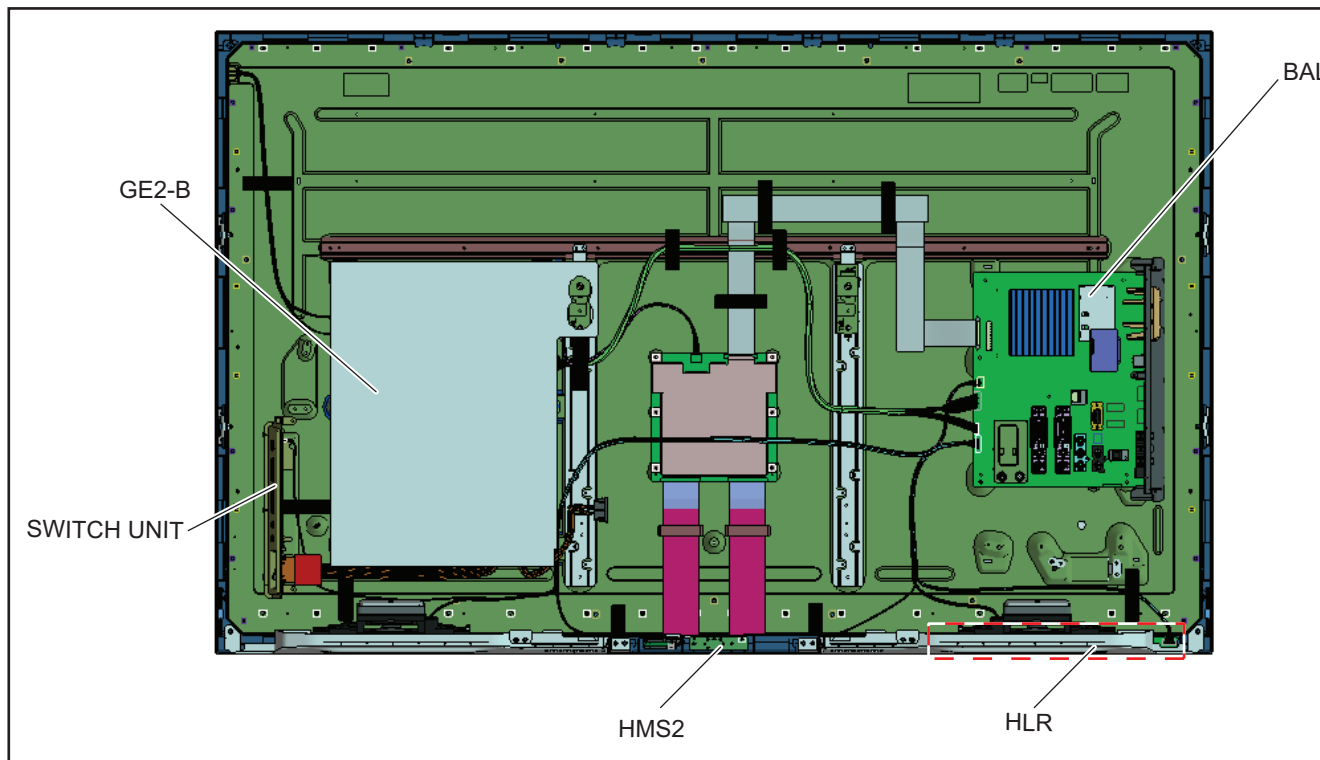


3-1-4. KDL-52EX700/52EX701/52EX703

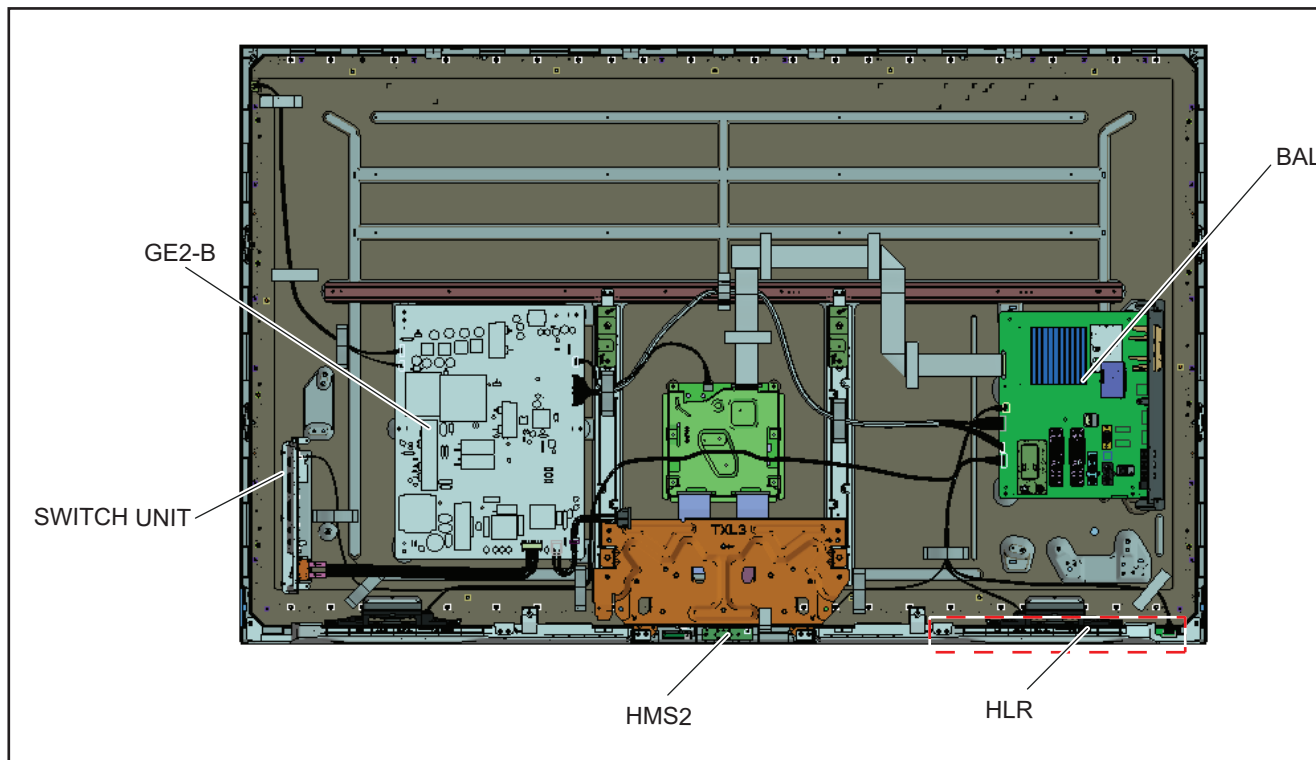

3-1-5. KDL-60EX700/60EX701/60EX703

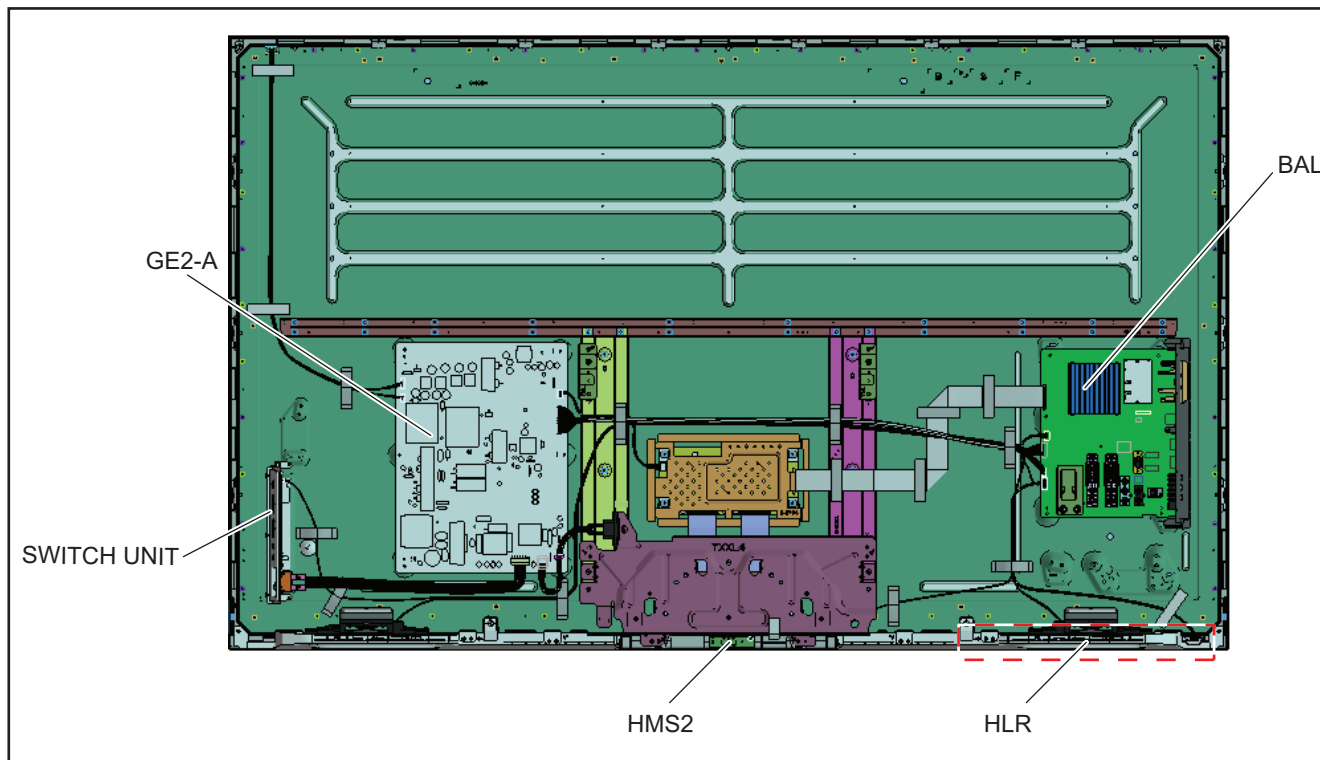

3-2. BLOCK DIAGRAM

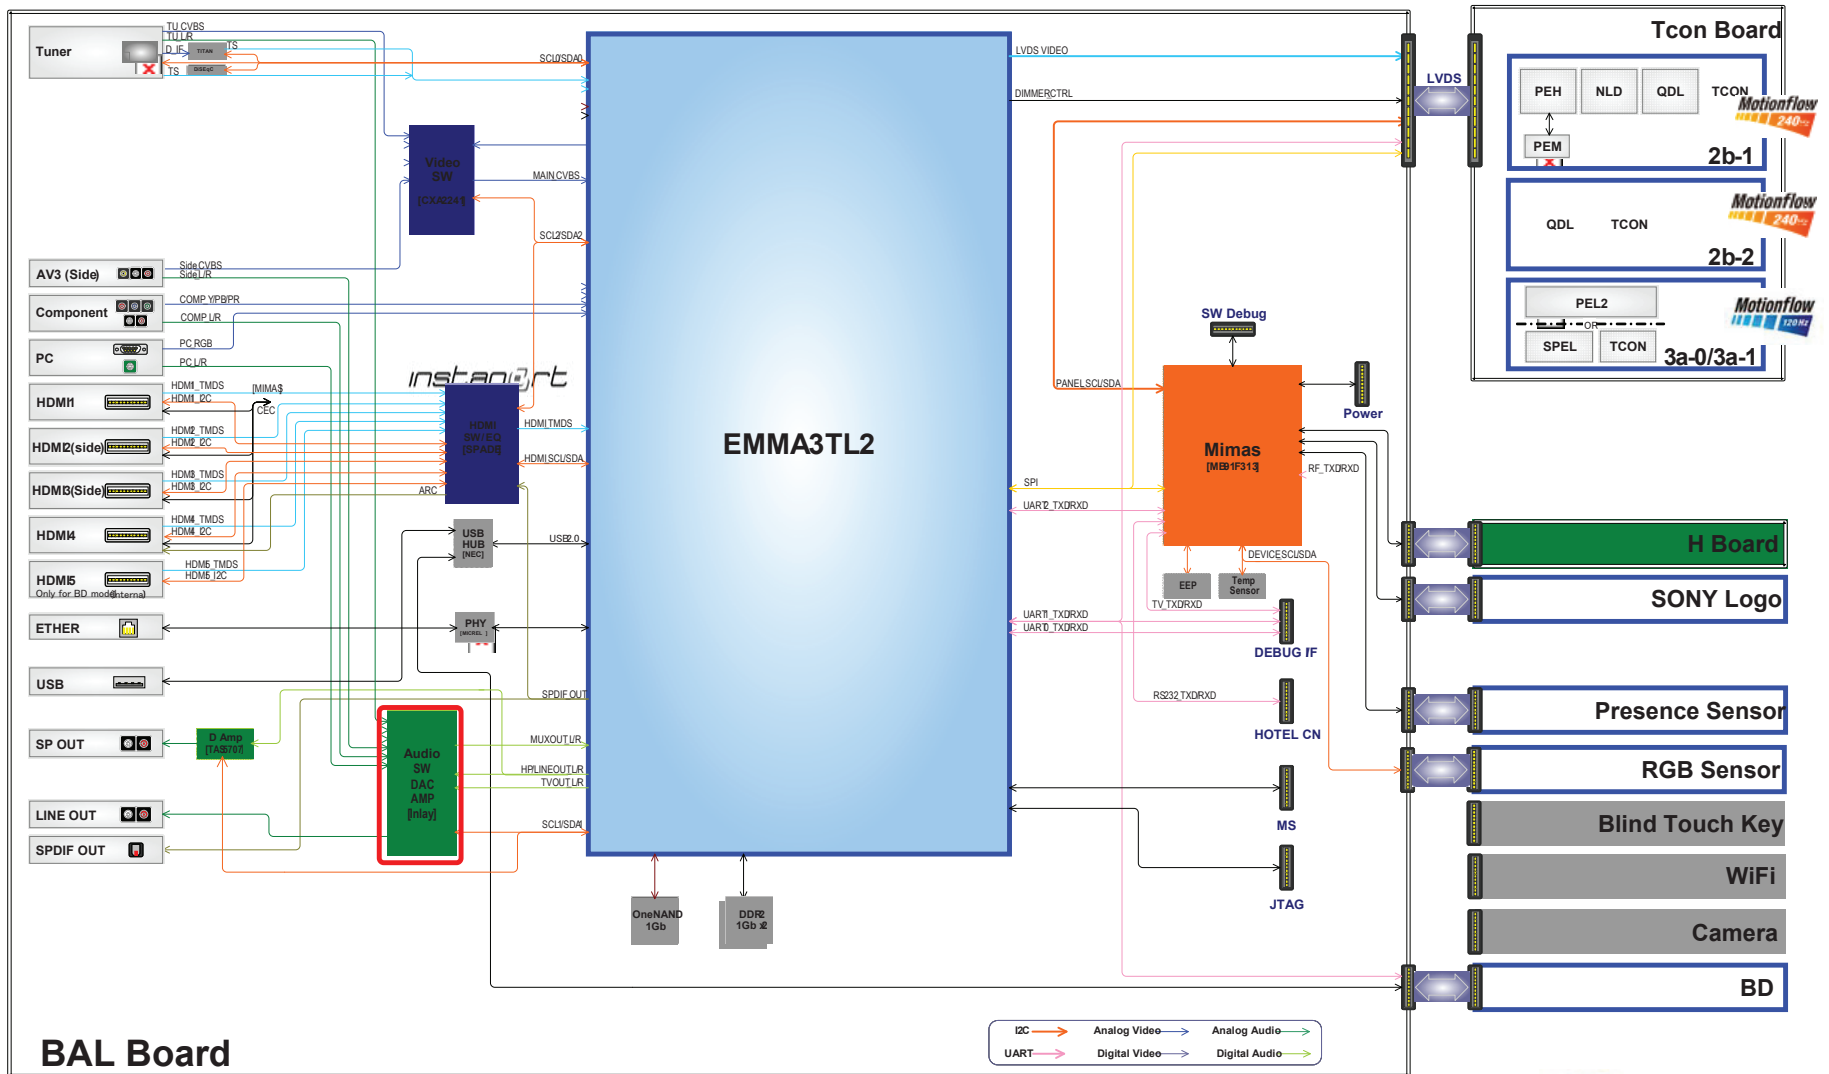



9-888-268-03

Sony Corporation
Sony Technology Center
Technical Services
Service Promotion Department

English
2010AJ74WEB-1
Printed in USA
© 2010.1

KDL-32EX700/40EX700/40EX703/46EX700/46EX701/46EX703/
52EX700/52EX701/52EX703/60EX700/60EX701/60EX703

36

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>