MPK-P1

SERVICE MANUAL

Ver 1.0 2000.10



US Model Canadian Model AEP Model

SPECIFICATIONS

Material Plastic (PC, ABS), stainless steel, glass

Water-resistance O-ring, buckle

Pressure-resistance To a depth of 30 m (98 feet) underwater

Switches that can be externally operated

Power, mode, shutter, zoom, flash, macro, control

Dimension Approx. 150 x 80 x 86 mm (6 x 3 1/4 x 3 1/2 inches)

 $(w \, / \, h \, / \, d)$

Mass Approx. 300 g (11 oz) (marine pack only)

Supplied accessories

Neck strap (1) Grease (1)

Anti-fogging lens solution (1) Operating Instructions (1)

Design and specifications subject to change without notice.

Main Feature

Useable at a depth as deep as 30 meters (98 feet) underwater.

For instructions on using your digital still camera with this pack, refer to the operating instructions of the digital still camera. This marine pack MPK-P1 is exclusively for use with the Sony Digital Still Camera DSC-P1, enabling the digital still camera to be used in the rain or at the beach as it is water- and moisture-resistant.

Notice

- Before using the digital still camera underwater, first take the marine pack to a depth of about 1 m (3.3 feet) and check that the digital still camera is operating properly and that the marine pack is not leaking, then commence your dive.
- In the unlikely event that a malfunction of the marine pack causes damage due to water leakage, Sony does not guarantee agaist damages to the equipment contained in it (digital still camera, battery, etc.) and the recorded contents, nor expenses entailed in the photography.

MARINE PACK



SECTION 1 EXPLODED VIEW


NOTE:

- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked " * "are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- · Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.

Note:

Items marked "!" are parts in relation to waterproof.

Replace these components with Sony parts. Be sure to check up waterproofing after

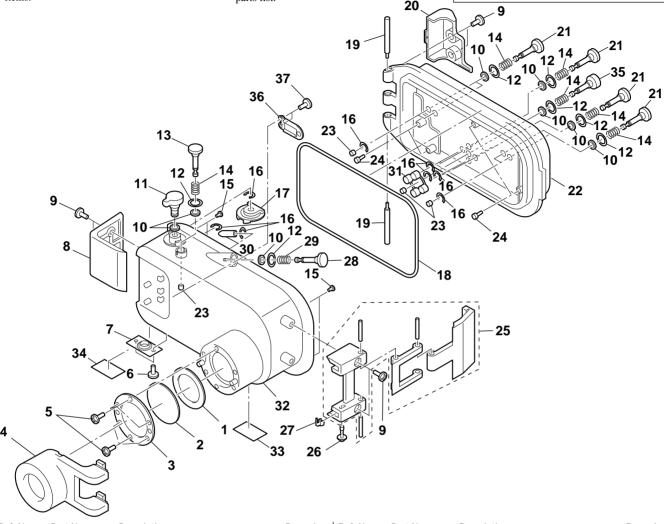

Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>
! 1 ! 2	3-065-005-01 3-065-003-01	GLASS, FRONT		! 26 ! 27		SPRING, LOCK	
! 3	3-065-004-01 3-065-006-01			! 28 ! 29		BUTTON, POWER	
4 ! 5		SCREW +P 2X6		30		SPRING, POWER BUTTON ARM, POWER	
6 7		SCREW (2.6X8) (TYPE 2), +K PLATE, TRIPOD SCREW		31 ! 32		RUBBER (B), BUTTON CABINET, FRONT	
8	3-065-015-01			* 33		LABEL, CAUTION	
8 9		SCREW (2.6X8), TAPPING, +P		* 34		LABEL, O RING CAUTION	
<i>!</i> 10	3-977-357-01	O RING (P3)		! 35	3-065-016-01	BUTTON (B)	
<i>!</i> 11	3-065-021-01	LEVER, MODE		36	3-065-994-01	PLATE, LIGHT INTERCEPTION	
! 12		RETAINER, O RING		37	2-115-925-31	SCREW +P M2x4	
! 13 ! 14		BUTTON, SHUTTER SPRING, BUTTON				ACCESSORIES & PACKING MATERIA	21
15	3-065-026-01	•				**************************************	
<i>!</i> 16	3-065-020-01				2-115-921-01		
! 17		ARM, SELECT				STRAP (B), NECK	00.111011
! 18 ! 19	3-065-033-01	O RING AS568 156 SHAFT, HINGE			3-065-038-11	MANUAL, INSTRUCTION (ENGLISH, FRENCH, DUTCH) (US, Cana	
20	3-065-028-01	•			3-065-038-21	MANUAL, INSTRUCTION (GERMAN,	, ,
20	0 000 020 0.	5 ,			0 000 000 2.	ITALIAN, PORTUGUI	
! 21	3-065-029-01				3-065-038-31	MANUAL, INSTRUCTION (RUSSIAN,	
! 22	3-065-027-01	•			2 041 240 01	CHINESE, KORE	:AN) (AEP)
23 24	3-065-019-01 3-065-031-01					SPACER, PACKING STOPPER LIQUID	
! 25		BLICKLE ASSY	_			STOLL ELGOLD	
Sony Cornoration							

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com