

Adjusting the audio emphasis (DYNAMIC SOUND SYSTEM)

Using the 5 BAND GRAPHIC EQUALIZER

Use	To adjust
BALANCE	Stereo imaging.
MEGA BASS	Deep bass sound.
400 Hz	Speaking voice, middle frequencies of instrumental music.
1 kHz	Presence of vocals.
4 kHz	Brightness of the sound.
10 kHz	High treble sounds or to reduce high frequency noise/tape hiss.

Using the PRESET MODE

Use	To
MANUAL	Adjust the sound using the 5 BAND GRAPHIC EQUALIZER.
DISCO	Get powerful, clear sounds emphasizing low and high range audio.
PARTY	Get light, bright sounds emphasizing high and middle range audio.
LIVE	Get wide-ranging sounds having presence.

 
Note

When adjusting the 5 BAND GRAPHIC EQUALIZER, be sure to set the PRESET MODE to MANUAL. The graphic equalizer will not work in any other position.

Connecting optional components

Before making connections, be sure to turn off the power of the component and set FUNCTION to TAPE/RADIO OFF on the player.

Listening to Audio Components

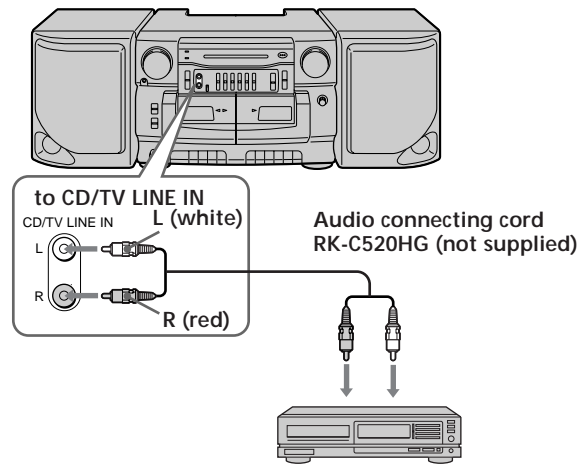

After connecting the component, set FUNCTION to CD/TV LINE IN and play the connected component.

Tip

You can record the sound of the connected component. Insert a cassette, and press ● REC on deck B.

Note

Connect the cables firmly to avoid any malfunction.

Using the Microphone

 
Turn on the microphone (not supplied) if it has a power switch.

Tips

- To mix radio or tape sounds and your voice, play the sound you want, and speak or sing into the microphone.
- To use the player as a public address system, set FUNCTION to CD/TV LINE IN, and speak into the microphone.

Note


If acoustic feedback (howling) occurs, turn down the volume or move the microphone away from the speakers.

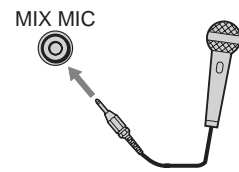

Setting up the system

Connecting the Speakers

 Make sure you turn off the power before making connections.

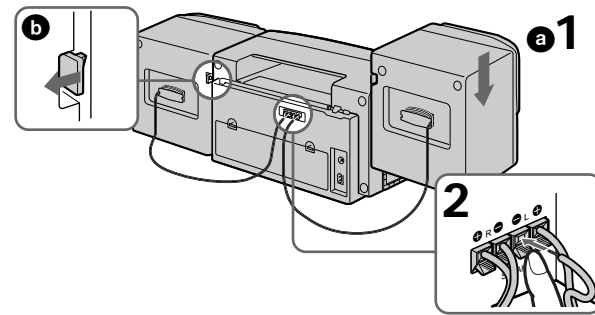

1 Align the grooves and slide the speaker box down until it snaps into place **a**.

2 Connect the black wires to (-) minus and the red wires to (+) plus terminals: the right speaker wires to the R, and the left speaker wires to the L terminals.

 
Tip

To detach the speakers, unlock the speaker **b** and slide the speaker box all the way up and away from the player.

Choosing Power Sources

To use the player on AC power source (mains)

Connect the supplied AC power cord to the AC IN jack.

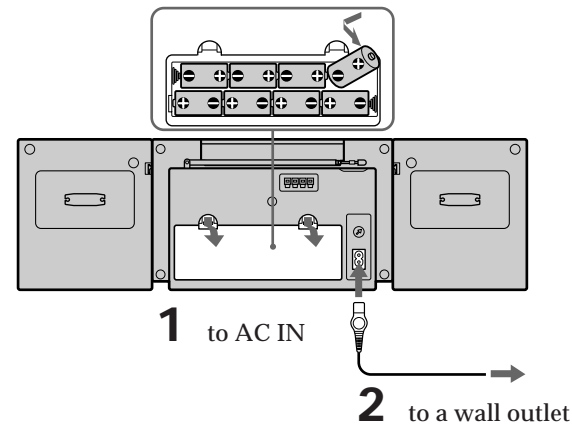


To use the player on batteries

Insert eight R20 (size D) batteries (not supplied) into the battery compartment.

To adjust the voltage

 Be sure to set the VOLTAGE SELECTOR (at the rear) to your local power supply.

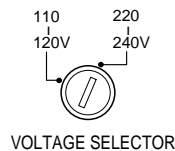

Tip

For customers supplied with an AC plug adaptor, use it if the plug of the mains lead does not match your mains.

Notes

- To use the player on batteries, disconnect the mains lead from the player.
- Replace the batteries when the OPR/BATT indicator dims or when the player stops operating. Replace all batteries with new ones.

SONY

WARNING

To prevent fire or shock hazard, do not expose the player to rain or moisture. To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

The FUNCTION selector is located at the front. When you turn on the player, the OPR/BATT indicator lights up.

Radio Cassette-Corder

Operating Instructions

CFS-717S
CFS-717SMK2

©1997 by Sony Corporation

3-859-353-15(1)

Troubleshooting

There is no audio.

- Connect the mains lead securely.
- Insert the batteries properly.
- Replace all batteries if they are weak.
- Unplug the headphones.
- Adjust the volume.
- Set FUNCTION to the position you want to operate.

Cassette cannot be inserted.

- Insert the cassette properly.

 
 
 
The ● REC button does not function.

- No cassette is in deck B.
- Make sure the safety tab on the cassette is in place.

Poor playback, recording or erasing quality.

- Dirty heads. Clean the unit (as shown) with a cotton swab slightly moistened with cleaning fluid or alcohol.
- Demagnetize the heads and all metal parts in the tape path with a commercially available tape head demagnetizer.

Deck A

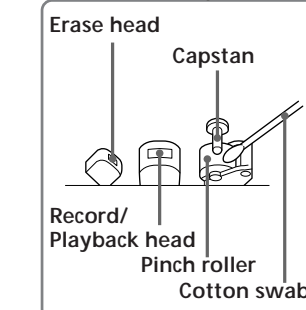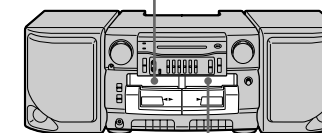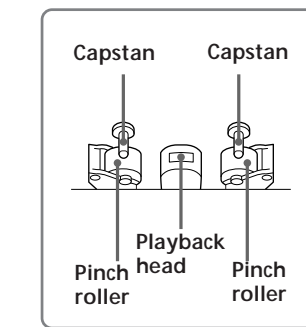

Deck B

Precautions

On safety/power sources

- Should any solid object or liquid fall into the player, unplug the player, and have it checked by qualified personnel before operating it any further.
- For AC operation, check that the player's operating voltage is identical with your local power supply (see "Specifications") and use the supplied mains lead; do not use any other type. The voltage selector is located on the rear of the player.
- The player is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the player itself has been turned off.
- For battery operation, use eight R20 (size D) batteries.
- When the batteries are not to be used, remove them to avoid damage that can be caused by battery leakage or corrosion.
- The nameplate indicating operating voltage, power consumption, etc. is located at the rear.

On placement/operation

- Do not leave the player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock.
- Do not place anything within 10 mm of the side of the cabinet. The ventilation holes must be unobstructed for the player to operate properly and to prolong the life of its components.
- Since a strong magnet is used for the speakers, keep personal credit cards using magnetic coding or spring-wound watches away from the player to prevent possible damage from the magnet.
- If the player has not been used for a long time, set it in the playback mode to warm it up for a few minutes before inserting a cassette.

 
 
If you have questions or problems concerning your player, please consult your nearest Sony dealer.

Specifications




- Frequency range**
FM: Saudi Arabia: 87.6-107MHz/Central and eastern Europe: 65-108MHz/Other countries: 87.6-108MHz
MW: 530-1,605kHz
SW1: 2.3-7MHz
SW2: 7-22MHz
- IF**
FM: 10.7MHz MW/SW: 455kHz
- Aerials**
FM/SW: Telescope MW: Built-in ferrite bar
- Recording system**
4-track, 2-channel stereo
- Frequency response**
80-12,500Hz
- Speakers**
Full range: 10cm (4 inches) dia., cone type/Tweeter: 5 cm (2 inches) dia.
- Input**
MIX MIC jack (minijack), sensitivity 3.9 mV for low impedance microphone CD/TV LINE IN jacks (phono jacks), sensitivity 0.43 V, input impedance 50 kilohms
- Output**
Headphones jack (stereo minijack), for 16-68 ohms impedance headphones
- Maximum Power output**
12W + 12W
- Battery life**
FM Recording: Sony R20P: Approx. 5 hours/Sony LR20 alkaline: Approx. 12 hours
Playback: Sony R20P: Approx. 2 hours/Sony LR20 alkaline: Approx. 5.5 hours
- Power requirements**
110-120V/220-240 V AC selectable, 50/60Hz
12V DC, eight R20 (size D) batteries
- Power consumption**
AC 30W
- Dimensions**
Approx. 760 x 225 x 220mm (w/h/d) (30 x 8 7/8 x 8 3/4 inches) incl. projecting parts and controls, not incl. handle
- Mass**
Approx. 6.8kg (15 lb) incl. batteries
- Supplied accessory**
AC power cord (1)

Design and specifications are subject to change without notice.

Location of controls

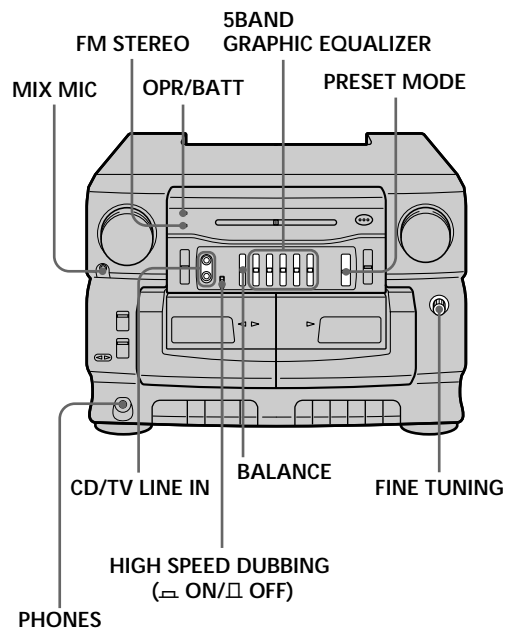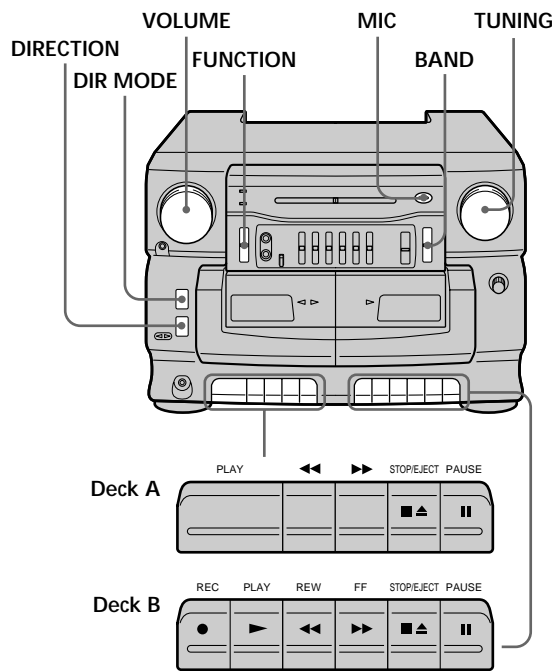


Listening to the radio

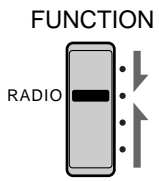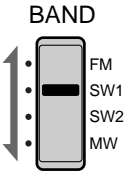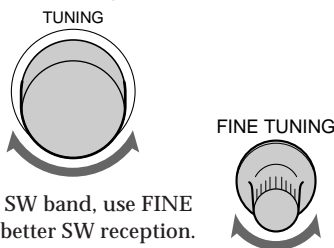   - 1 Set FUNCTION to RADIO.
 
- 2 Set BAND to the band you want.
 
- 3 Tune to the station you want.
 

To tune in an SW band, use FINE TUNING for better SW reception.

To turn off the radio
Set FUNCTION to TAPE/RADIO OFF.

 To improve broadcast reception
Reorient the aerial for FM. Reorient the player itself for MW. For SW, pull the aerial vertically.


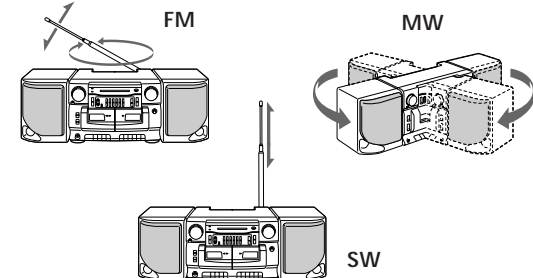



Tips

- To listen through headphones, connect the headphones to PHONES.
- For best results, move the player away from the TV.

Use TYPE I (normal) tape only.

  Playing a tape

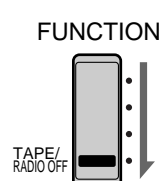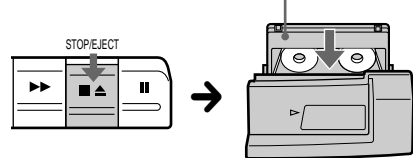 - 1 Set FUNCTION to TAPE /RADIO OFF.
 
- 2 Insert a recorded tape into deck A or B.
 

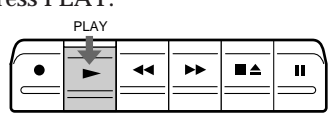With the side you want to play on facing forward.
- 3 Press PLAY.
 

To	Press
Stop recording	■▲
Stop playback	■▲
Fast-forward or rewind the tape	◀◀ or ▶▶
Pause playback	


Tips


- DIRECTION ◀/▶ (reverse/forward) indicators show the playback side during playback: FWD ▶ (forward side), or REV ◀ (reverse side)(deck A only).
- To select the direction of the tape, set DIR MODE to ◀▶ for both sides repeatedly, or ▶◀ for both sides (from the front side to reverse side only). If play begins from the reverse side, the tape stops at the end of that side (deck A only).
- To switch playback to the opposite side, press down DIRECTION once (deck A only).
- To play tapes in both decks successively, press PLAY on deck B and then press PLAY and || on deck A as the same time. When the tape ends on deck B, the playback starts automatically on deck A.
- When you play both decks, you will hear only deck B.

Note
Do not press ▶▶, ◀◀ or PLAY on the other deck during playback as this causes excessive wow and flutter.

Use TYPE I (normal) tape only.

 Recording (deck B)

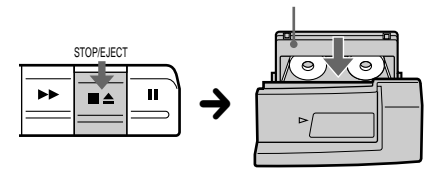 - 1 To record from the radio
Tune to the station you want.
To record from the built-in microphone
Set FUNCTION to TAPE/RADIO OFF.
- 2 Insert a blank tape into deck B.
 

With the side you want to record on facing forward.
- 3 Press ● REC on deck B.
 

To	Press
Stop recording	■▲
Pause recording	

When the tape ends, the recording stops.
Press this button again to resume recording.

Tips

 
- For best results, use the mains lead.
- Adjusting the volume or the audio emphasis will not affect the recording level.
- To erase a recording, disconnect the audio source if connected to CD/TV LINE IN. Set FUNCTION to CD/TV LINE IN and press ● REC.

Notes

- While recording from the built-in microphone, you cannot monitor the sound through the headphones.
- When you connect the microphone to MIX MIC jack, you cannot record from the built-in microphone.
- Do not press ▶▶, ◀◀ or PLAY on deck A during recording as this causes excessive wow and flutter.

Notes on cassettes



- Break off the cassette tab from side A or B to prevent accidental recording. If you want to reuse the tape for recording, cover the tab hole with adhesive tape.


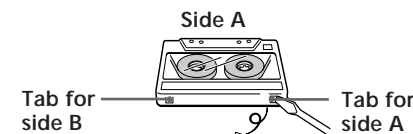


• The use of cassettes with more than 90 minutes of play time is not recommended except for long, continuous recording or playback.

Use TYPE I (normal) tape only.

  Dubbing (deck A to B)

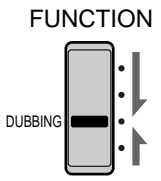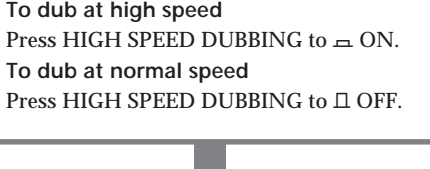  - 1 Set FUNCTION to DUBBING.
 
- 2 To dub at high speed
Press HIGH SPEED DUBBING to ON.
To dub at normal speed
Press HIGH SPEED DUBBING to OFF.
- 3 Insert a recorded tape into deck A, and a blank tape into deck B.
 

With the side you want to record on facing forward.
- 4 Press || PAUSE and then press PLAY on deck A.
 
- 5 Press ● REC on deck B.
 

To stop dubbing
Press ■▲ on deck A and B.

Tips

- For best results, use the mains lead.
- Do not set the FUNCTION during dubbing as this causes excessive wow and flutter.
- To dub at high speed, press HIGH SPEED DUBBING (ON) after you have inserted a blank tape in step 3. Do not press HIGH SPEED DUBBING during dubbing as this causes excessive wow and flutter.
- Adjusting the volume or the audio emphasis will not affect the recording level.
- When the tape in deck A ends first, deck B will also stop recording. When the tape in deck B ends first, deck A plays on as set with the DIR MODE switch.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>