 
 



E

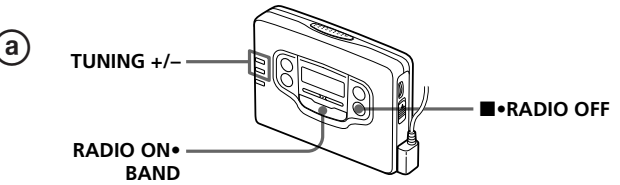


b

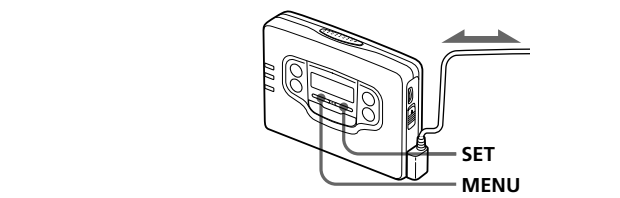

 
c

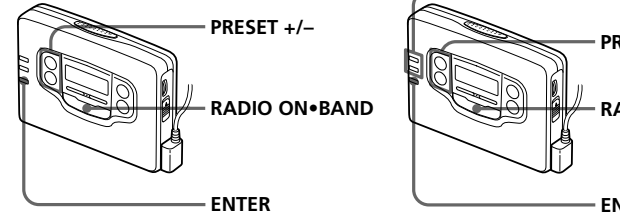

F

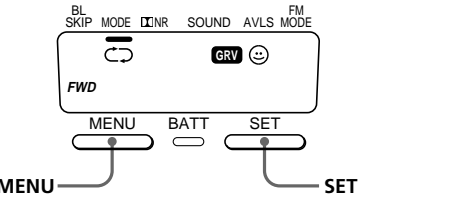 

G

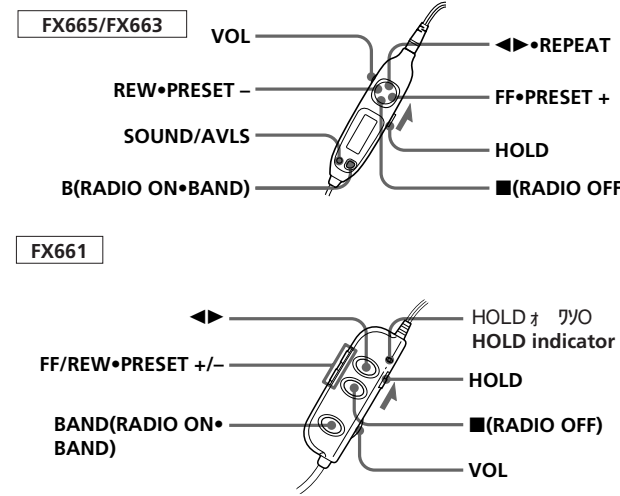 

E

- 1 RADIO ON•BAND 2 RADIO ON•BAND 3 TUNING +/- 4 WALKMAN HOLD 5 PRESET +/-

①・②・③・④・⑤・⑥・⑦・⑧・⑨・⑩・⑪・⑫・⑬・⑭・⑮・⑯・⑰・⑱・⑲・⑳

①・②・③・④・⑤・⑥・⑦・⑧・⑨・⑩・⑪・⑫・⑬・⑭・⑮・⑯・⑰・⑱・⑲・⑳

- 1 2 3 4 5

E

①・②・③・④・⑤・⑥・⑦・⑧・⑨・⑩・⑪・⑫・⑬・⑭・⑮・⑯・⑰・⑱・⑲・⑳

①・②・③・④・⑤・⑥・⑦・⑧・⑨・⑩・⑪・⑫・⑬・⑭・⑮・⑯・⑰・⑱・⑲・⑳

①・②・③・④・⑤・⑥・⑦・⑧・⑨・⑩・⑪・⑫・⑬・⑭・⑮・⑯・⑰・⑱・⑲・⑳

- 1 2 3 4 5

E

①・②・③・④・⑤・⑥・⑦・⑧・⑨・⑩・⑪・⑫・⑬・⑭・⑮・⑯・⑰・⑱・⑲・⑳

①・②・③・④・⑤・⑥・⑦・⑧・⑨・⑩・⑪・⑫・⑬・⑭・⑮・⑯・⑰・⑱・⑲・⑳

①・②・③・④・⑤・⑥・⑦・⑧・⑨・⑩・⑪・⑫・⑬・⑭・⑮・⑯・⑰・⑱・⑲・⑳

- 1 2 3 4

Listening to the Radio

- 1 Press RADIO ON•BAND to turn on the radio. 2 Press RADIO ON•BAND repeatedly to select AM or FM. 3 Press TUNING+/- to tune in to the desired station.

To turn off the radio

- Press RADIO OFF.

To improve the broadcast reception

- For AM: The Walkman has a built-in antenna. Reorient the Walkman horizontally to obtain optimum AM reception.

Presetting Radio Stations

Once you store your favorite stations in memory, you can tune them easily. You can preset up to 16 stations for FM and 8 stations for AM.

Tuning in to and Storing Radio Stations Automatically

- 1 Press RADIO ON•BAND to turn on the radio. 2 Press RADIO ON•BAND repeatedly to select AM or FM. 3 Press ENTER until "A" appears in the display.

Storing Radio Stations Manually

- 1 Turn on the radio and select the desired band. 2 Press ENTER.

Using the Remote Control

- 1 Press RADIO ON•BAND to store using TUNING+/-, and select a preset number using PRESET+/-.

To cancel the stored station

- 1 Slide HOLD in the direction of the arrow.

Using Other Functions

- 1 Press MENU repeatedly to set the cursor to SOUND in the display.

For FX665/FX663

- When using the remote control, see "Using the Remote Control".

Protecting Your Hearing (AVLS)

When you set the AVLS (Automatic Volume Limiter System) function to on, the maximum volume is kept down to protect your ears.

- 1 Press MENU repeatedly to set the cursor to AVLS in the display.

For FX665/FX663

When using the remote control, see "Using the Remote Control".

Notes

- If the sound is distorted when you listen to the bass-boosted sound with the AVLS function, turn down the volume.

On the unit

- Do not drop the unit or give a shock to the unit, or it may cause a malfunction.

To lock the buttons

- 1 Slide HOLD in the direction of the arrow.

For FX661

- 1 Slide HOLD so that the yellow mark appears.

Using SOUND

Press SOUND/AVLS to select the desired mode. With each press, the indications in the display changes as follows:

Using AVLS

Press and hold SOUND/AVLS for two seconds or more. "ON" appears in the display.

Additional Information

Precautions

On rechargeable battery and charger

- If the rechargeable battery is new or has not been used for a long time, it may not be charged completely until you use it several times.

On batteries

Do not carry the dry or rechargeable batteries with coins or other metallic objects.

To clean the tape head and path

Use the cleaning cassette CHK-1 (not supplied) every 10 hours of use.

To clean the exterior

Use a soft cloth slightly moistened with water. Do not use alcohol, benzine or thinner.

Troubleshooting

- The cassette holder does not open.

The volume cannot be turned up

If "ON" appears for AVLS display, press SET so that "ON" disappears.

The display on the remote control is not normal

Disconnect the remote control from the Walkman, then connect it again.

Specifications

Table with 2 columns: Section, Specifications. Includes Frequency range, Frequency response, Output, and Power requirements.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>