

TV/WEATHER/FM/AM PLL Synthesized Clock Radio

Operating Instructions

DREAM MACHINE

DREAM MACHINE is a trademark of Sony Corporation.


ICF-C113V

Sony Corporation © 1998 Printed in Malaysia

WARRANTY 4-557-146-02

WARNING

 To prevent fire or shock hazard, do not expose the unit to rain or moisture.

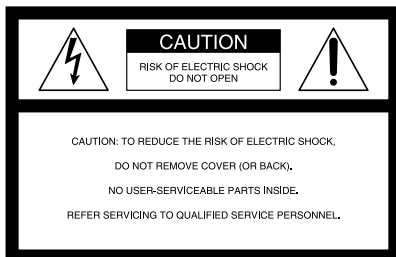

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

* The graphical symbols are at the bottom of the unit.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Before You Begin

Thank you for choosing the Sony Dream Machine. The Dream Machine will give you many hours of reliable service and listening pleasure. Before operating the Dream Machine, please read these instructions thoroughly and retain them for future reference.

Features

- Date button to display the year, month and date.
- D.S.T. (Daylight Saving Time)—Summer time calculation (one-hour skip function).
- Dual alarm FM/AM PLL (phase locked loop) synthesized clock radio.
- 5 random memory presets.
- Radio and buzzer alarms with the snooze function.
- LCD with backlight which has a brightness switch.
- LED indicators for Dual Alarm.
- Self power back-up: Even if the power supply is interrupted, the time setting and the memory will be backed up for half an hour without batteries.

Precautions

- Operate the unit only on 120 V AC, 60 Hz.
- Disconnect the cord by grasping the plug. Never pull it by the cord.
- Do not leave the unit in a location near a heat source such as a radiator or air duct, or in a place subject to direct sunlight, excessive dust, mechanical vibration, or shock.
- Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that block the ventilation holes.
- Should any liquid or solid object fall into the unit, unplug the unit and have it checked by qualified personnel before operating it further.
- When the casing becomes soiled, clean it with a soft cloth dampened with a mild detergent solution. Never use abrasive cleaners or chemical solvents, as they may mar the casing.

If you have any questions, please consult your nearest Sony dealer.

Specifications

Time display	12-hour system
Frequency range	FM: 87.5-108 MHz AM: 530-1710 kHz TV: 2-13ch WEATHER: 1-5ch
Channel steps	FM: 0.1 MHz (fixed) AM: 10 kHz (fixed)
Speaker	Approx. 6.6 cm (2 5/8 in) dia.
Power output	130 mW (at 10% harmonic distortion)
Power requirements	120 V AC, 60 Hz
Dimensions	Approx. 119 × 118 × 129.5 mm (w/h/d) (4 3/4 × 4 3/4 × 5 1/8 in) incl. projecting parts and controls
Mass	Approx. 630 g (11b 6.2 oz)

Design and specifications are subject to change without notice.

IMPORTANT SAFEGUARDS

For your protection, please read these safety instructions completely before operating the appliance, and keep this manual for future reference. Carefully observe all warnings, precautions and instructions on the appliance and in the operating instructions, and adhere to them.

INSTALLATION

Water and Moisture

Do not use powerline operated appliances near water - for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.

Heat

Do not place the appliance near or over a radiator or heat register, or where it is exposed to direct sunlight.

Ventilation

The slots and openings in the cabinet are provided for necessary ventilation. To ensure reliable operation of the appliance, and to protect it from overheating, these slots and openings must never be blocked or covered.

- Never cover the slots and openings with a cloth or other materials.
- Never block the slots and openings by placing the appliance on a bed, sofa, rug or other similar surface.
- Never place the appliance in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.

Accessories

Do not place the appliance on an unstable cart, stand, tripod, bracket, or table. The appliance may fall, causing serious injury to a child or an adult, and serious damage to the appliance. Use only a cart, stand, tripod, bracket, or table recommended by Sony.

-An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

Wall or Ceiling Mounting

If your appliance can be mounted to a wall or ceiling, mount it only as recommended by Sony.

USE

Power Source

This appliance should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company. For those appliances designed to operate from battery power, or other sources, refer to the operating instructions.

Grounding or Polarization

This appliance is equipped with a polarized AC power cord plug (a plug having one blade wider than the other), or with a three-wire grounding type plug (a plug having a third pin for grounding). Follow the instructions below:

-For the appliance with a polarized AC power cord plug:

This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the polarized plug by forcing it in.

-For the appliance with a three-wire grounding type AC plug:

This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the grounding plug.

Overloading

Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock.

When not in use

Unplug the power cord of the appliance from the outlet when left unused for a long period of time. To disconnect the cord, pull it out by grasping the plug. Never pull the plug out by the cord.

Power-Cord Protection

Route the power cord so that it is not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the plugs, receptacles, and the point where the cord exits from the appliance.

Lightning

For added protection for this appliance during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the appliance due to lightning and powerline surges.

Object and Liquid Entry

Never push objects of any kind into the appliance through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the appliance.

Cleaning

Unplug the appliance from the wall outlet before cleaning or polishing it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the appliance. Clean the appliance only as recommended by Sony.

Attachments

Do not use attachments not recommended by Sony, as they may cause hazards.

ANTENNAS

 
Outdoor Antenna Grounding

If an outdoor antenna or cable system is installed, follow the precautions below.

An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits. WHEN INSTALLING AN OUTDOOR ANTENNA SYSTEM, EXTREME CARE SHOULD BE TAKEN TO KEEP FROM CONTACTING SUCH POWER LINES OR CIRCUITS AS CONTACT WITH THEM IS ALMOST INVARIABLY FATAL.

Be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

Antenna Grounding According to the National Electrical Code

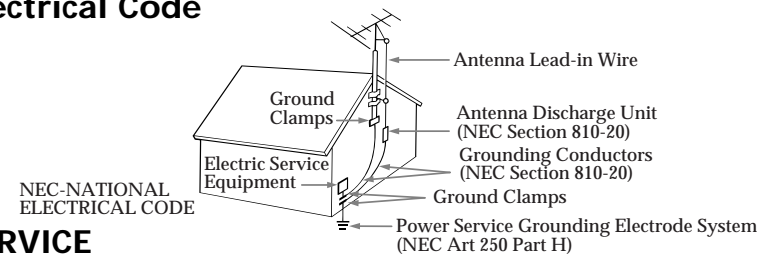

SERVICE

Damage Requiring Service

Unplug the appliance from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power cord or plug is damaged or frayed.
- If liquid has been spilled or objects have fallen into the appliance.
- If the appliance has been exposed to rain or water.
- The appliance does not appear to operate normally or exhibits a marked change in performance.
- This indicates a need for service.
- If the appliance does not operate normally when following the operating instructions, adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the appliance to normal operation.
- If the appliance has been subject to excessive shock by being dropped, or the cabinet has been damaged.

Servicing

 
Do not attempt to service the appliance yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Replacement parts

When replacement parts are required, be sure the service technician has used replacement parts specified by Sony that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.

Safety Check

Upon completion of any service or repairs to the appliance, ask the service technician to perform routine safety checks (as specified by Sony) to determine that the appliance is in safe operating condition.

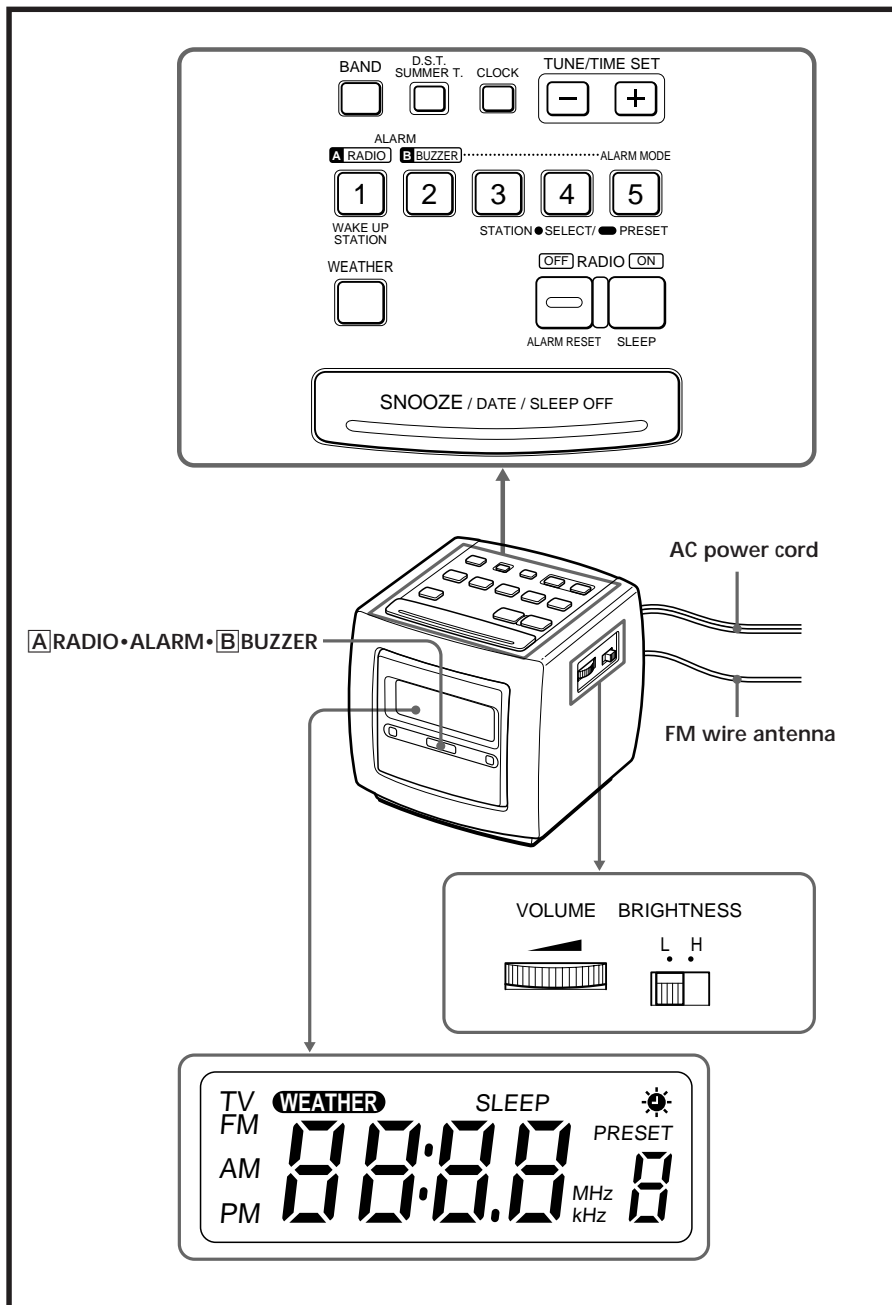

Setting the Clock

- 1 Plug in the clock radio.
"AM 12:00" will flash in the display.
- 2 Press **CLOCK** for a few seconds.
You will hear a beep and the year will start to flash in the display.
- 3 Press **TUNE/TIME SET +** or **-** until the correct year appears in the display.
- 4 Press **CLOCK** once.
- 5 Repeat steps 3 and 4 to set the month, date, hour, and minute.
After setting the minute, press and release **CLOCK** to start the counting of the seconds.

- To display the year and date, press **SNOOZE/DATE/SLEEP OFF** once for the date and within 2 seconds press it again for the year. The date or year will appear in the display for a few seconds and then the display returns to the current time.
When **SNOOZE/DATE/SLEEP OFF** is pressed while the **SNOOZE** function is operating, the year and date will not appear in the display.
- To set the current time rapidly, hold down the **+** or **-** button.
- To set the current time from zero seconds, release **CLOCK** with the time signal at step 5.

To change the display to the daylight saving time (summer time) indication

Press **D.S.T./SUMMER T.**
"☀" is displayed and the time indication changes to summer time.
To cancel the summer time indication, press **D.S.T./SUMMER T.** again.

Playing the Radio

Manual Tuning

- 1 Press **RADIO ON** to turn on the radio.
The band and frequency will appear in the display for a few seconds and then the current time indication returns to the display.
- 2 Press **BAND** repeatedly to select the desired band.
- 3 Use **TUNE/TIME SET +** or **-** to tune in the desired station.
The FM frequency advances or reverses in 0.1 MHz channel steps and the AM frequency in 10 kHz channel steps.
A beep sounds when the upper or lower extremity of the band range is reached.
- 4 Adjust volume using **VOLUME**.

- To turn off the radio, press **RADIO OFF**.
- To improve reception
TV/WEATHER/FM: Extend the FM wire antenna fully to increase FM reception sensitivity.
AM: Rotate the unit horizontally for optimum reception. A ferrite bar antenna is built in to the unit.
- To check the current station, press the **+** or **-** button lightly. The band and frequency are displayed for a few seconds, after which the current time indication returns to the display.
- If the radio alarm **A RADIO** comes on while the radio is playing, the station switches to the frequency set under preset number 1.

To listen to the WEATHER band

- 1 Press **RADIO ON** to turn on the radio.
- 2 Press **WEATHER** to switch to the WEATHER band.
"WEATHER" will appear in the display.
- 3 Press **TUNE/TIME SET +** or **-** repeatedly until the desired channel appears in the display.

To switch back to the previous band, press **BAND**.

To set the brightness of the backlight

Set **BRIGHTNESS** to H (high) or L (low) to make the display more visible.

Preset Tuning

You can preset up to five stations for one-touch tuning, one under each of preset buttons 1 to 5.

Presetting a station

Example: To set AM 1260 kHz in preset button 2.

- 1 Press **RADIO ON** to turn on the radio.
- 2 Tune in the station you want to preset. (See "Manual Tuning")
- 3 Hold down the desired **STATION•SELECT/PRESET** button (in this case, 2) until you hear two short beeps.



The frequency will appear for a few seconds and then the display will return to the current time.

- When using the radio alarm, preset the station you wish to serve as the alarm under preset button 1.

To change a preset station

Press the preset number again after tuning in manually to a different station. The previous station is replaced by the new one.

 
Tuning in a preset station

- 1 Press **RADIO ON** to turn on the radio.
- 2 Press the **STATION•SELECT/PRESET** button under which the desired station is stored.
- 3 Adjust volume using **VOLUME**.
After a few seconds, the display will return to the current time but the preset number indication will remain.

Setting the Alarm

You can set the radio and buzzer alarms at the preset time. Before setting the alarm, be sure to set the clock (See "Setting the Clock") and preset a radio station under preset button 1 (See "Preset Tuning").

- 1 Turn off the radio.
- 2 Hold down **A RADIO** or **B BUZZER** until a short beep sounds.
The "A RADIO" or "B BUZZER" indicator and the hour in the display will flash.
- 3 Press either **TUNE/TIME SET +** or **-** until the desired hour appears in the display.
- 4 Press **A RADIO** or **B BUZZER** to set the minute.
The minute will flash in the display.
- 5 Press either **TUNE/TIME SET +** or **-** until the desired minute appears in the display.
- 6 Press **A RADIO** or **B BUZZER**.
Two short beeps sound to indicate successful presetting.
- 7 Press **ALARM MODE** repeatedly until the alarm you want lights up.
Each time you press **ALARM MODE**, the alarm indication changes as follows.



When the alarm time is reached, the radio or buzzer sounds for 60 minutes or until turned off.

To stop the alarm

Press **ALARM RESET** while the alarm is activated.
The alarm will function at the same time the next day.

To cancel the alarm

Press **ALARM MODE** until neither the "A RADIO" nor "B BUZZER" indicator lights up.

Notes

- The alarm does not function, unless you set the clock, **A RADIO** and **B BUZZER** function.
- If both the radio and buzzer alarm are set for the same time, the radio alarm takes precedence.
- You can check the alarm time setting by pressing **A RADIO** or **B BUZZER**.

To doze for a few more minutes

 
- 1 Press **SNOOZE/DATE/SLEEP OFF**.
The radio or buzzer will shut off but will automatically come on again after about 8 minutes. You can repeat this process as many times as you like.

- The alarm indicator flashes continuously during the snooze function.

Setting the Sleep Timer

You can enjoy falling asleep to the radio using the built-in sleep timer that turns off the radio automatically after a preset duration.

- 1 Press **SLEEP**.
The radio turns on. It will go off after the preset time has passed. You can set the sleep timer to 90, 60, 30, or 15 minutes. Every push changes the display as follows.



The radio will play for the time you set, then shut off.

- To turn off the radio before the preset time, press **SNOOZE/DATE/SLEEP OFF**.

To Use Both Sleep Timer and Alarm

You can fall asleep to the radio sound and you will be awakened by the radio or buzzer alarm at the preset time.

- 1 Set the alarm. (See "Setting the Alarm".)
- 2 Set the sleep timer. (See "Setting the Sleep Timer".)

Troubleshooting

Should any problem occur with the unit, make the following simple checks to determine whether or not servicing is required. If the problem persists, consult the nearest Sony dealer.

- The clock does not show the correct time.
• Has an electrical power outage lasting more than half an hour occurred?

The radio or buzzer alarm does not sound at the preset alarm time.

- Has the desired radio and/or buzzer alarm mode been activated with the **ALARM MODE** button ("A RADIO" and/or "B BUZZER" indicator lit)?

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>