

FEATURES

8 mm VCR and Trinitron™ color television combined.

Easy recording of the TV program you are watching.


Simplified VCR timer-programming with on-screen instructions.

"Trouble-free" operation by following on-screen messages.

and others...

VCR	<ul style="list-style-type: none"> • 4-head system providing a high quality picture • PCM digital audio stereo recording • 4-hour recording possible. (On a P6-120 videocassette) • VCR SLEEP function for quick presetting of VCR's turn-off time.
TV	<ul style="list-style-type: none"> • Trinitron Microblack™ picture screen for high-resolution, high-contrast picture. • SLEEP function for automatic turn-off after one hour.
VCR and TV	<ul style="list-style-type: none"> • 181 regular and cable channels receivable. • Pay cable TV can be enjoyed by connecting a special converter. One-touch channel selection with ANT/AUX key. • Built-in MTS (Multichannel TV Sound) decoder for reception of stereo programs and SAP (Second Audio Program) broadcasts.* • FM simulcasted programs receivable with the addition of optional equipment. • APM hi-fidelity detachable speakers. • Programmable 3-week/4-event timer for recording TV programs. • On-screen displays show the operating mode. • Remote Commander for convenient operation.

CONNECTIONS

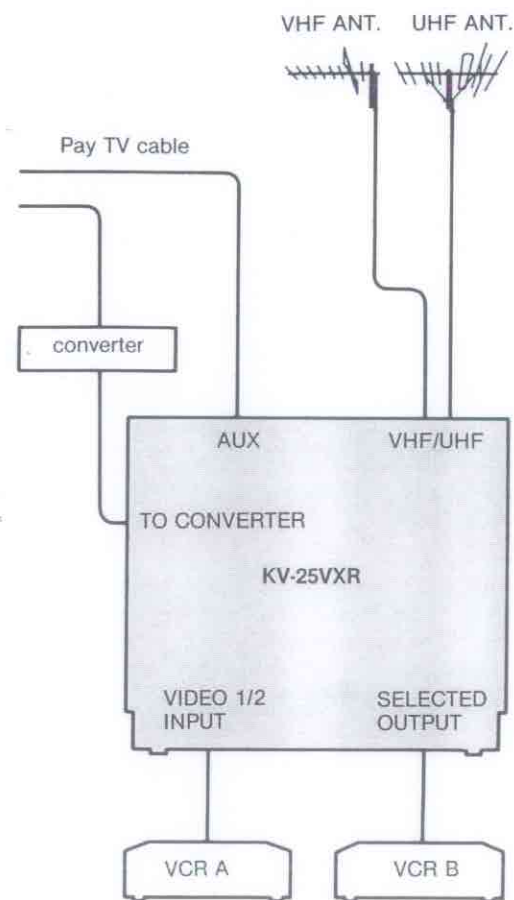

For details, refer to the instruction manual.

SONY.

TRINITRON® COLOR VIDEO TV **8**


KV-25VXR

(CABLE COMPATIBLE TV)

INSTANT INFORMATION

Video 8

©1986 by Sony Corporation
4-490-203-21 (1)

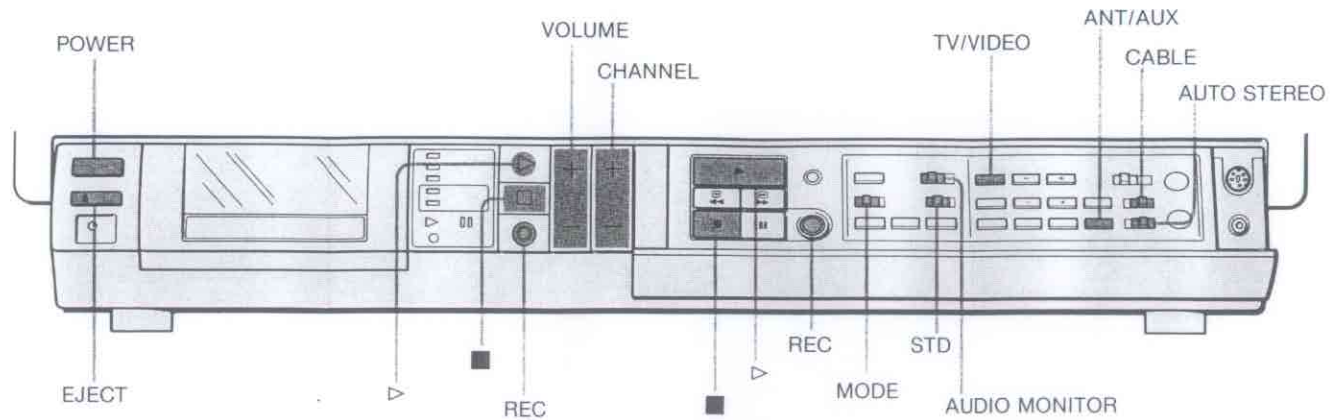

WATCHING THE TV

- 1 Press **POWER** to turn on the unit.
 - On-screen indication "VIDEO 1", "VIDEO 2" or "EXT-A" should be off. If not, press TV/VIDEO so that they disappear.
 - Set **AUTO STEREO** to ON to receive stereo broadcasts.
 - Set **CABLE** and **ANT/AUX** according to the channel to be watched.

Channel	CABLE switch	ANT/AUX key
VHF	OFF	Press so that "AUX" disappears.
UHF		
Cable TV	ON	Press so that "AUX" appears.
Pay cable TV		

- 2 Select the desired channel.
e.g. To select channel 123, press 1, 2, 3 and **ENTER** on the Commander.
 - 3 Press **VOLUME** to adjust the volume.
- To turn off the unit, press **POWER** again.

RECORDING A TV PROGRAM

- 1 Select the desired channel.
- 2 Press **EJECT** and insert a cassette.
 - Select the tape speed with **MODE**.
 - Select the MTS sound to be recorded with **STD**.
- 3 Press **REC** to start recording.
The **REC** lamp lights up.

To stop recording, press ■.

PLAYBACK

- 1 Insert a cassette.
 - Select the audio to be listened to with **AUDIO MONITOR**.

Audio desired	AUDIO MONITOR selector
MAIN	PCM
SAP	STD
BOTH	MIX

- 2 Press **>** to start playback.
The **PLAY** lamp lights up.

To stop playback, press ■.

Once the initial settings have been made, the unit can be controlled with the supplied Remote Commander. The controls with the same name as those on the unit have the same function.

For further information, refer to the instruction manual.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>