

SACD/DVD Player

Operating Instructions



DVP-NC650V

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.


To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this CD/DVD player is harmful to eyes, do not attempt to disassemble the cabinet.

Refer servicing to qualified personnel only.

The following caution label is located on the side of the player.

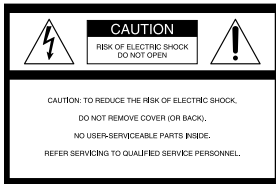

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

TO PREVENT ELECTRIC SHOCK MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

For customers in the U.S.A

Owner's Record

The model and serial numbers are located at the rear of the unit. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. DVP-NC650V
Serial No. _____

CAUTION

You are cautioned that any change or modifications not expressly approved in this manual could void your authority to operate this equipment.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Welcome!

Thank you for purchasing this Sony SACD/DVD Player. Before operating this player, please read this manual thoroughly and retain it for future reference.

Precautions

On safety

- Caution – The use of optical instruments with this product will increase eye hazard.
- Should any solid object or liquid fall into the cabinet, unplug the player and have it checked by qualified personnel before operating it any further.

On power sources

- The player is not disconnected from the AC power source as long as it is connected to the wall outlet, even if the player itself has been turned off.
- If you are not going to use the player for a long time, be sure to disconnect the player from the wall outlet. To disconnect the AC power cord, grasp the plug itself; never pull the cord.
- Should the AC power cord need to be changed, have it done at a qualified service shop only.

On placement

- Place the player in a location with adequate ventilation to prevent heat build-up in the player.
- Do not place the player on a soft surface such as a rug.
- Do not place the player in a location near heat sources, or in a place subject to direct sunlight, excessive dust, or mechanical shock.

On operation

- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.
- When you move the player, take out any discs. If you don't, the disc may be damaged.

On adjusting volume

Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, the speakers may be damaged when a peak level section is played.

On cleaning

Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

If you have any questions or problems concerning your player, please consult your nearest Sony dealer.

On cleaning discs

Do not use a commercially available cleaning disc. It may cause a malfunction.

IMPORTANT NOTICE

Caution: This player is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Projection televisions are especially susceptible to this.

On transporting the player

Before transporting the player, follow the procedure below to return the internal mechanisms to their original positions.

- 1** Remove all the discs from the disc tray.
- 2** Press \triangle to close the disc tray. Make sure that "NO DISC" appears on the front panel display.
- 3** Wait for 10 seconds, then press **I/⏻** on the remote, followed by **POWER** on the player. This will safely turn off the player.

Table of Contents

| | |
|--|-----------|
| WARNING | 2 |
| Welcome! | 2 |
| Precautions | 3 |
| About this Manual | 6 |
| This Player Can Play the Following Discs | 6 |
| Notes about the Discs | 7 |
| Index to Parts and Controls | 8 |
| Guide to the Control Menu Display | 12 |
| <hr/> | |
| Getting Started | 15 |
| Quick Overview | 15 |
| Step 1: Unpacking | 15 |
| Step 2: Inserting Batteries into the Remote | 15 |
| Step 3: TV Hookups | 16 |
| Step 4: Playing a Disc | 17 |
| <hr/> | |
| Hookups | 18 |
| Hooking Up the Player | 18 |
| Step 1: Connecting the Video Cords | 18 |
| Step 2: Connecting the Audio Cords | 20 |
| Step 3: Connecting the Power Cord | 27 |
| Step 4: Quick Setup | 28 |
| <hr/> | |
| Playing Discs | 33 |
| Playing Discs | 33 |
| Resuming Playback from the Point Where You Stopped the Disc (Resume Play) | 36 |
| Using the DVD's Menu | 37 |
| Selecting "ORIGINAL" or "PLAY LIST" on a DVD-RW Disc | 37 |
| Selecting a Playback Area for an SACD Disc | 38 |
| Playing VIDEO CDs with PBC Functions (PBC Playback) | 39 |
| Various Play Mode Functions (Program Play, Shuffle Play, Repeat Play, A-B Repeat Play) | 40 |
| <hr/> | |
| Searching for a Scene | 47 |
| Searching for a Particular Point on a Disc (Search, Scan, Slow-motion Play, Freeze Frame) | 47 |
| Searching for a Disc/Title/Chapter/Track/Index/Scene (Search mode) | 48 |
| Searching by Scene (VIEWER) | 50 |

| | |
|---|-----------|
| Viewing Information About the Disc | 52 |
| Viewing the Playing Time and Remaining Time on the Front Panel Display. | 52 |
| Checking the Playing Time and Remaining Time | 53 |
| Checking the Play Information (ADVANCED) | 55 |
| <hr/> | |
| Sound Adjustments | 56 |
| Changing the Sound | 56 |
| SURROUND Mode Settings | 58 |
| <hr/> | |
| Enjoying Movies | 63 |
| Changing the Angles | 63 |
| Displaying the Subtitles | 64 |
| Adjusting the Picture Quality (BNR) | 65 |
| Adjusting the Playback Picture (VIDEO EQUALIZER) | 66 |
| Enhancing the Playback Picture (DIGITAL VIDEO ENHANCER) | 67 |
| <hr/> | |
| Using Various Additional Functions | 68 |
| Locking Discs (Custom Parental Control, Parental Control) | 68 |
| Operation Sound Effects (Sound Feedback) | 72 |
| Controlling Your TV or AV Amplifier (Receiver) with the Supplied Remote | 73 |
| Controlling a CD Changer (Mega Control) | 75 |
| <hr/> | |
| Settings and Adjustments | 77 |
| Using the Setup Display | 77 |
| Setting the Display or Sound Track Language (LANGUAGE SETUP) | 78 |
| Settings for the Display (SCREEN SETUP) | 79 |
| Custom Settings (CUSTOM SETUP) | 81 |
| Settings for the Sound (AUDIO SETUP) | 83 |
| Settings for the Speakers (SPEAKER SETUP) | 86 |
| <hr/> | |
| Additional Information | 89 |
| Troubleshooting | 89 |
| Self-diagnosis Function (When letters/numbers appear in the display) | 91 |
| Glossary | 92 |
| Specifications | 95 |
| Language Code List | 97 |
| List of Setup Display Items | 98 |
| Index | 101 |




About this Manual



- Instructions in this manual describe the controls on the remote. You can also use the controls on the player if they have the same or similar names as those on the remote.
- The icons used in this manual are described below:

| Icon | Meaning |
|---|--|
|  | Functions available for DVD VIDEOS or DVD-Rs/DVD-RWs in Video mode |
|  | Functions available for DVD-RWs in VR (Video Recording) mode |
|  | Functions available for VIDEO CDs or CD-Rs/CD-RWs |
|  | Functions available for Super Audio CDs |
|  | Functions available for music CDs or CD-Rs/CD-RWs |
|  | More convenient features |

* “DVD” may be used as a general term for DVD VIDEOS, DVD-Rs, and DVD-RWS.

This Player Can Play the Following Discs

| Format of discs | |
|-----------------|---|
| DVD VIDEO |  |
| DVD-RW |  |
| SACD |  SUPER AUDIO CD |

| | |
|----------|---|
| VIDEO CD |  |
| Music CD |  |

 
“DVD VIDEO” and “DVD-RW” are trademarks.

Region code

Your player has a region code printed on the back of the unit and only will play DVD VIDEO discs (playback only) labeled with identical region codes.

DVDs labeled  will also play on this player.

If you try to play any other DVD, the message “Playback prohibited by area limitations.” will appear on the TV screen. Depending on the DVD, no region code indication may be labeled even though playing the DVD is prohibited by area restrictions.



Example of discs that the player cannot play

- The player cannot play the following discs:
- CD-ROMs (PHOTO CDs included)
 - All CD-Rs/CD-RWs other than music and VCD format CD-Rs/CD-RWs
 - Data part of CD-Extras
 - DVD-ROMs
 - DVD Audio discs

Also, the player cannot play the following discs:

- A DVD with a different region code (page 93).

- A disc recorded in a color system other than NTSC, such as PAL or SECAM. (This player conforms to the NTSC color system.)
- A disc that has a non-standard shape (e.g., card, heart).
- A disc with paper or stickers on it.
- A disc that has the adhesive of cellophane tape or a sticker still left on it.

Note

Some DVD-Rs, DVD-RWs, CD-Rs or CD-RWs cannot be played on this player due to the recording quality or physical condition of the disc, or the characteristics of the recording device. DVD-RWs in VR mode may also take time to play back due to the recording condition.

Furthermore, the disc will not play if it has not been correctly finalized. For more information, see the operating instructions for the recording device.

Note on playback operations of DVDs and VIDEO CDs

Some playback operations of DVDs and VIDEO CDs may be intentionally set by software producers. Since this player plays DVDs and VIDEO CDs according to the disc contents the software producers designed, some playback features may not be available. Also, refer to the instructions supplied with the DVDs or VIDEO CDs.

Copyrights

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents, other intellectual property rights owned by Macrovision Corporation, and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only, unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Notes about the Discs

On handling discs

- To keep the disc clean, handle the disc by its edge. Do not touch the surface.



- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.
- After playing, store the disc in its case.

On cleaning

- Before playing, clean the disc with a cleaning cloth. Wipe the disc from the center out.












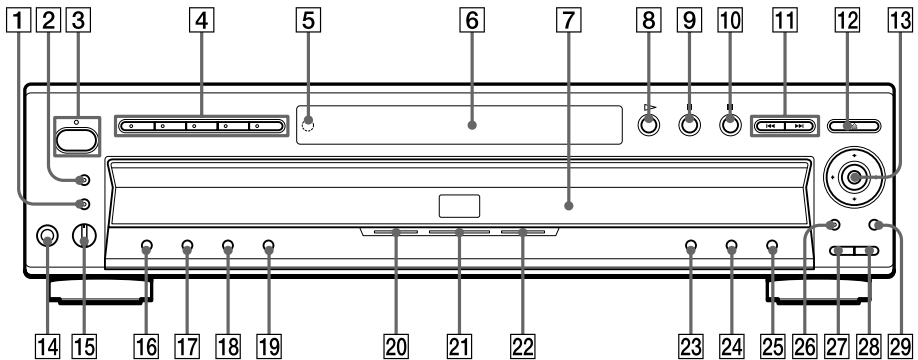


- Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.

Index to Parts and Controls

For more information, refer to the pages indicated in parentheses.

 
Front Panel (shown with the front door open)




- 1** BNR (Block Noise Reduction) button/indicator (65)
- 2** SURROUND button/indicator (58)
- 3** POWER (power) switch/indicator (33)
- 4** DISC SELECT (disc select) 1 through 5 buttons (34)
- 5**  (remote sensor) (15)
- 6** Front panel display (9)
- 7** Disc tray (33)
- 8**  (play) button (33)
- 9**  (pause) button (34, 72)
- 10**  (stop) button (33)
- 11**  (previous/next) buttons (34)
- 12**  (open/close) button (34)
- 13**  /  /  /  / ENTER (enter) buttons (28)
- 14** PHONES (phones) jack (33)
- 15** LEVEL (level) control (33)
- 16** SHUFFLE (shuffle) button (43)
- 17** REPEAT (repeat) button (44)
- 18** ONE/ALL (one/all) button (40)
- 19** LOAD (load) button (34)
- 20** SACD indicator
Lights up when the disc is an SACD.
- 21** MULTI CHANNEL (multi-channel) indicator
Lights up when:
– playing a disc that contains multiple audio signal channels
– the disc is not inserted
- 22** DVD indicator
Lights up when the disc is a DVD.
- 23** TOP MENU (top menu) button (37)
- 24** MENU (menu) button (37)
- 25**  RETURN (return) button (39)
- 26** MEGA CONTROL (mega control) button/indicator (75)
- 27** EXCHANGE (exchange) button (35)
- 28** DISC SKIP (disc skip) button (33)
- 29** DISPLAY (display) button (12)

Front Panel Display


When playing back a DVD VIDEO/DVD-RW

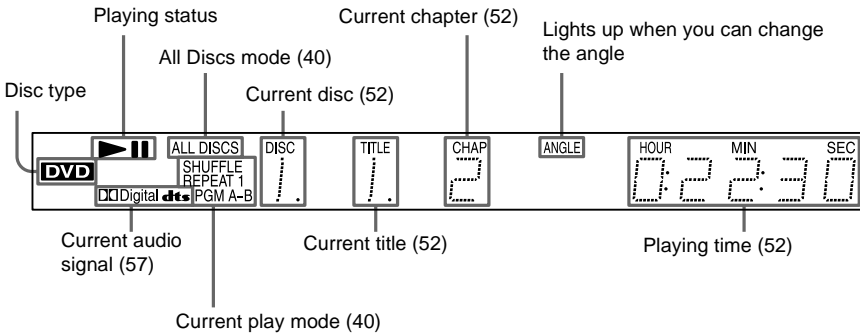

When playing back a VIDEO CD (PBC)

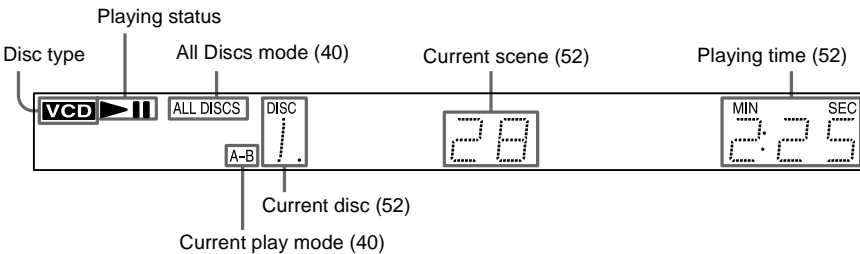


When playing back an SACD, CD or VIDEO CD (without PBC)

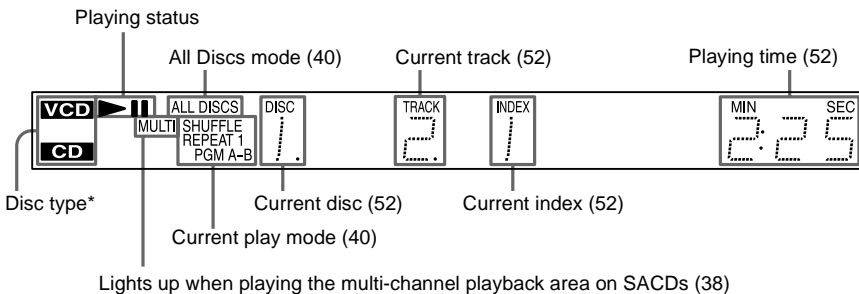

* When playing the SACD layer of SACD discs, the disc type is not displayed.


continued →

Rear Panel

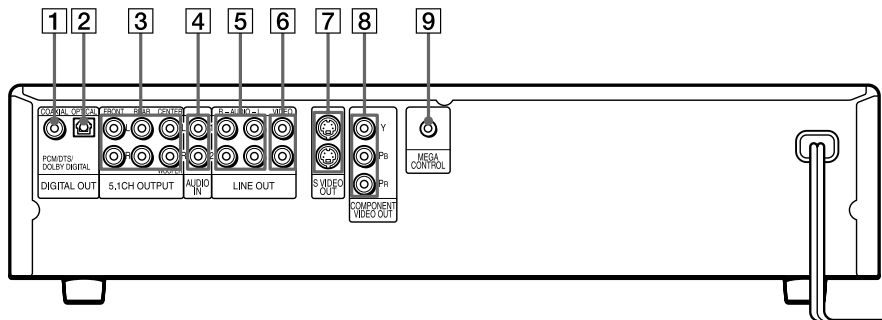

- 1 DIGITAL OUT (COAXIAL) (digital out (coaxial)) jack (22, 24, 26)
- 2 DIGITAL OUT (OPTICAL) (digital out (optical)) jack (22, 24, 26)
- 3 5.1CH OUTPUT (5.1-channel output) jack (22)
- 4 AUDIO IN L/R (audio in left/right) jacks (75)
- 5 LINE OUT L/R (AUDIO) (line out left/right (audio)) 1/2 jacks (16, 21, 24, 26)
- 6 LINE OUT (VIDEO) (line out (video)) 1/2 jacks (16, 18)
- 7 S VIDEO OUT (S video out) 1/2 jacks (18)
- 8 COMPONENT VIDEO OUT (component video out) jacks (18)
- 9 MEGA CONTROL (mega control) jack (75)

Remote

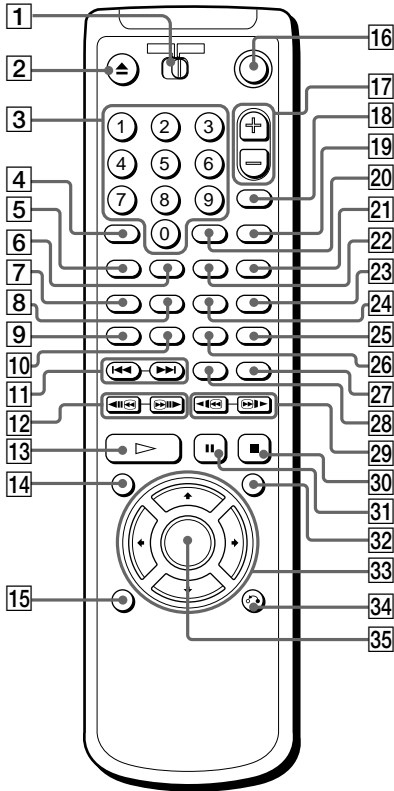


- 1** TV/DVD switch (73)
- 2** ▲ OPEN/CLOSE (open/close) button (33)
- 3** Number buttons (37)
The number 5 button has a tactile dot.
- 4** CLEAR (clear) button (41, 43, 44, 45)
- 5** SACD MULTI/2CH (SACD multi/2-channel) button (38)
- 6** SACD/CD button (38)
- 7** AUDIO (audio) button (56)
- 8** ANGLE (angle) button (63)
- 9** SHUFFLE (shuffle) button (43)
- 10** PROGRAM (program) button (41)
- 11** ◀◀/▶▶ PREV/NEXT (previous/next) buttons (34)
- 12** ◀◀◀/▶▶▶ SEARCH/STEP (search/step) buttons (47)
- 13** ▷ PLAY (play) button (33)
The ▷ button has a tactile dot.
- 14** TOP MENU (top menu) button (37)
- 15** DISPLAY (display) button (12)
- 16** I/⏻ (on/standby) button (33)
- 17** VOL (volume) +/- buttons (73)
The + button has a tactile dot.
- 18** TV/VIDEO/BNR (TV/video/BNR) button (65, 73)
- 19** WIDE MODE (wide mode)/DVE (Digital Video Enhancer) button (67, 73)
- 20** ENTER (enter) button (28)
- 21** DISC SKIP (disc skip) button (34)
- 22** SEARCH MODE (search mode) button (48)
- 23** TIME/TEXT (time/text) button (52)
- 24** SUBTITLE (subtitle) button (64)
- 25** A-B button (45)
- 26** REPEAT (repeat) button (44)
- 27** REPLAY (replay) button (34)
- 28** SURROUND (surround) button (58)
- 29** ◀◀◀/▶▶▶ SCAN/SLOW buttons (47)
- 30** ■ STOP (stop) button (34)
- 31** || PAUSE (pause) button (34)
- 32** MENU (menu) button (37)
- 33** ←/↑/↓/→ buttons (28)
- 34** ↻ RETURN (return) button (39)
- 35** ENTER (enter) button (28)





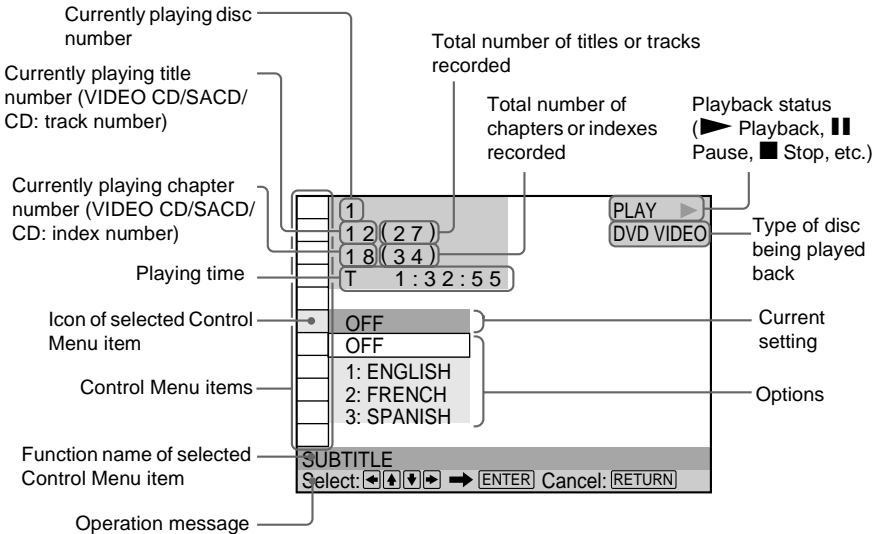

Guide to the Control Menu Display


















Use the Control Menu to select a function that you would like to use. The Control Menu display appears when the DISPLAY button is pressed. For details, please refer to the page in parentheses.

Control Menu



List of Control Menu Items

| | | |
|---|---|---|
|  | DISC (page 48) | Selects the disc to be played. |
|  | TITLE (page 48)/SCENE (page 48)/ TRACK (page 48) | Selects the title, scene, or track to be played. |
|  | CHAPTER (page 48)/INDEX (page 48) | Selects the chapter or index to be played. |
|  | TRACK (page 48) | Selects the track to be played. |
|  | INDEX (page 48) | Selects the index to be played. |
|  | TIME/TEXT (page 48) | Checks the elapsed time and the remaining playback time. Input the time code for picture and music searching. Displays the DVD or SACD/CD text. |


| | | |
|--|---|--|
|  | ORIGINAL/PLAY LIST (page 37) | Selects the type of titles (DVD-RW) to be played, the ORIGINAL one, or an edited PLAY LIST. |
|  | AUDIO (page 56) | Changes the audio setting. |
|  | MULTI/2CH (page 38) | Selects the playback area on SACDs when available. |
|  | SUBTITLE (page 64) | Displays the subtitles. Changes the subtitle language. |
|  | ANGLE (page 63) | Changes the angle. |
|  | SURROUND (page 58) | Selects the surround functions. |
|  | ADVANCED (page 55) | Checks the information (bit rate or layer) on the disc while playing a DVD. |
|  | PARENTAL CONTROL (page 68) | Set to prohibit playback on this player. |
|  | SETUP (page 77) | QUICK Setup (page 28) Use Quick Setup to choose the desired language for the on-screen display, the aspect ratio of the TV, the audio output, and the appropriate speaker settings. CUSTOM Setup In addition to the Quick Setup setting, you can adjust other various settings. RESET Returns the settings in “SETUP” to the default setting. |
|  | ONE/ALL DISCS (page 40) | Selects One Disc or All Discs mode. |
|  | PROGRAM (page 41) | Selects the discs, title, chapter, or track to play in the order you want. |
|  | SHUFFLE (page 43) | Plays the discs, title, chapter, or track in a random order. |
|  | REPEAT (page 44) | Plays the discs, entire disc (all titles/all tracks), or one title/chapter/track repeatedly. |
|  | A-B REPEAT (page 45) | Specifies the parts you want to play repeatedly. |
|  | BNR (page 65) | Adjusts the picture quality by reducing the “block noise” or mosaic like patterns that appear on your TV screen. |
|  | VIDEO EQUALIZER (page 66) | Adjusts the video signal from the player. You can select the picture quality that best suits the program you are watching. |
|  | DIGITAL VIDEO ENHANCER (page 67) | Exaggerates the outline of the image to produce a sharper picture. |






VIEWER (page 50)

Divides the screen into 9 sub-screens to help you find the scene you want quickly.

 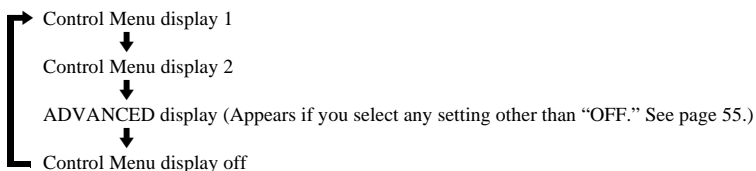 Each time you press DISPLAY, the Control Menu display changes as follows:



 The Control Menu icon indicator lights up in green  →  when you select any item except “OFF” (“SURROUND,” “PROGRAM,” “SHUFFLE,” “REPEAT,” “A-B REPEAT,” “BNR,” “DIGITAL VIDEO ENHANCER” only). The “ANGLE” indicator lights up in green only when the angles can be changed. The “VIDEO EQUALIZER” indicator lights up in green when any setting other than “STANDARD” is selected.

Quick Overview

A quick overview presented in this chapter will give you enough information to start using the player for your enjoyment. To use the surround sound features of this player, refer to “Hookups” on page 18.

Notes

- You cannot connect this player to a TV that does not have a video input jack.
- Be sure to turn off the power of each component before connecting.


Step 1: Unpacking

Check that you have the following items:

- Audio/video cord (pinplug x 3 ↔ pinplug x 3) (1)
- Remote commander (remote) RMT-D133A (1)
- Size AA (R6) batteries (2)
- S VIDEO cord (1)

Step 2: Inserting Batteries into the Remote

You can control the player using the supplied remote. Insert two size AA (R6) batteries by matching the ⊕ and ⊖ ends on the batteries to the markings inside the compartment. When using the remote, point it at the remote sensor **R** on the player.

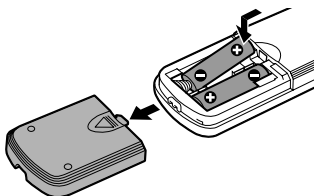


Notes

- Do not leave the remote in an extremely hot or humid place.
- Do not drop any foreign object into the remote casing, particularly when replacing the batteries.
- Do not expose the remote sensor to direct light from the sun or lighting apparatus. Doing so may cause a malfunction.
- If you do not use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

continued →

Step 3: TV Hookups

Connect the supplied audio/video cord and power cord in the order (1~3) shown below. Be sure to connect the power cord last.

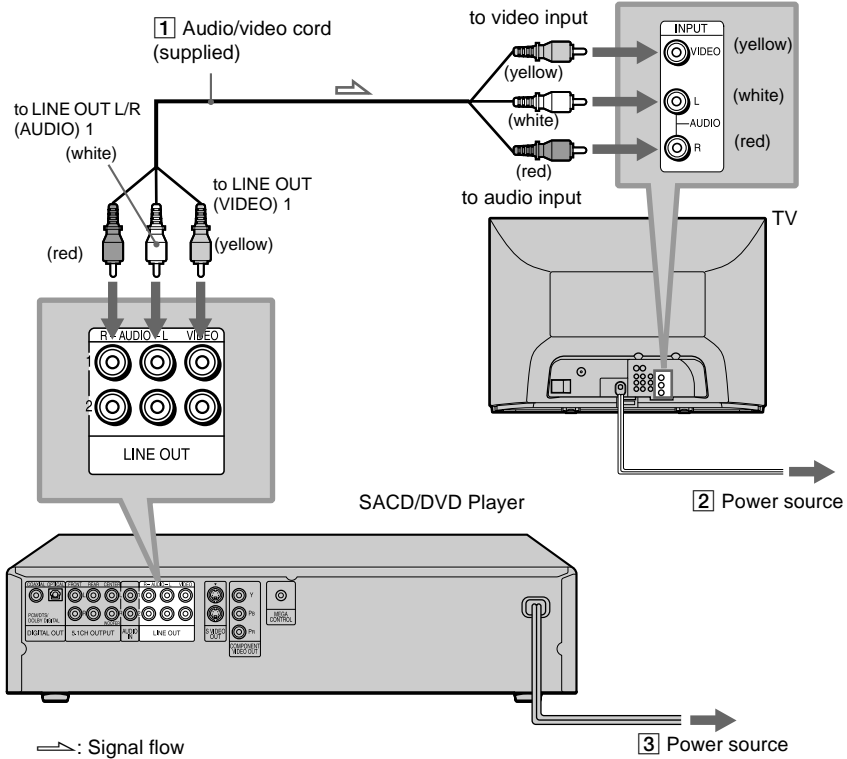


When connecting to a wide screen TV

Depending on the disc, the image may not fit your TV screen. If you want to change the aspect ratio, please refer to page 79.

Step 4: Playing a Disc

- 1 Turn on the TV.
- 2 Switch the input selector on the TV to the player.

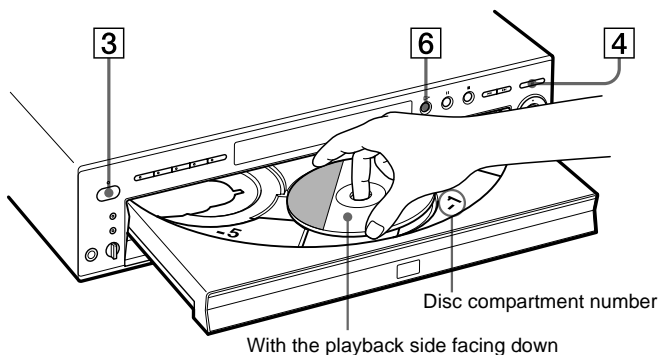

- 3 Press **POWER** on the player.
- 4 Press **⏏** on the player to open the disc tray.
- 5 Place the disc on the tray with the playback side facing down.
- 6 Press **▶**.
The disc tray closes and the player begins playing the disc.

After Step 6

Depending on the disc, a menu may be displayed on the TV screen. If so, select the item you want from the menu and play the DVD (page 37) or VIDEO CD disc (page 39).

To stop playing

Press **■**.

To take out the disc

Press **⏏**.

To turn off the player

Press **I/⏏** on the remote. The player is set to standby mode and the power indicator lights up in red. Press **POWER** on the player to turn off completely.

Hooking Up the Player

Follow Steps 1 to 4 to hook up and adjust the settings of the player.


Before you start, turn off the power, check that you have all of the supplied accessories, and insert the batteries into the remote (page 15).

Notes

- Plug cords securely to prevent unwanted noise.
- Refer to the instructions supplied with the components to be connected.


Step 1: Connecting the Video Cords

Connect this player to your TV monitor, projector, or AV amplifier (receiver) using a video cord. Select one of the patterns **A** through **C**, according to the input jack on your TV monitor, projector, or AV amplifier (receiver).

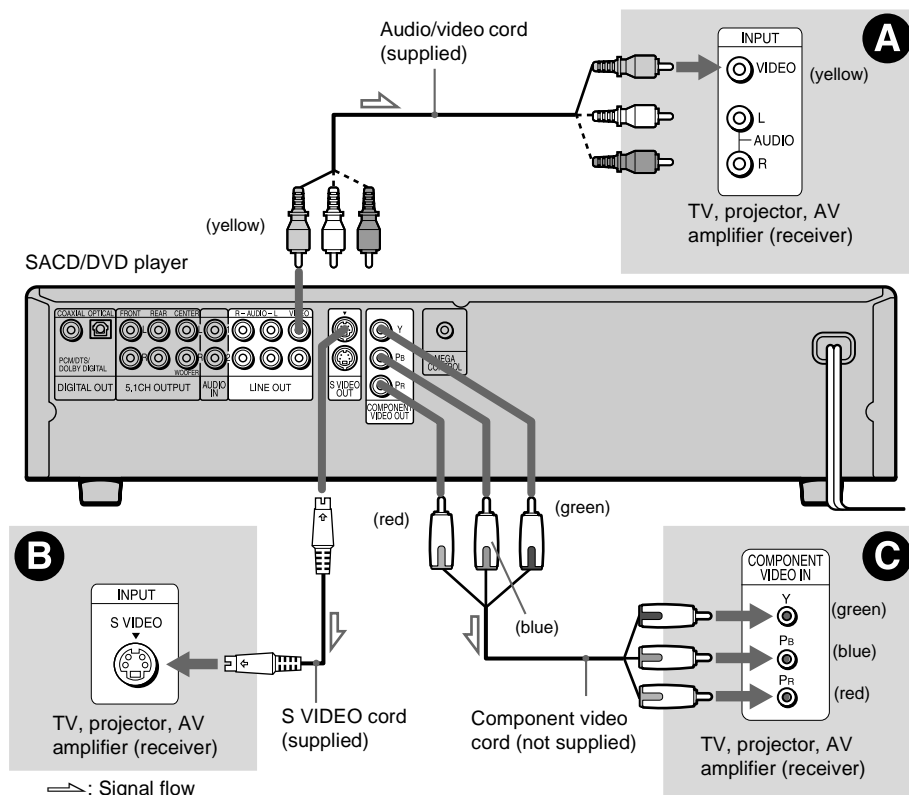

A If you are connecting to a video input jack

 Connect the yellow plugs of the audio/video cord (supplied) to the yellow (video) jacks. You will enjoy standard quality images.



Use the red and white plugs to connect to the audio input jacks (page 21).

 
B If you are connecting to an S VIDEO input jack

Connect the S VIDEO cord (supplied). You will enjoy high quality images.




B If you are connecting to a monitor, projector, or AV amplifier (receiver) having component video input jacks (Y, Pb, Pr)

Connect the component via the COMPONENT VIDEO OUT jacks using the component video cord (not supplied) or three video cords (not supplied) of the same kind and length. You will enjoy accurate color reproduction and high quality images.



Note

Do not connect your player to a VCR. You may not receive a clear image on the TV screen if you pass the player signals via the VCR.

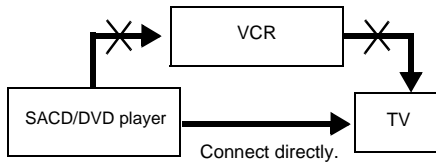


Step 2: Connecting the Audio Cords

Refer to the chart below to select the connection that best suits your system. The surround effects you will enjoy depend on the connections and components you use.

Select a connection

Select one of the following connections, **A** through **D**.

| Connection | Components to be connected |
|--------------------|---|
| A (page 21) | TV (stereo) |
| B (page 22) | AV amplifier (receiver) having 5.1ch input jacks <ul style="list-style-type: none"> • 4 speakers (front L and R, rear L and R) • 6 speakers (front L and R, center, rear L and R, subwoofer) |
| B (page 22) | AV amplifier (receiver) having a Dolby* Digital or DTS** decoder, and a digital input jack <ul style="list-style-type: none"> • 6 speakers (front L and R, center, rear L and R, subwoofer) |
| C (page 24) | Stereo amplifier (receiver) (having L and R audio input jacks only, or having a digital input jack) <ul style="list-style-type: none"> • 2 speakers (front L and R) |
| C (page 24) | MD deck/DAT deck |
| D (page 26) | AV amplifier (receiver) with a Dolby Surround (Pro Logic) decoder (having L and R audio input jacks only, or having a digital input jack) <ul style="list-style-type: none"> • 3 speakers (front L and R, and rear (monaural)) • 6 speakers (front L and R, center, rear L and R, subwoofer) |

 To enjoy SACD Multi or 96 kHz/24 bit sound, use connection **B**.

* Manufactured under license from Dolby Laboratories. "Dolby," "Pro Logic," and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. © 1992-1997 Dolby Laboratories. All rights reserved.

** Manufactured under license from Digital Theater Systems, Inc. US PAT. No. 5,451,942 and other world-wide patents issues and pending. "DTS" and "DTS Digital surround" are trademarks of Digital Theater Systems, Inc. © 1996 Digital Theater Systems, Inc. All rights reserved.



A Connecting to your TV

This connection will use your TV speakers for sound.

■ Recommended surround sound effects for this connection

- TVS DYNAMIC (page 58)
- TVS WIDE (page 58)

SACD/DVD player

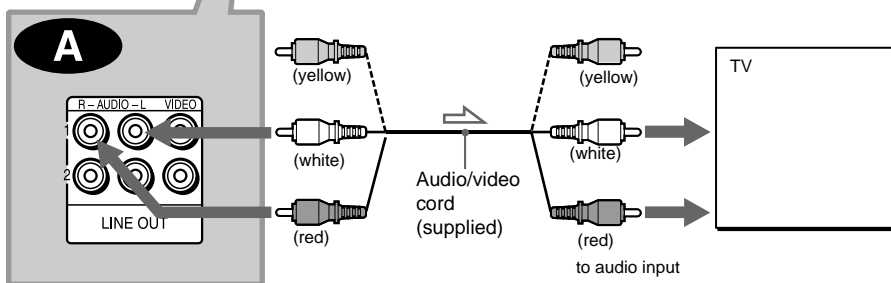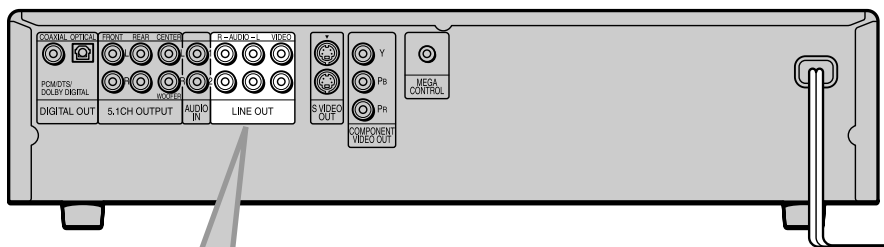

⇒: Signal flow

The yellow plug is used for video signals (page 18).

continued →

B Connecting to an AV amplifier (having 5.1ch input jacks or a digital input jack) and 4 to 6 speakers

If your AV amplifier (receiver) has 5.1 channel inputs, use **B-1**.

If you want to use the Dolby Digital or DTS decoder function on your AV amplifier (receiver), connect to its digital jack using **B-2**. With the following connections, you can enjoy a more realistic audio presence in the comfort of your own home.

B-1: Connecting to the 5.1ch input jacks

You can enjoy 5.1ch surround sound using the internal Dolby Digital, DTS or SACD Multi decoder of this player. You can also enjoy Dolby Surround (Pro Logic) sounds, or surround sounds using various “SURROUND” modes (page 58).

■ Recommended surround sound effects for this connection

When 6 speakers are connected (Set “SURROUND” to “OFF.”)


- Dolby Digital (5.1ch) (page 92)
- DTS (5.1ch) (page 92)
- SACD Multi-channel (page 93)

B-2: Connecting to a digital jack

This connection will allow you to use the Dolby Digital or DTS decoder function of your AV amplifier (receiver). You are not able to enjoy the surround sound effects of the player.

■ Recommended surround sound effects using this connection with your amplifier (receiver)


- Dolby Digital (5.1ch) (page 92)
- DTS (5.1ch) (page 92)
- 96 kHz/24 bit PCM

 Refer to the operating instructions of the AV amplifier (receiver) for correct speaker setting location when using the **B-2** connection.

Notes

- After you have completed the connection, be sure to set “DOLBY DIGITAL” to “DOLBY DIGITAL” (page 84) and “DTS” to “DTS” (page 85). Otherwise, no sound or a loud noise will come from the speakers.
- When you connect an amplifier (receiver) that conforms to the 96 kHz sampling frequency, set “48kHz/96kHz PCM” to “96kHz/24bit” (page 85).
- SACD audio signals are not output from a digital jack.

SACD/DVD player

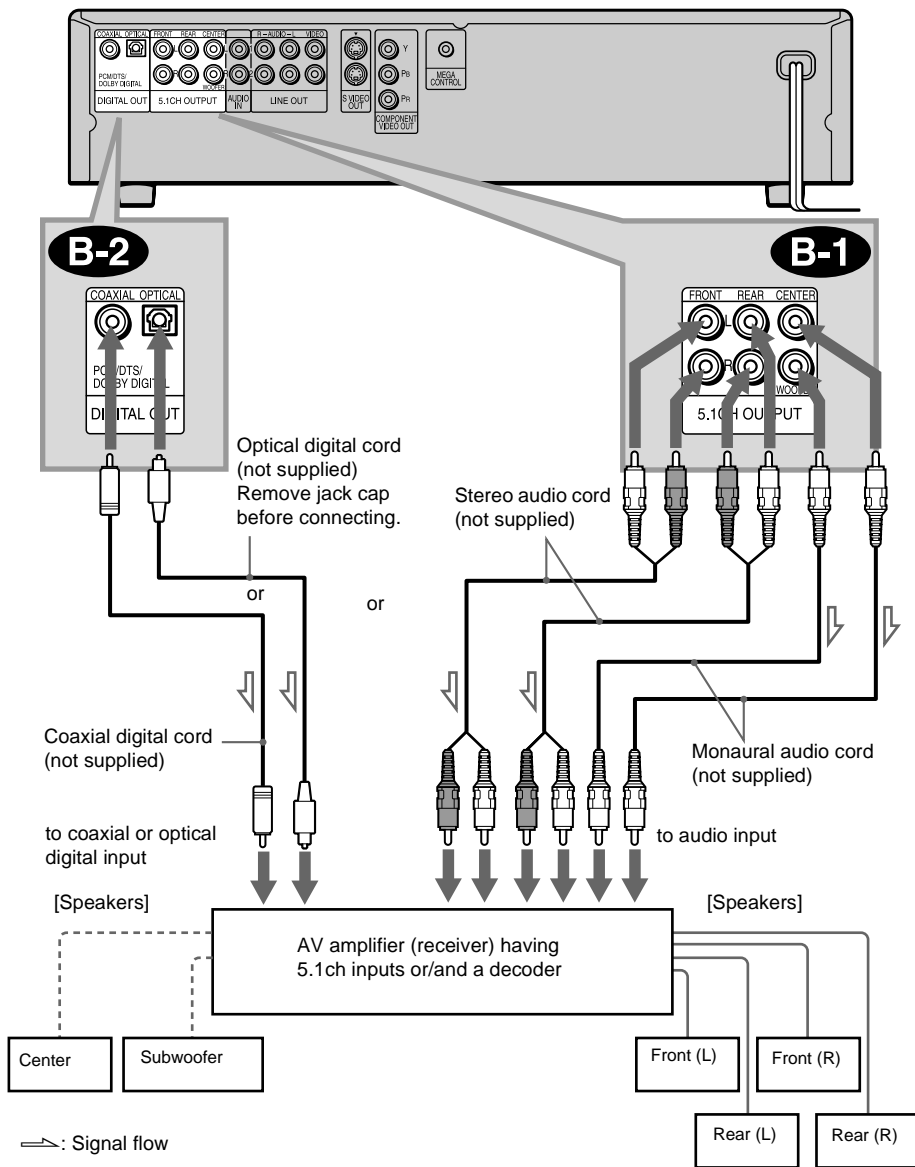

💡 To enhance the surround sound effects:

- Use high-performance speakers.
- Use front, rear, and center speakers having the same size and performance.
- Place a subwoofer between the right and left front speakers.

C Connecting to a stereo amplifier (receiver) and 2 speakers/Connecting to an MD deck or DAT deck

This connection will use your 2 front speakers connected to your stereo amplifier (receiver) for sound. If the stereo amplifier (receiver) has audio input jacks L and R only, use **C-1**. If the amplifier (receiver) has a digital input jack, use **C-2**. When connecting to an MD deck or a DAT deck, use **C-2**. In this case, you can also connect the player directly to the MD deck or DAT deck without using your stereo amplifier (receiver).

■ Recommended surround sound effects for the **C-1** connection only

- TVS STANDARD (page 58)




In connection **C-1**, you can use the supplied audio/video cord instead of using a separate audio cord.



To realize better surround sound effects, make sure that your listening position is in between your speakers.

Note

SACD audio signals are not output from a digital jack.

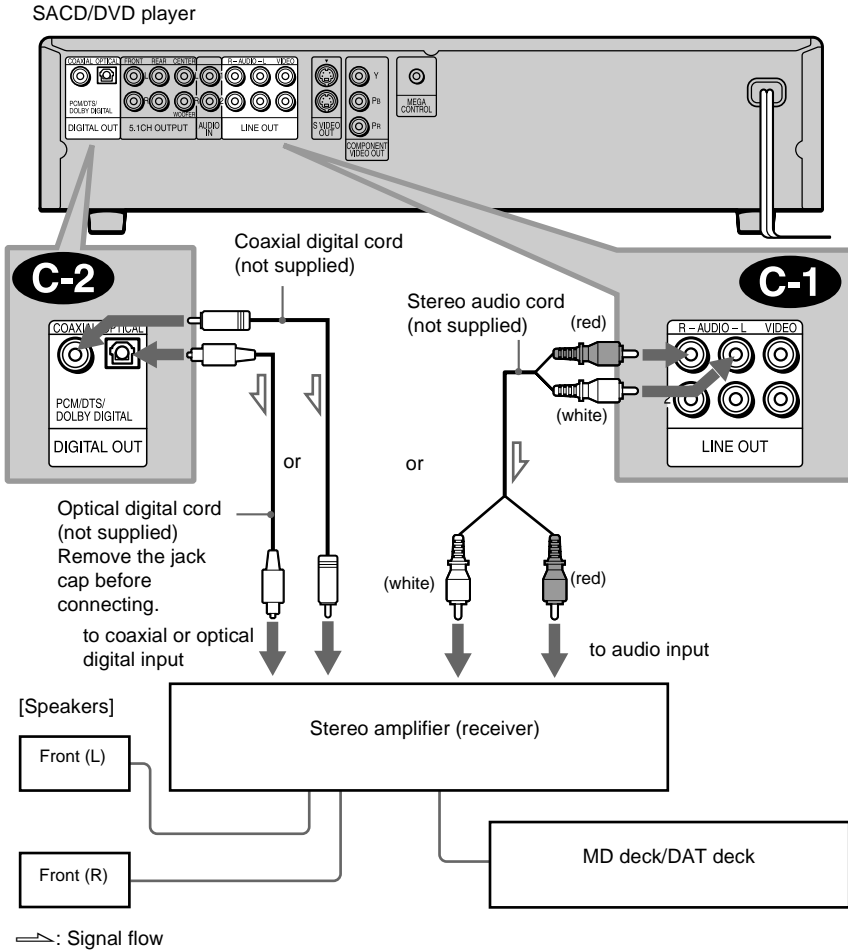

D Connecting to a Dolby Surround (Pro Logic) decoder amplifier (receiver) and 3 to 6 speakers

This connection will allow you to enjoy the surround effects of the Dolby Surround (Pro Logic) decoder on your amplifier (receiver). If you have an AV amplifier (receiver) equipped with a Dolby Digital or DTS decoder, refer to page 22.


You can enjoy the Dolby Surround effects only when playing Dolby Surround audio or multichannel audio (Dolby Digital) discs.

This connection needs a minimum of 3 speakers (front L and R, and rear (monaural)). The surround effects are enhanced if 6 speakers (front L and R, center, rear L and R, and subwoofer) are used.

If your amplifier (receiver) has R and L audio input jacks only, use **D-1**. If your amplifier (receiver) has a digital input jack, use **D-2**.

■ Recommended surround sound effects using this connection with your amplifier (receiver)


- Dolby Surround (Pro Logic) (page 92)

 For correct speaker setting location, please refer to the operating instructions of the amplifier (receiver).

Note

SACD audio signals are not output from a digital jack.

SACD/DVD player

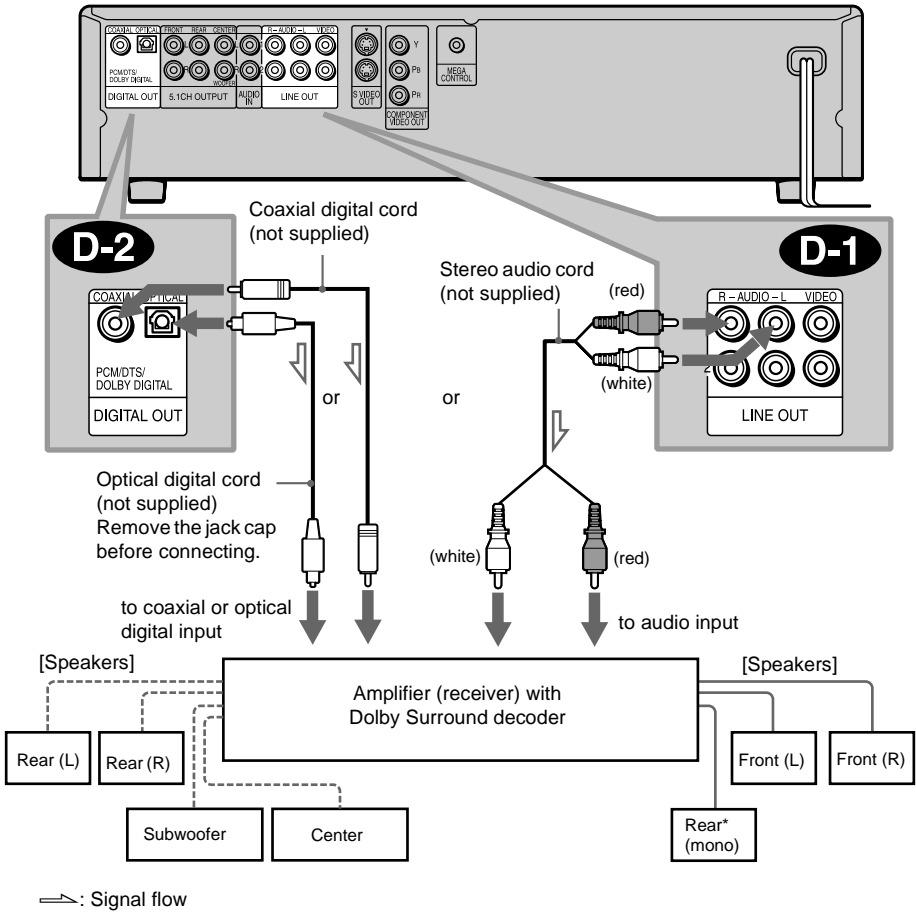

* When connecting 6 speakers, replace the monaural rear speaker with a center speaker, 2 rear speakers and a subwoofer.


Step 3: Connecting the Power Cord

Plug the player and TV power cords into an AC outlet.

Do not connect the power cord of your player to the “switched” power socket of an amplifier (receiver). Otherwise, when you turn off the power of your amplifier (receiver), the settings for the player may be lost.

Step 4: Quick Setup

Follow the steps below to make the minimum number of basic adjustments to use the player. To skip an adjustment press **▶▶**, to return to the previous adjustment, press **◀◀**.

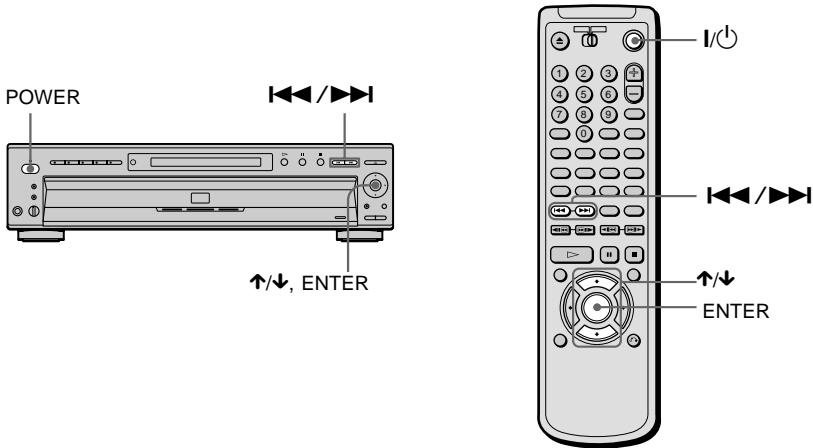

1 Turn on the TV.


2 Switch the input selector on the TV to the player.

3 Press **POWER** on the player and press **I/⏻** on the remote.

“Press [ENTER] to run QUICK SETUP.” appears at the bottom of the screen. If this message does not appear, select “QUICK” under “SETUP” in the Control Menu (page 77) to run Quick Setup.

4 Press **ENTER** without inserting a disc.

The Setup Display for selecting the language used in the on-screen display appears.

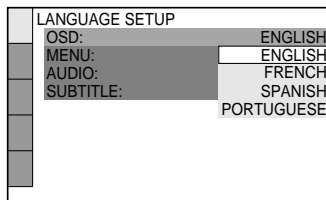


5 Press **⬆️/⬆️** to select a language.

The player uses the language selected here to display the menu and subtitles as well.

6 Press ENTER.

The Setup Display for selecting the aspect ratio of the TV to be connected appears.

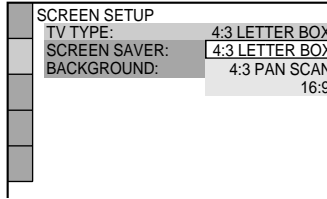


7 Press ↑/↓ to select the item.

| TV Type | You select | Page |
|---|--------------------------------|------|
| 4:3 standard TV | 4:3 LETTER BOX or 4:3 PAN SCAN | 79 |
| A wide-screen TV or 4:3 standard TV with the wide-screen mode | 16:9 | 79 |

8 Press ENTER.

The Setup Display for selecting the type of jack used to connect your amplifier (receiver) appears.

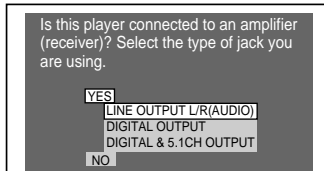

9 Press ↑/↓ to select the item, then press ENTER.


| Audio Cord Connecting Type | You select |
|--|-------------------------|
| C-1 D-1 | LINE OUTPUT L/R (AUDIO) |
| B-2 C-2 D-2 | DIGITAL OUTPUT |
| B-1 or both B-1 and B-2 | DIGITAL & 5.1CH OUTPUT |
| A | NO |

- When “NO” or “LINE OUTPUT L/R (AUDIO)” is selected, Quick Setup is finished and connections are complete.
- When “DIGITAL OUTPUT” or “DIGITAL & 5.1CH OUTPUT” is selected, the Setup Display for “DOLBY DIGITAL” appears.

continued →

10 Press **↑/↓** to select the item.


Choose the item that matches the audio connection you selected in pages 22 to 26 (**B** through **D**).

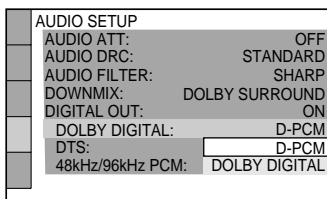

| Audio Cord Connection Type | You select | Page |
|----------------------------|--|------|
| C-2 D-2 | D-PCM | 83 |
| B-2 | DOLBY DIGITAL (only if the amplifier/receiver has a Dolby Digital decoder) | 83 |

11 Press **ENTER**.

“DTS” is selected.

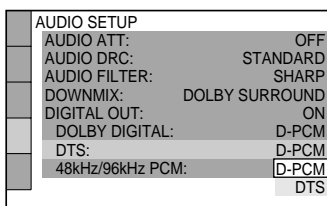

12 Press **↑/↓** to select the item.

Choose the item that matches the audio connection you selected in pages 22 to 26 (**B** through **D**).


| Audio Cord Connection Type | You select | Page |
|----------------------------|--|------|
| C-2 D-2 | D-PCM | 83 |
| B-2 | DTS (only if the amplifier/receiver has a DTS decoder) | 83 |

13 Press **ENTER**.

- When “DIGITAL OUTPUT” is selected in Step **8**, Quick Setup is finished. All connections and setup operations are complete.
- When “DIGITAL & 5.1CH OUTPUT” is selected in Step **8**, the Setup display for “SPEAKER SETUP” appears.


14 Press **↑/↓** to select the size of the center speaker.

If no center speaker is connected, select “NONE.” Refer to page 86 for each selection item.

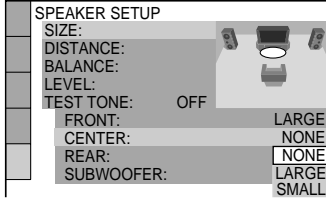

15 Press **ENTER**.

The Setup Display for selecting the size of the rear speaker appears.

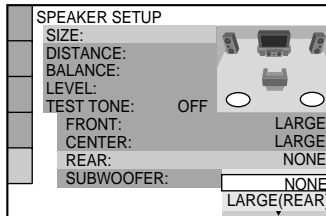

16 Press **↑/↓** to select the size.


If no rear speaker is connected, select “NONE.”

“SIDE” and “REAR” refer to the speakers’ position relative to your listening position.

Refer to page 86 for each selection item.

17 Press **ENTER**.

The Setup Display for selecting whether or not you have connected a subwoofer appears.

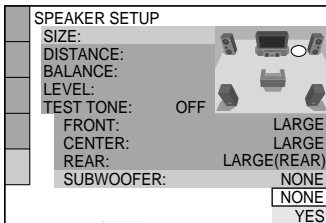

18 Press **↑/↓** to select the item.

19 Press **ENTER**.

Quick Setup is finished. All connections and setup operations are complete.

Note

You can directly start Quick Setup only when you run it for the first time.
To run Quick Setup a second time, select “QUICK” under “SETUP” in the Control Menu (page 77).

Enjoying the surround sound effects

To enjoy the surround sound effects of this player or your amplifier (receiver), the following items must be set as described below for the audio connection you selected in pages 22 to 26 (**B** through **D**). Each of these are the default settings and do not need to be adjusted when you first connect the player. Refer to page 77 for using the Setup Display.

Audio Connection (pages 21 to 26)

A

No additional settings are needed.

B-1

| Item | You select | Page |
|----------|--------------------------------|------|
| DISTANCE | Set according to the connected | 86 |
| BALANCE | speakers | |
| LEVEL | | |

- If the sound distorts even when the volume is turned down, set “AUDIO ATT” to “ON” (page 83).

B-2

C-2

D-2

| Item | You select | Page |
|-------------|----------------|------|
| DOWNMIX | DOLBY SURROUND | 84 |
| DIGITAL OUT | ON | 84 |

- Set “48kHz/96kHz PCM” to “96kHz/24bit,” only if you connect an amplifier (receiver) that conforms to 96 kHz digital audio input (page 85).

C-1

D-1

| Item | You select | Page |
|---------|----------------|------|
| DOWNMIX | DOLBY SURROUND | 84 |



- If the sound distorts even when the volume is turned down, set “AUDIO ATT” to “ON” (page 83).

Playing Discs

DVD VIDEO DVD-RW VIDEO CD SACD CD

Depending on the DVD or VIDEO CD, some operations may be different or restricted.

Refer to the operating instructions supplied with your disc.

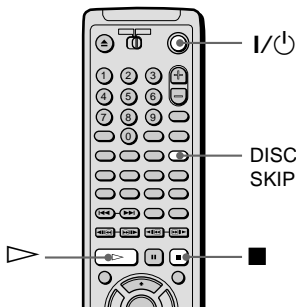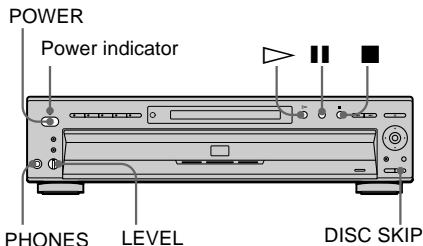

1 Turn on your TV.


2 Switch the input selector on the TV to the player.

When using an amplifier (receiver)

Turn on the amplifier (receiver) and select the appropriate channel.

3 Press POWER.


The player enters standby mode and the power indicator lights up in red.

4 Press  on the player, and place a disc on the disc tray.

The player automatically turns on and the power indicator lights up in green.

To place other discs on the tray, press DISC SKIP and place the discs in the order you want to play them.

Each time you press DISC SKIP, the disc tray turns so you can place the discs on the empty compartments. The player plays from the last disc placed on the tray.

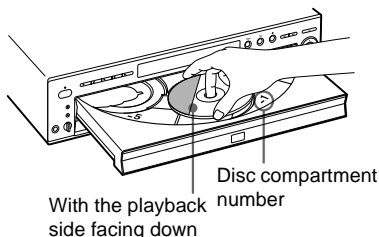

5 Press .

The disc tray closes, and the player starts playback (continuous play). Adjust the volume on the TV or the amplifier (receiver).

After following Step 5

Depending on the disc, a menu may appear on the TV screen. You can play the disc interactively by following the instructions on the menu. DVD VIDEO (page 37), VIDEO CD (page 39).

To turn on the player

Press POWER on the player. The player enters standby mode and the power indicator lights up in red. Press I/⏻ on the remote. The player turns on and the power indicator lights up in green. In standby mode, the player also turns on by pressing ⏻ on the player or by pressing ▷.

To turn off the player

Press I/⏻ on the remote. The player enters standby mode and the power indicator lights up in red. To turn off the player completely, press POWER on the player. While pressing a disc, do not turn off the player by pressing POWER. Doing so may cancel the menu settings. When you turn off the player, first press ■ to stop playback and then press I/⏻ on the remote.



To use headphones

Connect headphones to the PHONES jack and adjust the headphones volume by turning LEVEL.

Note


SACD audio signals are not output from the digital jack.


Additional operations

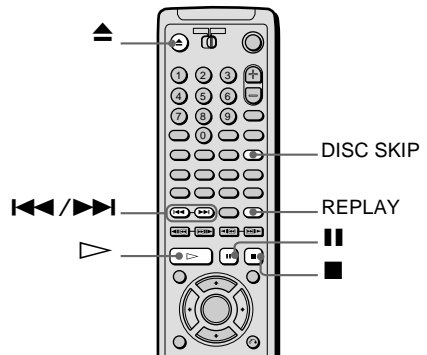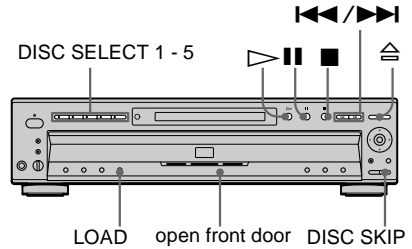

| To | Operation |
|---|---------------------------------------|
| Select a disc | Press DISC SELECT 1 - 5 on the player |
| Stop | Press ■ |
| Pause | Press |
| Resume play after pause | Press or ▷ |
| Go to the next disc | Press DISC SKIP |
| Go to the next chapter, track, or scene in continuous play mode | Press ►► |
| Go back to the preceding chapter, track, or scene in continuous play mode | Press ◀◀ |
| Stop play and remove the disc | Press ▲ |
| Replay a previous scene (DVD VIDEO only) | Press REPLAY |

| To | Operation |
|--|--|
| Check if a disc is in the disc compartment | Press LOAD on the player. The DISC SELECT indicator for each compartment (1 - 5) containing a disc lights up. |

 The **Replay** function is useful when you want to review a scene or dialog that you missed.


 Before loading the discs, a **DISC SELECT** indicator of an empty compartment may be lit.

Notes

- You may not be able to use the **Replay** function with some scenes.
- If you turn the power off by pressing **POWER** on the player, the loading information will be reset.

Replacing discs while playing a disc (EXCHANGE)


You can open the disc tray while playing a disc so that you can check which discs are to be played next and replace discs without interrupting playback of the current disc.

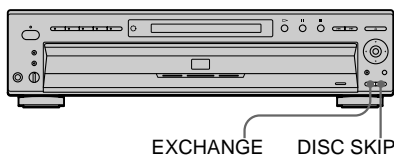

- 1 Press EXCHANGE.**
The disc tray opens and two disc compartments appear. Even if the player is playing a disc, it doesn't stop playing.
- 2 Replace the discs in the compartments with new ones.**
- 3 Press DISC SKIP.**
The disc tray turns and another two disc compartments appear.

4 Replace the discs in the compartments with new ones.

5 Press **EXCHANGE**.
The disc tray closes.

-  While the disc tray is open,
- If the playback of the current disc ends, the player stops playing. If the disc is played in **One Disc Repeat Play** mode, the current disc starts playing again.
 - In **All Discs Shuffle Play** mode (page 43), titles/tracks/chapters are reshuffled only on the current disc.
 - In **Program Play** mode (page 41), the titles/tracks/chapters only on the current disc are played.


Note

Do not push the disc tray to close in Step 5, as you may damage the player.

Resuming Playback from the Point Where You Stopped the Disc (Resume Play)

DVD VIDEO **DVD-RW** **VIDEO CD** **SACD** **CD**

When you stop the disc, the player remembers the point where you pressed ■ and “RESUME” appears on the front panel display. As long as you do not remove the disc, Resume Play works even if the player enters standby mode by pressing I/⏻.

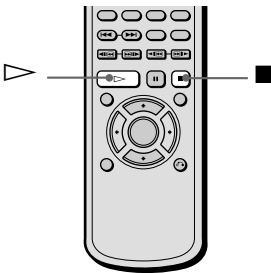

Notes

- Depending on where you stopped the disc, the player may not resume playback from exactly the same point.
- The point where you stopped playing is cleared when:
 - you turn the power off by pressing POWER on the player.
 - you change the play mode.
 - you change the settings on the Setup Display.
 - you load disc information by pressing LOAD on the player
 - you press MEGA CONTROL

1 While playing a disc, press ■ to stop playback.

“RESUME” appears on the front panel display and you can restart the disc from the point where you stopped the disc. If “RESUME” does not appear, Resume Play is not available.

2 Press ▷.


The player starts playback from the point where you stopped the disc in Step 1.

💡 To play from the beginning of the disc, press ■ twice, then press ▷.

Using the DVD's Menu

DVD VIDEO

A DVD is divided into long sections of a picture or a music feature called "titles." When you play a DVD which contains several titles, you can select the title you want using the TOP MENU button. When you play DVDs that allow you to select items such as the language for the subtitles and the language for the sound, select these items using the MENU button.

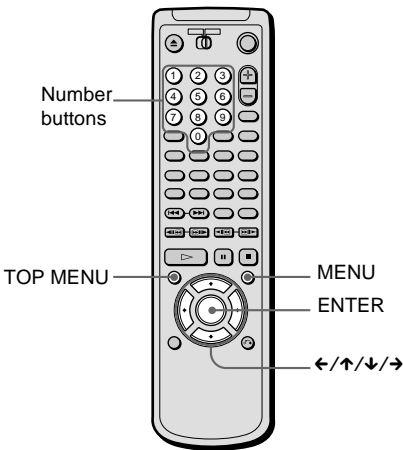


- 1** Press TOP MENU or MENU.
The disc's menu appears on the TV screen.
The contents of the menu vary from disc to disc.
- 2** Press ←/↑/↓/→ or the number buttons to select the item you want to play or change.
- 3** Press ENTER.

You can also display the disc's menu by pressing TOP MENU or MENU on the player.


Selecting "ORIGINAL" or "PLAY LIST" on a DVD-RW Disc

DVD-RW

Some DVD-RW discs in VR (Video Recording) mode have two types of titles for playback: originally recorded titles (ORIGINAL) and titles that can be created on recordable DVD players for editing (PLAY LIST). You can select the type of titles to be played.

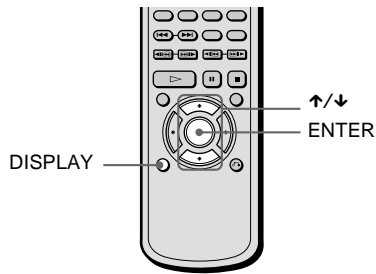

- 1** Press DISPLAY in stop mode.
The Control Menu appears.
- 2** Press ↑/↓ to select (ORIGINAL/PLAY LIST), then press ENTER.
The options for "ORIGINAL/PLAY LIST" appear.

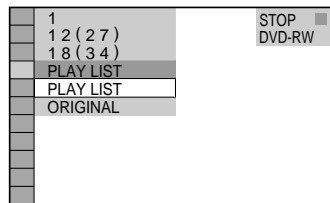

continued →

-
- 3** Press **↑/↓** to select the setting.
- **PLAY LIST**: plays the titles created from “ORIGINAL” for editing.
 - **ORIGINAL**: plays the titles originally recorded.

4 Press **ENTER**.


To turn off the Control Menu

Press **DISPLAY** repeatedly until the Control Menu is turned off.

Note

Repeat Play and A-B Repeat Play work only within the titles of the selected type.

Selecting a Playback Area for an SACD Disc **SACD**

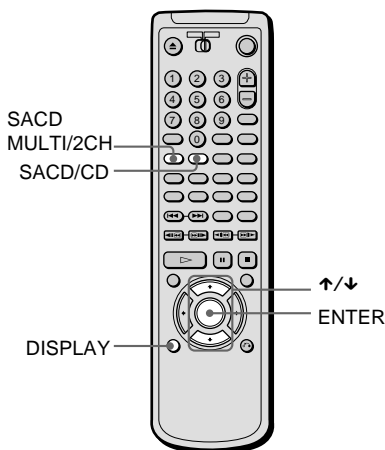

Selecting a playback area on a 2 channel + Multi-channel SACD

Some SACDs consist of a 2 channel playback area and a multi-channel playback area. You can select the playback area you want to listen to.

Press **SACD MULTI/2CH** in stop mode. Each time you press the button, the “MULTI” indicator turns on and off in the front panel display. When no indicator appears, the 2 channel playback area is selected.

To select a playback area using the Control Menu

- 1** Press **DISPLAY**.
The Control Menu appears.
- 2** Press **↑/↓** to select **MULTI/2CH** (MULTI/2CH), then press **ENTER**.
- 3** Press **↑/↓** to select the playback area, “MULTI” or “2CH,” then press **ENTER**.

Selecting a playback layer when playing a hybrid SACD

Some SACDs consist of an HD layer and a CD layer. You can select the playback layer you want to listen to.

Press SACD/CD in stop mode.

Each time you press the button, an HD layer or a CD layer is alternately selected. When playing a CD layer, the "CD" indicator in the front panel display lights up.


Notes

- For details about SACD discs, see page 92 (Super Audio CD).
- Each play mode function works only within the selected layer or playback area.

Playing VIDEO CDs with PBC Functions (PBC Playback)

VIDEO CD

With PBC (Playback Control) functions, you can enjoy simple interactive operations, search functions, and other operations. PBC playback allows you to play VIDEO CDs interactively by following the menu on the TV screen.

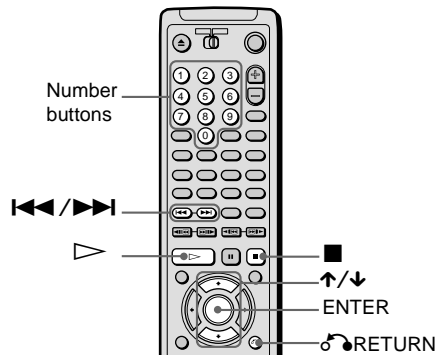

1 Start playing a VIDEO CD with PBC functions.

The menu for your selection appears.

2 Select the item number you want by pressing \uparrow/\downarrow or the number buttons.

3 Press ENTER.

4 Follow the instructions in the menu for interactive operations.

Refer to the instructions supplied with the disc, as the operating procedure may differ according to the VIDEO CD.

continued →

To go back to the menu

Press RETURN.

To play without using PBC, press / or the number buttons while the player is stopped to select a track, then press or ENTER.

“Play without PBC.” appears on the TV screen and the player starts continuous play. You cannot play still pictures such as a menu.

To return to PBC playback, press twice then press .

Note

Depending on the VIDEO CD, “Press ENTER” in Step 3 may appear as “Press SELECT” in the instructions supplied with the disc. In this case, press .

Various Play Mode Functions (Program Play, Shuffle Play, Repeat Play, A-B Repeat Play)

You can set the following play modes:


- Program Play (page 41)
- Shuffle Play (page 43)
- Repeat Play (page 44)
- A-B Repeat Play (page 45)

Note


- The play mode is canceled when:
 - you open the disc tray.
 - the player enters standby mode by pressing on the remote.
 - you turn the power off by pressing POWER on the player.


Selecting the disc mode (One disc or All discs)


You can play one disc or all of the discs in the player. Before setting Program Play, Shuffle Play, or Repeat Play, you must select whether to set those play mode on one disc or all of the discs.

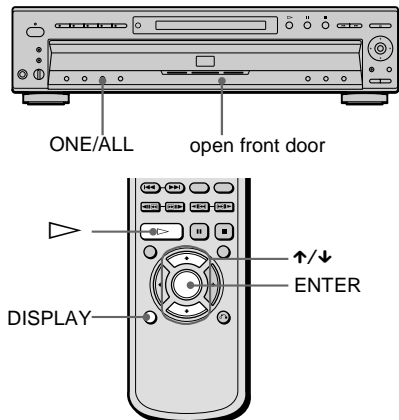

1 Press **DISPLAY** twice.
The Control Menu appears.


2 Press **↑/↓** to select  (**ONE/ALL DISCS**) and press **ENTER**.
The options for “ONE/ALL DISCS” appear.

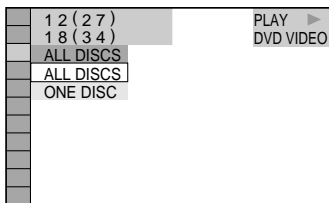


 You can select “ALL DISCS” or “ONE DISC” by pressing ONE/ALL on the player. Each time you press the button, the disc mode changes alternately.


Creating your own program (Program Play) **DVD VIDEO** **VIDEO CD** **SACD** **CD**

You can play the contents of the discs in the order you want by arranging the order of the discs, titles, chapters, or tracks to create your own program. You can program up to 99 titles, chapters, and tracks. By selecting All Discs mode (page 40), you can create a program for all of the discs in the player.

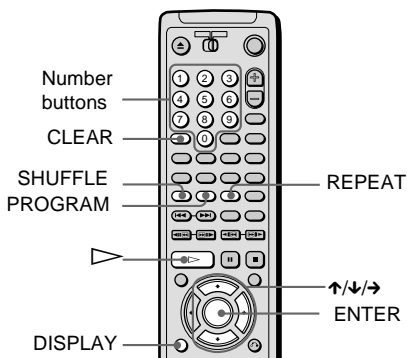


1 Press **DISPLAY** twice.
The Control Menu appears.


2 Press **↑/↓** to select  (**PROGRAM**) and press **ENTER**.
The options for “PROGRAM” appear.

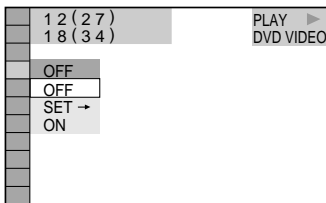

3 Press **↑/↓** to select “SET→” and press **ENTER**.
The display for programming appears.

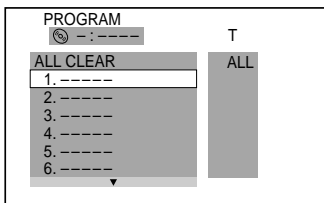



4 Press **→**.
The player is ready to program the first disc.

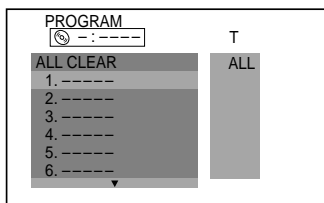

continued →

5 Select the disc you want to program using the number buttons or \uparrow/\downarrow , then press ENTER.

The cursor moves to the title or track (in this case, "01").

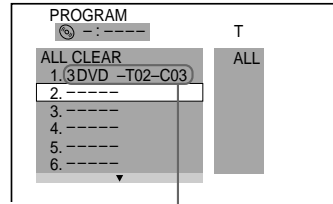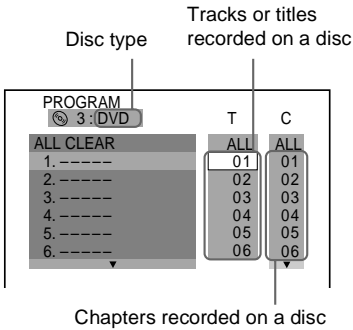

Selected disc, title and chapter

■ When playing a VIDEO CD, SACD, or CD

For example, select track "02."

Press \uparrow/\downarrow or the number buttons to select "02" under "T," then press ENTER.



A track number may be displayed in 3 digits for an SACD.

6 Select the title, chapter, or track you want to program.

■ When playing a DVD

For example, select chapter "03" of title "02."

Press \uparrow/\downarrow or the number buttons to select "02" under "T," then press ENTER.

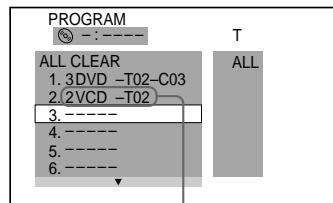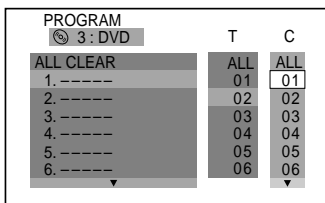

Selected disc and track

Next, press \uparrow/\downarrow or the number buttons to select "03" under "C," then press ENTER.

7 To program other titles, chapters, or tracks, repeat Steps 4 to 6.

The programmed discs, titles, chapters, and tracks are displayed in the selected order.

8 Press \triangleright to start Program Play.

Program Play begins.

When the program ends, you can restart the same program again by pressing \triangleright .

To return to normal play

Press CLEAR, or select "OFF" in Step 3.

To play the same program again, select "ON" in Step 3 and press \triangleright .

To turn off the Control Menu


Press DISPLAY repeatedly until the Control Menu is turned off.

To change or cancel a program

- 1 Follow Steps 1 through 3 of “Creating your own program (Program Play).”
- 2 Select the program number of the disc, title, chapter, or track you want to change or cancel using \uparrow/\downarrow or the number buttons, and press \rightarrow .
- 3 Follow Step 5 for new programming. To cancel a program, select the program and press CLEAR.

To cancel all the titles, chapters, or tracks in the programmed order

- 1 Follow Steps 1 through 3 of “Creating your own program (Program Play).”
- 2 Press \uparrow and select “ALL CLEAR.”
- 3 Then press ENTER.

 You can do Repeat Play or Shuffle Play of the programmed titles, chapters, or tracks by pressing REPEAT or SHUFFLE, or to activate “REPEAT” or “SHUFFLE” during Program Play.

 You can select “PROGRAM” directly by pressing PROGRAM.


Note

The number of titles, chapters, or tracks displayed are the same number of titles, chapters, or tracks recorded on a disc.


Playing in random order (Shuffle Play)


DVD VIDEO DVD-RW VIDEO CD SRC D CD

You can have the player “shuffle” discs, titles, chapters, or tracks and play them in a random order. Subsequent “shuffling” may produce a different playing order. By selecting All Discs mode (page 40), you can shuffle all of the discs in the player.

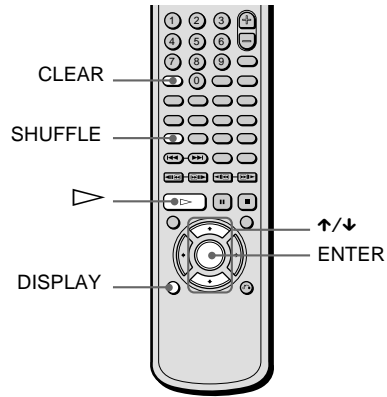

- 1 Press DISPLAY twice during playback. The Control Menu appears.

- 2 Press \uparrow/\downarrow to select  (SHUFFLE), then press ENTER. The options for “SHUFFLE” appear.

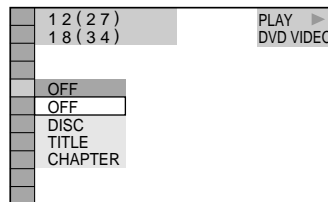

continued \rightarrow

3 Press \uparrow/\downarrow to select the item.

■ When playing a DVD VIDEO (Program Play is set to "OFF")

- DISC*: Shuffles discs and plays them in random order.
- TITLE: Shuffles titles and plays them in random order.
- CHAPTER: Shuffles chapters and plays them in random order.

■ When playing a DVD-RW

- DISC*: Shuffles discs and plays them in random order.

■ When playing a VIDEO CD/SACD/CD (Program Play is set to "OFF")

- DISC*: Shuffles discs and plays them in random order.
- TRACK: Shuffles tracks and plays them in random order.

* Appears only when you select All Discs mode.

■ When Program Play is set to "ON"

- ON: Shuffles titles or tracks selected in Program Play and plays them in random order.



4 Press ENTER.


To return to normal play

Press CLEAR or select "OFF" in Step 3.

To turn off the Control Menu

Press DISPLAY repeatedly until the Control Menu is turned off.

 You can set the Shuffle Play while the player is stopped. After selecting the "SHUFFLE" option, press . Shuffle Play starts.

 You can select "SHUFFLE" directly by pressing SHUFFLE. Each time you press the button, the item changes.

Note


Up to 96 chapters in a disc can be played in random order when "CHAPTER" is selected.

Playing repeatedly (Repeat Play)

DVD VIDEO DVD-RW VIDEO CD SACD CD

You can play all discs, or all of the titles or tracks on a disc or a single title, chapter, or track repeatedly.


You can use a combination of Shuffle or Program Play modes. By selecting All Discs mode (page 40), you can repeat all of the discs in the player.

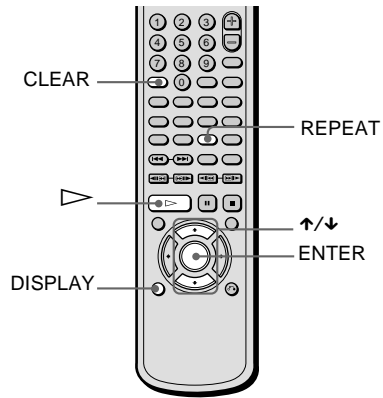

1 Press DISPLAY twice during playback. The Control Menu appears.

2 Press \uparrow/\downarrow to select (REPEAT), then press ENTER.

The options for "REPEAT" appear.

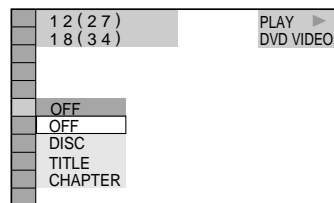

3 Press \uparrow/\downarrow to select the item.

■ When playing a DVD VIDEO (Program Play and Shuffle Play are set to "OFF")

- DISC: Repeats all of the titles on the disc when you select One Disc mode, or all of the titles on all of the

discs when you select All Discs mode.

- **TITLE:** Repeats the current title on a disc.
- **CHAPTER:** Repeats the current chapter.

■ **When playing a DVD-RW**

- **DISC:** Repeats all of the titles of the selected type when you select One Disc mode, or all of the titles on all of the discs when you select All Discs mode.
- **TITLE:** Repeats the current title on a disc.
- **CHAPTER:** Repeats the current chapter.

■ **When playing a VIDEO CD/SACD/CD (Program Play and Shuffle Play are set to "OFF")**

- **DISC:** Repeats all of the tracks on a disc when you select One Disc mode, or all of the tracks on all of the discs when you select All Discs mode.
- **TRACK:** Repeats the current track.

■ **When Program Play is set to "ON" or Shuffle Play is activated**

- **ON:** Repeats Program Play or Shuffle Play.

4 Press ENTER.

To return to normal play

Press CLEAR or select "OFF" in Step 3.

To turn off the Control Menu

Press DISPLAY repeatedly until the Control Menu is turned off.


💡 You can set Repeat Play while the player is stopped. After selecting the "REPEAT" option, press \square . Repeat Play starts.

💡 You can select "REPEAT" directly by pressing REPEAT. Each time you press the button, the item changes.

Repeating a specific portion (A-B Repeat Play)


DVD VIDEO DVD-RW VIDEO CD SACD CD

You can play a specific portion of a title, chapter, or track repeatedly. (This function is useful when you want to memorize lyrics, etc.)

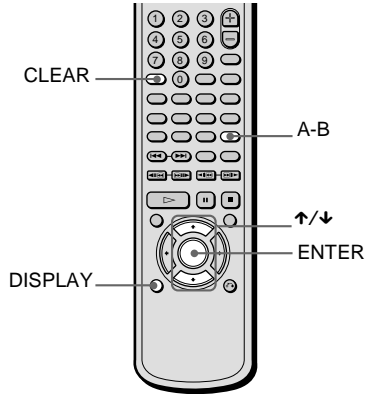


1 Press DISPLAY twice during playback. The Control Menu appears.

2 Press \uparrow/\downarrow to select  (A-B REPEAT), then press ENTER. The options for "A-B REPEAT" appear.

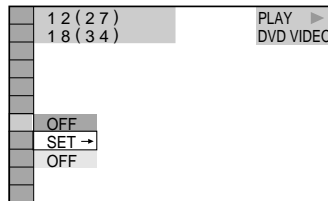


continued →


-
- 3** Press \uparrow/\downarrow to select "SET \rightarrow ," then press ENTER.
The "A-B REPEAT" setting display appears.

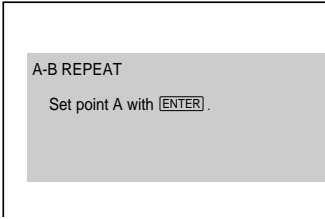

-
- 4** During playback, when you find the starting point (point A) of the portion to be played repeatedly, press ENTER.
The starting point (point A) is set.

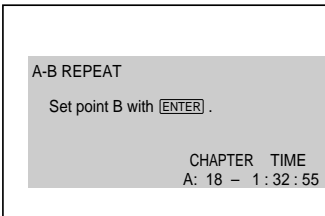

-
- 5** When you reach the ending point (point B), press ENTER again.
The set points are displayed and the player starts repeating this specific portion.
"A-B" appears on the front panel display during A-B Repeat Play.

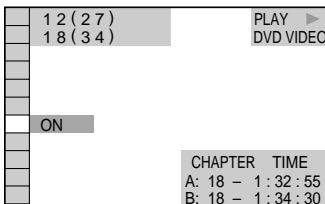


To return to normal play

Press CLEAR, or select "OFF" in Step 3.

To turn off the Control Menu

Press DISPLAY repeatedly until the Control Menu is turned off.

 You can select "A-B REPEAT" directly by pressing A-B. Press the button once to set the point A, and press it again to set the point B.


Notes

- You can set A-B Repeat Play for only one specific section.
- When you set A-B Repeat Play, the settings for Shuffle Play, Repeat Play, and Program Play are canceled.
- A-B Repeat Play does not work for titles containing still pictures on a DVD-RW in VR mode.
- You cannot set the starting point (point A) on one disc and ending point (point B) on another disc.

Searching for a Scene

Searching for a Particular Point on a Disc (Search, Scan, Slow-motion Play, Freeze Frame)

You can locate a particular point on a disc quickly by monitoring the picture or playing back slowly.

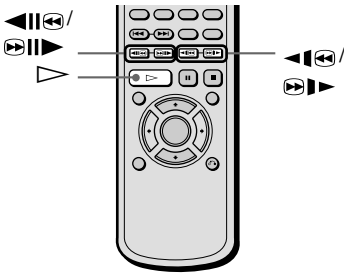

Note

Depending on the DVD/VIDEO CD, you may not be able to do some of the operations described.

Locating a point quickly (Search)

DVD VIDEO DVD-RW VIDEO CD SACD CD

During playback, keep pressing **▶▶** to locate a point in the playback direction or keep pressing **◀◀** to locate a point in the opposite direction. When you find the point you want, release the button to return to normal playback speed.

Locating a point quickly by playing a disc in fast forward or fast reverse (Scan)

DVD VIDEO DVD-RW VIDEO CD SACD CD

Press **◀◀** or **▶▶** while playing a disc. When you find the point you want, press **▷** to return to normal speed.

Each time you press **◀◀** or **▶▶** during scan, the playback speed changes. Three speeds are available. With each press the indication changes as follows:

Playback direction

×2▶▶ (DVD VIDEO/SACD/CD only)

FF2▶▶▶▶ ← **FF1▶▶▶▶**

Opposite direction

×2◀◀ (DVD VIDEO only)

FR2◀◀◀◀ ← **FR1◀◀◀◀**

The “**×2▶▶**”/“**×2◀◀**” playback speed is about twice the normal speed. The “**FF2▶▶▶▶**”/“**FR2◀◀◀◀**” playback speed is faster than “**FF1▶▶▶▶**”/“**FR1◀◀◀◀**”.

Watching frame by frame (Slow-motion Play)

DVD VIDEO DVD-RW VIDEO CD

Press **◀◀** or **▶▶** when the player is in pause mode. To return to the normal speed, press **▷**.

Each time you press **◀◀** or **▶▶** during Slow-motion Play, the playback speed changes. Two speeds are available. With each press the indication changes as follows:

Playback direction

SLOW2▶▶ ↔ **SLOW1▶▶**

Opposite direction (DVD only)




SLOW2◀◀ ↔ **SLOW1◀◀**

The “**SLOW2▶▶**”/“**SLOW2◀◀**” playback speed is slower than “**SLOW1▶▶**”/“**SLOW1◀◀**”.

continued →

Playing one frame at a time


DVD VIDEO DVD-RW VIDEO CD

When the player is in the pause mode, press  to go to the next frame. Press  to go to the preceding frame (DVD VIDEO only). If you hold the button down, you can view the frames in succession. To return to normal playback, press .

Searching for a Disc/Title/Chapter/Track/Index/Scene (Search mode)

DVD VIDEO DVD-RW VIDEO CD SRCD CD

You can search a DVD by disc, title or chapter, and you can search a VIDEO CD/SACD/CD by track, index, or scene. As title and tracks are assigned unique numbers on the disc, you can select the desired one by entering its number. Or, you can search for a scene using the time code.

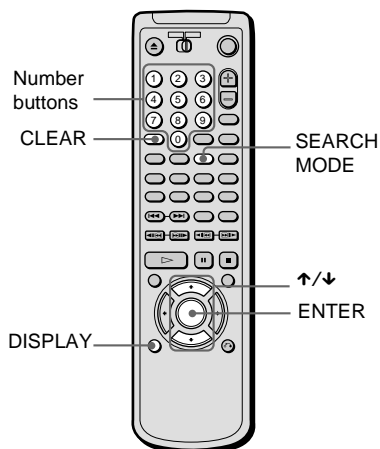


 
 
 


1 Press DISPLAY.

The Control Menu appears.

2 Press to select the search method.

■ When playing a DVD VIDEO/DVD-RW

| | | | |
|---|-------------|---|----------|
|  | (DISC), |  | (TITLE), |
|  | (CHAPTER), |  | (TRACK), |
|  | (TIME/TEXT) |  | (SCENE) |

Select "TIME/TEXT" for "Time search" (see below).

■ When playing a VIDEO CD
 (DISC), (TRACK)

or (INDEX)

■ When playing a VIDEO CD with PBC
Playback

(DISC), (SCENE)


■ When playing an SACD/CD
 (DISC), (TRACK)

or (INDEX)

Example: when you select (CHAPTER)


“** (**)” is selected (** refers to a number).

The number in parentheses indicates the total number of titles, chapters, tracks, indexes or scenes.

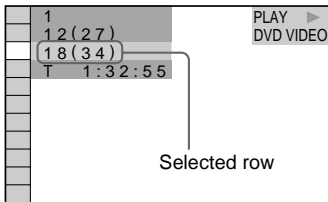

3 Press ENTER.

“** (**)” changes to “-- (**).”

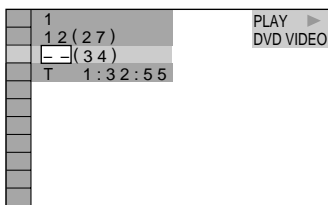

4 Press \uparrow/\downarrow or the number buttons to select the title, chapter, track, index, or scene number you want to search.

If you make a mistake

Cancel the number by pressing CLEAR, then select another number.

5 Press ENTER.

The player starts playback from the selected number.

To turn off the Control Menu

Press DISPLAY repeatedly until the Control Menu is turned off.

To search for a scene using the time code (Time search) (DVD VIDEO/DVD-RW only)

1 In Step 2, select (TIME/TEXT).

“T **:**:**” (playing time of the current title) is selected.

2 Press ENTER.

“T **:**:**” changes to “T --:--:--.”

3 Input the time code using the number buttons, then press ENTER.

For example, to find the scene at 2 hours, 10 minutes, and 20 seconds after the beginning, just enter “2:10:20.”

You can select “TITLE,” “CHAPTER,” “TRACK,” “INDEX,” “SCENE” or “TIME/TEXT” directly by pressing SEARCH MODE repeatedly.

When the Control Menu display is turned off, you can search for a chapter (DVD VIDEO/DVD-RW) or track (SACD/CD) by pressing the number buttons and ENTER.


You can display the first scene of titles, chapters, or tracks recorded on the disc on a screen divided into 9 scenes. You can start playback directly by selecting one of the scenes. For details, see “Searching by Scene (VIEWER).”

Notes

- The title, chapter or track number displayed is the same number recorded on the disc.
- You cannot search for a still picture on a DVD-RW in VR mode.

Searching by Scene (VIEWER)

You can divide the screen into 9 sub-screens and find the desired scene quickly.

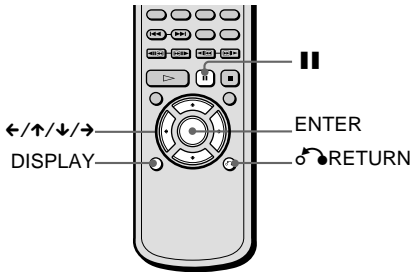


1 Press DISPLAY twice during playback.

The Control Menu appears.

2 Press \uparrow/\downarrow to select (VIEWER), then press ENTER.

The options for “VIEWER” appear.

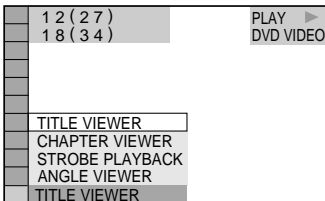

3 Press \uparrow/\downarrow to select the item.

Refer to the explanations given for each item in the following sections.

- TITLE VIEWER (for DVD VIDEO only)
- CHAPTER VIEWER (for DVD VIDEO only)
- TRACK VIEWER (for VIDEO CD only)
- STROBE PLAYBACK
- ANGLE VIEWER (for DVD VIDEO only)

4 Press ENTER.

To start playback from the selected scene

Select the scene using $\leftarrow/\uparrow/\downarrow/\rightarrow$ and press ENTER. The playback starts from the selected scene.

To return to normal play

Press \curvearrowright RETURN.

To turn off the Control Menu

Press DISPLAY repeatedly until the Control Menu is turned off.

Notes

- Depending on the disc, you may not be able to select all functions.
- The sound is muted when using this function.

Scanning the title, chapter, or track

DVD VIDEO VIDEO CD

You can divide the screen into 9 sub-screens and display the first scene of titles, chapters, or tracks. You can also play back from the selected title, chapter, or track.

Select the item you want in Step 3, then press ENTER in Step 4.

■ When playing a DVD VIDEO

Select “TITLE VIEWER” or “CHAPTER VIEWER.”

■ When playing a VIDEO CD

Select “TRACK VIEWER.”

The initial scenes of titles, chapters, or tracks appear.

💡 If there are more than 9 titles, chapters, or tracks, ▼ is displayed at the bottom right. To display the additional titles, chapters, or tracks, select the bottom right scene (the position 9) and press ↓. To return to the previous scene, select the top left scene (the position 1) and press ↑.

| | | | |
|---|---|---|---|
| 1 | 2 | 3 | |
| 4 | 5 | 6 | |
| 7 | 8 | 9 | ▼ |

Dividing a scene into 9 sections (STROBE PLAYBACK)

DVD VIDEO **VIDEO CD**

You can display 9 consecutive moving pictures on the screen. When you press ■■, the moving pictures pause. Select “STROBE PLAYBACK” in Step 3, then press ENTER in Step 4.

Displaying different angles simultaneously **DVD VIDEO**

If various angles (multi-angles) for a scene are recorded on the DVD VIDEO, you can display all of the angles recorded on the disc on the same screen, and start playback in continuous mode at the chosen angle. The angles are displayed on a screen divided into 9 sections.


Select “ANGLE VIEWER” in Step 3, then press ENTER in Step 4.

Viewing Information About the Disc

Viewing the Playing Time and Remaining Time on the Front Panel Display

DVD VIDEO DVD-RW VIDEO CD SACD CD

You can check information about the disc, such as the remaining time, current title or track number, using the front panel display (page 9).

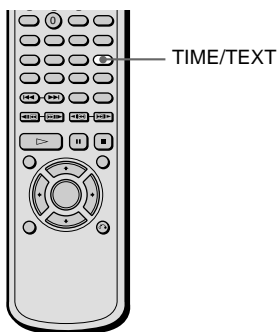

Press TIME/TEXT.

Each time you press TIME/TEXT while playing the disc, the display changes as shown in the following charts.

When playing a DVD VIDEO or DVD-RW

Title playing time and current disc, title and chapter number

| DISC | TITLE | CHAP | HOUR | MIN | SEC |
|------|-------|------|------|-----|-----|
| 1. | 1. | 2 | 1:03 | 24 | |



Remaining time of the current title

| DISC | TITLE | CHAP | HOUR | MIN | SEC |
|------|-------|------|-------|-----|-----|
| 1. | 1. | 2 | -1:15 | 36 | |



Playing time and number of the current chapter

| DISC | CHAP | HOUR | MIN | SEC |
|------|------|------|-----|-----|
| 1. | 2 | 0:22 | 30 | |



Remaining time of the current chapter

| DISC | CHAP | HOUR | MIN | SEC |
|------|------|-------|-----|-----|
| 1. | 2 | -0:13 | 20 | |



Text

| | | | | | |
|-------------|--|--|--|--|--|
| SONY HITS/5 | | | | | |
|-------------|--|--|--|--|--|

When playing a VIDEO CD (without PBC functions), SACD, or CD

Track playing time and current disc, track and index number

| DISC | TRACK | INDEX | MIN | SEC |
|------|-------|-------|------|-----|
| 1. | 2. | 1 | 2:25 | |



Remaining time of the current track

| DISC | TRACK | INDEX | MIN | SEC |
|------|-------|-------|-------|-----|
| 1. | 2. | 1 | -1:50 | |



Playing time of the disc

| DISC | MIN | SEC |
|------|-----|-----|
| 1. | 32 | 12 |



Remaining time of the disc

| DISC | MIN | SEC |
|------|-----|-----|
| 1. | -20 | 18 |



Text

| | | |
|-------------|--|--|
| SONY HITS/5 | | |
|-------------|--|--|

💡 When playing VIDEO CDs with PBC functions, the scene number or the playing time is displayed.

💡 The playing time and remaining time of the current chapter, title, track, scene, or disc will also appear on your TV screen. See the following section “Checking the Playing Time and Remaining Time” for instructions on how to read this information.


Note

Depending on the type of disc being played and the playing mode, the above mentioned disc information may not be displayed.


Checking the Playing Time and Remaining Time

DVD VIDEO **DVD-RW** **VIDEO CD** **SACD** **CD**

You can check the playing time and remaining time of the current title, chapter, or track, and the playing time or remaining time of the disc. Also, you can check the DVD/SACD/CD text recorded on the disc.

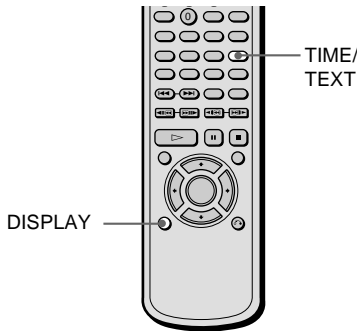

- 1 Press **DISPLAY** during playback. The Control Menu appears.

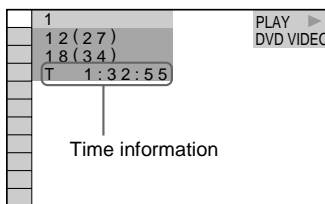

2 Press TIME/TEXT repeatedly to change the time information.

The display and the kinds of time that you can change depend on the disc you are playing.

■ When playing a DVD VIDEO or DVD-RW

 
- T **:**:**
Playing time of the current title
- T-**:**:**
Remaining time of the current title
- C **:**:**
Playing time of the current chapter
- C-**:**:**
Remaining time of the current chapter

■ When playing a VIDEO CD (with PBC functions)

- **:**:**
Playing time of the current scene

■ When playing a VIDEO CD (without PBC functions), SACD, or CD

- T **:**:**
Playing time of the current track
- T-**:**:**
Remaining time of the current track
- D **:**:**
Playing time of the current disc
- D-**:**:**
Remaining time of the current disc



The DVD/SACD/CD text

💡 If the DVD/SACD/CD text does not fit on a single line, you can see the entire text by watching it scroll across the front panel display.

💡 You can select the time and text directly by pressing TIME/TEXT.

Notes

- This player can only display the first level of DVD/SACD/CD text, such as the disc's name or title.
- Depending upon the disc, the text may not be displayed.

To turn off the Control Menu

Press DISPLAY repeatedly until the Control Menu is turned off.


Checking the DVD/SACD/CD text

Press TIME/TEXT repeatedly in Step 2 to display the text recorded on the DVD/SACD/CD. The DVD/SACD/CD text appears only when the text is recorded in the disc. You cannot change the text. If the disc does not contain text, "NO TEXT" appears.

Checking the Play Information (ADVANCED)


DVD VIDEO DVD-RW

You can check information such as the bit rate or the disc layer that is being played. While playing a disc, an approximate bit rate of the playback picture is always displayed as Mbps (Mega bit per second) and the audio as kbps (kilo bit per second).

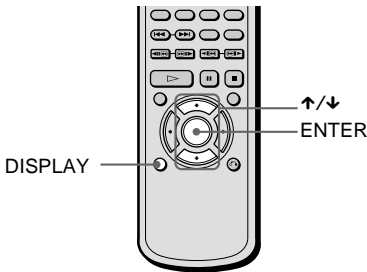

1 Press **DISPLAY** during playback.
The Control Menu is displayed.

2 Press **↑/↓** to select **BIT RATE** (ADVANCED), then press **ENTER**.
The options for “ADVANCED” appear.

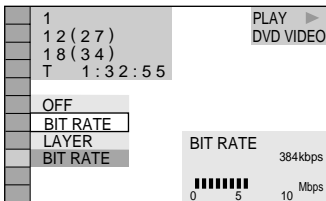

3 Press **↑/↓** to select items.
For each item, please refer to “Displays of each item.”

- **BIT RATE:** displays the bit rate.
- **LAYER:** displays the layer and the pick-up point.

4 Press **ENTER**.

To close the ADVANCED window

Select “OFF” in Step 3.

 
To turn off the Control Menu

Press **DISPLAY** repeatedly until the Control Menu is turned off.

Display of each item


By pressing **DISPLAY** repeatedly, you can display either “BIT RATE” or “LAYER,” whichever was selected in “ADVANCED.”

BIT RATE



Bit rate refers to the amount of video/audio data per second in a disc. The higher the bit rate, the larger the amount of data. When the bit rate level is high, there is a large amount of data. However, this does not always mean that you can get higher quality pictures or sounds.

LAYER

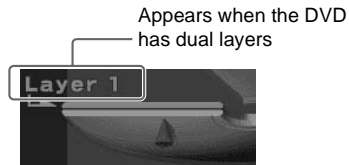

Indicates the approximate point where the disc is playing.

If it is a dual-layer DVD, the player indicates which layer is being read (“Layer 0” or “Layer 1”).

For details on the layers, see page 92 (DVD VIDEO).

Sound Adjustments


Changing the Sound

DVD VIDEO **DVD-RW** **VIDEO CD** **CD**

If the DVD VIDEO is recorded with multilingual tracks, you can select the language you want while playing the DVD VIDEO.

If the DVD VIDEO is recorded in multiple audio formats (PCM, Dolby Digital, or DTS), you can select the audio format you want while playing the DVD VIDEO.

With stereo CDs or VIDEO CDs, you can select the sound from the right or left channel and listen to the sound of the selected channel through both the right and left speakers. (In this case, the sound loses its stereo effect.) For example, when playing a disc containing a song with the vocals on the right channel and the instruments on the left channel, you can select the left channel and hear the instruments from both speakers.

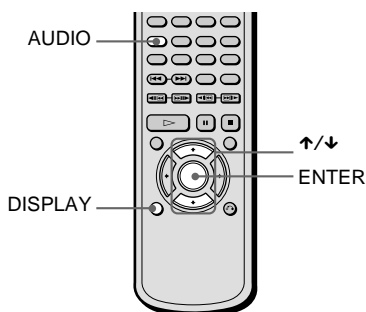


1 Press DISPLAY during playback.

The Control Menu is displayed.

2 Press ↑/↓ to select (AUDIO), then press ENTER.

The options for "AUDIO" appear.

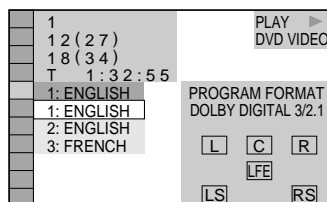

3 Press ↑/↓ to select the desired audio signal.

■ When playing a DVD VIDEO

Depending on the DVD VIDEO, the choice of language varies.

When 4 digits are displayed, they represent the language code. Refer to the language code list on page 97 to see which language the code represents. When the same language is displayed two or more times, the DVD VIDEO is recorded in multiple audio formats.

■ When playing a DVD-RW

The types of sound tracks recorded on a disc are displayed. The default setting is underlined.

Example:

- 1: MAIN (main sound)
- 1: SUB (sub sound)
- 1: MAIN+SUB (main and sub sound)

■ When playing a VIDEO CD or CD


The default setting is underlined.

- STEREO: The standard stereo sound
- 1/L: The sound of the left channel (monaural)
- 2/R: The sound of the right channel (monaural)

4 Press ENTER.

To turn off the Control Menu

Press DISPLAY repeatedly until the Control Menu is turned off.


 You can select "AUDIO" directly by pressing AUDIO. Each time you press the button, the item changes.

Notes

- While playing a DVD, the sound may change automatically.
- You cannot change the sound for SACDs.


Displaying the audio information of the disc 

When you select "AUDIO," the channels being played are displayed on the screen. For example, in Dolby Digital format, multiple signals ranging from monaural to 5.1 channel signals can be recorded on a DVD. Depending on the DVD, the number of the recorded channels may differ.

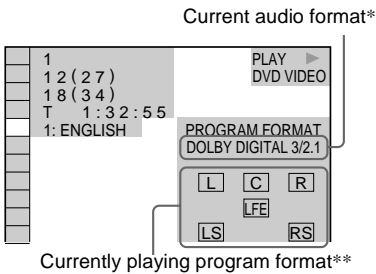

*"PCM," "DTS," or "DOLBY DIGITAL" is displayed. In the case of "DOLBY DIGITAL," the channels in the playing track are displayed by numbers as follows:

For Dolby Digital 5.1 ch:

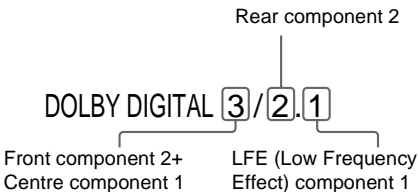


**The letters in the program format display mean the following sound component.


- L: Front (left)
- R: Front (right)
- C: Center
- LS: Rear (left)
- RS: Rear (right)
- S: Rear (monaural): The rear component of the Dolby Surround processed signal and the Dolby Digital signal
- LFE: Low Frequency Effect signal

The display examples are as follows:

- PCM (stereo)

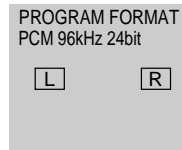


- Dolby Surround

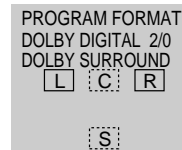


- Dolby Digital 5.1ch


When an LFE signal component is output, "LFE" is enclosed in a solid line. When an LFE signal component is not output, "LFE" is enclosed in a broken line.

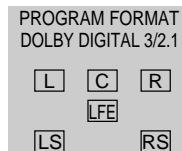

• DTS

When an LFE signal component is output, “LFE” is enclosed in a solid line. When an LFE signal component is not output, “LFE” is enclosed in a broken line.

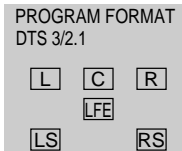


 When the signal contains rear signal components such as “LS,” “RS” or “S,” the Surround effect is enhanced (page 58).


SURROUND Mode Settings


DVD VIDEO DVD-RW VIDEO CD CD

You can enjoy surround sounds while playing discs including Dolby Digital and DTS DVDs, even if you have only 2 or 4 speakers. Select surround mode that best suits your speaker setup.

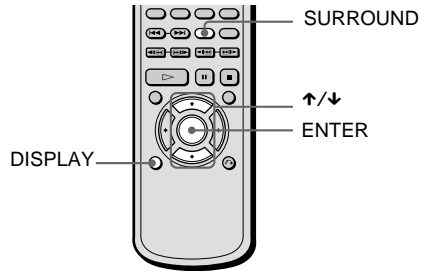

1 Press **DISPLAY** during playback.
The Control Menu appears.

2 Press **↑/↓** to select  (**SURROUND**), then press **ENTER**.
The options for “SURROUND” appear.

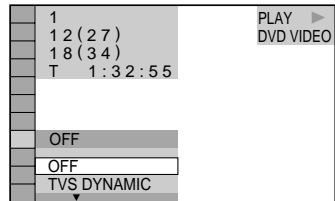

3 Press **↑/↓** to select one of the surround modes.
Refer to the following explanations given for each item.

For 2 speaker setups

- TVS DYNAMIC
- TVS WIDE
- TVS NIGHT
- TVS STANDARD

For 4 to 6 speaker setups

(If you select “NONE” in the setting of “REAR” in “SPEAKER SETUP” (page 86), you cannot select these modes.)

- NORMAL SURROUND
- ENHANCED SURROUND
- VIRTUAL REAR SHIFT
- VIRTUAL MULTI REAR
- VIRTUAL MULTI DIMENSION



4 Press ENTER.

To cancel the setting

Select “OFF” in Step 3.

To turn off the Control Menu

Press DISPLAY repeatedly until the Control Menu is turned off.

For 2 speaker setups

When you connect only 2 front speakers, TVS (TV Virtual Surround) lets you enjoy surround sound effects by using sound imaging to create virtual rear speakers from the sound of the front speakers (L: left, R: right) without using actual rear speakers. Select one of the following modes:

If the player is set up to output the signal from the DIGITAL OUT (OPTICAL or COAXIAL) jack, the surround effect will be heard only when “DOLBY DIGITAL” and “DTS” are set to “D-PCM” in “AUDIO SETUP” (page 84).

TVS DYNAMIC


Uses sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers. The virtual speakers are reproduced as shown in the illustration below. The sound imaging effect is distinct and clearly reproduces each aural element of the audio track.

This mode is effective when the distance between the front L and R speakers is short, such as with built-in speakers on a stereo TV.

TVS WIDE

Uses sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers. The virtual speakers are reproduced as shown in the illustration below. This gives the sound an expanded effect that fills the area surrounding the listener.

This mode is effective when the distance between the front L and R speakers is short, such as with built-in speakers on a stereo TV.

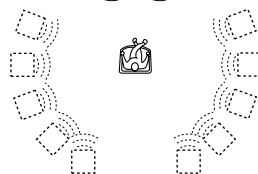


TVS NIGHT

The large sounds, such as explosions, are suppressed, but the quieter sounds are unaffected. This feature is useful when you don't want to disturb other people but still want to hear the dialog and enjoy the surround sound effects of “TVS WIDE.”

TVS STANDARD

Uses sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers. The virtual speakers are reproduced as shown in the illustration below. Use this setting when you want to use TVS with 2 separate speakers and retain the sound quality.

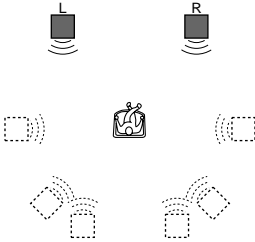

L: Left front speaker
 R: Right front speaker
 []: Virtual speakers

For 4 to 6 speaker setups

You can enjoy the following surround effects by using the 2 front speakers and 2 rear speakers.


Connect the player to the amplifier (receiver) with the **B-1** connection (page 22).

You can experience Dolby Surround (Pro Logic) sounds or Digital Cinema Sound (DCS). DCS uses sound imaging to shift the sound of the rear speakers away from the actual speaker position or create entire sets of virtual rear speakers from one set of actual rear speakers. "VIRTUAL REAR SHIFT," "VIRTUAL MULTI REAR," and "VIRTUAL MULTI DIMENSION" make use of this technology.

NORMAL SURROUND

Software with 2 channel audio signals is decoded with the Dolby Surround (Pro Logic) decoder to create surround effects. The rear speakers will emit identical monaural sounds. If you are using a center

speaker, the appropriate sounds for the center speaker will be delivered.

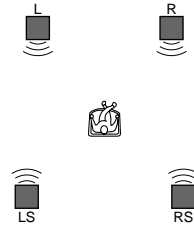


ENHANCED SURROUND

Provides a greater sense of presence from a Dolby Surround (Pro Logic) source with a monaural rear channel signal. Produces a stereo like effect in the rear channels.

VIRTUAL REAR SHIFT



Uses sound imaging to shift the sound of the rear speakers away from the actual speaker position.

The virtual speakers are reproduced as shown in the illustration below. The shift position differs according to "REAR" or "SIDE" setting of the rear speakers (page 86).

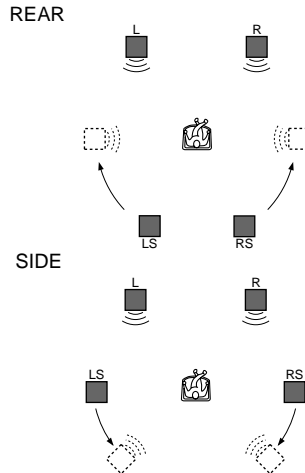

VIRTUAL MULTI REAR

Uses sound imaging to create an array of virtual rear speakers from a single pair of actual rear speakers. The virtual speakers are reproduced as shown in the illustration below. The position of the virtual rear speakers differs according to “REAR” or “SIDE” setting of the rear speakers (page 86).

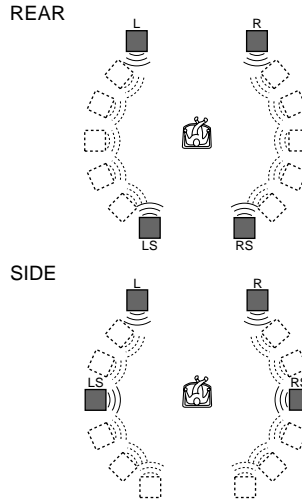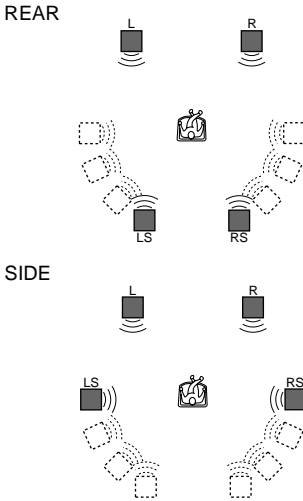

- L: Left front speaker
- R: Right front speaker
- LS: Left rear speaker
- RS: Right rear speaker
- ⊞: Virtual speakers

You can select “SURROUND” directly by pressing SURROUND. Each time you press the button, the item changes. If you select any setting other than “OFF,” the SURROUND indicator on the player lights up.

VIRTUAL MULTI DIMENSION

Uses sound imaging to create an array of virtual rear speaker positions higher than the listener from a single pair of actual rear speakers.

This mode creates five sets of virtual speakers surrounding the listener at approximately a 30° angle of elevation. The effect differs according to “REAR” or “SIDE” setting of the rear speakers (page 86).

Notes

- To enjoy the multichannel audio through the 5.1CH OUTPUT jacks, correctly set each speaker position and distance. For details on setting each speaker, see page 86.
- When you select an item, the sound cuts off for a moment.
- When the playing signal does not contain a signal for the rear speakers (page 57), the surround effects may be difficult to hear.
- When you select “TVS DYNAMIC,” “TVS WIDE,” “TVS NIGHT,” or “TVS STANDARD,” the player does not output the sound from the center speaker.
- When you select one of the surround modes, turn off the surround setting of the connected TV or amplifier (receiver).


continued →

- If the player is set up to output the signal from the DIGITAL OUT (OPTICAL or COAXIAL) jack, the TVS effect will not be heard when you play a CD.
- Make sure that your listening position is between and at an equal distance from your speakers, and that the speakers are located in similar surroundings. Otherwise, the TVS effect may be hard to discern.
- “TVS NIGHT” only works with Dolby Digital discs. However, not all discs will respond to the “TVS NIGHT” function in the same way.
- If you use the DIGITAL OUT (OPTICAL or COAXIAL) jack and set “DOLBY DIGITAL” to “DOLBY DIGITAL,” and “DTS” to “DTS,” in “AUDIO SETUP,” sound will come from your speakers but it will not have the TVS effect.


Changing the Angles

DVD VIDEO


If various angles (multi-angles) for a scene are recorded on the DVD VIDEO, "ANGLE" appears in the front panel display. This means that you can change the viewing angle. For example, while playing a scene of a train in motion, you can display the view from either the front of the train, the left window of the train or from the right window without having the train's movement interrupted.

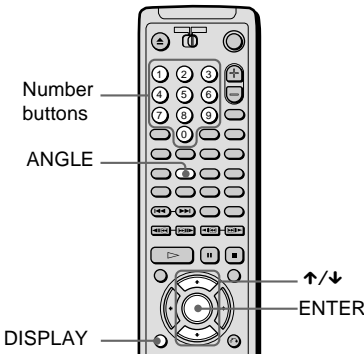

1 Press DISPLAY during playback.
The Control Menu appears.


2 Press ↑/↓ to select  (ANGLE).

The number of the angle appears.
The number in parentheses indicates the total number of angles.

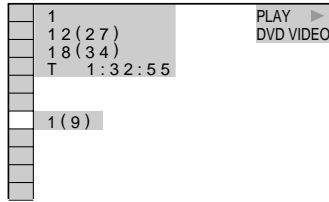

3 Press → or ENTER.

The number of the angle changes to "-."

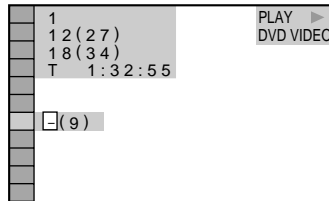



4 Select the angle number using the number buttons or ↑/↓, then press ENTER.

The angle changes to the selected angle.

To turn off the Control Menu

Press DISPLAY repeatedly until the Control Menu is turned off.

 You can select the angle directly by pressing ANGLE. Each time you press the button, the angle changes.

 You can display all the angles recorded on the disc on the same screen, and start playback directly in continuous mode from the chosen angle. The angles are displayed on a screen divided into 9 sections. For details, see page 50.


Note

Depending on the DVD VIDEO, you may not be able to change the angles even if multi-angles are recorded on the DVD VIDEO.


Displaying the Subtitles


DVD VIDEO DVD-RW

If subtitles are recorded on the disc, you can turn the subtitles on and off whenever you want while playing. If multilingual subtitles are recorded on the disc, you can change the subtitle language while playing, and turn it on or off whenever you want. For example, you can select the language you want to practice and turn the subtitles on for better understanding.

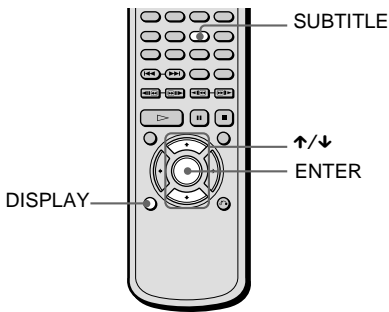

1 Press **DISPLAY** during playback.
The Control Menu appears.

2 Press **↑/↓** to select  (SUBTITLE), then press **ENTER**.
The options for "SUBTITLE" appear.

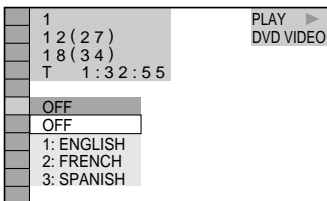

3 Press **↑/↓** to select the setting.
■ When playing a DVD VIDEO
Select the language.

Depending on the DVD VIDEO, the choice of language varies.

When 4 digits are displayed, they indicate the language code. Refer to "Language Code List" on page 97 to see which language the code represents.

■ When playing a DVD-RW
Select "ON."


4 Press **ENTER**.

To cancel the SUBTITLE setting

Select "OFF" in Step 3.

To turn off the Control Menu

Press **DISPLAY** repeatedly until the Control Menu is turned off.

 You can select "SUBTITLE" directly by pressing **SUBTITLE**. Each time you press the button, the item changes.


Note

Depending on the DVD VIDEO, you may not be able to change the subtitles even if multilingual subtitles are recorded on it.


Adjusting the Picture Quality (BNR)


DVD VIDEO DVD-RW VIDEO CD

The Block Noise Reduction (BNR) function adjusts the picture quality by reducing the “block noise” or mosaic like patterns that appear on your TV screen.

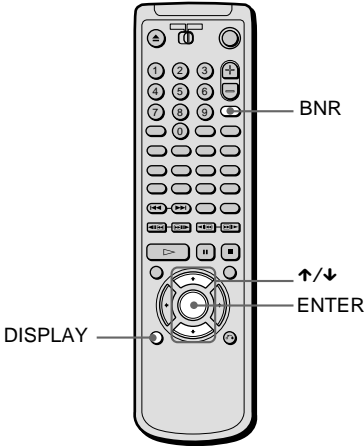

- 1 Press DISPLAY twice during playback.**
The Control Menu appears.

- 2 Press ↑/↓ to select  (BNR), then press ENTER.**
The options for “BNR” appear.

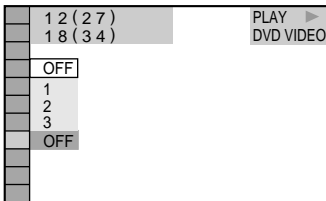


- 3 Press ↑/↓ to select a level.**
As the value increases, the mosaic like patterns on your TV screen will decrease.
 - 1: reduces the “block noise”.
 - 2: reduces the “block noise” more than 1.
 - 3: reduces the “block noise” more than 2.

- 4 Press ENTER.**
The disc plays with the setting you selected.

To cancel the “BNR” setting
Select “OFF” in Step 3.

To turn off the Control Menu
Press DISPLAY repeatedly until the Control Menu is turned off.

 You can select “BNR” directly by pressing BNR. Each time you press the button, the item changes. If you select any setting other than “OFF,” the indicator on the player lights up.


Notes

- If the outlines of the images on your screen should become blurred, set “BNR” to “OFF.”
- Depending on the disc or the scene being played, the “BNR” effect may be hard to discern.

Adjusting the Playback Picture (VIDEO EQUALIZER)

DVD VIDEO **DVD-RW** **VIDEO CD**

You can adjust the video signal of the DVD or VIDEO CD from the player, not from the TV, to obtain the picture quality you want. Choose the video mode that suits the program you are watching.

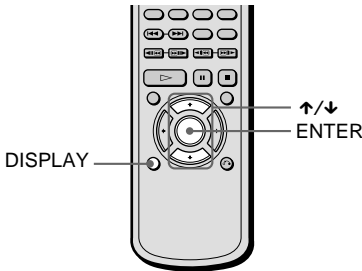

- **DYNAMIC 1:** produces a bold dynamic picture by increasing the picture contrast and the color intensity.
- **DYNAMIC 2:** produces a more dynamic picture than DYNAMIC 1 by further increasing the picture contrast and the color intensity.
- **CINEMA 1:** enhances details in dark areas by increasing the black level.
- **CINEMA 2:** White colors become brighter and black colors become richer, and the color contrast is increased.

4 Press ENTER.

To turn off the Control Menu

Press DISPLAY repeatedly until the Control Menu is turned off.


 When you watch a movie, "CINEMA 1" or "CINEMA 2" is recommended.

1 Press DISPLAY twice during playback.

The Control Menu appears.

2 Press ↑/↓ to select (VIDEO EQUALIZER), then press ENTER.

The options for "VIDEO EQUALIZER" appear.

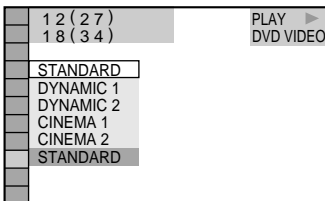


3 Press ↑/↓ to select the setting you want.

- **STANDARD:** displays a standard picture.

Enhancing the Playback Picture (DIGITAL VIDEO ENHANCER)

DVD VIDEO DVD-RW VIDEO CD

The Digital Video Enhancer function makes the picture appear clear and crisp by enhancing the outlines of images on your TV screen. Also, this function can soften the images on the screen.

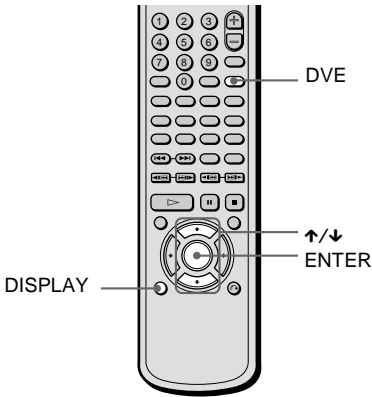


1 Press DISPLAY twice during playback.

The Control Menu appears.

2 Press ↑/↓ to select , then press ENTER.

The options for “DIGITAL VIDEO ENHANCER” appear.

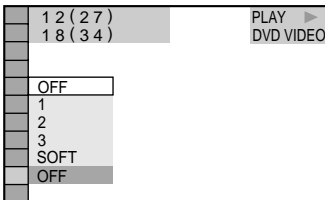

3 Press ↑/↓ to select a level.

As the value increases, the outlines of images on your TV screen will become crisper.

- 1: enhances the outline.
- 2: enhances the outline more than 1.
- 3: enhances the outline more than 2.
- SOFT: softens the image (DVD VIDEO/DVD-RW only).

4 Press ENTER.


The disc plays with the setting you selected.

To cancel the “DIGITAL VIDEO ENHANCER” setting

Select “OFF” in Step 3.

To turn off the Control Menu

Press DISPLAY repeatedly until the Control Menu is turned off.

 You can select “DIGITAL VIDEO ENHANCER” directly by pressing DVE. Each time you pressing the button, the item changes.

Note

Depending on the DVD/VIDEO CD disc or the scene being played, noise found in the disc may become more apparent. If this happens, it is recommended that you use the BNR function (page 65) with the DVE function. If the condition still does not improve, reduce the Digital Video Enhancer level or select “SOFT” (DVD VIDEO/DVD-RW only) in Step 3 above.

Using Various Additional Functions

Locking Discs (Custom Parental Control, Parental Control)

You can set two kinds of playback restrictions for the desired disc.

- Custom Parental Control

You can set the playback restrictions so that the player will not play inappropriate discs.

- Parental Control


Playback of some DVD VIDEOS can be limited according to a predetermined level such as the age of the users.

The same password is used for both Parental Control and Custom Parental Control.

Custom Parental Control

DVD VIDEO VIDEO CD SACD CD

You can set the same Custom Parental Control password for up to 50 discs. When you set the fifty-first disc, the first disc is canceled.

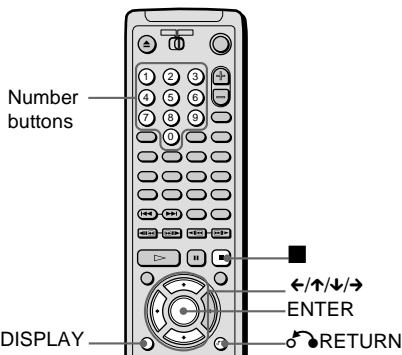

1 Insert the disc you want to lock.


If the disc is playing, press ■ to stop playback.

2 Press DISPLAY while the player is in stop mode.

The Control Menu appears.


3 Press ↑/↓ to select (PARENTAL CONTROL), then press ENTER.

The options for "PARENTAL CONTROL" appear.

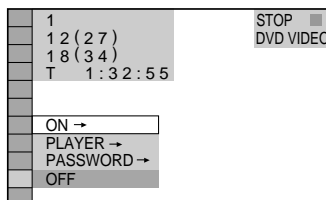


4 Press ↑/↓ to select "ON →," then press ENTER.

■ If you have not entered a password
The display for registering a new password appears.

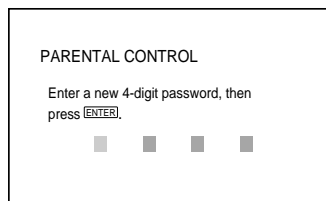

Enter a 4-digit password by using the number buttons, then press ENTER. The display for confirming the password appears.

■ When you have already registered a password
The display for entering the password appears.

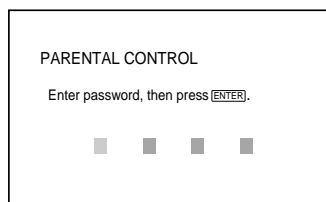

- 5 Enter or re-enter your 4-digit password by using the number buttons, then press ENTER.


“Custom parental control is set.” appears and then the screen returns to the Control Menu display.

To turn off the Custom Parental Control function

- 1 Follow Steps 1 through 3 of “Custom Parental Control.”
- 2 Press \uparrow/\downarrow to select “OFF \rightarrow ,” then press ENTER.
- 3 Enter your 4-digit password using the number buttons, then press ENTER.

To play the disc for which Custom Parental Control is set

- 1 Insert the disc for which Custom Parental Control is set. The “CUSTOM PARENTAL CONTROL” display appears.

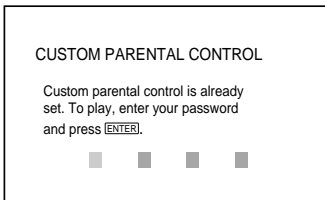


- 2 Enter your 4-digit password using the number buttons, then press ENTER. The player is ready for playback.

If you forget your password, enter the 6-digit number “199703” using the number buttons when the “CUSTOM PARENTAL CONTROL” display asks you for your password, then press ENTER. The display will ask you to enter a new 4-digit password.


Parental Control (limiting playback by children) **DVD VIDEO**

Playback of some DVD VIDEOS can be limited according to a predetermined level such as the age of the users. The “PARENTAL CONTROL” function allows you to set a playback limitation level. A scene that is limited is not played, or it is replaced by a different scene.

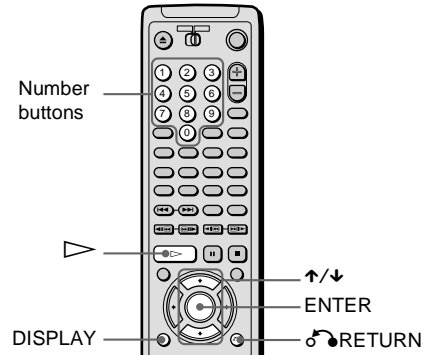


- 1 Press DISPLAY while the player is in stop mode. The Control Menu appears.

- 2 Press \uparrow/\downarrow to select (PARENTAL CONTROL), then press ENTER. The options for “PARENTAL CONTROL” appear.

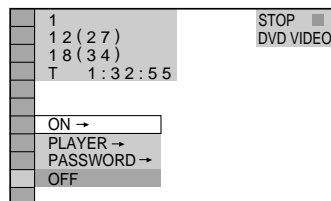


3 Press \uparrow/\downarrow to select "PLAYER \rightarrow ," then press ENTER.

■ **If you have not entered a password**
The display for registering a new password appears.

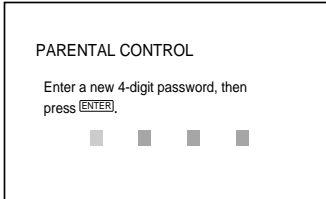


Enter a 4-digit password using the number buttons, then press ENTER. The display for confirming the password appears.

■ **When you have already registered a password**
The display for entering the password appears.

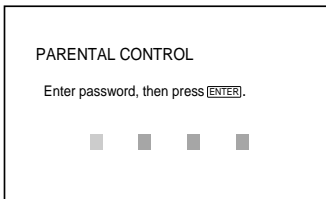


4 Enter or re-enter your 4-digit password by using the number buttons, then press ENTER.

The display for setting the playback limitation level appears.

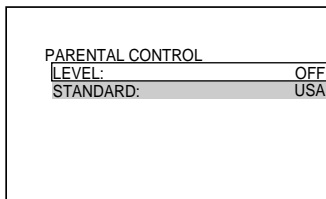

5 Press \uparrow/\downarrow to select "STANDARD," then press ENTER.

The selection items for "STANDARD" are displayed.

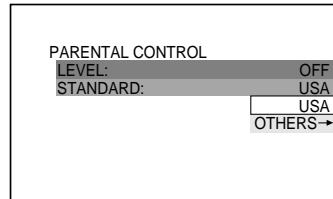


6 Press \uparrow/\downarrow to select a geographic area as the playback limitation level, then press ENTER.

The area is selected.

When you select "OTHERS \rightarrow ," select and enter the standard code in the table on page 71 using the number buttons.


7 Press \uparrow/\downarrow to select "LEVEL," then press ENTER.

The selection items for "LEVEL" are displayed.

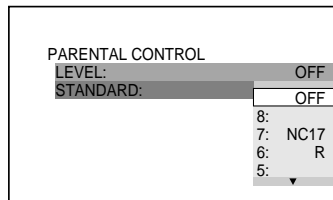

8 Select the level you want using \uparrow/\downarrow , then press ENTER.

Parental Control setting is complete.

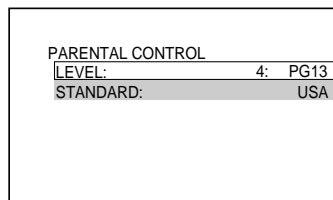

The lower the value, the more strict the limitation.


Area Code

To turn off the Parental Control function

Set "LEVEL" to "OFF" in Step 8.

To play a disc for which Parental Control is set

- 1 Insert the disc and press \triangleright .
The "PARENTAL CONTROL" display appears.
- 2 Enter your 4-digit password using the number buttons, then press ENTER.
The player starts playback.

 If you forget your password, remove the disc and repeat Steps 1 to 3 of "Limiting playback by children." When you are asked to enter your password, enter "199703" using the number buttons, then press ENTER. The display will ask you to enter a new 4-digit password. After you enter a new 4-digit password in Step 4, replace the disc in the player and press \triangleright . When the "PARENTAL CONTROL" display appears, enter your new password.


Notes

- When you play DVD VIDEOS which do not have the Parental Control function, playback cannot be limited on this player.
- Depending on the DVD VIDEO, you may be asked to change the parental control level while playing the disc. In this case, enter your password, then change the level. If the Resume Play mode is canceled, the level returns to the original level.

| Standard | Code number | Standard | Code number |
|-----------|-------------|----------------|-------------|
| Argentina | 2044 | Korea | 2304 |
| Australia | 2047 | Malaysia | 2363 |
| Austria | 2046 | Mexico | 2362 |
| Belgium | 2057 | Netherlands | 2376 |
| Brazil | 2070 | New Zealand | 2390 |
| Canada | 2079 | Norway | 2379 |
| Chile | 2090 | Pakistan | 2427 |
| China | 2092 | Philippines | 2424 |
| Denmark | 2115 | Portugal | 2436 |
| Finland | 2165 | Russia | 2489 |
| France | 2174 | Singapore | 2501 |
| Germany | 2109 | Spain | 2149 |
| Hong Kong | 2219 | Sweden | 2499 |
| India | 2248 | Switzerland | 2086 |
| Indonesia | 2238 | Taiwan | 2543 |
| Italy | 2254 | Thailand | 2528 |
| Japan | 2276 | United Kingdom | 2184 |

Changing the password

DVD VIDEO VIDEO CD SACD CD

- 1 Press **DISPLAY** while the player is in stop mode.
The Control Menu appears.
- 2 Press **↑/↓** to select  (PARENTAL CONTROL), then press **ENTER**.
The options for "PARENTAL CONTROL" appear.
- 3 Press **↑/↓** to select "PASSWORD →," then press **ENTER**.
The display for entering the password appears.
- 4 Enter your 4-digit password using the number buttons, then press **ENTER**.
- 5 Enter a new 4-digit password using the number buttons, then press **ENTER**.
- 6 To confirm your password, re-enter it using the number buttons, then press **ENTER**.

If you make a mistake entering your password

Press **←** before you press **ENTER** in Step 5 and input the correct number.

If you make a mistake

Press **↶** RETURN.

To turn off the Control Menu

Press **DISPLAY** repeatedly until the Control Menu is turned off.

Operation Sound Effects

(Sound Feedback)



The player beeps when the following operations are performed.

The default setting of the Sound Feedback function is set to off.

| Operation | Operation sound |
|---------------------------|-----------------|
| Power is turned on | One beep |
| Power is turned off | Two beeps |
| ▷ is pressed | One beep |
| is pressed | Two beeps |
| Playback is stopped | One long beep |
| Operation is not possible | Three beeps |

To set Sound Feedback

POWER

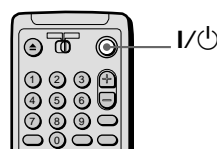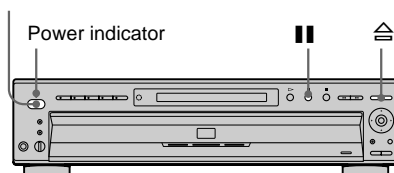

- 1 Press **POWER** on the player, then press **I/⏏** on the remote.
The power indicator lights up in green. When there is a disc in the player, press **⏏** and remove the disc. Then press **⏏** again to close the disc tray.
- 2 Press and hold **||** on the player for more than two seconds.

You will hear one beep and the Sound Feedback function is turned on.

To turn off the Sound Feedback function

When there is no disc in the player, press and hold **II** on the player for more than two seconds. You will hear two beeps and the Sound Feedback function is turned off.


Controlling Your TV or AV Amplifier (Receiver) with the Supplied Remote

By adjusting the remote signal, you can control your TV with the supplied remote. If you connect the player with an AV amplifier (receiver), you can control the volume with the supplied remote.

Notes

- Depending on the units being connected, you may not be able to control your TV or AV amplifier (receiver) using some of the buttons below.
- If you enter a new code number, the code number previously entered will be erased.
- When you replace the batteries of the remote, the code number you have set may be reset to the default setting. Set the appropriate code number again.

Controlling TVs with the remote

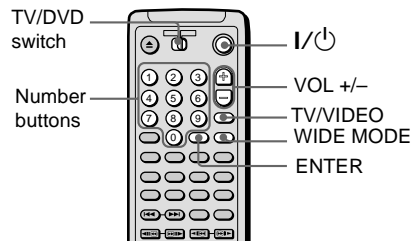

- 1 Slide the TV/DVD switch to "TV."
- 2 Hold down I/⏻, and enter your TV's manufacturer's code (see the table) using the number buttons.
- 3 Release I/⏻.

Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.


| Manufacturer | Code number | Manufacturer | Code number |
|------------------|-------------|--------------|-------------|
| Sony (default) | 01 | Panasonic | 06,19 |
| Akai | 04 | Philco | 03,04 |
| AOC | 04 | Philips | 08,21 |
| Centurion | 12 | Pioneer | 16 |
| Coronado | 03 | Portland | 03 |
| Curtis-Mathes | 12 | Quasar | 06,18 |
| Daytron | 12 | Radio Shack | 05,14 |
| Emerson | 03,04,14 | RCA | 04,10 |
| Fisher | 11 | Sampo | 12 |
| General Electric | 06,10 | Samsung | 20 |
| Gold Star | 03,04,17 | Sanyo | 11 |
| Hitachi | 02,03 | Scott | 12 |
| J.C.Penney | 04,12 | Sears | 07,10,11 |
| JVC | 09 | Sharp | 03,05,18 |
| KMC | 03 | Sylvania | 08,12 |
| Magnavox | 03,08,12 | Teknika | 03,08,14 |
| Marantz | 04,13 | Toshiba | 07 |
| MGA/ | 04,12,13, | Wards | 03,04,12 |
| Mitsubishi | 17 | Yorx | 12 |
| NEC | 04,12 | Zenith | 15 |

Controlling the TV

When you set the TV/DVD switch to TV, you can control the following items with the supplied remote.

| By pressing | You can |
|--------------------------|---|
| I/⏻ | Turn the TV on or off |
| VOL +/- | Adjust the volume of the TV |
| WIDE MODE | Switch to or from the wide mode of a Sony Wide TV |
| TV/VIDEO | Switch the TV's input source between the TV and other input sources |
| Number buttons and ENTER | Select the channel of the TV |

Controlling the volume of your AV amplifier (receiver) with the remote

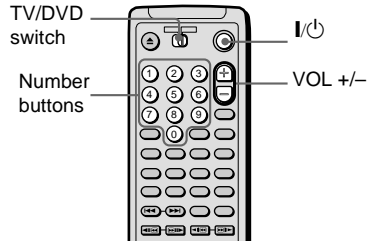

- 1 Slide the TV/DVD switch to DVD.
- 2 Hold down I/⏻, and enter your AV amplifier (receiver)'s manufacturer's code (see the table below) using the number buttons.
- 3 Release I/⏻.

Code numbers of controllable AV amplifiers (receivers)

If more than one code number is listed, try entering them one at a time until you find the one that works with your AV amplifier (receiver).

If you do not connect an AV amplifier (receiver), you can control your TV's volume by setting the code number to 90 (default). However, you must first set the code number of controllable TVs as explained above.

| Manufacturer | Code number |
|--------------|----------------|
| Sony | 80, 88, 89, 91 |
| Denon | 84, 85, 86 |
| Kenwood | 92, 93 |
| Onkyo | 81, 82, 83 |
| Pioneer | 99 |
| Sansui | 87 |
| Technics | 97, 98 |
| Yamaha | 94, 95, 96 |


Controlling the AV amplifiers (receivers)

When you set the TV/DVD switch to DVD, you can control the volume of the AV amplifier (receiver) using VOL +/-.

Controlling a CD Changer (Mega Control)



You can control a Sony CD changer of 5/50/200/300/400 discs connected to the MEGA CONTROL jack of the player.

Connecting the CD changer

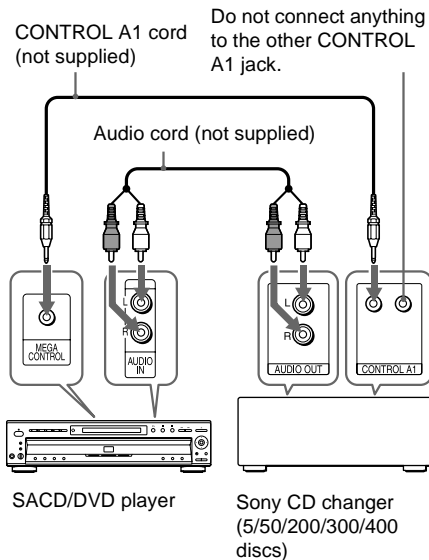

Controlling the CD changer



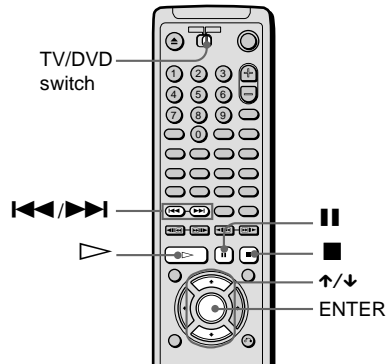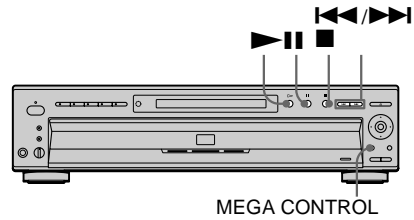





The controls indicated below are effective while the MEGA CONTROL button is lit.



- 1** Set the command mode selector of the CD changer to "CD3."
- 2** Set the TV/DVD switch on the remote to "DVD."
- 3** Turn on the player and the CD changer.
- 4** Press MEGA CONTROL on the player. The MEGA CONTROL button on the front panel lights up and the display shows the current disc number in the CD changer.
- 5** Select the play mode you want on the CD changer.

6 Press on the player to start playing.

Playback starts and the display shows the current disc and track numbers and the playing time of the track. While the MEGA CONTROL button on the front panel is lit, you can control CD changer with the controls on the player as follows:

| To | Operation |
|---|---|
| Select a disc during playback | Press the number button on the remote and ENTER, or  /  and ENTER |
| Stop | Press  |
| Pause | Press  |
| Resume play after pause | Press  or  |
| Go to the next track or scene in continuous play mode | Press  |
| Go back to the preceding track or scene in continuous play mode | Press  |

To control the player again

Press MEGA CONTROL on the player. The MEGA CONTROL button on the player turns off and you can control the player.

Notes

- Connect only a Sony 5/50/200/300/400 CD changer to MEGA CONTROL jack.
- Set CONTROL A1 or CONTROL A1II in the setup menu of the CD changer so that it matches the connection made above. Refer to the operating instructions supplied with the CD changer.
- You cannot locate a particular point on a CD's track using the controls on the player.
- Depending on the CD changer, some controls on the player may not operate the CD changer as they do the player.
- You cannot control the player when the MEGA CONTROL button on the front panel is lit.
- The player will not enter Resume Play after the MEGA CONTROL button on the front panel has been turned on and off.
- You cannot control the CD changer right after turning on the player or connecting the CD changer. Wait a few seconds until the player recognizes the CDs.

- When the MEGA CONTROL button is lit, you cannot use the Control Menu.

Settings and Adjustments


Using the Setup Display


By using the Setup Display, you can make various adjustments to items such as picture and sound. You can also set a language for the subtitles and the Setup Display, among other things. For details on each Setup Display item see page 78 through 88. For an overall list of Setup Display items, see page 98.


Note

Playback settings stored in the disc take priority over the Setup Display settings and not all the functions described may work.


How to use the Setup Display

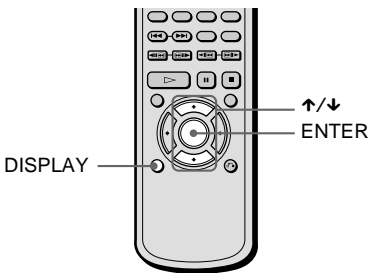


- 1 Press **DISPLAY** on the remote when the player is in stop mode.
The Control Menu appears.
- 2 Press **↑/↓** to select  (**SETUP**) and press **ENTER**.
The options for “SETUP” appear.

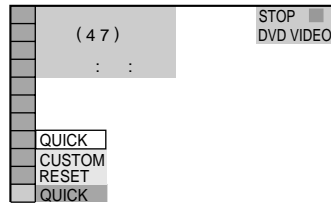


- 3 Press **↑/↓** to select “CUSTOM” and press **ENTER**.
The Setup Display appears.

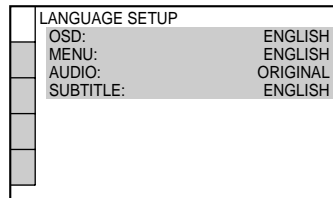


- 4 Press **↑/↓** to select the setup item from the displayed list: “LANGUAGE SETUP,” “SCREEN SETUP,” “CUSTOM SETUP,” “AUDIO SETUP” or “SPEAKER SETUP.” Then press **ENTER**.
The selected setup item appears.
Example: “SCREEN SETUP”

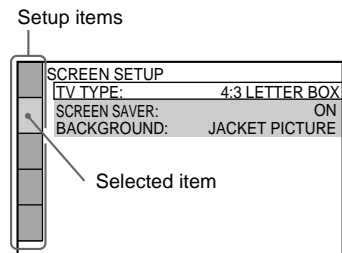

- 5** Select an item using \uparrow/\downarrow , then press ENTER.
The options for the selected item appear.
Example: "TV TYPE"

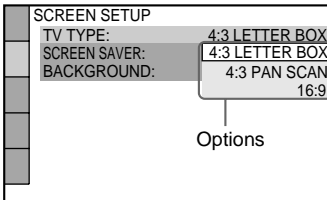

- 6** Select a setting using \uparrow/\downarrow , then press ENTER.
The setting is selected and setup is complete.
Example: "16:9"

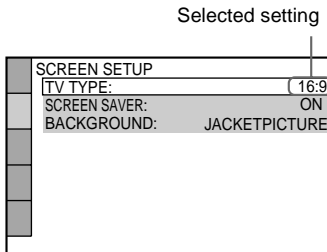

To turn off the Setup Display

Press DISPLAY repeatedly until the Setup Display is turned off.

If you select "QUICK" in Step 3, you will enter the Quick Setup mode (page 28).


Follow from Step 5 of the Quick Setup explanation to make basic adjustments.

If you select "RESET" in Step 3, you can reset all of the "SETUP" settings on page 98 to the default settings. After you select "RESET" and press ENTER, select "YES" and press ENTER to reset the settings (it takes a few seconds to complete), or select "NO" and press ENTER to return to the Control Menu. Do not press POWER or \mathcal{I}/\mathcal{D} when resetting the player.

Setting the Display or Sound Track Language (LANGUAGE SETUP)

"LANGUAGE SETUP" allows you to set various languages for the on-screen display or sound track.

Select "LANGUAGE SETUP" in the Setup Display. For details on using the display, see "Using the Setup Display" (page 77).

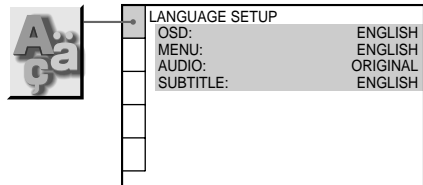

■ OSD (On-Screen Display)

Switches the display language on the screen.
Selects the language from the displayed list.

■ MENU (DVD VIDEO only)


You can select the desired language for the disc's menu.

■ AUDIO (DVD VIDEO only)

Switches the language of the sound track.
Select the language from the displayed list.
When you select "ORIGINAL," the language given priority in the disc is selected.

■ SUBTITLE (DVD VIDEO only)

Switches the language of the subtitles recorded on the DVD VIDEO.
Select the language from the displayed list.
When you select "AUDIO FOLLOW," the language for the subtitles changes according to the language you selected for the sound track.

 If you select “OTHERS →” in “MENU,” “SUBTITLE,” and “AUDIO,” select and enter the language code from the list using the number buttons (page 97).

Note


When you select a language that is not recorded on the DVD VIDEO, one of the recorded languages will be automatically selected (except for the “OSD”).

Settings for the Display

(SCREEN SETUP)

Choose settings according to the TV to be connected.

Select “SCREEN SETUP” in the Setup Display. For details on using the display, see “Using the Setup Display” (page 77). The default settings are underlined.

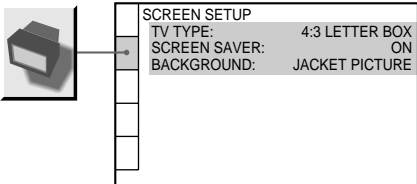

TV TYPE

Selects the aspect ratio of the connected TV (4:3 standard or wide).

| | |
|-----------------------|---|
| <u>4:3 LETTER BOX</u> | Select this when you connect a 4:3 screen TV. Displays a wide picture with bands on the upper and lower portions of the screen. |
| 4:3 PAN SCAN | Select this when you connect a 4:3 screen TV. Automatically displays the wide picture on the entire screen and cuts off the portions that do not fit. |
| 16:9 | Select this when you connect a wide-screen TV or a TV with a wide mode function. |

 
4:3 LETTER BOX



4:3 PAN SCAN



16:9



Note

Depending on the DVD, “4:3 LETTER BOX” may be selected automatically instead of “4:3 PAN SCAN” or vice versa.

■ SCREEN SAVER

Turns on and off the screen saver so that the screen saver image appears when you leave the player in pause or stop mode for 15 minutes, or when you play back an SACD/CD for more than 15 minutes. The screen saver will help prevent your display device from becoming damaged (ghosting). Press \triangleright to turn off the screen saver.

| | |
|------------|-----------------------------|
| <u>ON</u> | Turns on the screen saver. |
| <u>OFF</u> | Turns off the screen saver. |

■ BACKGROUND


Selects the background color or picture on the TV screen in stop mode or while playing a SACD/CD.

| | |
|-----------------------|---|
| <u>JACKET PICTURE</u> | The jacket picture (still picture) appears in the background, but only when the jacket picture is already recorded on the disc (CD-EXTRA, etc.). If the disc does not contain a jacket picture, the “GRAPHICS” picture appears. |
| <u>GRAPHICS</u> | A preset picture stored in the player appears in the background. |
| <u>BLUE</u> | The background color is blue. |
| <u>BLACK</u> | The background color is black. |

Custom Settings (CUSTOM SETUP)

Use this to set up playback related and other settings.

Select “CUSTOM SETUP” in the Setup Display. For details on using the display, see “Using the Setup Display” (page 77). The default settings are underlined.

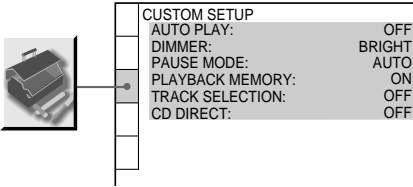

■AUTO PLAY

Selects the Auto Play setting when you turn on the player.

| | |
|------------|---|
| <u>OFF</u> | Does not use “TIMER,” “DEMO1,” or “DEMO2” to start playback. |
| TIMER | Starts playing when the player is turned on. The player can be played at any time when connected to a timer (not supplied). Set the timer when the player is in standby mode (the I/ indicator lights up in red). |
| DEMO1 | Starts playing the first demonstration automatically. |
| DEMO2 | Starts playing the second demonstration automatically. |

■DIMMER

Adjusts the lighting of the front panel display.

| | |
|---------------|--|
| <u>BRIGHT</u> | Makes the front panel display bright. |
| DARK | Makes the front panel display dark. |
| OFF | Turns off the lighting of the front panel display. |

■PAUSE MODE (DVD VIDEO/DVD-RW only)

Selects the picture in pause mode.

| | |
|-------------|--|
| <u>AUTO</u> | The picture, including subjects that move dynamically, is output with no jitter. Normally, select this position. |
| FRAME | The picture, including subjects that do not move dynamically, is output in high resolution. |

■PLAYBACK MEMORY (DVD VIDEO/VIDEO CD only)

The player can store the “SUBTITLE” and other settings of each disc for up to 50 discs (Playback Memory).

Set the Playback Memory function “ON” or “OFF.”

| | |
|-----------|--|
| <u>ON</u> | Stores the settings in memory when you eject the disc. |
| OFF | Does not store the settings in memory. |

The following settings are stored in memory by the Playback Memory function.

- ANGLE (page 63)*
- AUDIO (page 56)*
- BNR (page 65)
- DIGITAL VIDEO ENHANCER (page 67)
- SUBTITLE (page 64)*
- VIDEO EQUALIZER (page 66)

* DVD VIDEO only

continued →

Notes

- The player can store the settings of up to 50 discs. When you store the setting of disc number 51, the first disc setting is canceled.
- The Playback Memory function cannot be used for DVD-RWs in VR mode.
- During playback, do not turn off the player by pressing POWER on the player. Doing so may cancel the settings. When you turn off the player, press ■ first to stop playback and then press I/⏻ on the remote. After the power indicator lights up in red and the player enters standby mode, press POWER on the player.

■ TRACK SELECTION (DVD VIDEO only)

Gives the sound track which contains the highest number of channels priority when you play a DVD on which multiple audio formats (PCM, DTS or Dolby Digital format) are recorded.

| | |
|------|--------------------|
| OFF | No priority given. |
| AUTO | Priority given. |

Notes

- When you set the item to “AUTO,” the language may change. The “TRACK SELECTION” setting has higher priority than the “AUDIO” settings in “LANGUAGE SETUP” (page 78).
- If PCM, DTS and Dolby Digital sound tracks have the same number of channels, the player selects PCM, DTS and Dolby Digital sound tracks in this order.

■ CD DIRECT

Eliminates the use of unnecessary circuits when playing CDs. The setting will be activated when you press DISC SKIP. This function affects the output of the following jacks:

- LINE OUT L/R (AUDIO) 1/2 jacks
- 5.1CH OUTPUT jacks
- PHONES jack

| | |
|-----|---|
| OFF | Select this when playing CD discs, including CD type DTS discs. |
| ON | Eliminates the use of unnecessary circuits needed to play CDs. |

Note


If you select “ON” when playing CD type DTS discs, the sound will become noisy.

Settings for the Sound

(AUDIO SETUP)

“AUDIO SETUP” allows you to set the sound according to the playback and connection conditions.

Select “AUDIO SETUP” in the Setup Display. For details on using the display, see “Using the Setup Display” (page 77). The default settings are underlined.

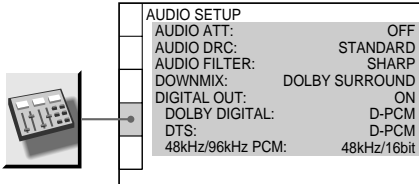

■AUDIO ATT (attenuation)

If the playback sound is distorted, set this item to “ON.” The player reduces the audio output level.

This function affects the output of the following jacks:

- LINE OUT L/R (AUDIO) 1/2 jacks
- 5.1CH OUTPUT jacks
- PHONES jack

| | |
|------------|--|
| <u>OFF</u> | Turns off the audio attenuation. Normally, select this position. |
| ON | Reduces the audio output level so that no sound distortion occurs. Select this when the playback sound from the speakers is distorted. |

■AUDIO DRC (Dynamic Range Control) (DVD VIDEO/DVD-RW only)

Makes the sound clear when the volume is turned down when playing a DVD that has the “AUDIO DRC” function. This affects the output from the following jacks:

- LINE OUT L/R (AUDIO) 1/2 jacks
- 5.1CH OUTPUT jacks
- DIGITAL OUT (OPTICAL or COAXIAL) jack only when “DOLBY DIGITAL” is set to “D-PCM” in “DIGITAL OUT” (page 84).
- PHONES jack

| | |
|-----------------|--|
| <u>STANDARD</u> | Normally, select this position. |
| TV MODE | Makes the low sounds clear even if you turn the volume down. It is especially recommended when you listen to the sound using the speakers of the TV. |
| WIDE RANGE | Gives you the feeling of being at a live performance. When you use high quality speakers, it is even more effective. |

■AUDIO FILTER (except SACD)

Selects the digital filter to reduce noises above the 22.05 kHz (Sampling frequency (Fs) of the audio sources is 44.1 kHz), 24 kHz (Fs is 48 kHz), or 48 kHz (Fs is above 96 kHz).

| | |
|--------------|--|
| <u>SHARP</u> | Provides a wide frequency range and spatial feeling. |
| SLOW | Provides smooth and warm sound. |

Notes

- There may be little effect by changing the digital filter depending on discs or playback environment.
- There is no effect on SACDs.

continued →

■DOWNMIX (DVD VIDEO/DVD-RW only)

Switches the mixing down methods when you play a DVD on which rear signal components such as “LS,” “RS,” or “S” are recorded in Dolby Digital or DTS format. For details on the rear signal components, see “Changing the Sound” (page 56). This function affects the output of the following jacks:

- LINE OUT L/R (AUDIO) jacks
- DIGITAL OUT (OPTICAL or COAXIAL) jack when “DOLBY DIGITAL” is set to “D-PCM” in “DIGITAL OUT” (page 84).
- PHONES jack

| | |
|-----------------------|--|
| <u>DOLBY SURROUND</u> | Select this when the player is connected to an audio component that conforms to Dolby Surround (Pro Logic). The output signals which reproduce the Dolby Surround effect are downmixed to 2 channels. |
| <u>NORMAL</u> | Select this when the player is connected to an audio component that does not conform to Dolby Surround (Pro Logic). All of the output signals are downmixed to 2 channels without the Dolby Surround (Pro Logic) effect. |

■DIGITAL OUT

Selects if audio signals are output via the DIGITAL OUT (OPTICAL or COAXIAL) jack.

| | |
|------------|--|
| <u>ON</u> | Normally, select this position. When you select “ON,” set “DOLBY DIGITAL,” “DTS” and “48kHz/96kHz PCM.” For details on setting these items, see “Setting the digital output signal.” |
| <u>OFF</u> | The player does not output the audio signals via the DIGITAL OUT (OPTICAL or COAXIAL) jack. The influence of the digital circuit upon the analog circuit is minimal. |

Note

SACD audio signals are not output from a digital jack.

Setting the digital output signal

Switches the method of outputting audio signals when you connect the following component using an optical or coaxial digital cord via the DIGITAL OUTPUT (OPTICAL or COAXIAL) jack.

- Amplifier (receiver) with digital input jack
- Amplifier (receiver) with a built-in DTS or Dolby Digital decoder
- MD or DAT deck

For connection details, see page 24.

Select “DOLBY DIGITAL,” “DTS” and “48kHz/96kHz PCM” after setting “DIGITAL OUT” to “ON.”

| | |
|------------------|----------------|
| AUDIO SETUP | |
| AUDIO ATT: | OFF |
| AUDIO DRC: | STANDARD |
| AUDIO FILTER: | SHARP |
| DOWNMIX: | DOLBY SURROUND |
| DIGITAL OUT: | ON |
| DOLBY DIGITAL: | D-PCM |
| DTS: | D-PCM |
| 48kHz/96kHz PCM: | 48kHz/16bit |

■DOLBY DIGITAL (DVD VIDEO/DVD-RW only)

Selects the Dolby Digital signals output via the DIGITAL OUT (OPTICAL or COAXIAL) jack.

| | |
|--------------|--|
| <u>D-PCM</u> | Select this when the player is connected to an audio component lacking a built-in Dolby Digital decoder. You can select whether the signals conform to Dolby Surround (Pro Logic) or not by making adjustments to the “DOWNMIX” item in “AUDIO SETUP” (page 84). |
|--------------|--|

| | |
|----------------------|--|
| DOLBY DIGITAL | Select this when the player is connected to an audio component with a built-in Dolby Digital decoder. If the player is connected to an audio component lacking a built-in Dolby Digital decoder, do not set this. Otherwise, when you play the Dolby Digital sound track, a loud noise (or no sound) will come out from the speakers, affecting your ears or causing the speakers to be damaged. |
|----------------------|--|

| | |
|--------------------|---|
| 96kHz/24bit | All types of signals including 96kHz/24bit are output in their original format. However, if the signal is encrypted for copyright protection purposes, the signal is only output as 48kHz/16bit. If a receiver (amplifier) which cannot accept 96kHz is connected to the player, do not set this. Otherwise, a loud noise may come out from the speakers. |
|--------------------|---|

■ DTS (DVD VIDEO only)

Selects if DTS signals are output via the DIGITAL OUT (OPTICAL or COAXIAL) jack.

| | |
|--------------|--|
| D-PCM | Select this when the player is connected to an audio component lacking a built-in DTS decoder. If you play DTS audio sound tracks, the player outputs stereo signals via the DIGITAL OUT (OPTICAL or COAXIAL) jack. |
| DTS | Select this when the player is connected to an audio component having a built-in DTS decoder. If the player is connected to an audio component lacking a built-in DTS decoder, do not set this. Otherwise, when you play the DTS sound track, a loud noise (or no sound) will come out from the speakers, affecting your ears or causing the speakers to be damaged. |

■ 48kHz/96kHz PCM (DVD VIDEO only)

Selects the sampling frequency of the audio signal to be output via the DIGITAL OUT (OPTICAL or COAXIAL) jack.

| | |
|--------------------|--|
| 48kHz/16bit | The audio signals of DVD VIDEOS are always converted to 48kHz/16bit. |
|--------------------|--|

Notes

- Even if you set "48kHz/96kHz PCM" in "AUDIO SETUP" to "96kHz/24bit," the sampling frequency is converted to 48kHz/16bit when a "SURROUND" mode (page 58) is selected.
- The analog audio signals from the LINE OUT L/R (AUDIO) 1/2 jacks and 5.1CH OUTPUT jacks are not affected by this setting and keep their original sampling frequency level.

Settings for the Speakers


(SPEAKER SETUP)

To obtain the best possible surround sound, set the size of the speakers you have connected and their distance from your listening position. Then use the test tone to adjust the volume and the balance of the speakers to the same level.

This setting is effective when connecting the speaker with 5.1CH OUTPUT jacks (page 22).

Select “SPEAKER SETUP” in the setup display. For details, see “Using the Setup Display” (page 77).

The default settings are underlined.

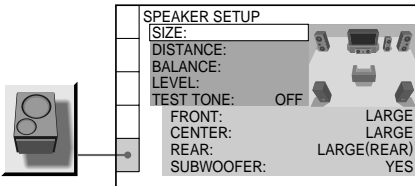

To return to the default setting

Select the item, then press CLEAR. Note that only the SIZE setting does not return to the default setting.

■ SIZE

Selects the size of the speakers to be connected.

• FRONT

| | |
|--------------|---|
| <u>LARGE</u> | Normally select this position. |
| SMALL | When the sound cracks or the surround sound effects are difficult to hear, select this. This activates the bass redirection circuitry and outputs the bass frequencies of the front speaker from the subwoofer. |

• CENTER

| | |
|-------------|--|
| <u>NONE</u> | If you do not connect a center speaker, select this. |
|-------------|--|

| | |
|--------------|---|
| <u>LARGE</u> | Normally select this position. |
| SMALL | When the sound cracks or the surround sound effects are difficult to hear, select this. This activates the bass redirection circuitry and outputs the bass frequencies of the center speaker from other speakers. |

• REAR

| | |
|--------------|--|
| <u>NONE</u> | If you do not connect rear speakers, select this. |
| <u>LARGE</u> | (REAR/SIDE): Normally select this position. Select either of these according to the rear speaker’s position*. |
| SMALL | (REAR/SIDE): When the sound cracks or the surround sound effects are difficult to hear, select this. Select either of these according to the rear speaker’s position*. This activates the bass redirection circuitry and outputs the bass frequencies of the rear speaker from other speakers. |


* Rear speaker position

Correctly specify the location of the rear speakers to enjoy the surround effect.

- Set to the “SIDE,” if the location of the rear speakers corresponds to section **A** below.
- Set to the “REAR,” if the location of the rear speakers corresponds to section **B** below.


This setting affects only “VIRTUAL REAR SHIFT,” “VIRTUAL MULTI REAR,” and “VIRTUAL MULTI DIMENSION” mode (page 58).

These settings do not affect the SACD Multi audio signals.

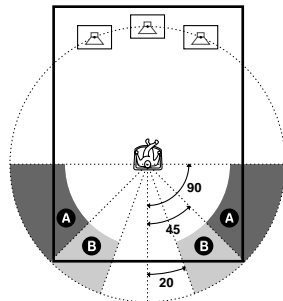

• SUBWOOFER

| | |
|------|--|
| NONE | If you do not connect a subwoofer, select this. This activates the bass redirection circuitry and outputs the LFE signals from the front speakers as long as the front speaker size is set to "LARGE." |
| YES | If you connect a subwoofer, select this to output the LFE (low frequency effect) channel from the subwoofer. When you set the other speakers settings to "SMALL," the subwoofer makes up for the missing bass frequencies of the speakers. |

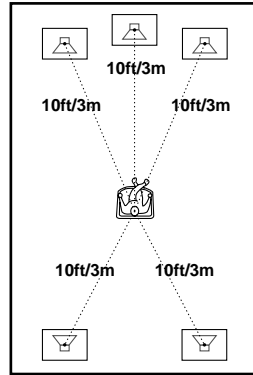

Notes

- The cut off frequency for the subwoofer is fixed at 120 Hz.
- If your speakers are too small to reproduce low bass frequencies, please set all speaker settings to "SMALL" and utilize a subwoofer for low frequency sound.
- Even if there are fewer than 6 speakers connected, the player distributes the audio signal components to the front speakers.

■DISTANCE

In order to set the distance for each speaker, first set the distance from the listening position to the front speaker using FRONT. This will automatically set the same distance for the CENTER and REAR speakers. Then, starting from these settings, change the distance for the center and rear speakers as explained below so that they match the actual physical distance to your listening position. The default distance setting for the speakers in relation to the listening position is shown below.

Be sure to change the value in the Setup Display when you move the speakers. The default adjustments are in parentheses.

| | |
|------------------|--|
| FRONT (10ft/3m) | Front speaker distance from the listening position can be set in 1 foot (0.3 meter) increments from 4 to 50 feet (1.2 to 15.2 meters). |
| CENTER (10ft/3m) | Center speaker distance can be moved up to 2 feet (0.6 meters) backward from the front speakers or 5 feet (1.5 meters) forward closer to the listening position, in 1 foot (0.3 meter) increments. |
| REAR (10ft/3m) | Rear speaker distance can be moved up to 16 feet (4.8 meters) closer to your listening position from the front speaker position, in 1 foot (0.3 meter) increments. |

Notes

- If each of the front or rear speakers are not placed at an equal distance from your listening position, set the distance according to the closest speaker.
- Do not place the rear speakers farther away from your listening position than the front speakers.
- These settings do not affect the SACD Multi audio signals.

continued →

■BALANCE

You can vary the balance of the left and right speakers as follows. Be sure to set “TEST TONE” to “ON” for easy adjustment. The default adjustments are in parentheses.

| | |
|-------------|--|
| FRONT (0dB) | Adjust the balance between the front left and right speakers (–6dB [L] to +6dB [R], 0.5dB increments). |
| REAR (0dB) | Adjust the balance between the rear left and right speakers (–6dB [L] to +6dB [R], 0.5dB increments). |

■LEVEL

You can vary the level of each speaker as follows. Be sure to set “TEST TONE” to “ON” for easy adjustment. The default adjustments are in parentheses.

| | |
|-----------------|--|
| FRONT (0dB) | Adjust the level of the front speakers (–6dB to 0dB, 0.5 dB increments). |
| CENTER (0dB) | Adjust the level of the center speaker (–12dB to 0dB, 0.5dB increments). |
| REAR (0dB) | Adjust the level of the rear speakers (–12dB to 0dB, 0.5dB increments). |
| SUBWOOFER (0dB) | Adjust the level of the subwoofer (–10dB to +10dB, 0.5dB increments). |

To adjust the volume of all the speakers at one time

Use the amplifier’s (receiver’s) volume control.

■TEST TONE

The speakers will emit a test tone. Use this when you use the 5.1CH OUTPUT jacks and adjust the “BALANCE” and “LEVEL.”

| | |
|-----|---|
| OFF | The test tone is not emitted from the speakers. |
|-----|---|

| | |
|----|---|
| ON | The test tone is emitted from each speaker in sequence while adjusting balance or level. When you select one of the “SPEAKER SETUP” items, the test tone is emitted from both left and right speakers simultaneously. |
|----|---|

Adjusting the speaker volume and level

- 1 Select “SPEAKER SETUP” in the Setup Display.
- 2 Select “TEST TONE” and set to “ON.” You will hear the test tone from each speaker in sequence.
- 3 From your listening position, select “BALANCE” or “LEVEL” and adjust the value of “BALANCE” using ←/→ and “LEVEL” using ↑/↓. The test tone is emitted from both left and right speakers simultaneously.
- 4 Select “TEST TONE” and set to “OFF” to turn off the test tone.

Notes

- When you adjust the speaker settings, the sound cuts off for a moment.
- The test tone signals are not output from the digital jack.

Troubleshooting

If you experience any of the following difficulties while using the player, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer.

Power

The power is not turned on.

- ➔ Check that the AC power cord is connected securely.

Picture

There is no picture.

- ➔ The connecting cords are not connected securely.
- ➔ The connecting cords are damaged.
- ➔ The player is not connected to the correct TV input jack (page 18).
- ➔ The video input on the TV is not set so that you can view pictures on the player.

Picture noise appears.

- ➔ The disc is dirty or flawed.
- ➔ If the picture output from your player goes through your VCR to get to your TV, the copy-protection signal applied to some DVD programs could affect picture quality. If you still experience problems even when you connect your player directly to your TV, please try connecting your player to your TV's S video input (page 18).

Even though you set the aspect ratio in "TV TYPE" of "SCREEN SETUP," the picture does not fill the screen.

- ➔ The aspect ratio of the disc is fixed on your DVD.

Sound

There is no sound.

- ➔ The connecting cord is not connected securely.
- ➔ The connecting cord is damaged.
- ➔ The player is connected to the wrong input jack on the amplifier (receiver) (page 22, 24, 26).
- ➔ The amplifier (receiver) input is not changed so that you can listen to the player.
- ➔ The player is in pause mode or in Slow-motion Play mode.
- ➔ The player is in fast forward or fast reverse mode.
- ➔ If the audio signal does not come through the DIGITAL OUT (OPTICAL or COAXIAL) jack, check the audio settings (page 83).
- ➔ SACD audio signals are not output from a digital jack.

Sound is noisy.

- ➔ The disc is dirty or flawed.

Sound distortion occurs.

- ➔ Set "AUDIO ATT" in "AUDIO SETUP" to "ON" (page 83).

The surround effect is difficult to hear when you are playing a Dolby Digital, or DTS sound track.

- ➔ Check the speaker connections and setting (page 22, 24, 26).
- ➔ Depending on the DVD, the output signal may not be the entire 5.1 channels. It may be monaural or stereo even if the sound track is recorded in Dolby Digital or DTS format.

The sound comes from the center speaker only.

- ➔ Depending on the disc, the sound may come from the center speaker only.
- ➔ Set "SURROUND" to "OFF" in the Control Menu display (page 58).

Operation

The remote does not function.

- ➔ There are obstacles between the remote and the player.
- ➔ The distance between the remote and the player is too far.
- ➔ The remote is not pointed at the remote sensor on the player.
- ➔ The batteries in the remote are weak.

The disc does not play.

- ➔ There is no disc inside.
- ➔ The disc is turned over. Insert the disc with the playback side facing down on the disc tray.
- ➔ The disc is skewed.
- ➔ The player cannot play CD-ROMs, etc. (page 6).
- ➔ The region code on the DVD does not match the player.
- ➔ Moisture has condensed inside the player. Remove the disc and leave the player turned on for about half an hour. Turn on the power again before playing the disc (page 3).
- ➔ The player cannot play DVD-Rs, DVD-RWs, CD-Rs, or CD-RWs that are not finalized.

The disc does not start playing from the beginning.

- ➔ Program Play, Shuffle Play, Repeat Play or A-B Repeat Play has been selected (page 40). Press CLEAR to cancel these functions before playing a disc.
- ➔ Resume Play has been selected. During stop, press ■ on the player or the remote and then start playback (page 36).
- ➔ Depending upon the disc, the menu may automatically appear on the TV screen.

The player starts playing the disc automatically.

- ➔ The disc features an auto playback function.
- ➔ "AUTO PLAY" in "CUSTOM SETUP" is set to "TIMER" (page 81).

Playback stops automatically.

- ➔ Some discs may contain an auto pause signal. While playing such a disc, the player stops playback at the auto pause signal.

You cannot perform some functions such as stop, Search, Scan, Slow-motion Play, Repeat Play, Shuffle Play, or Program Play.

- ➔ Depending on the disc, you may not be able to do some of the operations above. See the operating manual that comes with the disc.

The language for the sound track cannot be changed.

- ➔ Multilingual tracks are not recorded on the DVD being played.
- ➔ The DVD prohibits the changing of the language for the sound track.
- ➔ Try using the DVD's menu instead of the direct selection buttons on the remote (page 37).

The subtitle language cannot be changed.

- ➔ Try using the DVD's menu instead of the direct selection buttons on the remote (page 37).
- ➔ Multilingual subtitles are not recorded on the DVD being played.
- ➔ The DVD prohibits the changing of the subtitles.

The subtitle cannot be turned off.

- ➔ Try using the DVD's menu instead of the direct selection buttons on the remote (page 37).
- ➔ The DVD prohibits the subtitles being turned off.

The angles cannot be changed.

- ➔ Try using the DVD's menu instead of the direct selection buttons on the remote (page 37).
- ➔ Multi-angles are not recorded on the DVD being played. The angle can be changed when the "ANGLE" indicator lights up on the front panel display (page 9).
- ➔ The DVD prohibits changing of the angles.

The player does not operate properly.

- ➔ When static electricity, etc., causes the player to operate abnormally, press POWER on the player to turn the player off and then on again.

Nothing is displayed on the front panel display.

- ➔ "DIMMER" in "CUSTOM SETUP" is set to "OFF." Set "DIMMER" to "BRIGHT" or "DARK" (page 81).

5 numbers or letters are displayed on the screen and on the front panel display.

- ➔ The self-diagnosis function was activated. (See the table on page 91.)


The disc cannot be removed and "LOCKED" appears on the front panel display.

- ➔ Contact your Sony dealer or local authorized Sony service facility.

Self-diagnosis Function

(When letters/numbers appear in the display)

When the self-diagnosis function is activated to prevent the player from malfunctioning, a five-character service number (e.g., C 13 00) with a combination of a letter and digits appears on the screen and the front panel display. In this case, check the following table.

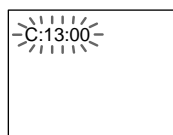

| First three characters of the service number | Cause and/or corrective action |
|--|--|
| C 13 | The disc is dirty. ➔ Clean the disc with a soft cloth (page 7). |
| C 31 | The disc is not inserted correctly. ➔ Re-insert the disc correctly. |
| E XX (xx is a number) | To prevent a malfunction, the player has performed the self-diagnosis function. ➔ Contact your nearest Sony dealer or local authorized Sony service facility and give the 5-character service number. Example: E 61 10 |

Glossary

Chapter (page 9)

Sections of a picture or a music feature that are smaller than titles. A title is composed of several chapters. Depending on the disc, no chapters may be recorded.

Digital Cinema Sound (DCS) (page 58)

Technology that Sony developed to enjoy surround in a home using 4 or more speakers. It simulates the sound of a movie editing studio instead of the usual concert hall so that you can enjoy the surround sound of a movie theater in the comfort of your own home.

Dolby Digital (page 20, 84)

Digital audio compression technology developed by Dolby Laboratories. This technology conforms to 5.1-channel surround sound. The rear channel is stereo and there is a discrete subwoofer channel in this format. Dolby Digital provides the same 5.1 discrete channels of high quality digital audio found in Dolby Digital cinema audio systems. Good channel separation is realized because all of the channel data are recorded discretely and little deterioration is realized because all channel data processing is digital.

Dolby Surround (Pro Logic) (page 84)

Audio signal processing technology that Dolby Laboratories developed for surround sound. When the input signal contains a surround component, the Pro Logic process outputs the front, center, and rear signals. The rear channel is monaural.

DTS (page 20, 85)

Digital audio compression technology that Digital Theater Systems, Inc. developed. This technology conforms to 5.1-channel surround sound. The rear channel is stereo and there is a discrete subwoofer channel in this format. DTS provides the same 5.1

discrete channels of high quality digital audio.

Good channel separation is realized because all of the channel data is recorded discretely and little deterioration is realized because all channel data processing is digital.

DVD VIDEO (page 6)

A disc that contains up to 8 hours of moving pictures even though its diameter is the same as a CD.

The data capacity of a single-layer and single-sided DVD is 4.7 GB (Giga Byte), which is 7 times that of a CD. The data capacity of a double-layer and single-sided DVD is 8.5 GB, a single-layer and double-sided DVD is 9.4 GB, and double-layer and double-sided DVD is 17 GB.

The picture data uses the MPEG 2 format, one of the worldwide standards of digital compression technology. The picture data is compressed to about 1/40 (average) of its original size. The DVD also uses a variable rate coding technology that changes the data to be allocated according to the status of the picture. Audio information is recorded in a multi-channel format, such as Dolby Digital, allowing you to enjoy a more real audio presence.

Furthermore, various advanced functions such as the multi-angle, multilingual, and Parental Control functions are provided with the DVD.

DVD-RW (page 6)

A DVD-RW is a recordable and rewritable disc with the same size as the DVD VIDEO. The DVD-RW can be recorded in two different modes: VR mode and Video mode. VR (Video Recording) mode enables various programming and editing functions, some of which are limited in the case of Video mode. Video mode complies with DVD VIDEO format and is compatible with DVD players while a DVD-RW recorded in VR mode can only be played on DVD-RW compliant players. The "DVD-RW" appears in this

manual, or the on-screen display refers to DVD-RWs in VR mode.


Index (CD)/Video Index (VIDEO CD) (page 48)

A number that divides a track into sections to easily locate the point you want on an SACD/CD or VIDEO CD. Depending on the disc, no index may be recorded.

Parental Control (page 68)

A function of the DVD used to limit playback of the disc according to the age of the user and the limitation level in each country. The limitation varies from disc to disc; when it is activated, or playback is completely prohibited, violent scenes are skipped or replaced with other scenes, etc.

Region Code (page 6)

This system is used to protect copyrights. A region number is allocated on each DVD player or DVD disc according to the sales region. Each region code is shown on the player as well as on the disc packaging. The player can play the discs that match its region code. The player can also play discs with the  mark. Even when the region code is not shown on the DVD, the region limit may still be activated.

 
Scene (page 9)

On a VIDEO CD with PBC (playback control) functions, the menu screens, moving pictures and still pictures are divided into sections called "scenes."


Super Audio CD (SACD) (page 6)

An SACD disc can reproduce sounds that are extremely faithful to the original sound by use of DSD (Direct Stream Digital) technology. This technology utilizes a sampling frequency of 2.8224 MHz, which is 64 times that of a conventional CD, and 1-bit quantization that enables the disc to hold 4 times the amount of information that a standard PCM format CD can hold. SACDs are divided into the following types.


- Super Audio CD (single layer disc)
This disc consists of a single HD layer*.
* High density signal layer for the Super Audio CD




- Super Audio CD (dual layer disc)
This disc consists of dual HD layers and is capable of extended play over long periods. Also, as the dual layer disc consists of dual HD layers on one side only, you do not have to turn the disc over during playback.

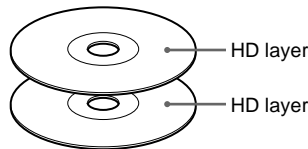

- Super Audio CD + CD (Hybrid disc)
This disc consists of an HD layer and a CD layer. Also, as the dual layers are on one side only, you do not have to turn the disc over during playback. You can play the CD layer using a conventional CD player.

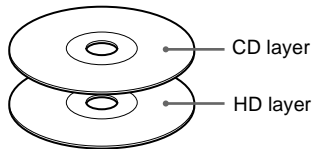

 - 2 channel + Multi-channel Super Audio CD
This disc consists of the 2 channel playback area and the multi-channel playback area.



Title (page 9)

The longest section of a picture or music feature on a DVD, movie, etc., in video software, or the entire album in audio software.

Track (page 9)

Sections of a picture or a music feature on an SACD/CD or VIDEO CD (the length of a song).

TV Virtual Surround (TVS) (page 58)

Technology from Sony developed to produce surround sound for home use using just a stereo TV. Designed to work with the sound characteristics of your TV, this technology brings the excitement of surround sound to your home using nothing more than your stereo TV's internal speakers. Furthermore, various TVS modes are available. For example, "TVS WIDE" uses just two speakers to create a virtual sound environment that makes you feel like you are surrounded by multiple speakers.

Specifications

System

| | |
|----------------------|---------------------|
| Laser | Semiconductor laser |
| Signal format system | NTSC |

Audio characteristics

| | |
|-----------------------------------|---|
| Frequency response | DVD (PCM 96 kHz): 2 Hz to 44 kHz (-2 dB \pm 2.0 dB at 44 kHz) SACD: 2 Hz to 100 kHz (-3 dB \pm 2.0 dB at 50 kHz) CD: 2 Hz to 20 kHz (\pm 0.5 dB) |
| Signal-to-noise ratio (S/N ratio) | 115 dB (DVD VIDEO) (LINE OUT L/R (AUDIO) 1/2 jacks only) |
| Harmonic distortion | 0.003 % |
| Dynamic range | DVD VIDEO/SACD: 103 dB CD: 99 dB |
| Wow and flutter | Less than detected value (\pm 0.001% W PEAK) |

Outputs

| Jack name | Jack type | Output level | Load impedance |
|---------------------------------|---------------------|---|--|
| DIGITAL OUT (OPTICAL) | Optical output jack | -18 dBm | Wave length 660 nm |
| DIGITAL OUT (COAXIAL) | Phono jack | 0.5 V _{p-p} | 75 ohms terminated |
| LINE OUT L/R (AUDIO) 1/2 | Phono jack | 2 V _{rms} (at 50 kilohms) | Over 10 kilohms |
| 5.1CH OUTPUT | Phono jack | 2 V _{rms} (at 50 kilohms) | Over 10 kilohms |
| LINE OUT (VIDEO) 1/2 | Phono jack | 1.0 V _{p-p} | 75 ohms, sync negative |
| S VIDEO OUT 1/2 | 4-pin mini DIN | Y: 1.0 V _{p-p} C: 0.286 V _{p-p} | 75 ohms, sync negative 75 ohms terminated |
| COMPONENT VIDEO OUT (Y, PB, PR) | Phono jack | Y: 1.0 V _{p-p} PB, PR: 0.7 V _{p-p} | 75 ohms, sync negative 75 ohms |
| AUDIO IN L/R | Phono jack | - | 47 kilohms |
| MEGA CONTROL | Mini jack | - | - |
| PHONES | Phone jack | 12 mW | 32 ohms |

General

| | |
|-----------------------|--|
| Power requirements | 120 V AC, 60 Hz |
| Power consumption | 17 W |
| Dimensions (approx.) | 430 × 108 × 414 mm (17 × 4 3/8 × 16 3/8 in.) (width/height/depth) including projecting parts |
| Mass (approx.) | 5.5 kg (12 lb. 2 oz.) |
| Operating temperature | 5°C to 35°C (41°F to 95°F) |
| Operating humidity | 25% to 80% |

Supplied accessories

See page 15.

Specifications and design are subject to change without notice.

ENERGY STAR® is a U.S. registered mark. As an ENERGY STAR® Partner, Sony Corporation has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

Language Code List

For details, see pages 56, 64, 78.

The language spellings conform to the ISO 639: 1988 (E/F) standard.

| Code | Language | Code | Language | Code | Language | Code | Language |
|------|--------------------|------|---------------------|------|--------------------|------|------------------|
| 1027 | Afar | 1183 | Irish | 1347 | Maori | 1507 | Samoa |
| 1028 | Abkhazian | 1186 | Scots Gaelic | 1349 | Macedonian | 1508 | Shona |
| 1032 | Afrikaans | 1194 | Galician | 1350 | Malayalam | 1509 | Somali |
| 1039 | Amharic | 1196 | Guarani | 1352 | Mongolian | 1511 | Albanian |
| 1044 | Arabic | 1203 | Gujarati | 1353 | Moldavian | 1512 | Serbian |
| 1045 | Assamese | 1209 | Hausa | 1356 | Marathi | 1513 | Siswati |
| 1051 | Aymara | 1217 | Hindi | 1357 | Malay | 1514 | Sesotho |
| 1052 | Azerbaijani | 1226 | Croatian | 1358 | Maltese | 1515 | Sundanese |
| 1053 | Bashkir | 1229 | Hungarian | 1363 | Burmese | 1516 | Swedish |
| 1057 | Byelorussian | 1233 | Armenian | 1365 | Nauru | 1517 | Swahili |
| 1059 | Bulgarian | 1235 | Interlingua | 1369 | Nepali | 1521 | Tamil |
| 1060 | Bihari | 1239 | Interlingue | 1376 | Dutch | 1525 | Telugu |
| 1061 | Bislama | 1245 | Inupiak | 1379 | Norwegian | 1527 | Tajik |
| 1066 | Bengali; Bangla | 1248 | Indonesian | 1393 | Occitan | 1528 | Thai |
| 1067 | Tibetan | 1253 | Icelandic | 1403 | (Afan) Oromo | 1529 | Tigrinya |
| 1070 | Breton | 1254 | Italian | 1408 | Oriya | 1531 | Turkmen |
| 1079 | Catalan | 1257 | Hebrew | 1417 | Punjabi | 1532 | Tagalog |
| 1093 | Corsican | 1261 | Japanese | 1428 | Polish | 1534 | Setswana |
| 1097 | Czech | 1269 | Yiddish | 1435 | Pashto; Pushto | 1535 | Tonga |
| 1103 | Welsh | 1283 | Javanese | 1436 | Portuguese | 1538 | Turkish |
| 1105 | Danish | 1287 | Georgian | 1463 | Quechua | 1539 | Tsonga |
| 1109 | German | 1297 | Kazakh | 1481 | Rhaeto- Romance | 1540 | Tatar |
| 1130 | Bhutani | 1298 | Greenlandic | 1482 | Kirundi | 1543 | Twi |
| 1142 | Greek | 1299 | Cambodian | 1483 | Romanian | 1557 | Ukrainian |
| 1144 | English | 1300 | Kannada | 1489 | Russian | 1564 | Urdu |
| 1145 | Esperanto | 1301 | Korean | 1491 | Kinyarwanda | 1572 | Uzbek |
| 1149 | Spanish | 1305 | Kashmiri | 1495 | Sanskrit | 1581 | Vietnamese |
| 1150 | Estonian | 1307 | Kurdish | 1498 | Sindhi | 1587 | Volapük |
| 1151 | Basque | 1311 | Kirghiz | 1501 | Sangho | 1613 | Wolof |
| 1157 | Persian | 1313 | Latin | 1502 | Serbo- Croatian | 1632 | Xhosa |
| 1165 | Finnish | 1326 | Lingala | 1503 | Singhalese | 1665 | Yoruba |
| 1166 | Fiji | 1327 | Laothian | 1505 | Slovak | 1684 | Chinese |
| 1171 | Faroese | 1332 | Lithuanian | 1506 | Slovenian | 1697 | Zulu |
| 1174 | French | 1334 | Latvian; Lettish | | | 1703 | Not specified |
| 1181 | Frisian | 1345 | Malagasy | | | | |

List of Setup Display Items

The default settings are underlined.



LANGUAGE SETUP (page 78)

| | |
|----------|--|
| OSD | <u>ENGLISH</u> FRENCH SPANISH PORTUGUESE |
| MENU | <u>ENGLISH</u> FRENCH SPANISH PORTUGUESE GERMAN ITALIAN DUTCH CHINESE JAPANESE DANISH SWEDISH FINNISH NORWEGIAN RUSSIAN OTHERS → |
| AUDIO | <u>ORIGINAL</u> (All other selections are same as the "MENU" language.) |
| SUBTITLE | <u>AUDIO FOLLOW</u> (All other selections are same as the "MENU" language.) |



SCREEN SETUP (page 79)

| | |
|--------------|--|
| TV TYPE | <u>4:3 LETTER BOX</u> 4:3 PAN SCAN 16:9 |
| SCREEN SAVER | <u>ON</u> OFF |
| BACKGROUND | <u>JACKET PICTURE</u> GRAPHICS BLUE BLACK |



CUSTOM SETUP (page 81)

| | |
|-----------------|---------------------------------------|
| AUTO PLAY | <u>OFF</u> TIMER DEMO1 DEMO2 |
| DIMMER | <u>BRIGHT</u> DARK OFF |
| PAUSE MODE | <u>AUTO</u> FRAME |
| PLAYBACK MEMORY | <u>ON</u> OFF |
| TRACK SELECTION | <u>OFF</u> AUTO |
| CD DIRECT | <u>OFF</u> ON |



AUDIO SETUP (page 83)

| | | | |
|--------------|--|--------------------|-----------------------------------|
| AUDIO ATT | <u>OFF</u> ON | | |
| AUDIO DRC | <u>STANDARD</u> TV MODE WIDE RANGE | | |
| AUDIO FILTER | <u>SHARP</u> SLOW | | |
| DOWNMIX | <u>DOLBY SURROUND</u> NORMAL | | |
| DIGITAL OUT | <u>ON</u> | DOLBY DIGITAL | <u>D-PCM</u> DOLBY DIGITAL |
| | | DTS | <u>D-PCM</u> DTS |
| | | 48kHz/96kHz PCM | <u>48kHz/16bit</u> 96kHz/24bit |
| | <u>OFF</u> | | |



SPEAKER SETUP (page 86)

| | | |
|---|------------------|---|
| SIZE | FRONT | <u>LARGE</u> SMALL |
| | CENTER | <u>NONE</u> LARGE SMALL |
| | REAR | <u>NONE</u> LARGE (REAR) LARGE (SIDE) SMALL (REAR) SMALL (SIDE) |
| | SUBWOOFER | <u>NONE</u> YES |
| DISTANCE (The distance from the listening position.) | FRONT | 4ft ~ 50ft (1.2m ~ 15.2m) |
| | CENTER | 0ft ~ 52ft (0m ~ 15.8m) (It changes according to the distance from the front speaker.) |
| | REAR | 0ft ~ 50ft (0m ~ 15.2m) (It changes according to the distance from the front speaker.) |
| BALANCE | FRONT | - 6dB ~ + 6dB |
| | REAR | - 6dB ~ + 6dB |
| LEVEL | FRONT | - 6dB ~ 0dB |
| | CENTER | - 12dB ~ 0dB |
| | REAR | - 12dB ~ 0dB |
| | SUBWOOFER | - 10dB ~ + 10dB |
| TEST TONE | <u>OFF</u> ON | |

Index

Numerics

- 16:9 79
- 4:3 LETTER BOX 79
- 4:3 PAN SCAN 79
- 48kHz/96kHz PCM 85
- 5.1 Channel Surround 22

A

- A-B Repeat Play 45
- ADVANCED 55
- ALL DISCS 40
- ANGLE 63
- ANGLE VIEWER 50
- AUDIO 56, 78
- AUDIO ATT 83
- AUDIO DRC 83
- AUDIO FILTER 83
- AUDIO SETUP 83
- AUTO PLAY 81

B

- BACKGROUND 80
- BALANCE 88
- Batteries 15
- BNR 65

C

- CD 33
- CD DIRECT 82
- CHAPTER 48
- Chapter 92
- CHAPTER VIEWER 50
- Connecting 18
- Continuous play
 - DVD 33
 - SACD/CD/VIDEO CD 33
- Control Menu 12
- CUSTOM 77
- CUSTOM PARENTAL
- CONTROL 68
- CUSTOM SETUP 81

D

- DCS (Digital Cinema Sound) 92
- DIGITAL OUT 84
- Digital output 84
- DIGITAL VIDEO
- ENHANCER 67
- DIMMER 81
- Display

- Control Menu Display 12
- Front Panel Display 9
- Setup Display 77
- DISTANCE 87
- DOLBY DIGITAL 56, 84
- DOWNMIX 84
- DTS 56, 85
- DVD 33, 92
- DVD-RW 37, 92

F

- Fast forward 34
- Fast reverse 34
- Front Panel Display 9

H

- Handling discs 7
- Hooking up 18

I

- INDEX 48
- Index 93

L

- LANGUAGE SETUP 78
- LEVEL 88
- Locating
 - a specific point by watching the TV screen 47

M

- MENU 78
- Menu
 - disc's menu 37
 - top menu 37
- MULTI/2CH 38

O

- ONE DISC 40
- On-screen display
 - Control Menu display 12
 - Setup Display 77
- ORIGINAL 37
- ORIGINAL/PLAY LIST 37
- OSD 78

P

- PARENTAL CONTROL 69
- PAUSE MODE 81
- PBC Playback 39

- PLAY LIST 37
- PLAYBACK MEMORY 81
- PROGRAM 41
- Program Play 41

Q

- QUICK 78
- Quick Setup 28

R

- Remote 15
- REPEAT 44
- Repeat Play 44
- Replay 34
- RESET 78
- Resume Play 36

S

- S VIDEO output 18
- SACD 93
- SCENE 48
- Scene 93
- SCREEN SAVER 80
- SCREEN SETUP 79
- Searching. See Locating.
- SETUP 77
- Setup Display 77
- SHUFFLE 43
- Shuffle Play 43
- SIZE 86
- Slow-motion Play 47
- SPEAKER SETUP 86
- Speakers
 - Hooking 22
- STROBE PLAYBACK 50
- SUBTITLE 64, 78
- Subtitles 64
- SURROUND 58

T

- TEST TONE 88
- Time search 49
- TIME/TEXT 48
- TITLE 48
- Title 93
- TITLE VIEWER 50
- Top menu 37
- TRACK 48
- Track 94
- TRACK SELECTION 82
- TRACK VIEWER 50

Troubleshooting 89
TV TYPE 79
TVS (TV Virtual Surround)
58, 94

U

Usable discs 6

V

VIDEO CD 33
VIDEO EQUALIZER 66
VIEWER 50

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>