

Compact Hi-Fi Stereo System


Operating Instructions



***LBT-G1000
LBT-D150***

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

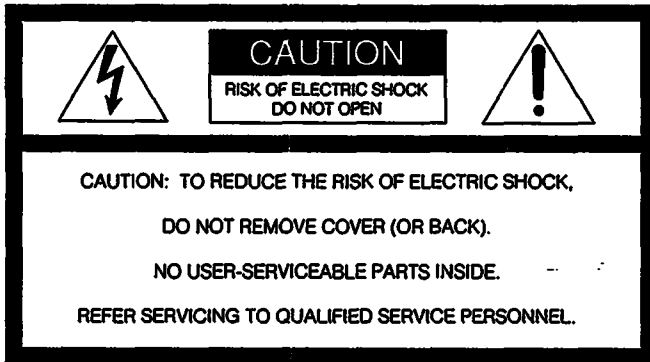

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

* The graphical symbols are on the rear enclosure.

Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Owner's Record

The model and serial number is located at the rear. Record this serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. _____ Serial No. _____

INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

CAUTION

The use of optical instruments with this product will increase eye hazard.

Precautions

This unit is a compact disc deck receiver which consists of an amplifier, tuner, stereo cassette deck and compact disc player.

Before operating this unit, be careful about the followings.

On safety

- Operate the unit only on 120 V AC, 60 Hz.
- Should any solid object or liquid fall into the unit, unplug it and have it checked by qualified personnel before operating it any further.
- Unplug the unit from the wall outlet if it is not to be used for an extended period of time. To disconnect the cord, pull it out by grasping the plug. Never pull the cord itself.
- As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.

On installation

- Place the unit on a level surface.
- Do not install the unit in a location near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- Good air circulation is essential to prevent internal heat buildup in the unit. Place the unit in a location with adequate air circulation. Do not place the unit on a soft surface, such as a rug that would block the ventilation holes on the bottom.
- Do not place anything on top of the cabinet. The top ventilation holes must be unobstructed for the proper operation of the unit and to prolong the life of its components.

On cleaning the cabinet

Clean the cabinet, panel and controls with a soft cloth lightly moistened with mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

On repacking

Do not throw away the carton and the packing material. It makes an ideal container to transport the unit in.

On moisture condensation

If the unit is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the unit. Should this occur, the player will not operate. In this case, remove the disc and leave the unit turned on for about an hour until the moisture evaporates.

If you have any question or problem concerning your unit, please consult your nearest Sony dealer.

For detailed precautions, see the leaflet "IMPORTANT SAFEGUARDS". (Model for U.S.A.)

Note

This "Operating Instructions" is common for models LBT-G1000 and LBT-D150. The illustrations are those of LBT-G1000.

Differences in the functions, etc. are specified respectively.

Table of Contents

Getting Started

Precautions	3
Preparations	4
Connections	5

Using Your Stereo

Turning on the power	6
Adjusting the sound	7
Receiving broadcast	8
Playing back tapes	10
Recording on tapes	11
Dubbing tapes	12
Playing compact discs	12
Playing in a random order	14
Playing repeatedly	14
Playing in a desired order and time	15
Designating the total playing time	16

General

Maintenance	17
Specifications	18
Troubleshooting guide	19
Location of controls	21


Preparations

Remote Commander


You can control the system (except the cassette deck) with the supplied remote commander.

Insert two R6 (size AA) batteries with the correct polarity.

- 1** Slide the cover in the direction of the arrow to remove it.

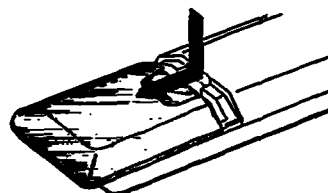

- 2** Insert two R6 (size AA) batteries correctly so that the ⊕ and ⊖ polarities match the polarity diagrams inside the battery compartment.

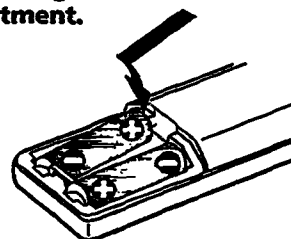

Battery life

About half a year of normal operation can be expected when using the Sony SUM-3 (NS) batteries. When the batteries are exhausted, the remote commander can no longer operate the unit. If this happens, replace both batteries with new ones.

To avoid battery leakage


When the commander is not to be used for a long time, remove the batteries to avoid damage caused by battery leakage and corrosion.

To avoid malfunction of the remote commander

Avoid keeping the commander in extremely hot or humid locations.


Connections

Turn all the power off before making any connections.
The diagram below shows the system connections. The letters in the diagram correspond to those in the text.

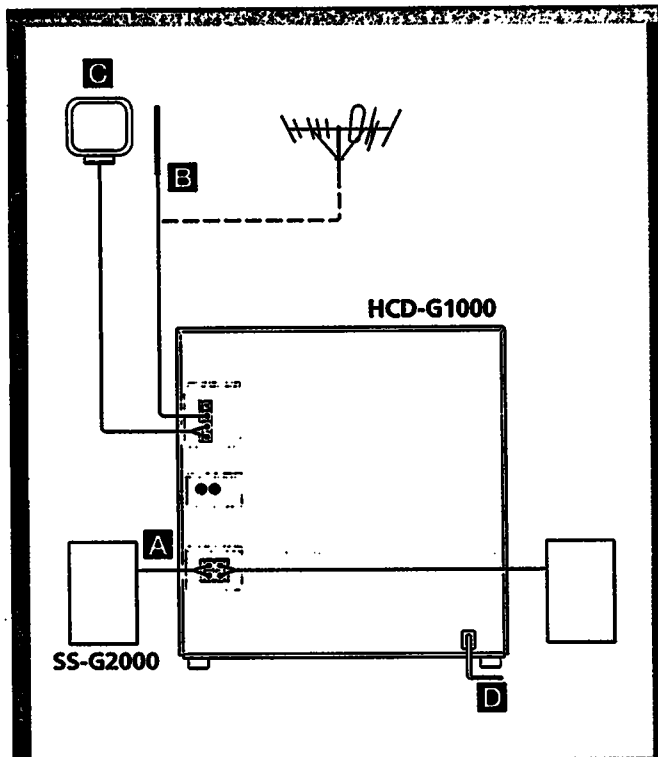

How to attach a wire to the terminal

 
- 1 Press down on the knob.



- 2 Insert the wire.



 - 3 Push up the knob.




Notes on Connection

- Connect the AC power cord last.
- Cord plugs and jacks are color coded. Red plugs and jacks are for the right channel (R) and white ones are for the left channel (L).

Speaker Cord Connection A

- 1 Strip 9/16 inch (15 mm) of the speaker cord coating from the end of the cord.
- 2 Connect the right speaker to the R (right) speaker terminal, and the left speaker to the L (left) speaker terminal, with the red cords to + and the black cords to -.

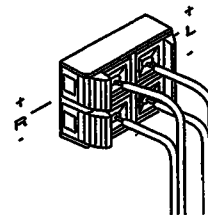


Caution

Connect the supplied speakers only.

FM Antenna Connection B

Connect the supplied FM wire antenna to the FM 75 Ω terminal and extend horizontally.

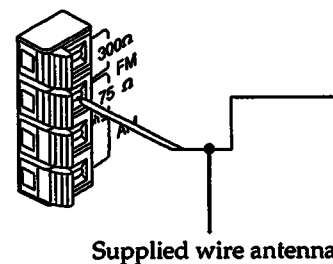


For better reception
Connect to an outdoor antenna.

Connections

AM Antenna Connection C

Connect the supplied loop antenna to the AM and μ terminals.

You can attach the loop antenna on the wall using commercially available screws.

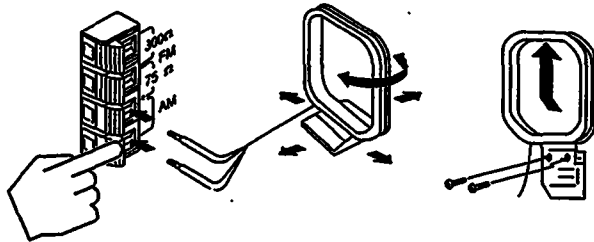

For better reception

In addition to the loop antenna, connect an insulated wire of 20- to 50- feet (6 to 15 meters) to the AM terminal (the lower terminal). Be sure not to disconnect the loop antenna.

Adding Other Components to the System


Connecting a video equipment (for LBT-G1000)

You can connect a video equipment to the VIDEO IN jacks only for the audio input signal.

To select the video equipment, press the VIDEO button.

Note

When this system is turned on, noise may occur during radio reception or in the picture and sound of the video equipments (TV, VTR, etc.). In this case, place this system away from the video equipments or turn off the power of the unit.

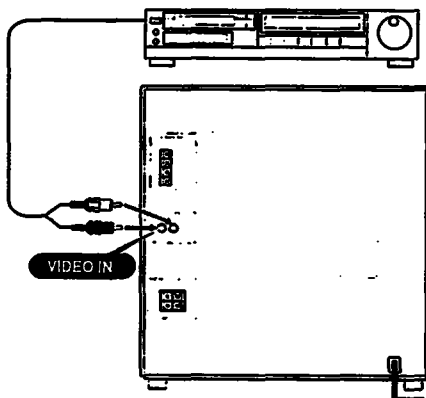

Connecting a turntable (for LBT-D150)

You can connect a turntable system (PS-LX56, etc.) to the PHONO IN jacks. To listen to analog discs, press the PHONO button.

AC Power Cord D


Connect the AC power cord to a wall outlet.

Note

Memories stored in the unit may be lost when the AC power cord is disconnected for a certain period of time.


Turning on the Power

Press the POWER button to turn on the power after completing all connections.

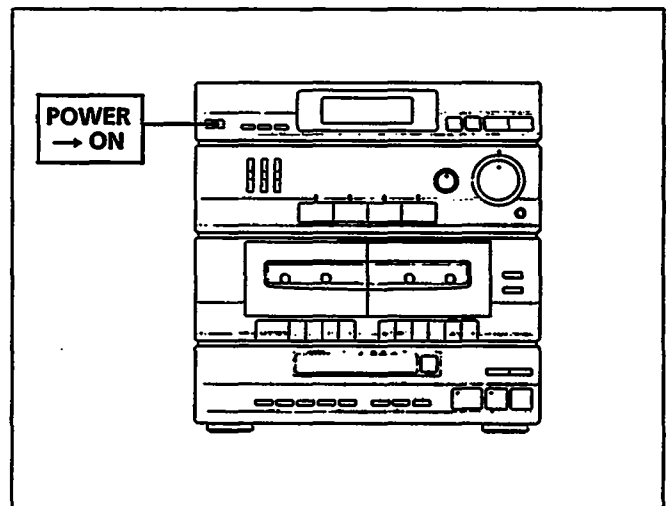

Adjusting the Sound

The following operations apply only to reproduced sound.
The letters in the illustration below correspond to those in the text.

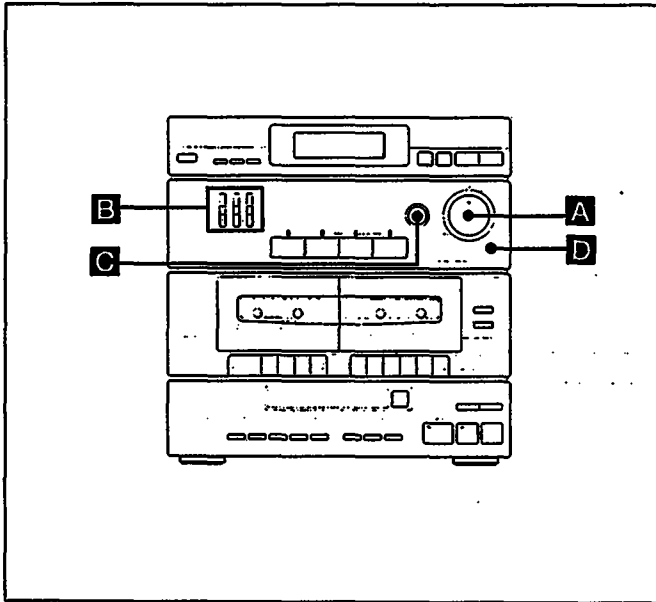


Adjusting the Volume A

To increase the volume, turn the **VOLUME** control clockwise.

To decrease it, turn the control counterclockwise.

- Turn down the volume before switching on the unit to prevent possible damage to the speakers.

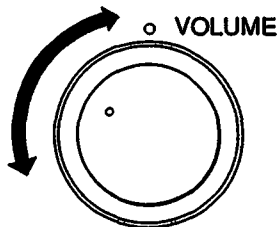


Adjusting the Sound Quality B

Adjust the following **3 BAND GRAPHIC EQUALIZER** controls.

100 Hz: Boosts or cuts heavy bass.

1 kHz: Accentuates or dims vocals.

10 kHz: Boosts to a brighter sound or reduces stridency.

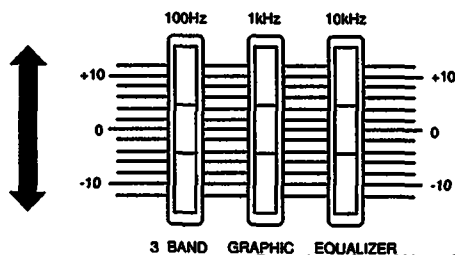


Adjusting the Sound Quality B

LBT-D150 B

Adjust the **TONE CONTROLS**.


BASS: Boosts or cuts heavy bass.

TREBLE: Boosts to a brighter sound or reduces stridency.

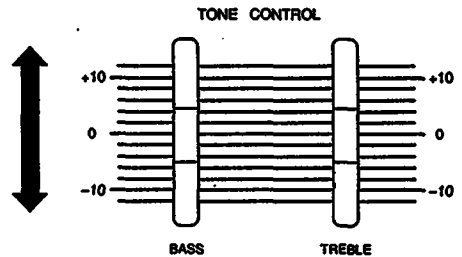

Adjusting the surround effect C

To obtain a stage-like atmosphere for playing stereo sources, adjust the **SURROUND** control.

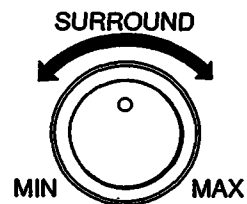


For private listening D

Connect a pair of headphones to the **HEADPHONES** jack. No sound is heard from the speakers.


Receiving Broadcast

You can listen to FM or AM stations.

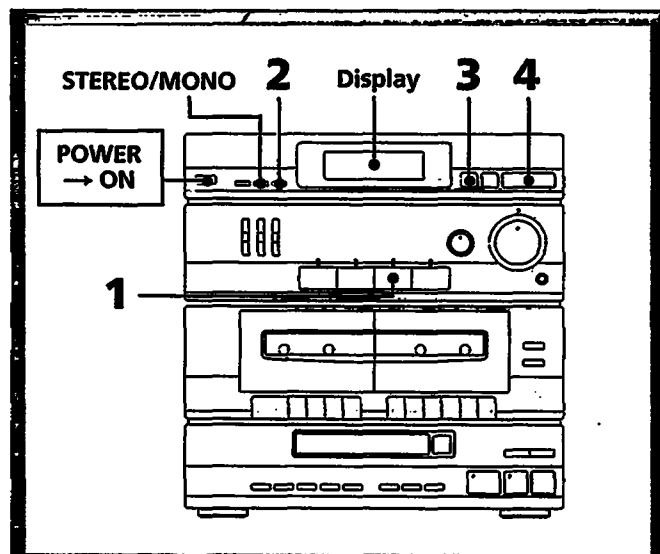


1 Press the **TUNER** button.

2 Press the **TUNING/PRESET** button to enter the tuning mode.
"PRESET" and the preset code disappear.

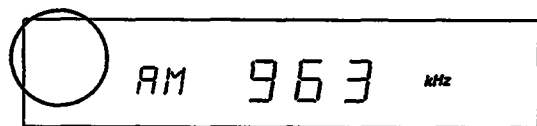

 3 Press the **BAND** button repeatedly until the desired band appears.




Each time you press the **BAND** button, the received band changes as follows:

FM ← → AM

4 Keep the **DUAL MODE TUNING + or -** button pressed for over one second so that "AUTO" appears.

The unit starts scanning frequencies and stops when it tunes into a station. Repeat this step until the desired station is tuned in.

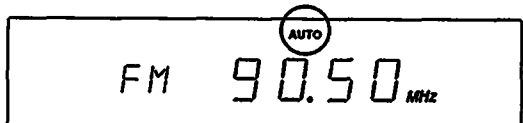

The "TUNED" indicator appears

When a station of a sufficient signal strength is tuned in.

The "STEREO" indicator appears

When an FM stereo program of a sufficient signal strength is tuned in.

When you press the TUNER button

The CD player is automatically turned off so that radio broadcast may not be disturbed by noise.

For receiving FM stations in stereo

If the MONO indicator is lit, press the **STEREO/MONO** button so that the indicator goes out.

When an FM stereo program is noisy or hard to receive

Press the **STEREO/MONO** button so that "MONO" appears. This eliminates the stereo effect, but the noise will be greatly reduced.

To return to the stereo mode, press the **STEREO/MONO** button again. The MONO indicator goes off.

If you cannot tune in a desired station

A station with a weak signal may be skipped. In this case, tune in the station manually.

- Press the **DUAL MODE TUNING + or -** button again to stop scanning.
- Press the **DUAL MODE TUNING + or -** button repeatedly and tune in the exact frequency.

Note

The controls of the tuner become inactive when you press any of the function buttons other than the **TUNER** button.

Changing the AM Tuning Interval

The unit tunes in AM stations at 10-kHz intervals. To use the unit where the tuning interval is 9-kHz, change the setting as follows:

- 1 Turn on the power.
- 2 Tune in any AM station.
- 3 Turn off the power.
- 4 While pressing the **DUAL MODE TUNING +** button, turn on the power.


To reset the interval, repeat the same procedure.

Important


- Stored stations will be erased from the memory when you change the interval.
- Stored stations will be erased from the memory when the AC power cord is disconnected for a long time.

You can store station frequencies in the unit's memory for quick recall later on. Up to 30 frequencies in any band can be stored by specifying a code for each frequency. The code is a combination of a letter – A, B or C – and a number – 0 to 9: A-1, A-2, ..., A-9, A-0, B-1, ..., C-1, ..., C-0.

Storing Stations

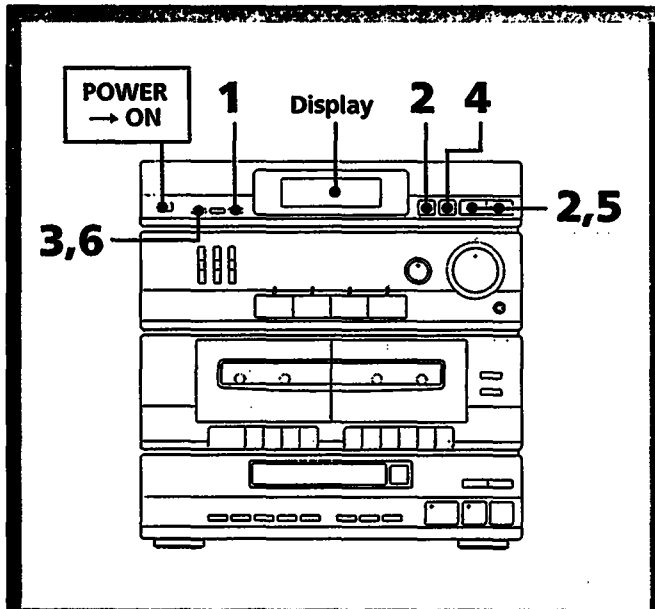


 - 1** Press the **TUNING/PRESET** button to enter the tuning mode. "PRESET" and the preset code disappear.




- 2** Press the **BAND** button and the **DUAL MODE TUNING + or -** button to tune in the desired station. (See page 8.)

 
- 3** Press the **MEMORY** button. "PRESET" and "MEMORY" appear on the display. While a number of the last memorized code is blinking, proceed to step 4.



 
- 4** Press the **SHIFT** button to select a letter (A, B or C). The last memorized number with the selected letter appears.



 - 5** Press the **DUAL MODE TUNING + or -** button to select a number (0 – 9).



 - 6** Press the **MEMORY** button. "PRESET" and "MEMORY" disappear. A code is specified and the setting of the STEREO/MONO button is also stored. One second later, the code disappears and the tuner enters the tuning mode again.



If you cannot store a station successfully

 
 
Be sure to press the buttons for the code while the "MEMORY" indicator lights. If the indicator has gone off, press the MEMORY button again.

To erase a stored station

Storing a new station on a used code erases the previously stored one.

To select the preset channel directly using the DUAL MODE TUNING buttons

Each time you press the DUAL MODE TUNING button in step 4, the code (combination of a letter and a number) can be selected without pressing the SHIFT button and you can skip to step 6. The preset channel changes as follows:




Tuning into a Stored Station

- Press the **TUNING/PRESET** button to enter the preset mode. ("PRESET" and the preset code appear.)
- Press the **SHIFT** button and the **DUAL MODE TUNING + or -** button to specify the code for the desired station.

Playing Back Tapes

You can use tapes of type I and II for playback.

Playing Deck A or B

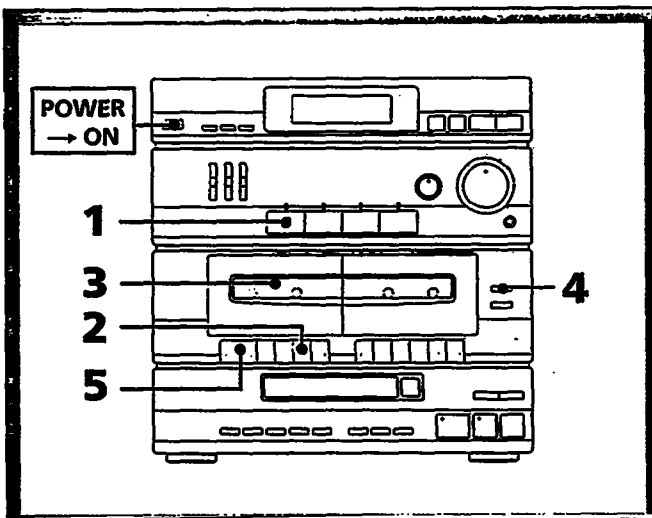

1 Press the **TAPE** button.

2 Press the **■ / ▲** button.

3 Insert a recorded tape.

4 Press the **TAPE SELECT** button to select tape type.

5 Press the **▶** button.
Playback starts.

When the tape is played to the end, the deck stops.

To stop during playback, press the ■ / ▲ button.

To fast forward or rewind, press the ▶▶ or ◀◀ button.

To pause, press the || PAUSE button. To resume, press the || PAUSE button again.

When both decks are set to play mode

Only the sound from deck B will be heard.

Note

When a deck is operated while recording or playing back a tape on the other deck, sound waver (uneven rotation) may result.

Playing from Deck to Deck—Relay Play

1 Insert tapes into decks A and B.

2 Press the **▶** button on deck B.

Deck B starts playing.


3 Press the **|| PAUSE** button and the **▶** button on deck A.

When the tape in deck B ends, the tape in deck A starts playing.

Recording on Tapes

You can use tape type I and II for recording.

Recording a Tape

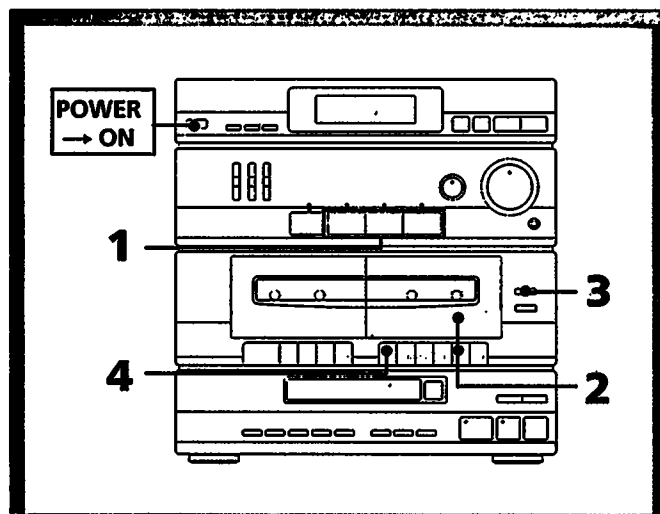

- 1** Select a source (except TAPE) with the function selectors.
- 2** Insert a blank tape into deck B.
- 3** Press the TAPE SELECT button to select tape type.
- 4** Press the ● REC button and start the selected source.
Recording starts.


When the tape is recorded to the end, the deck stops.
To stop during recording, press the ■ / ▲ button.

To start recording more precisely


- 1 After steps 1 to 3 above, press the ■■ PAUSE button on deck B.
- 2 Press the ● REC button.
- 3 Press the ■■ PAUSE button again to start recording.

Protecting Your Recording


Break off the tab of the side to be protected. For side A, break off the right-hand tab facing the side A up. This prevents further recording on that side.

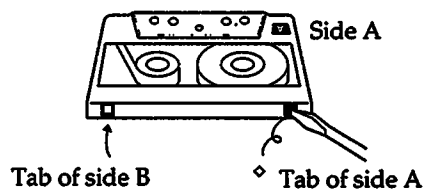

To record on a protected tape, cover the opening with plastic tape.

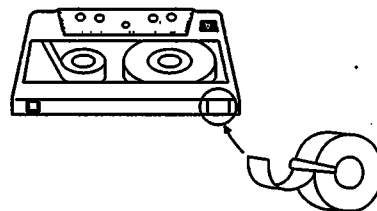


Location of Controls

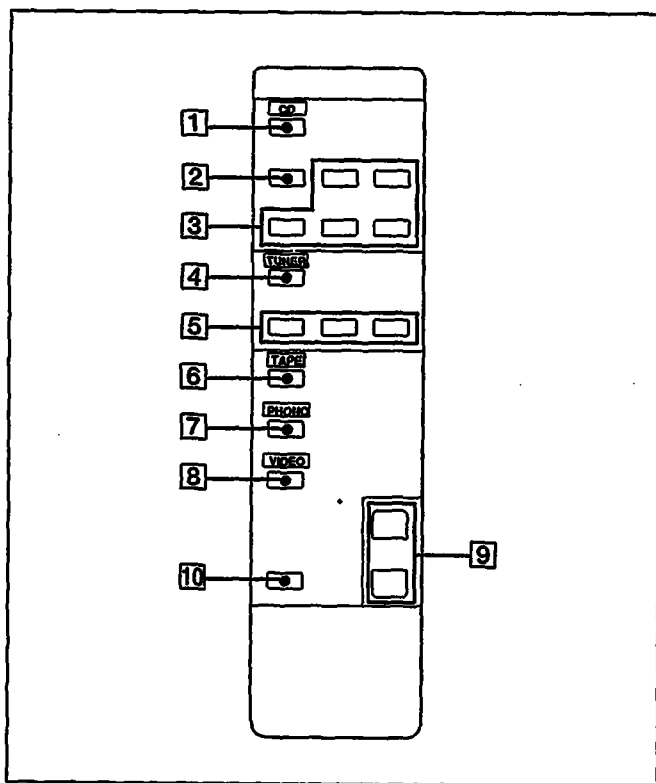

Remote commander RM-S221

- 1 CD function button
- 2 This button is inoperative with this unit.
- 3 CD operation buttons
◀◀ / ▶▶ (AMS*) buttons, ▶ (play) button, || PAUSE button, ■ (stop) button
- 4 TUNER function button
- 5 Tuner operation buttons
SHIFT button
PRESET +/- buttons
These buttons are used to select the preset station number.
- 6 TAPE function button
- 7 PHONO function button (operative with LBT-D150 only)
- 8 VIDEO function button (operative with LBT-G1000 only)
- 9 VOL (volume) +/- buttons
- 10 These buttons are inoperative with this unit.

* AMS is the abbreviation of Automatic Music Sensor.

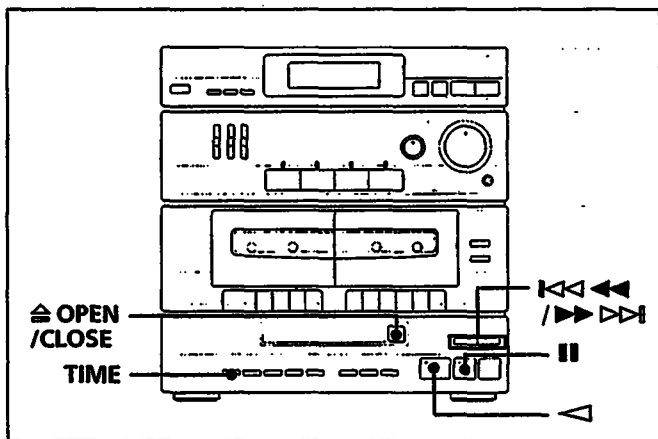

Information in the Display

To check the remaining or total playing time

 
Use the TIME button on the player.

To check

Press


Remaining time
of a track

TIME once during play



Remaining time
on the CD

 
TIME twice during play



Press once more to resume the prior display.

Total playing
time

 TIME in stop mode



appears for a few seconds

Notes

- You can check the remaining time during continuous, shuffle and program play.
- The total playing time and number of tracks also appear in the display when you press the **OPEN/CLOSE** button to close the disc tray.

Locating a Particular Selection

You can locate the beginning of a desired selection during stop, play or pause mode.

To locate the beginning of the current or preceding selection

- Press the **◀◀** button as many times as required.
- Keep the **◀◀** button pressed to skip selections. (This is operable in stop mode only, with the button on the main unit.)

To locate the beginning of a succeeding selection

- Press the **▶▶** button as many times as required.
- Keep the **▶▶** button pressed to skip selections. (This is operable in stop mode only, with the button on the main unit.)

Locating a Particular Point on the Disc

To search quickly while monitoring the sound

Keep the **▶▶▶** or **◀◀◀** button pressed during play, then release it at the desired point.

To search quickly while observing the display

Press the **||** button to pause, then keep the **▶▶▶** or **◀◀◀** button pressed. The search speed will increase but there will be no sound. Watch the display to find the desired point. To resume play, press the **▶** or **||** button at the desired point.

The "77" indicator is displayed


When you reach the end of a disc by continuously pressing the **▶▶▶** button.

Press the **◀◀◀** button to return to normal indication.

Playing in a Random Order


You can have the selections played in a random order.

Shuffle Play

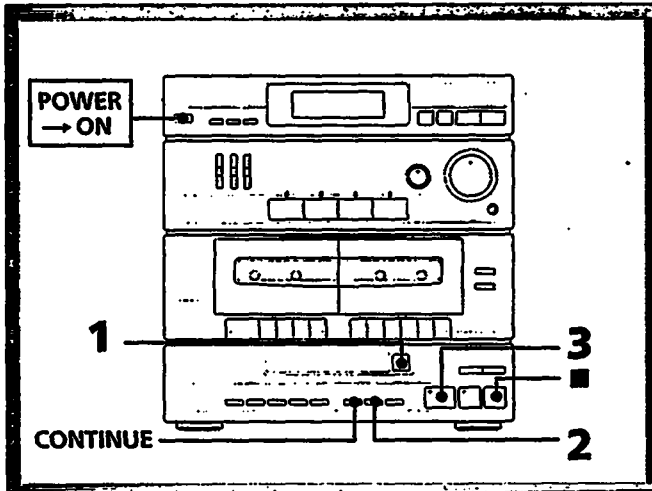

1 Place a disc on the tray.

 2 Press the **SHUFFLE** button.
"SHUFFLE" appears in the display.



3 Press the **▶** button.
Shuffle play starts.

To stop playing

Press the **■** button.

To cancel shuffle play

Press the **CONTINUE** button and the unit enters continuous play mode. "SHUFFLE" disappears from the display.


What is this indication?



This indication appears while the player is "shuffling" the selections.

Playing Repeatedly

You can choose between two different repeat play modes. One repeats all the tracks in the current play mode; the other repeats a single track. Use the **REPEAT** button on the unit to do this operation.

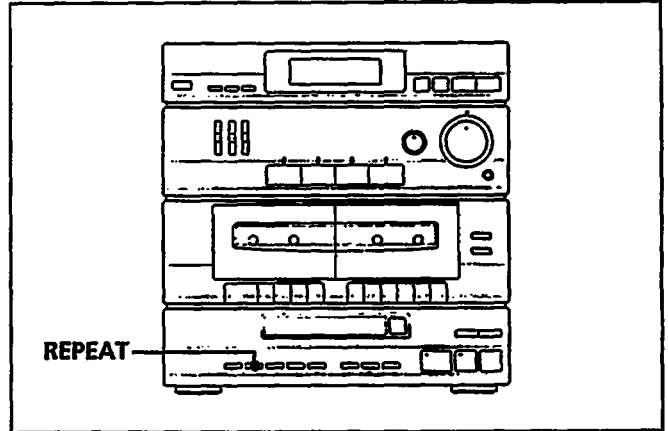


Repeating all the tracks (in any play mode)

Press the **REPEAT** button so that "REPEAT" lights up in the display.



Repeating a single track (in continuous play mode only)

 Press the **REPEAT** button so that "REPEAT 1" lights up in the display while playing the desired track.




To cancel repeat play

Press the **REPEAT** button so that "REPEAT" or "REPEAT 1" disappears from the display.

Playing in a Desired Order and Time

You can make a program by designating up to 24 selections in the order you want them to be played. The unit will play the disc according to your program.

Designating the Playing Order

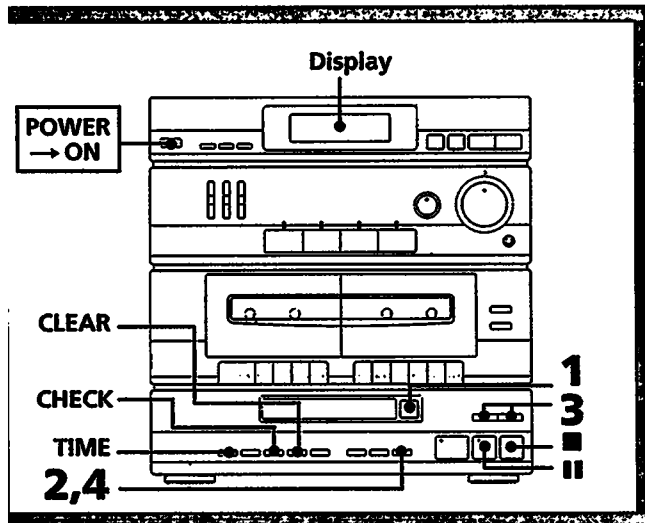


1 Place a disc on the tray and close it with the **▲ OPEN/CLOSE** button.

2 Press the **PROGRAM** button.
"PROGRAM" appears in the display.

3 Press the **◀◀ ◀◀** or **▶▶ ▶▶** button to select the selection and check the playing time.
If satisfactory, go to the next step. If not, choose another selection.

4 Press the **PROGRAM** button to store the selection.

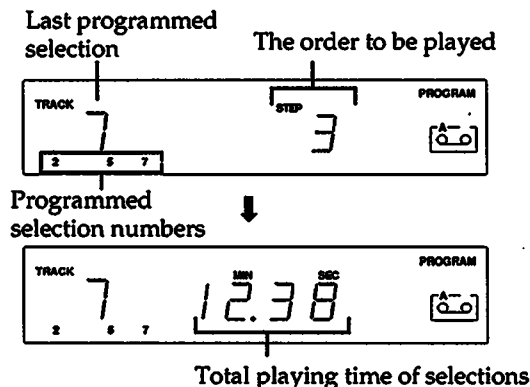

5 Repeat steps 3 and 4.

To play the program

Press the **▶** button.

To stop playing

Press the **■** button.

You can play the same program repeatedly as long as you do not cancel program play or erase the program.

To erase the entire program

- Press the **■** button once during stop; twice during play.
- Press the **▲** button.
- Turn off the power.
- Press the **CONTINUE** button.

If you press the **PROGRAM** button during continuous or shuffle play

The selection being played will be the first one in the program.

To check your program

Press the **CHECK** button. The first selection in the program will be displayed.

Each time you press the **CHECK** button, the next selection in the program will be displayed. After the last selection, "End" will be indicated and the display will soon return to the initial status.

If "---.---" is displayed instead of the actual time

The total time is 100 minutes or more.

Playing in a Desired Order and Time

Changing Your Program

You can make the following changes before starting play.

To erase the last selection, press the CLEAR button. Each time you press the CLEAR button, the last selection in the program will be erased.

To delete a selection, press the CHECK button repeatedly until the undesired selection is displayed. Then press the CLEAR button.

If you want to change the order, erase the entire program by pressing the ■ button in stop mode, and then repeat the programming procedure from the beginning.

Making a Program for Editing a Tape


You can insert a pause in your program by pressing the || button. Use this function to make a program for both sides of the tape at one time.

- 1 Program the selections for side A.**
- 2 Press the || button.**
"P" will appear in the display and the total playing time will be reset to 0.
- 3 Program the selections for side B.**
When you start playing, the selections for side A will be played and then the unit will pause with the chosen selections for side B illuminated in the display. Set the tape to the beginning of side B, then press the ► or || button. The selections for side B will be played.

What is the tape indicator?

 During program play, the tape indicator shows side A or B being played.



 : Side A is being played.

 : Side A has been played and the unit is in pause mode, or side B is being played.

To check the remaining time

Press the TIME button once to check the remaining time of the selection being played; twice to check the total remaining time; once more to return to the initial display.

If you have inserted a pause, the display shows the remaining time until the pause.


 appears while checking the program for side A and  appears while checking the program for side B.

Designating the Total Playing Time

You can designate a playing time and the unit will make two different programs of selections each fitting within that period. Use this function, by designating the length of your tape, for editing both sides of a tape.

This feature, called Time Edit, sets the playing time of each program within the designated time automatically by choosing selections in numerical order.


You can also program desired selections by priority. In this case, you can designate desired selections beforehand and the remaining selections will be programmed to fit the remaining time.

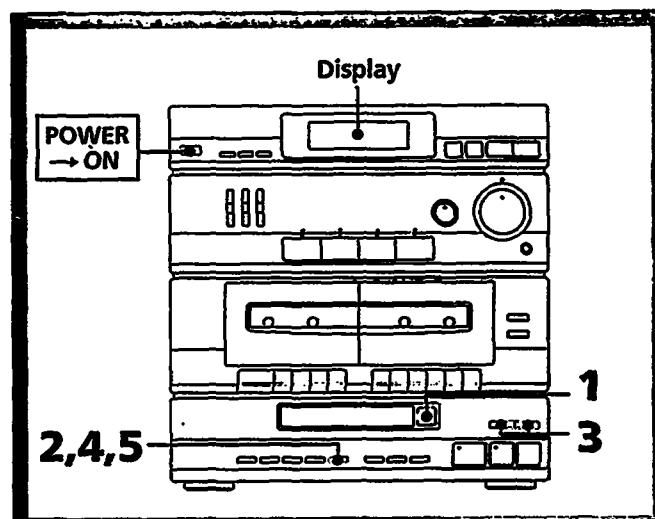



1 Place a disc on the tray and close it with the  OPEN/CLOSE button.

2 Press the EDIT button and display "EDIT".

  3 Press the  button.



Each time you press the  button, the display changes to give you the following duration.

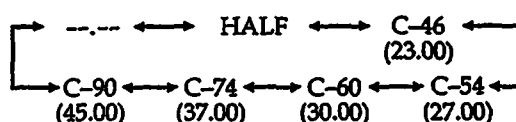

When you select HALF



The playing time of each program (for side A and B) is set to a half of the total playing time of the disc. When some of the selections have been programmed beforehand, it is not possible to select HALF.


Maintenance

Keep your system in good condition to obtain the best sound.

Cleaning Heads and Tape Path

Clean after every 10 hours of use and before recording.

- 1 Press the  /  button to open the cassette holder.
- 2 Moisten a cotton swab slightly with cleaning fluid or alcohol.
- 3 Wipe heads, pinch roller and capstans.

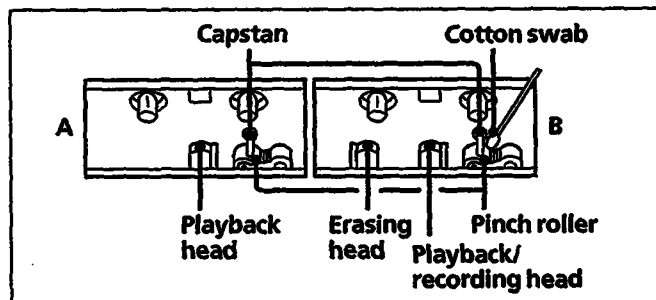

Do not insert a cassette tape until cleaned areas are completely dry.

Demagnetizing the Heads


Remove magnetism built up on the heads after every 20 to 30 hours of use.

Turn off the power before demagnetizing the heads. Use any commercially available demagnetizer.

Cleaning Discs

When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the center outward.

Do not use solvents such as benzine, thinner, commercially available cleaners or anti-static spray intended for analog discs.

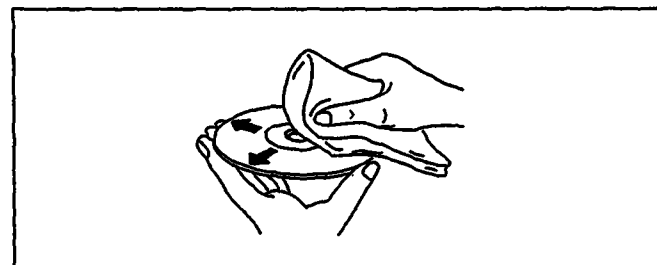


Cleaning the Cabinets

Use a soft cloth lightly moistened with a mild detergent solution.


4 Press the EDIT button.

The selections for side A are determined automatically. Then the display shows the last selection to be recorded (a)), total playing time (b)), and the selections to be recorded (c)).

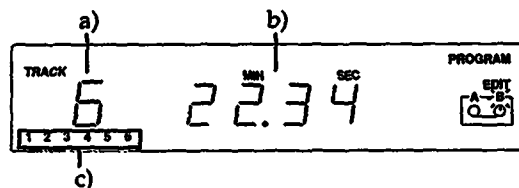



 5 Press the EDIT button once more while "B" in the tape indicator is blinking.

Another program for the other side is completed.



To play the program

Press the  button.

 

The selections for side A will be played and then the unit will pause. Set the tape to the beginning of side B, then press the  or the  button. The selections for side B will be played.

To stop playing

Press the  button.

You can play the same program repeatedly as long as you do not cancel the edit or erase the program.


To erase the entire program

- Press the  button once during stop; twice during play.
- Press the  button.
- Turn off the power.
- Press the CONTINUE button.

To check the program

See page 15.

To designate a different time for each side

Execute steps 1 to 4, then press the  button. Then execute steps 2 to 4 for the other side.

Specifications

Compact disc deck receiver (HCD-G1000/HCD-D150)

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 6-ohm loads, both channels driven, from 70 - 15,000 Hz; rated 10 watts per channel minimum RMS power, with less than 10% total harmonic distortion from 250 milliwatts to rated output.

Amplifier

Continuous RMS power output
10 W + 10 W (6 ohms, at 1 kHz,
5% THD)

Input	Jack type	Sensitivity	Impedance
VIDEO (LBT-G1000)	Phono	300 mV	47 kilohms
PHONO (LBT-D150)	Phono	3 mV	47 kilohms

Output	Jack type	Impedance
HEADPHONES	Stereophone	Accepts headphones of 8 ohms or more

Frequency response 15 Hz to 50 kHz ± 3 dB

Tuner

System FM stereo
FM/AM superheterodyne tuner

FM tuner section

Tuning range 87.5 to 108 MHz
Antenna 300 ohms balanced
75 ohms unbalanced

Intermediate frequency 10.7 MHz

AM tuner section

Tuning range 530 to 1,710 kHz
Antenna AM loop antenna
External antenna terminal

Intermediate frequency 450 kHz

Cassette deck

Recording system 4-track 2-channel stereo
Frequency response With Type II cassette (Sony UX-S)
40 Hz to 14 kHz (± 3 dB)

With Type I cassette (Sony HF-S)
40 Hz to 13 kHz (± 3 dB)

Wow and flutter 0.1% (WRMS)

Compact disc player

Laser Semiconductor laser
Wavelength 780 - 790 nm
Frequency response 2 Hz to 20 kHz ± 1 dB
Harmonic distortion Less than 0.01% (1 kHz)

General

Power requirements 120 V AC, 60 Hz
Power consumption 45 W
Mass Approx. 7.5 kg (16 lb 9 oz)
Dimensions Approx. 355 x 380 x 325 mm
(14 x 15 x 12 $\frac{7}{8}$ inches)
(w/h/d, including projections)

Speakers (SS-G2000/SS-D255)

Speaker system 2-way speaker system (SS-D255)
3-way speaker system (SS-G2000)
Mass Approx. 3 kg per speaker
(6 lb 10 oz)
Dimensions Approx. 220 x 395 x 180 mm
(8 $\frac{3}{4}$ x 15 $\frac{5}{8}$ x 7 $\frac{1}{8}$ inches)
(w/h/d, including projections)

Supplied accessories

Remote commander RM-S221 (1)
Batteries Sony SUM-3 (NS) (2)
FM wire antenna (1)
AM loop antenna (1)

Design and specifications are subject to change without notice.

Troubleshooting Guide

Before going through the check list below, first refer back to the connections and operating procedures.

Should any problem persist after you have made these checks, consult your nearest Sony service facility.

General

Symptom	Cause	Remedy
No power.	AC power cord is not connected securely.	Connect the AC power cord securely.
No sound.	Volume is not turned up.	Turn up the volume.
	Wrong connection.	Connect the speaker cords correctly.
Reversed left and right sound.	Wrong connection.	Connect the speaker cords correctly.
Severe hum or noise.	Loose connections.	Make connections securely.
	Unit is near TV or VCR.	Move TV or VCR away from the unit.

Tuner

Symptom	Cause	Remedy
The "TUNED" or "STEREO" indicator blinks.	Antenna is not aimed in the right direction.	Adjust the location and direction of the antenna.
	Weak signal.	Connect to an external antenna if the indication still blinks. Set the STEREO/MONO button to MONO.
Severe hum or noise.	Antenna is not aimed in the right direction.	Adjust the location and direction of the antenna.
	Weak signal.	Connect to an external antenna if hum or noise still interferes with reception.

Cassette deck

Symptom	Cause	Remedy
You cannot play back a tape.	PAUSE is engaged.	Press the PAUSE button to release the unit from the pause mode.
You cannot record on a tape.	The tab has been removed from the cassette.	Cover the opening with plastic tape.
You cannot dub tapes.	The tab of the cassette in deck B has been removed.	Cover the opening with plastic tape.
Unclear recording or playback.	Dirty head.	Clean and demagnetize the recording/playback head.
Excessive wow or flutter, or sound dropout.	Dirty capstan and pinch roller.	Clean the capstan and pinch roller.
Incomplete erasure.	Magnetized head.	Demagnetize the erasing head.

Troubleshooting Guide

CD player


Symptom	Cause	Remedy
The disc tray does not close.	The disc is not placed correctly.	Place the disc correctly on the disc tray.
Play does not start.	Dirty disc.	Clean the disc.
	The disc is inserted upside down.	Insert the disc with the printed side up.
	is engaged.	Press the ► or button again to release it.
	Moisture condensation.	Leave the unit turned on for approximately one hour.
Play does not begin from the first selection.	The unit is in the program or shuffle mode.	Press the CONTINUE button.

Remote commander

Symptom	Cause	Remedy
The remote commander does not operate the unit.	The batteries are run down.	Replace both batteries.
	The remote commander is not pointed at the remote sensor.	Point the remote commander at the sensor.
	There is an obstacle between the remote commander and the unit.	Remove the obstacle.
	The remote commander is too far from the unit.	Move closer.
Operation is not possible.	The internal control program may not be functioning.	Turn off the power and turn it again.

Location of Controls

Refer to the pages indicated in parentheses for details.

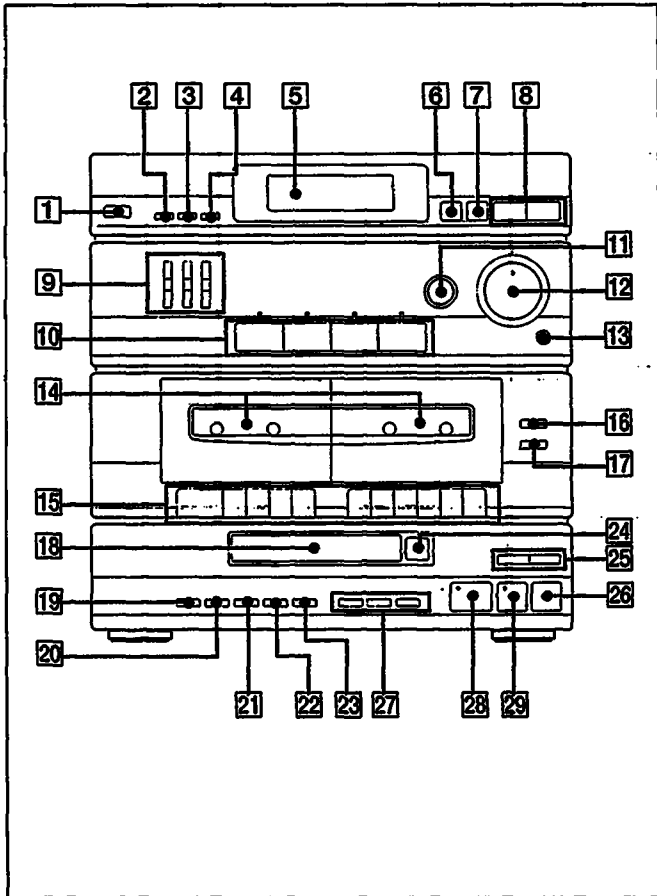

Compact Disc Deck Receiver HCD-G1000

Tuner section

- 1 POWER switch (page 6)
- 2 MEMORY button (page 9)
- 3 STEREO/MONO button (page 8)
- 4 TUNING/PRESET button (pages 8, 9)
- 5 Display window
- 6 BAND button (page 8)
- 7 SHIFT button (page 9)
- 8 DUAL MODE TUNING +/- buttons (pages 8, 9)

Amplifier section

- 9 3 BAND GRAPHIC EQUALIZER controls (LBT-G1000)
TONE CONTROLS (LBT-D150) (page 7)
- 10 Function selectors and indicators
- 11 SURROUND control (page 7)
- 12 VOLUME control (page 7)
- 13 HEADPHONES jack (page 7)

Cassette deck section


- 14 Cassette holders
- 15 Tape operating buttons
▶ (play) button, ■ / ▲ (stop/eject) button, ▶▶ (rightward fast winding) button, ◀◀ (leftward fast winding) button,
|| PAUSE button, ● REC button (only for deck B)
- 16 TAPE SELECT (TYPE I/TYPE II) button (pages 10, 11, 12)
- 17 DUBBING SPEED (HIGH/NORMAL) button (LBT-G1000 only) (page 12)

Compact disc player section

- 18 Disc tray
- 19 TIME button (page 13)
- 20 REPEAT button (page 14)
- 21 CHECK (program check) button (page 15)
- 22 CLEAR (program clear) button (page 16)
- 23 EDIT button (pages 16, 17)
- 24 ▲ OPEN/CLOSE button (page 12)
- 25 ◀◀ ◀◀ / ▶▶ ▶▶ AMS* buttons (page 13)
- 26 ■ (stop) button (page 12)
- 27 PLAY MODE buttons
CONTINUE button (pages 14, 15, 17)
SHUFFLE button (page 14)
PROGRAM button (page 15)
- 28 ▶ (play) button and indicator (page 12)
- 29 || (pause) button and indicator (page 12)

* AMS is the abbreviation of Automatic Music Sensor.

Location of Controls

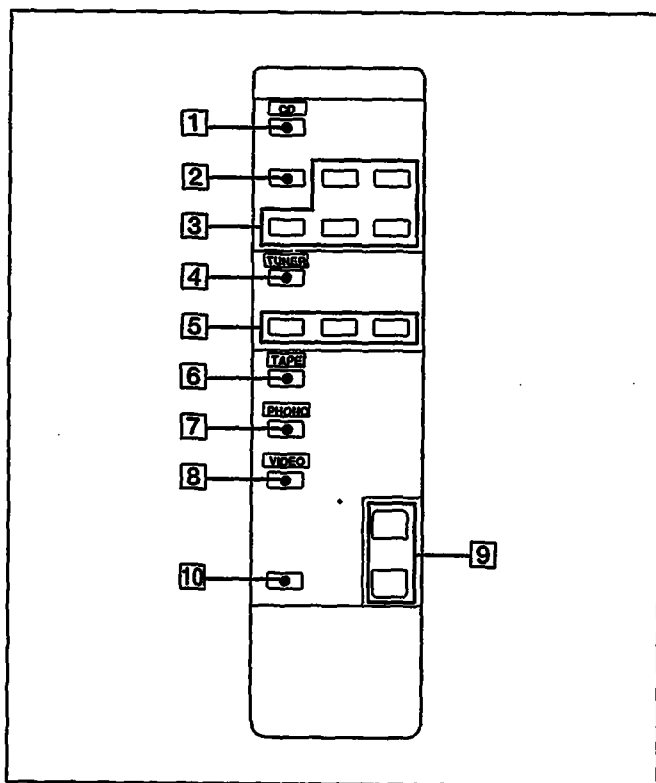

Remote commander RM-S221

- 1 CD function button
- 2 This button is inoperative with this unit.
- 3 CD operation buttons
◀◀ / ▶▶ (AMS*) buttons, ▶ (play) button, || PAUSE button, ■ (stop) button
- 4 TUNER function button
- 5 Tuner operation buttons
SHIFT button
PRESET +/- buttons
These buttons are used to select the preset station number.
- 6 TAPE function button
- 7 PHONO function button (operative with LBT-D150 only)
- 8 VIDEO function button (operative with LBT-G1000 only)
- 9 VOL (volume) +/- buttons
- 10 These buttons are inoperative with this unit.

* AMS is the abbreviation of Automatic Music Sensor.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>