

# Contents

<b>Getting started</b> .....	<b>4</b>	<b>Entertainment</b> .....	<b>51</b>
Assembly, SIM card, battery, turning on, call, help, Flight mode, i-mode™ activity menu, PC Suite, camera.		Handsfree, Music and Video player, radio, MusicDJ™, VideoDJ™, ringtones and melodies, games.	
<b>Getting to know the phone</b> .....	<b>10</b>	<b>Connectivity</b> .....	<b>60</b>
Keys, menus, navigation, icons, shortcuts, phone language, entering letters, file manager, memory card.		Internet, i-mode™, synchronizing, Bluetooth™ technology, USB cable.	
<b>Calling</b> .....	<b>25</b>	<b>More features</b> .....	<b>68</b>
Calls, contacts, call list, speed dial, voice control, call options, groups, business cards.		Alarm clock, calendar, tasks, profiles, time and date, SIM card lock, and more.	
<b>Messaging</b> .....	<b>38</b>	<b>Troubleshooting</b> .....	<b>75</b>
Text messaging, picture messaging (iMMS), iMail.		Why doesn't the phone work the way I want it to?	
<b>Imaging</b> .....	<b>45</b>	<b>Important information</b> .....	<b>81</b>
Camera, video, pictures, PhotoDJ™, themes.		Sony Ericsson Consumer Web site, service and support, safe and efficient use, end user license agreement, warranty, declaration of conformity.	
		<b>Index</b> .....	<b>91</b>

## Sony Ericsson

GSM 850/900/1800/1900

This user guide is published by Sony Ericsson Mobile Communications AB, without any warranty. Improvements and changes to this user guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this user guide.

All rights reserved.

©Sony Ericsson Mobile Communications AB, 2006

Publication number: EN/LZT 108 9005 R2A

Please note:

Some of the services in this user guide are not supported by all networks. *This also applies to the GSM International Emergency Number 112.*

Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not.

Please read the *Guidelines for safe and efficient use* and the *Limited warranty* chapters before you use your mobile phone.

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

i-mode is a trademark or registered trademark of NTT DoCoMo, Inc.

Bluetooth™ is a trademark or registered trademark of Bluetooth SIG Inc.

MusicDJ, PhotoDJ and VideoDJ are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB.

Memory Stick Micro™ and M2™ are trademarks of Sony Corporation.

Real is a trademark or a registered trademark of RealNetworks, Inc. RealPlayer® for Mobile is included under license from RealNetworks, Inc. Copyright 1995-2004, RealNetworks, Inc. All rights reserved.

Adobe™ Photoshop™ Album Starter Edition is a trademark or registered trademark of Adobe Systems Incorporated.

Cyber-shot is a trademark of Sony Corporation. Microsoft, Windows and PowerPoint are either registered trademarks or trademarks of Microsoft Corporation in the U.S and other countries/regions. T9™ Text Input is a trademark or a registered trademark of Tegic Communications. T9™ Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057, United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries/regions.

End-user license agreement for Sun™ Java™ J2ME™.

Smart-Fit Rendering is a trademark or registered trademark of ACCESS CO., LTD. in Japan and other countries/regions.

1 Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.

2 Export Regulations: Software, including technical data, is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries/regions. Customer agrees to comply strictly with all such regulations and acknowledges that it has the responsibility to obtain licenses to export, re-export, or import Software. Software may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, Cuba, Iraq, Iran, North Korea, Libya, Sudan, Syria (as such listing may be revised from time to time) or any country/region to which the U.S. has embargoed goods; or (ii) to anyone on the U.S. Treasury Department's list of Specially Designated Nations or the U.S. Commerce Department's Table of Denial Orders.

3 Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable.

Part of the software in this product is copyright © SyncML initiative Ltd. (1999-2002). All rights reserved.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved.

**Note:** Sony Ericsson advised users to backup their personal data information.

All illustrations are for illustration only and may not accurately depict the actual phone.

## Instruction symbols

The following appear in the user guide:



Note



A service or function is network- or subscription-dependent. Contact your network operator for details.



See also page...



Use a selection or navigation key to scroll and select  
➡ *14 Navigation.*



Press the navigation key centre.



Press the upper part of the navigation key.



Press the lower part of the navigation key.



Press the left part of the navigation key.



Press the right part of the navigation key.

## Getting started

*Assembly, SIM card, battery, turning on, call, help, Flight mode, i-mode™ activity menu, PC Suite, camera.*

More information and downloads are available at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).


## Assembly

### *To use your phone*

 
- 1 Insert the SIM card and the battery.
- 2 Charge the battery.
- 3 Turn on your phone.


### **SIM card**

When you register as a subscriber with a network operator, you get a SIM (Subscriber Identity Module) card. The SIM card contains a computer chip that keeps track of items such as your phone number, the services included in your subscription, and names and numbers in your contacts.

 *Save contact information on your SIM card before removing it from another phone. Contacts may have been saved in the phone memory.*

### **PIN**

You may need a PIN (Personal Identity Number) for your SIM card to start your phone and activate services. When you enter your PIN, each digit appears as \*, unless it starts with the same digits as an emergency number, for example 112. This allows for emergency calls without entering a PIN. Press  to correct mistakes.

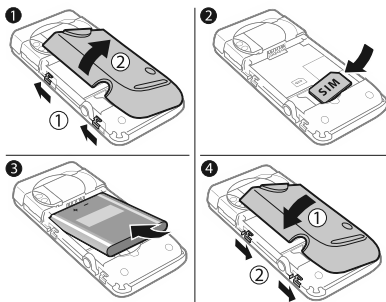
 *If you enter the wrong PIN three times in a row, PIN blocked appears. To unblock it, you need to enter your PUK (Personal Unblocking Key) ➤ 73 SIM card lock.*

### **Battery**

Some functions use more battery power than others and may cause a need for more frequent re-charging. If talk time or standby time becomes noticeably shorter, you may have to replace the battery. Only use approved batteries from Sony Ericsson ➤ 84 Battery.

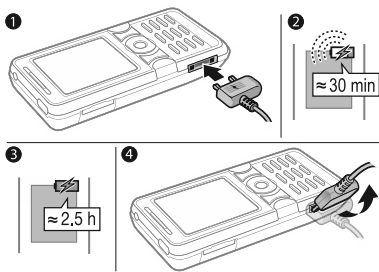
## SIM card and battery

### To insert SIM card and battery



- 1 Slide the catches to the left and lift the battery cover side as shown in the picture. Remove the battery cover by tilting it until the hinges on the battery cover release.
- 2 Slide the SIM card into its holder with the contacts facing down.
- 3 Insert the battery with the label side up and the connectors facing each other.
- 4 Fit the hinges on the battery cover to the phone and close the battery cover. Slide the catches to the right.

### To charge the battery

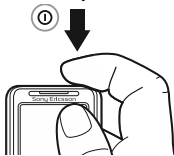


- 1 Connect the charger plug to the phone with the symbol facing upwards.
- 2 It may take up to 30 minutes before the battery icon appears.
- 3 Wait approximately 2.5 hours or until the battery icon indicates that the battery is fully charged. Press a key to activate the screen.
- 4 Remove the charger by tilting the plug upwards.

## Turning on your phone

Make sure the phone is charged and a SIM card inserted before turning the phone on. After turning on, use the setup wizard to prepare the phone for use.

## To turn on the phone



- 1 Press and hold down ①. The first startup may take a few minutes.
- 2 Select to use the phone in:
  - Normal – full functionality or
  - Flight mode – limited functionality with network, FM radio and Bluetooth™ transceivers off.

➤ 7 Flight mode menu.
- 3 Enter your SIM card PIN, if requested.
- 4 At first startup, select the language for your phone menus.
- 5 ▶ Yes for the setup wizard to help you.
- 6 Follow instructions to complete setup.



*Predefined settings may already exist in your phone.*

## Standby

After you have turned the phone on and entered your PIN, the name of the network operator will appear on the screen. This is called standby mode.

## Make a call

The phone must be in normal mode (not flight mode).

### To make a call

- 1 Enter a phone number (with international prefix and area code if applicable).
- 2 ▶ Call to make a call.
- 3 ▶ More for options during the call.
- 4 ▶ End call to end the call.

## Help in your phone

Help and information is available in your phone at any time.

### To view tips and tricks

- ▶ Settings ▶ the General tab
- ▶ Setup wizard ▶ Tips and tricks.

### To view information about functions


Scroll to a function ▶ More ▶ Info, if available.

### To view the phone demonstration

- ▶ Entertainment ▶ Demo tour.

## Flight mode menu

If you turn on the phone and Flight mode menu is activated, select from Normal with full functionality or Flight mode with limited functionality. Flight mode means that Network, Bluetooth transceivers and FM Radio are turned off to prevent disturbance to sensitive equipment. You can, for example, play music or write a text message to send later but not make calls.

 Follow onboard regulations, flight crew instructions for use of electronic devices.


### To view Flight mode menu options

► Settings and scroll to the General tab ► Flight mode and select an option.

 

## i-mode™ activity menu

You can open the i-mode™ activity menu almost anywhere in the phone to view and handle new events, and to access i-mode, applications running in the background and shortcuts.

### To open and close the i-mode™ activity menu

Press .

### i-mode™ activity menu tabs

- **i-mode** – access to Internet, for example, via i-Menu or your bookmarks. When you select a bookmark and the browser opens, other programs are closed or minimized.
- **New events** – when you have missed a call or received a new message, the New events tab appears. Press  to dismiss an event. New events can also be set to appear as pop-up text instead, ► Settings ► the General tab ► New events ► Pop-up.
- **Running apps** – applications that are running in the background. Select an application to return to it or press  to end it.
- **My shortcuts** – add, delete and change the order of shortcuts. When you select a shortcut and the application opens, other programs are closed or minimized.

## PC Suite software

Enhance the experience of your phone by installing the PC Suite software on your computer. This allows you to, for example, synchronize your phone calendar with a computer calendar.

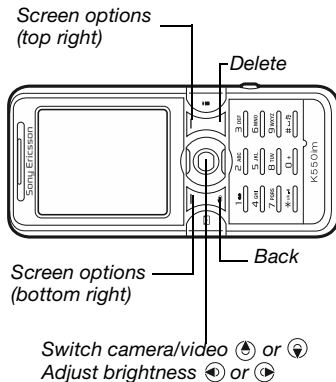
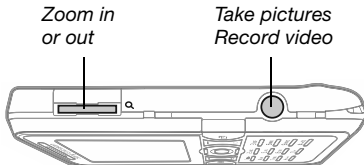
### To install the PC Suite software

- 1 Turn on your computer and insert the CD that came with your phone into the CD drive of your computer. The CD starts automatically and the installation window opens.
- 2 **Computer:** Select a language and click **OK**.
- 3 **Computer:** Click **Install** in the PC Suite section and follow the instructions on the screen. When the installation is complete, the PC Suite icon appears on the desktop of your computer.





For the latest version of PC Suite, visit [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

## Take pictures or record video clips








 
### *To take a picture or record video*

- 1 From standby, press and hold down  to activate the camera.
- 2 Use the navigation key to switch between camera and video recorder.
- 3 **Camera:** Press  to take a picture.



**Video:** Press  to start recording. To stop recording, press  again.

Your pictures and video clips are automatically saved in File manager  
▶ Camera album.

- 4 To take another picture or record another video clip, press  to return to the viewfinder.  
To stop using the camera or video recorder, press and hold down .

## Play music and videos

### *To play music and videos*

- 1 ▶ Music player or ▶ Entertainment  
▶ Video player. A player browser opens.
- 2 Browse for music and video clips.
- 3 ▶ Open highlight a title ▶ Play.

## Games and applications in standby

You can set games and applications to appear in standby.

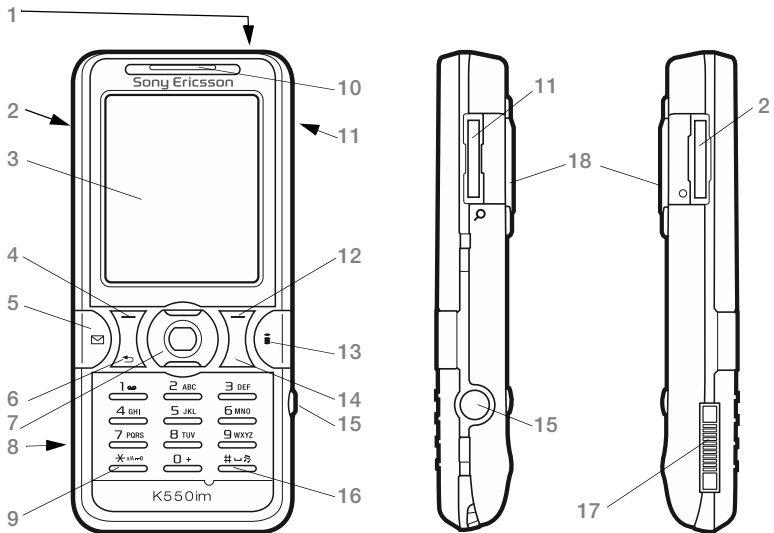
### *To set games and applications to standby*


- 1 ▶ Games & apps and select an application or a game.
- 2 ▶ More ▶ Set to standby.






 



 

 
# Getting to know the phone

Keys, menus, navigation, icons, shortcuts, phone language, entering letters, file manager, memory card.

## Phone overview



 Some icons on keys may differ.

- 1  Power on/off button
- 2  Play/stop button
- 3 Screen
- 4  Selection key
- 5  Messaging key
- 6  Back key
- 7 Navigation key
- 8 Memory Stick Micro™ (M2™) slot (under the battery cover)
- 9  Keylock key
- 10 Ear speaker
- 11  Volume/camera digital zoom buttons
- 12  Selection key
- 13  i-Mode™ key
- 14  Clear key
- 15  Camera button
- 16  Silent key
- 17 Connector for charger, handsfree and USB cable
- 18 Camera lens

For more information ➡ *14 Navigation*

## Menu overview



### Games & apps



### i-mode

- i-Menu\*
- Bookmarks
- Saved pages
- Enter Web addr.
- Last Web addr.
- Settings



### Entertainment

- Online services\*
- Video player
- VideoDJ™
- PhotoDJ™
- MusicDJ™
- Remote control
- Record sound
- Demo tour



### Cyber-shot™



### Contacts

- New contact



### Music player

- Now playing
- Artists
- Tracks
- Playlists



### File manager\*/\*\*

- Camera album
- Music
- Pictures
- Videos
- Themes
- Web pages
- Games/Apps
- Other



### Messaging

- Write new
- Inbox
- Drafts
- Outbox
- Sent messages
- Check new
- Saved messages
- Call voicemail
- Templates
- Settings



### Radio



## Calls\*\*



All



Answered



Dialled



Missed



## Organizer

- Alarms
- Calendar
- Tasks
- Notes
- Synchronization
- Timer
- Stopwatch
- Light
- Calculator
- Code memo



## Settings\*\*



General

Profiles

Time & date

Language

Voice control

New events

Shortcuts

Flight mode

Security

Setup wizard

Phone status

Master reset



Sounds & alerts

Ring volume

Ringtone

Silent mode

Increasing ring

Vibrating alert

Message alert

Key sound



Display

Wallpaper

Standby app.

Themes

Start-up screen

Screen saver

Clock size

Brightness

Edit line names\*



Calls

Speed dial

Divert calls

Switch to line 2\*

Manage calls

Time & cost\*

Show/hide my no.

Handsfree



Connectivity\*

Bluetooth

Infrared port

USB

OBEX authen.

Synchronization

Device mgmt.

Mobile networks

Data comm.

Internet settings

Streaming settings

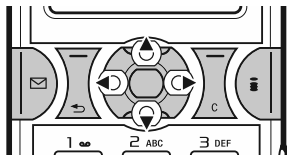
Accessories

\* Some menus are operator-, network- and subscription-dependent.


\*\* Use the navigation keys to move across tabs in submenus. For more information ➤ 14 Navigation.

## Navigation




 
The main menus are shown as icons. Some submenus include tabs. Scroll to a tab by pressing the left or right part of the navigation key.




### Key

- 
-  Go to the main menus or select highlighted items.


---

  -     Move through the menus and tabs.

 
---

  -  Select options shown above these keys on the screen.


---

  -  Go back one level in the menus. Press and hold down to return to standby or to end a function.


---

  -  Delete items, such as pictures, sounds and contacts. During a call, press and hold down to mute the microphone.


---

  -  Press to go to the **Messaging** menu. Press and hold down to activate your standby game or application (if set).

 
---

  -  Press to open the **i-mode** tab in the i-mode™ activity menu  
▶ **7 i-mode™ activity menu**. Press and hold down to go to **Games/Apps**.


---

 
 
 

 

 


  -  Open or pause the **Music player**.

---

  -  Press and hold down to take a picture, or record a video clip.














---

  -  From standby, press and hold down to call your voicemail service (if set).

 - 	From standby, press and hold down any of these keys to reach a contact beginning with a specific letter.
 - 	From standby, press a number key and then ► <b>Call</b> to speed dial.
	View a shortcut guide when using the camera.
	From standby, press and then ► <b>Lock keys</b> or <b>Unlock</b> to lock or unlock the phone keys.
	Turn off the ringtone when receiving a call. Press and hold down to set the phone to silent. The alarm sounds even if the phone is set to silent.
	View status information in standby. Increase the volume during a call, or when using the <b>Music player</b> . Zoom out when using the camera or viewing pictures. Press and hold down to go back one music track. Press twice to reject a call. Press and hold down to voice dial, alternatively say your magic word (if set) ► <b>32 Voice dialling</b> .
	Decrease the volume during a call, or when using the <b>Music player</b> . Zoom in when using the camera or viewing pictures. Press and hold down to go forward one music track. Press and hold down to voice dial, alternatively say your magic word (if set) ► <b>32 Voice dialling</b> .
► <b>Info</b>	Find more information, explanations or tips about selected features, menus or functions available in your phone ► <b>6 Help in your phone</b> .
► <b>More</b>	Enter a list of options. There are different alternatives in the list of options depending on where you are in the menus.

## Status bar





 
 
Some of the icons that may appear:

Icon	Description
	GSM network signal strength.
	Battery status.
	Battery charging, appears with battery status icon.
	Missed incoming call.
	Text message received.
	iMail message received.
	Picture message received.
	Ongoing call.
	Keylock is on.
	Handsfree is connected.
	Radio playing in the background.
	Calendar reminder.
	Task reminder.

 

 

## Shortcuts

Use keypad shortcuts to quickly go to a menu, and predefined navigation key shortcuts to quickly reach certain functions. Edit the navigation key shortcuts to suit your own needs.

### Using keypad shortcuts

In standby, go to menus by pressing  and then enter the number of the menu. Menu numbering starts from the top left icon and moves across and then down row by row, for example, press  for the fifth menu item. For the tenth, eleventh and twelfth items, press ,  and  respectively. To go back to standby, press and hold down .

### Using navigation key shortcuts

In standby, go to a shortcuts menu or function by pressing , ,  or .

### To edit a navigation key shortcut

- ▶ Settings ▶ the General tab
- ▶ Shortcuts and select a shortcut
- ▶ Edit.



## Phone language

Select the language to use in the phone menus or when writing text.

### To change the phone language

► Settings ► the General tab  
► Language ► Phone language.  
Select a language.

In standby, you can also press:

- 8888 for automatic language.
- 0000 for English.
- 0008 for Chinese.

*Most SIM cards automatically set the menu language to the country/region where you bought your SIM card. If not, the predefined language is English.*

### To select writing language

- 1 ► Settings ► the General tab  
► Language ► Writing language.
- 2 Scroll to the language to use and mark it. ► Save to exit the menu.

## Entering letters

Enter letters in one of the following ways (text input methods), for example, when writing messages:

- Multitap text input
- T9™ Text Input

To enter text, you have to be in a function where text input is possible, for example, ► Messaging  
► Write new ► Text message.

### To change the text input method

Before or when entering letters, press and hold down to change the method.

### To change the writing language

Before or when entering letters, press and hold down and select another writing language.

## Options list

► More for options when writing a message.

### To enter letters using multitap input

- Press - repeatedly until the desired character appears.
- Press to shift between capital and lower-case letters.
- Press and hold down - to enter numbers.
- Press to delete letters or numbers.
- Press for the most common punctuation marks.
- Press to add a space.

*Multitap input only applies when latin characters are selected as input language.*

## T9™ Text Input

The T9™ Text Input method uses a built-in dictionary to recognize the most commonly used word for each sequence of key presses. This way, you press each key only once, even if the letter you want is not the first letter on the key.

### *To enter letters using T9™ Text Input*

- 1 For example, to write the word “Jane”, press **5**, **2**, **6**, **3**.
- 2 If the word shown is the one you want, press **#↵** to accept and add a space. To accept a word without adding a space, press **⏩**. If the word shown is not the one you want, press **⏪** or **⏩** repeatedly to view alternative words. Accept a word and add a space by pressing **#↵**.
- 3 Continue writing the message. To enter a punctuation mark, press **1** and then **⏪** or **⏩** repeatedly, press **#↵** to accept and add a space.

### *To add words to the T9™ Text Input dictionary*

- 1 When entering letters ► **More**  
► **Spell word**.
- 2 Edit the word by using multitap input. Use **⏪** and **⏩** to move the cursor between the letters. To delete a character, press **C**. To delete the entire word, press and hold down **C**.

When you have edited the word ► **Insert**. The word is added to the T9™ Text Input dictionary. Next time you enter this word using T9™ Text Input, it appears in alternative words.

### **Next word prediction**

When writing a message, you can use T9™ Text Input to predict the next word, if previously used in a sentence.

### *To turn next word prediction on/off*

When entering letters ► **More**  
► **Writing options** ► **Next word pred.**

### *To use next word prediction*

When entering letters, press **#↵** to accept or continue.

 
## Chinese input

This mobile phone has different input methods for entering Chinese characters:

- Stroke input
- Pinyin input




You can use these methods, for example, to enter Chinese names and Chinese short messages.

### Switching between Chinese input methods




In the Chinese editing mode, you can select and switch quickly to another input method by pressing and holding .

### General instructions

Regardless of which input method you choose, your phone has a function to speed up the entry of Chinese characters. Whenever you enter a stroke or a Pinyin letter, a candidate row of the most frequently used characters containing that stroke or relating to that letter appears at the bottom of the screen.

If the character you want is not displayed in the candidate row, press  to present another candidate row. Continue pressing  until the character you want is displayed. Alternatively, you can enter the next stroke or Pinyin letter, and a new set of characters will immediately be displayed in the candidate row. To go back to the previous row, press . To select a character in the candidate row, press the navigation key.

### Stroke input

A Chinese character is built up of strokes. There are more than 30 basic strokes, which are grouped into five stroke categories. Each category is represented on the keypad by one of the keys  - . The Wild Card key , is used when you are not sure of which stroke to use

- ▶ 21 For example, to enter “信息” and
- ▶ 22 Example of using the wild card key.

## Stroke categories

The five stroke categories are defined in the table below:

Number Key	Stroke Category	Basic Stroke	Stroke Name	Character
①	一	一	Over	王 十 在 七 天
		丿	Lift	海 次 找 牡 刁
②	丨	丨	Down	中 上 業 門 且
		丿	Down-Hook	小 水 打 子 承
③	丿	丿	Short Slope Down	直 真 盾 草
		丿	Long Left Slope	八 旭 丹 風 所
		丿	Over Slope	香 毛 丘 匕 安
④	丶	丶	Short left Slope	而 頁 面 貿 殷
		丶	Dot	六 州 心 性 電
		丶	Right Slope	人 火 又 之 木
		㇇	Down-Curved-Over	西 四 酉 酷 酒

Number Key	Stroke Category	Basic Stroke	Stroke Name	Character
⑤	㇇	㇇	Down-Over	山 屯 母 互 剝
		㇇	Left Slope-Over	台 去 公 約 能
		㇇	Left Slope-Dot	女 好 巡 巢 災
		㇇	Down-Lift	衣 以 食 收 瓦
		㇇	Right Slope-Hook	我 或 民 成 找
		㇇	Down-Over-Hook	心 必 思 忘
		㇇	Down-Over-Curved-Hook	已 也 毛 孔 見
		㇇	Down-Over-Down-Hook	張 號 費 夷 鄂
		㇇	Down-Over-Down	鼎 亞
		㇇	Over-Hook	寫 字 皮 通 魚
		㇇	Over-Down	口 已 戶 書 骨

Number Key	Stroke Category	Basic Stroke	Stroke Name	Character
		丿	Over-Down-Hook	月 万 同 永 沒
		㇇	Over-Left Slope	又 之 發 多 社
		㇇	Over-Down-Over-Left Slope	及 极 廷 建
		㇇	Over-Left Slope-Curved-Hook	阿 隊 陳 那 部
		㇇	Over-Down-Over-Hook	乃 奶 盈 鼎
		㇇	Over-Down-Over-Down	凸
		㇇	Curved-Hook	家 狗 豹 逐 迳
		㇇	Over-Down-Curved-Hook	飛 九 風 氣 迅

Number Key	Stroke Category	Basic Stroke	Stroke Name	Character
		㇇	Over-Down-Over	投 船 凹
Ⓟ	? (Wild card key)			

## Components

The basic building units of Chinese characters are components that are made up of strokes. After entering the first two strokes of the desired character, the component and character candidates that started with that stroke are displayed in the candidate row.

Using components is a fast method for entering complex characters.



*The smaller candidates surrounded by dotted frames are components, and the bigger candidates without dotted frames are characters.*

**For example, to enter “信息”**

- 1 Enter “丿”, “丨” and “㇇”.
- 2 Move the cursor to “信”, press Ⓟ. Move the cursor to “息”, press Ⓟ again to select “息”.

## Example of using the wild card key

The wild card key (6), is used to supplement unclear strokes in entering characters. If you want to enter “互”, but you only know that “一” is the first and the last stroke of the character and that the total number of strokes is four, enter (1), (6), (6), (1). The character is displayed in the candidate row.

## Pinyin input

Press the keys containing the required Pinyin letters, and the phone will make various proposals on the screen, according to the pronunciation rules of Mandarin.

Below is the key mapping of Pinyin letters on the keypad.

Number Key	Pinyin Letter
2	abc
3	def
4	ghi
5	jkl
6	mno
7	pqrs
8	tuü
9	wxyz



On the keypad, the letter ü is replaced by v.

For example, to enter “ 信息 ”

- 1 Press (9), (4), (6).
- 2 When “xin” is highlighted, press (left arrow) or (right arrow) and select “ 信 ”, then press (right arrow). (If you want to enter any of the other suggested Pinyin combinations, scroll up or down to the desired combination, then press (right arrow)).
- 3 Press (right arrow) again to select “ 息 ”, when “ 息 ” is highlighted.

## Input punctuation, symbols and smilies

Under any Chinese input mode, press (X/a/Am), to see the table of punctuation marks, symbols and smilies. Use the navigation key to make a selection. Press (#->?) to enter a space into the text.

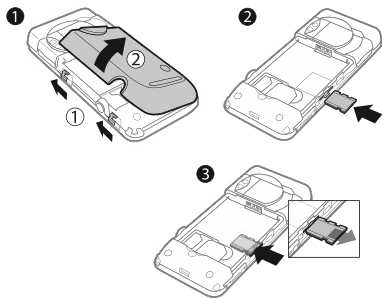
## File manager

Use the file manager to handle items such as pictures, videos, music, themes, Web pages, games and applications saved in the phone memory or on a memory card. (Games and applications can be saved in the phone memory only.)

## Memory Stick Micro™ (M2™)

Your phone supports the Memory Stick Micro™ (M2™) memory card adding more storage space to your phone to store files containing pictures or music, for example.

### To insert and remove a memory card



- 1 Remove the battery cover.
- 2 Insert the memory card as shown (with the contacts facing down).
- 3 Press the edge to release and remove the card.

You can also move and copy files between a computer and the memory card. When the memory card is inserted, files are automatically saved to it if you don't select to save the files to phone memory.

Create subfolders to move or copy files to. Unrecognized files are saved in the **Other** folder. When handling files, you can select several or all files in a folder at the same time for all items except **Games** and **Applications**.

### Memory status

If all available memory is full, you cannot save any files until content is removed. Check the memory status for your phone and memory card by highlighting a folder ► **More** ► **Memory status**.

### File manager menu tabs

The file manager is divided into three tabs, and icons indicate where the files are saved.

- **All files** – all content in the phone memory and on the memory card.
- **On Memory Stick** – all content on the memory card.
- **In phone** – all content in the phone memory.

## File information

View file information by highlighting it ► **More ► Information**. Items that are downloaded, or received using one of the available transfer methods, may be copyright-protected. If a file is protected, you may not be able to copy or send that file. A copyright-protected file has a key symbol.

### *To use a file from the file manager*

- 1 ► **File manager** and open a folder.
- 2 Scroll to a file ► **More**.

### *To move or copy a file to memory*

- 1 ► **File manager** and select a folder.
- 2 Scroll to a file ► **More ► Manage file ► Move** to move the file or ► **More ► Manage file ► Copy** to copy the file.
- 3 Select to move or copy the file to **Phone** or **Memory Stick** ► **Select**.

### *To move or copy files to a computer*

► **66 Transferring files using the USB cable**.

### *To create a subfolder*

- 1 ► **File manager** and open a folder.
- 2 ► **More ► New folder** and enter a name for the folder.
- 3 ► **OK** to save the folder.

### *To select several files*

- 1 ► **File manager** and open a folder.
- 2 ► **More ► Mark ► Mark several**.
- 3 Scroll to select files ► **Mark** or **Unmark**.

### *To select all files in a folder*

- **File manager** and open a folder
- **More ► Mark ► Mark all**.

### *To delete a file or a subfolder from the file manager*

- 1 ► **File manager** and open a folder.
- 2 Scroll to a file ► **More ► Delete**.

## Memory card options

Check memory status or format the memory card to delete all information.

### *To use memory card options*

- **File manager** and select the **On Memory Stick** tab ► **More** for options.



# Calling

*Calls, contacts, call list, speed dial, voice control, call options, groups, business cards.*

## Making and receiving calls

Before you can make or receive any calls, you must turn on your phone and be within range of a network.

➤ **5 Turning on your phone.**

### Networks

When you turn on the phone, it automatically selects your home network if this is within range. If it is not within range, you may use another network, provided your network operator has an agreement that allows you to do so. This is called roaming.

Select the network to use, or you can add a network to your preferred networks. You can also change the order in which networks are selected during an automatic search.

### To view available network options

- ▶ **Settings** and use ⏪ or ⏩ to scroll to the **Connectivity** tab
- ▶ **Mobile networks.**

### To make a call

- 1 Enter a phone number (with international country/region code and area code, if applicable).
- 2 ▶ **Call** to make a voice call or ▶ **More** to view options.
- 3 ▶ **End call** to end the call.

💡 *You can call numbers from your contacts and call list ➤ 27 Contacts, and ➤ 30 Call list. You can also use your voice to make calls ➤ 31 Voice control.*

### To make international calls

- 1 Press and hold down **(+)** until a + sign appears.
- 2 Enter the country/region code, area code (without the first zero) and phone number. ▶ **Call** to make a voice call.

### To re-dial a number

If a call connection fails and **Retry?** appears ▶ **Yes.**

💡 *Do not hold the phone to your ear when waiting. When the call connects, the phone gives a loud signal.*

### To answer or reject a call


- ▶ **Answer** or ▶ **Busy.**

### **To turn off the microphone**

- 1 Press and hold down **(C)**.
- 2 To resume the conversation press and hold down **(C)** again.

### **To turn the loudspeaker on or off during a voice call**

► More ► Turn on speaker or Turn off speaker.

 Do not hold the phone to your ear when using the loudspeaker. This could damage your hearing.

### **To change the ear speaker volume**

Press **(▲)** to increase or **(▼)** to decrease the ear speaker volume during a call.

### **Missed calls**

When the i-mode™ activity menu is set to default, missed calls appear in the **New events** tab in standby. If **Pop-up** is set to default **Missed calls** appears in standby


► 7 i-mode™ activity menu.

### **To check missed calls from standby**

- If i-mode activity menu is set to default, press **(☰)** and use **(◀)** or **(▶)** to scroll to the **New events** tab. Scroll **(▲)** or **(▼)** to select a number and ► **Call** to call.
- If **Pop-up** is set to default, ► **Calls** and use **(◀)** or **(▶)** to scroll to the **Missed** tab. Scroll **(▲)** or **(▼)** to select a number and ► **Call** to call.

## **Emergency calls**

Your phone supports international emergency numbers, for example, 112, 911. These numbers can normally be used to make emergency calls in any country/region, with or without a SIM card inserted.

 In some countries/regions, other emergency numbers may also be promoted. Your network operator may therefore have saved additional local emergency numbers on the SIM card.

### **To make an emergency call**

Enter 112 (the international emergency number) ► **Call**.

### **To view your local emergency numbers**

► **Contacts** ► **More** ► **Options**  
► **Special numbers** ► **Emergency nos.**

## Contacts

You can save your contact information in the phone memory or on a SIM card.

Choose which contact information – Phone contacts or SIM contacts – is shown as default.

For useful information and settings  
► Contacts ► More ► Options.





### Default contacts

If Phone contacts is selected as default, your contacts show all the information saved in Contacts. If you select SIM contacts as default, your contacts show information depending on the SIM card.

### To select default contacts

- 1 ► Contacts ► More ► Options  
► Advanced ► Default contacts.
- 2 ► Phone contacts or SIM contacts.

 
### Phone contacts

Save contacts in the phone with names, phone numbers and personal information. You can also add pictures and ringtones to contacts. Use , ,  and  to scroll between tabs and their information fields.

### To add a phone contact

- 1 If Phone contacts is selected as default, ► Contacts ► New contact ► Add.
- 2 Enter the name ► OK.
- 3 Enter the number ► OK.
- 4 Select a number option.
- 5 Scroll between tabs and select the fields to add information. To enter symbols such as @, ► More ► Add symbol and select a symbol ► Insert.
- 6 When all information is added ► Save.

### To delete a contact

- 1 ► Contacts and scroll to a contact.
- 2 Press  and select Yes.

### To delete all phone contacts

If Phone contacts is selected as default, ► Contacts ► More ► Options ► Advanced ► Delete all contacts ► Yes and ► Yes. Names and numbers on the SIM card are not deleted.

### SIM contacts

Save contacts on your SIM card.

### ***To add a SIM contact***

- 1 If **SIM contacts** is selected as default,  
▶ **Contacts** ▶ **New contact** ▶ **Add**.
- 2 Enter the name ▶ **OK**.
- 3 Enter the number ▶ **OK** and select a number option. Add more information, if available ▶ **Save**.

### ***To automatically save names and phone numbers on the SIM card***

▶ **Contacts** ▶ **More** ▶ **Options**  
▶ **Advanced** ▶ **Auto save on SIM**  
and select **On**.

### **Memory status**

The number of contacts you can save in the phone or on the SIM card depends on available memory.

### ***To view memory status***

▶ **Contacts** ▶ **More** ▶ **Options**  
▶ **Advanced** ▶ **Memory status**.

## **Using contacts**

Contacts can be used in many ways. Below you can see how to:

- Call phone and SIM contacts.
- Send phone contacts to another device.
- Copy contacts to phone and SIM card.

- Add a picture or a ringtone to a phone contact.
- Edit contacts.
- Synchronize your contacts.

### ***To call a phone contact***

**When Chinese has been selected as the phone language**

#### ***To call a contact written in Chinese characters***



- 1 ▶ **Contacts**. Press and hold **(#-☎)** to switch the search language to Chinese. Then enter the first strokes or all strokes of the contact you want to call (a maximum of 10 strokes).
- 2 When the contact is highlighted, press **(☎)** or **(☎)** to select a number ▶ **Call**.

#### ***To call a contact written in Latin characters***



- 1 ▶ **Contacts**. Press and hold **(#-☎)** to switch the search language to English. Then enter the first letters or all letters of the contact you want to call (a maximum of 10 letters).
- 2 When the contact is highlighted, press **(☎)** or **(☎)** to select a number ▶ **Call**.

When English has been selected as the phone language


 
### *To call a contact written in Chinese characters*

- 1 ► **Contacts**. Scroll to the contact you want to call.
- 2 When the contact is highlighted, press  or  to select a number ► **Call**.

### *To call a contact written in Latin characters*

- 1 ► **Contacts**. Scroll to, or enter the first letters or all letters of the contact you want to call (a maximum of 10 letters).
- 2 When the contact is highlighted, press  or  to select a number ► **Call**.

### *To call a SIM contact*

- If **SIM contacts** is default ► **Contacts** and when the contact is highlighted press  or  to select a number. ► **Call** to make a voice call.
- If **Phone contacts** is set as default ► **Contacts** ► **More** ► **Options** ► **SIM contacts** and select the contact ► **Call** to make a voice call.

### *To send a contact*


- **Contacts** and select a contact
- **More** ► **Send contact** and select a transfer method.

### *To send all contacts*

- **Contacts** ► **More** ► **Options**
- **Advanced** ► **Send all contacts** and select a transfer method.

### *To copy names and numbers to the SIM card*

- 1 ► **Contacts** ► **More** ► **Options**
- **Advanced** ► **Copy to SIM**.
- 2 Select one of the alternatives.


 *When copying all contacts from the phone to the SIM card, all existing SIM card information is replaced.*

### *To copy names and numbers to phone contacts*

- 1 ► **Contacts** ► **More** ► **Options**
- **Advanced** ► **Copy from SIM**.
- 2 Select one of the alternatives.

### *To add a picture, ringtone sound or video to a phone contact*

- 1 ► **Contacts** and select the contact
- **More** ► **Edit contact**.
- 2 Select the relevant tab and then select **Picture** or **Ringtone** ► **Add**.
- 3 Select an option and an item ► **Save**.

 *If your subscription supports Calling Line Identification (CLI) service, you can assign personal ringtones to contacts.*

### *To edit a phone contact*

- 1 ► **Contacts** and select a contact  
► **More** ► **Edit contact**.
- 2 Scroll to the relevant tab and select the field to edit ► **Edit**.
- 3 Edit the information ► **Save**.

### *To edit a SIM contact*

- 1 If SIM contacts is default ► **Contacts** and select the name and number to edit. If phone contacts is default  
► **Contacts** ► **More** ► **Options**  
► **SIM contacts** and select the name and number to edit.
- 2 ► **More** ► **Edit contact** and edit the name and number.

### *To save and restore contacts with a memory card*

- **Contacts** ► **More** ► **Options**
- **Advanced** ► **Back up to M.S.** or **Restore from M.S..**

### *To select the sort order for contacts*

- **Contacts** ► **More** ► **Options**
- **Advanced** ► **Sort order**.

## **Synchronizing contacts**

You can synchronize your contacts with a contacts application on the Web. For more information

- 62 *Synchronizing*.

## **Call list**

Information about most recent calls.

### *To call a number from the call list*

- 1 From standby, ► **Calls** and select a tab.
- 2 Scroll to the name or number to call  
► **Call** to make a voice call.

### *To add a call list number to contacts*

- 1 From standby, ► **Calls** and select a tab.
- 2 Scroll to the number to add ► **More**  
► **Save number**.
- 3 ► **New contact** to create a new contact, or select an existing contact to add the number to.

### *To clear the call list*

- **Calls** and select the **All** tab ► **More**  
► **Delete all**.

## **Speed dial with pictures**

Save numbers in positions 1-9 in your phone to access them easily. Speed dial is dependent on your default contacts ► 27 *Default contacts*. You can connect numbers saved on the SIM card to the speed dial positions.

If you add contacts with pictures to speed dial positions, the contact pictures appear for easy reference  
► 29 *To add a picture, ringtone sound or video to a phone contact*.

### *To edit speed dial numbers*

- 1 ► **Contacts** ► **More** ► **Options**  
► **Speed dial.**
- 2 **Scroll to the position** ► **Add or**  
► **More** ► **Replace.**

### *To speed dial*

From standby, enter the position number ► **Call.**

## **Voice mail**

If your subscription includes an answering service, callers can leave a voicemail message when you cannot answer a call.



Contact your network operator for your voicemail number or for more information.

### *To call your voicemail service*

From Standby, press and hold down **1**. If you have not entered a voicemail number, ► **Yes** and enter the number.

### *To edit your voicemail number*

- **Messaging** ► **Settings**
- **Voice mail number.**

## **Voice control**



Manage calls with your voice by creating voice commands to:

- **Voice dial** – call someone by saying their name.
- **Activate voice control** by saying a “magic word”.
- **Answer and reject calls** when using a handsfree.

### **Before voice dialling**

Activate the voice dialling function and record your voice commands. An icon appears next to a phone number that has a voice command.

### *To activate voice dialling and record names*

- 1 ► **Settings** ► **the General tab**  
► **Voice control** ► **Voice dialling**  
► **Activate** ► **Yes** ► **New voice** and select a contact.
- 2 If the contact has more than one number, use  and  to view the numbers. Select the number to add the voice command to. Record a voice command such as “John mobile”.
- 3 Instructions appear. Wait for the tone and say the command to record. The voice command is played back to you.
- 4 If the recording sounds OK ► **Yes**.  
If not ► **No** and repeat step 3.

To record another voice command for a contact ► **New voice** ► **Add** again and repeat steps 2-4 above.

### **Caller name**

Hear your recorded contact name when you receive a call from that contact.

#### **To turn the caller name on or off**

- **Settings** ► the **General** tab
- **Voice control** ► **Play caller name**.

### **Voice dialling**

Start voice dialling from standby using the phone, a portable handsfree, a Bluetooth headset or by saying your magic word.

#### **To make a call**

- 1 From standby, press and hold down one of the volume keys.
- 2 Wait for the tone and say a recorded name, for example “John mobile”. The name is played back to you and the call is connected.

#### **To make a call with a handsfree**

From standby, press and hold down the handsfree button, or press the Bluetooth headset button.

### **The magic word**

Record and use a voice command as a magic word to activate voice control without pressing any keys. The magic word can only be used with a handsfree.



*Choose a long, unusual word or phrase that can easily be distinguished from ordinary background speech.*

#### **To activate and record the magic word**

- 1 ► **Settings** ► the **General** tab  
► **Voice control** ► **Magic word**  
► **Activate**.
- 2 Instructions appear. ► **Continue**. Wait for the tone and say the magic word.
- 3 ► **Yes** to accept or ► **No** to record a new magic word.
- 4 Instructions appear. ► **Continue** and select the environments in which your magic word is to be activated.

### **Voice answering**

Answer or reject incoming calls by using your voice, when using a handsfree.



*You can use a MIDI, WAV (16 kHz), eMelody or iMelody file as a ringtone with voice answering.*



### **To activate voice answering and record voice answer commands**

- 1 ▶ Settings ▶ the General tab  
▶ Voice control ▶ Voice answer  
▶ Activate.
- 2 Instructions appear. ▶ Continue.  
Wait for the tone and say “Answer”,  
or another word.
- 3 ▶ Yes to accept or ▶ No for a new  
recording.
- 4 Instructions appear. ▶ Continue.  
Wait for the tone and say “Busy”,  
or another word.
- 5 ▶ Yes to accept or ▶ No for a new  
recording.
- 6 Instructions appear. ▶ Continue and  
select the environments in which voice  
answering is to be activated.

### **To answer or reject a call using voice commands**

When the phone rings, say:

- “Answer” to connect the call.
- “Busy” to reject the call.

### **To edit your voice commands**

- 1 ▶ Contacts and scroll to a contact.
- 2 ▶ More ▶ Edit contact and scroll to  
the relevant tab.

### **To re-record a voice command**

- 1 ▶ Settings ▶ the General tab  
▶ Voice control ▶ Voice dialling  
▶ Edit names.
- 2 Select a command ▶ More  
▶ Replace voice ▶ Yes.
- 3 Wait for the tone and say the  
command.



### **Diverting calls**

Divert calls, for example, to an answering service.



*When the restrict call function is activated, some divert call options are not available. ▶ 36 Restricted dialling.*

Your phone has the following options:

- Divert always – all calls.
- When busy – if a call is ongoing.
- Not reachable – if turned off or unreachable.
- No reply – if not answered in a specified time.

### **To activate a call divert**

- 1 ▶ Settings ▶ the Calls tab  
▶ Divert calls.
- 2 Select a call type and divert option  
▶ Activate.
- 3 Enter the phone number to divert your  
calls to, or press Look up to find  
a contact ▶ OK.

### *To deactivate a call divert*

Scroll to the divert option

▶ Deactivate.

## More than one call



Handle more than one call simultaneously.



### Call waiting service

When this is activated you hear a beep if you receive a second call.

### *To activate or deactivate the call waiting service*

▶ Settings ▶ the Calls tab by using  or  and ▶ Manage calls  
▶ Call waiting.

### *To make a second call*

- 1 ▶ More ▶ Hold to hold the ongoing call.
- 2 Enter the number to call ▶ More ▶ Call.

### Receiving a second voice call

When you receive a second call, you can:

- ▶ Answer and put the ongoing call on hold.
- ▶ Busy to reject and continue with the ongoing call.
- ▶ Replace active call to answer and end the ongoing call.



## Handling two voice calls

If you have calls ongoing and on hold, you can:

- ▶ More for options:
  - Switch – switch between the two calls.
  - Join calls – join the two calls.
  - Transfer call – connect the two calls. You are disconnected from both calls. (operator dependent )
- ▶ End call for options:
  - Yes – retrieve the call on hold.
  - No – end both calls.

You cannot answer a third call without ending one of the first two calls or joining them into a conference call.

## Conference calls

Start a conference call by joining an ongoing call and a call on hold. You then put the conference on hold and add up to five participants, or make another call.



*There may be additional charges for calls involving multiple parties – contact your network operator for more information.*

### *To join the two calls into a conference call*

- ▶ More ▶ Join calls.

### *To add a new participant*

- 1 ▶ More ▶ Hold to put the joined calls on hold.
- 2 ▶ More ▶ Add call and call the next person to add to the conference call.
- 3 ▶ More ▶ Join calls.
- 4 Repeat steps 1-3 to add more participants.

### *To release a participant*

- ▶ More ▶ Release part. and select the participant to release from the conference call.

### *To have a private conversation*

- 1 ▶ More ▶ Talk to and select the participant to talk to.
- 2 ▶ More ▶ Join calls to resume the conference call.



## **Two voice lines**

Make separate calls with different phone numbers if your subscription supports alternate line service.

### *To select a line for outgoing calls*

- ▶ Settings and use ⌂ or ⌂ to scroll to the **Calls** tab. Select line 1 or 2.

### *To change the name of a line*

- ▶ Settings and use ⌂ or ⌂ to scroll to the **Display** tab ▶ Edit line names. Select the line to edit.

## **My numbers**

View, add and edit your own phone numbers.

### *To check your phone numbers*

- ▶ Contacts ▶ More ▶ Options
- ▶ Special numbers ▶ My numbers and select one of the options.

## **Accept calls**

Only receive calls from certain phone numbers. If the divert calls option **When busy** is activated, calls are diverted.

### *To add numbers to the accepted callers list*

- ▶ Settings and use ⌂ or ⌂ to scroll to the **Calls** tab ▶ Manage calls
- ▶ Accept calls ▶ Only from list ▶ Edit
- ▶ New ▶ Add. Select a contact or
- ▶ Groups ▶ 37 Groups.

### *To accept all calls*

- ▶ Settings ▶ the **Calls** tab
- ▶ Manage calls ▶ Accept calls
- ▶ All callers.



## Restricted dialling

Restrict outgoing and incoming calls. A password from your service provider is required.



*If you divert incoming calls, you cannot activate some restrict calls options.*

The following calls can be restricted:

- All outgoing – all outgoing calls.
- Outgoing intl – all outgoing international calls.
- Outg. intl roam. – all outgoing international calls except to your home country/region.
- All incoming – all incoming calls.
- Inc. when roaming – all incoming calls when you are abroad
  - ▶ 25 Networks.

### *To activate or deactivate a call restriction*

- 1 ▶ Settings and use or to scroll to the Calls tab ▶ Manage calls ▶ Restrict calls. Select an option.
- 2 Select Activate or Deactivate, enter your password ▶ OK.



## Fixed dialling

The fixed dialling function allows calls to be made to certain numbers saved on the SIM card. The fixed numbers are protected by your PIN2.



*You can still call the international emergency number, 112, even when the fixed dialling function is activated.*

Partial numbers can be saved. For example, saving 0123456 allows calls to be made to all numbers starting with 0123456.



*When fixed dialling is activated, you may not be allowed to view or manage any phone numbers saved on the SIM card.*

### *To activate or deactivate fixed dialling*

- 1 ▶ Contacts ▶ More ▶ Options ▶ Special numbers ▶ Fixed dialling and select Activate or Deactivate.
- 2 Enter your PIN2 ▶ OK and then ▶ OK again to confirm.

### *To save a fixed number*

- ▶ Contacts ▶ More ▶ Options
- ▶ Special numbers ▶ Fixed dialling
- ▶ Fixed numbers ▶ New number and enter the information.



## Call time and cost

During a call, the duration of the call is shown. You can check the duration of your last call, outgoing calls and the total time of your calls.

### To check the call time

- ▶ **Settings** and use or to scroll to the **Calls** tab ▶ **Time & cost**
- ▶ **Call timers**.

## Additional calling functions

### Tone signals

Use telephone banking services or control an answering machine with tone signals during a call.

### To use tone signals

- Press + , or to send tones.
- ▶ **More** ▶ **Disable tones** or **Enable tones** to turn the tones on or off during a call.
- Press to clear the screen after a call.

### Notepad

Use the screen as a notepad to enter a phone number during a call. When you end the call, the number remains on the screen for you to call or save in your contacts.

### To call or save from the notepad

- ▶ **Call** to call the number or
- ▶ **More** ▶ **Save number** and select a contact to save the number to or
- ▶ **New contact** to create a new contact to save the number to.

### Showing or hiding your number

If your subscription supports the Calling Line Identification Restriction (CLIR) service, you can hide your phone number when making a call.

### To always show or hide your phone number

- 1 ▶ **Settings** ▶ the **Calls** tab  
▶ **Show/hide my no.**
- 2 Select **Show number**, **Hide number** or **Network default**.

## Groups

Create a group of numbers and iMail addresses to send messages to several recipients at the same time  
► **38 Messaging**.



*If you send a text message to a group, you will be charged for each member.*

You can also use groups (with numbers) when you create accepted callers lists ► **35 Accept calls**.

### *To create a group of numbers and iMail addresses*

- 1 If Phone contacts is default,  
▶ Contacts ▶ More ▶ Options  
▶ Groups ▶ New group ▶ Add.
- 2 Enter a name for the group  
▶ Continue.
- 3 ▶ New ▶ Add to find and select  
a contact number or iMail address.
- 4 Repeat step 3 to add more numbers  
or iMail addresses. ▶ Done.

### **Business cards**

Add your own business card as a contact.

#### *To add your own business card*

- ▶ Contacts ▶ More ▶ Options
- ▶ My business card and add information for your business card
- ▶ Save.

#### *To send your business card*

- ▶ Contacts ▶ More ▶ Options
- ▶ My business card ▶ Send my card and select a transfer method.

## **Messaging**

*Text messaging, picture messaging (iMMS), iMail.*

Your phone supports various messaging services. Please contact your service provider about the services you can use, or for more information, visit [www.sonyericsson.com/support](http://www.sonyericsson.com/support).


### **Text messaging (SMS)**

Text messages can contain simple pictures, sound effects, animations, and melodies. You can also create and use templates for your messages.

#### **Before you start**

The number to your service centre is supplied by your service provider and is usually set on the SIM card. If not, you can enter the number yourself.

#### *To set a service centre number*


 
- 1 Press  and select Settings  
▶ Text message ▶ Service centre.  
If the service centre number is saved on the SIM card it is shown.
- 2 If there is no number shown ▶ Edit  
▶ New ServiceCentre and enter the number, including the international “+” prefix and country/region code  
▶ Save.

## **Sending text messages**

For information about entering letters

➤ *17 Entering letters.*


### ***To write and send a text message***

- 1 Press  and select **Write new**  
▶ **Text message**
- 2 Write your message. (If you want to save the message for later in **Drafts**, press  ▶ **Save message.**)
- 3 ▶ **Continue** ▶ **Enter phone no.** to enter a number, or ▶ **Contacts look-up** to retrieve a number or a group from **Contacts**, or select from last used recipients ▶ **Send.**

### ***To copy and paste text in a message***

- 1 When writing your message ▶ **More**  
▶ **Copy & paste.**
- 2 ▶ **Copy all** or ▶ **Mark & copy** and use the navigation key to scroll and mark text in your message.
- 3 ▶ **More** ▶ **Copy & paste** ▶ **Paste.**

## **Receiving text messages**

Message notification appears on the screen. When you have read the message, press  to close the message.

### ***To reply to a text message***

- 1 Select the message in the inbox to reply to ▶ **More** ▶ **Reply** or open the message ▶ **Reply.**
- 2 Select the message type for your reply.


### ***To call a number in a text message***

Select the phone number displayed in the message, ▶ **Call.**


 
### **Saving and deleting text messages**

Received messages are saved in the phone memory. When the phone memory is full, delete messages or move text messages to the SIM card to be able to receive new messages. Text messages saved on the SIM card remain until they are deleted.


### ***To save a message***

- 1 Press  and select ▶ **Inbox**, then select the message to save.
- 2 ▶ **More** ▶ **Save message**  
▶ **Saved messages** to save on the SIM card. You can also ▶ **Templates** to save a text message as a template in the phone.

### **To delete a message**

- 1 Press  and select a folder.
- 2 Select the message to delete and press .

### **To save or delete several messages**

- 1 Press  and select a folder.
- 2 Select a message ► **More**
  - **Delete all msgs** to delete all messages in the folder or
  - **Mark several** scroll and select messages by pressing **Mark** or **Unmark**.
- 3 ► **More** ► **Save messages** to save messages or ► **Delete messages** to delete messages.

### **To save an item in a text message**

- 1 When reading a message, select the phone number, picture or Web address to save ► **More**.
- 2 ► **Use** (the phone number you have selected appears) ► **Save number** to save the phone number or ► **Save picture** to save a picture or ► **Use** (the bookmark you have selected appears) ► **Save bookmark** to save a bookmark.


### **Long messages**

The number of characters allowed in a text message depends on the language used for writing. You can send a long message by linking two or more messages. You are charged for each of the messages linked in a long message. The recipient may not receive all parts of a long message at the same time.



*Check with your service provider for the maximum number of messages that can be linked.*

### **To turn long messages on**


- Press  and select **Settings**
- **Text message** ► **Max. msg length**
  - **Max. available**.

### **Templates for text messages**

Add a new template or save a message as a template in your phone


► **39 To save a message.**

### **To add a template**

- 1 Press  and select **Templates**
  - **New template**.
- 2 **Insert text** ► **OK**.
- 3 **Enter a title** ► **OK**.




### *To use a template*

- 1 Press  and select **Templates**.
- 2 Select a template ► **Use** ► **Text message**.
- 3 Add text or ► **Continue** and select a recipient to send the message to.

### **Text message options**

Set a default value for several message options or choose the settings each time you send a message.


### *To set default text message options*

Press  and select **Settings** ► **Text message**, then select the options to change.

### *To set message options for a specific text message*

- 1 When the message is written and a recipient is selected ► **More** ► **Advanced**.
- 2 Select an option to change ► **Edit** and select a new setting ► **Done**.

### *To check the delivery status of a sent text message*

- 1 Press  and select **Sent messages**.
- 2 Select a text message ► **View** ► **More** ► **View status**.

## **Picture messaging (iMMS)**

Picture messages can contain text, pictures, camera pictures, slides, sound recordings, video clips, signatures and attachments. You can send picture messages to a mobile phone or an iMail address.


### **Before you start**

Both you and the recipient must have subscriptions that support picture messaging.


### **Picture message options**

Select how to download your picture messages. You can also create a signature for your picture messages, and set how pictures should be resized.

### *To set picture message options*

Press  and select **Settings** ► **iMMS**, then select the options to change.

## ***To manually download new picture messages***



 


When **Download options** is set to **Manual**, press  and select **Check new** to download new messages.

## **Sending picture messages**



*When writing and editing picture messages you can use the copy and paste functionality ► 39 To copy and paste text in a message.*


## ***To create and send a picture message***

- 1 Press  and select **Write new**  
► **iMMS**. Scroll  to use toolbar options. Scroll  or  to select an option. (If you want to save the message for later in **Drafts**, press  ► **Save message**.)
- 2 When ready to send ► **Continue**.
- 3 ► **Enter iMail addr.** or ► **Enter phone no.** or ► **Contacts look-up** to retrieve a number or group in **Contacts** or select from last used recipients.
- 4 ► **More** to add more recipients to the message or change the message subject.
- 5 ► **Send**.

## **Receiving picture messages**

A message notification appears on the screen when you have a new picture message to download, or the new picture message automatically appears in your inbox (depending on how you have selected to download your picture messages).

## ***To read downloaded picture messages***

Press  and select ► **Inbox**, then select a message ► **View**.

## ***To reply to a picture message***

► 39 *To reply to a text message.*

## **Saving and deleting picture messages**

Received messages are saved in the phone memory. When the phone memory is full, delete messages to be able to receive new messages.

## ***To save an item in a picture message***

When viewing a picture message  
► **More** ► **Save items** and select an item to save from the list that appears.

## ***To save or delete picture messages***

► 39 *Saving and deleting text messages.*



## iMail


Read your iMail messages in your phone at any time. Write a message, attach a camera picture, sound recording or video clip, and send it to your friends or colleagues. You can also reply to and forward iMail in your phone.

Your iMail address is supplied by your network operator. Visit the Web site of your network operator if you want to change your iMail address.

### iMail options

Select how to download your iMails and what attachments to allow. You can also create a signature for your iMails, and specify how the original message should be quoted in your replies.

#### *To set iMail message options*

Press  and select ► **Settings**  
► **iMail settings**, then select the options to change.

#### *To manually download new iMail messages*



► 42 *To manually download new picture messages.*


 

#### **Sending iMail messages**



*When writing and editing iMail messages you can use the copy and paste functionality* ► 39 *To copy and paste text in a message.*

#### *To write and send an iMail message*


- 1 Press  and select **Write new**  
► **iMail**.
- 2 ► **Add** to enter the recipient field.  
► **Enter iMail addr.** to type an iMail address ► **OK**, or ► **Contacts look-up** to select a recipient from **Contacts**  
► **Select**, or select an iMail address from last used recipients ► **Select**.
- 3 ► **Edit** to enter the recipient field (after one is added) to add more recipients. Select **To**, **Cc** or **Bcc** and select recipients to add. When you have selected recipients ► **Done**.
- 4 Press  to select the subject field, type an iMail subject ► **OK**. To edit the subject ► **Edit**.

- 5 Press  to select the text field, write your message ► OK. To edit the message ► Edit. (If you want to save the message for later in **Drafts**, press  ► Save message.)
- 6 Press  to select the attachment field. ► Add and choose the attachment type to add ► Select to select the attachment to add. To add more attachments ► Add.
- 7 ► Continue ► Send.

### Receiving iMail messages

A message notification appears on the screen when you have a new iMail to download, or the new iMail automatically appears in your inbox (depending on how you have selected to download your iMail messages).

#### *To read downloaded iMail messages*

Press  and select ► Inbox, then select a message ► View.

#### *To reply to an iMail message*

► 39 *To reply to a text message.*

### Saving and deleting iMail messages

Received messages are saved in the phone memory. When the phone memory is full, delete messages to be able to receive new messages.

#### *To save or delete iMail messages*

► 39 *Saving and deleting text messages.*

#### *To view or save an attachment in an iMail message*


View a message ► More  
► Attachments ► View to view the item or select an item to save.

### Area and cell information



Information messages may be sent to network subscribers within a certain area or cell.

#### *To turn information on or off*

Press  and select ► Settings  
► Area info ► Reception or Cell information.

# Imaging

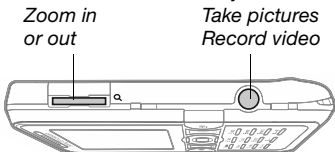
Camera, video, pictures, PhotoDJ™, themes.

## Camera and video recorder

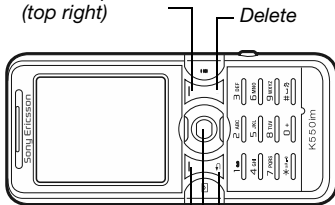
Take pictures and record video clips to save, view and send in messages

► 8 Take pictures or record video clips.

Camera buttons and keys



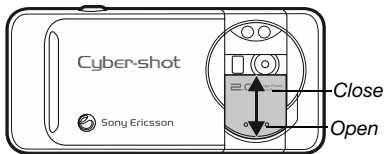
Screen options  
(top right)



Screen options  
(bottom right)

Switch camera/video or   
Adjust brightness or

To take a picture or record video



- 1 Slide open the lens cover.
  - 2 Use the navigation key to switch between camera and video recorder.
  - 3 **Camera:** Press half-way down to use auto focus and then fully down to take a picture.  
**Video:** Press half-way down to use auto focus and then fully down to start recording. To stop recording, press again.
- To take another picture or record another video clip, press to return to the viewfinder.
  - To stop using the camera or video recorder and return to standby, press and hold down or close the lens cover.

Pictures and video clips are saved in File manager ► Camera album.



## Camera settings

When you are in the viewfinder

► **Settings** for options to adjust and enhance your pictures and video clips before taking or recording them.



*If you try to record with a strong light source such as direct sunlight or with a lamp in the background, the screen may black out or the picture may be distorted.*


### **To use the zoom**

Use volume buttons to zoom in and out.

### **To adjust brightness**

Use the navigation key to increase or decrease brightness.

### **To use auto focus**

Press  half-way down. You hear a beep when auto focus is set within the frame that appears.

## Camera and video options

When the camera or video is activated

► **Settings** for the following options:


- Switch to video camera to record a video clip or Switch to still camera to take a picture.

- **Shoot mode (camera):**
  - Normal – no frame.
  - Panorama – join several pictures into one.
  - Frames – add a frame to your picture.
  - Burst – take a rapid sequence of pictures.
- **Shoot mode (video)** – select For iMMS or High quality video.
- **Scenes (camera)** – select from:
  - Auto – automatic settings.
  - Twilight landscape – a scenic picture at night.
  - Twilight portrait – for example, for a subject picture at night.
  - Landscape – a scenic picture.
  - Portrait – for example, a subject picture.
  - Beach/Snow – use in bright environments, for example, at the beach or when skiing.
  - Sports – use for fast-moving objects.
- **Picture size (camera)** – select from:
  - 2 MP (1632x1224)
  - 1 MP (1280x960)
  - VGA (640x480)

- **Focus – select from:**
  - **Auto** – auto focus for close-ups.
  - **Macro** – use for detailed close-ups.
  - **Infinite** – use to focus on all scenery.
- **Turn on light** – enhance lighting conditions.
- **Turn on night mode (video)** – adapt to poor lighting conditions.
- **Turn on self-timer (camera)** – take a picture a few seconds after pressing the camera button.
- **Effects** – select from:
  - **Off** – no effect.
  - **Black & white** – no colour.
  - **Negative** – reversed colours.
  - **Sepia** – brown tint.
  - **Solarize** – overexposure.
- **White balance** – adjust colours to lighting conditions. Select from **Auto**, **Daylight**, **Cloudy**, **Fluorescent** or **Incandescent**.
- **Metering mode** – adjust exposure to the whole or the centre of the picture or video. Select from **Normal** or **Spot**.
- **Picture quality (camera)** – select **Normal** or **Fine** picture quality.
- **Turn off mic. (video)** – set microphone.
- **Shutter sound (camera)** – select different shutter sounds.

- **Turn on time and date (camera)** – add time and date to a picture to appear as green text in the lower right corner. View in 1:1 size or use zoom when viewing a picture to see the text.
- **Save to** – select to save to **Memory Stick** or **Phone memory**.

### Camera shortcuts

When using the camera, you can also use keys as shortcuts to options. Press  for a camera key guide.

## Transferring pictures

### Transfer to your computer

Using the USB cable, you can drag and drop camera pictures to a computer ➤ *66 Transferring files using the USB cable.*

To further enhance and organize camera pictures on a computer, Windows® users can install Adobe™ Photoshop® Album Starter Edition, included on the CD with the phone or visit [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

### To view your camera pictures

- 1 ► **File manager** ► **Camera album**.
- 2 The pictures are shown in thumbnail view. For a full picture view ► **View**.

## Pictures and video clips

View and use pictures and video clips.

### Handling pictures

View, add, edit or delete pictures in the file manager. The number of pictures you can save depends on the size of the pictures. File types supported are, for example, GIF, JPEG, WBMP, BMP, PNG and SVG-Tiny.

#### *To view and use pictures*

- 1 ► File manager ► Pictures.
- 2 Select a picture ► View or ► More ► Use as and select an option.

#### *To display pictures in a slide show*

- 1 ► File manager ► Pictures and select a picture.
- 2 ► View ► More ► Slide show.

#### *To view information about a file*

- 1 ► File manager ► Pictures or Videos, select file.
- 2 ► More ► Information.

## Using pictures

Add a picture to a contact, use it during phone startup, as a wallpaper in standby or as a screen saver.



*An animation of more than 1MB set as wallpaper may affect performance.*

### Screen saver

The screen saver is automatically activated when the phone is idle for a few seconds. After a few more seconds, the screen saver changes to sleep mode to save power. Press any key or button to activate the screen again.

### To edit pictures

► 50 PhotoDJ™.


### Exchanging pictures

You can exchange pictures using one of the available transfer methods. Please note that you are not allowed to exchange some copyright-protected material. For more information on pictures in messages ► 38 Messaging.



### ***To send a picture***

► **File manager** ► **Pictures** and scroll to a picture. ► **More** ► **Send** and select a transfer method.

 *Some phones do not support picture sizes larger than 160 x 120 pixels.*

### ***To receive a picture***

► **Settings** ► **Connectivity** and select a transfer method.

### ***To save a picture in a message***

► **40** *To save an item in a text message* or ► **42** *To save an item in a picture message* or ► **44** *To view or save an attachment in an iMail message.*

### **Saving pictures and video clips**

When you have taken a picture or recorded a video clip, the phone saves it in the phone memory or on a Memory Stick Micro™ (M2™), if inserted.

If the phone memory or Memory Stick Micro™ (M2™) is full, you cannot save any more pictures or video clips unless you delete or move files  
► **22** *File manager.*

### **Sending pictures and video clips**

When you have taken a picture or recorded a video clip, you can send it as a picture message if the file size has not exceeded the limit. To exchange pictures and video clips using other transfer methods  
► **48** *Exchanging pictures.*

### ***To use more video clip or picture options***

Record a video clip or take a picture  
► **More** and select an option, for example, to take a new picture.

### **Transferring pictures to your computer**

Using the USB cable, you can drag and drop camera pictures to a computer ► **66** *Transferring files using the USB cable.*

### **Remote screen**

Use a compatible Bluetooth accessory to view pictures on a remote screen such as a TV. The accessory is not included with your phone. For a complete list of compatible accessories, please visit [www.sonyericsson.com/support](http://www.sonyericsson.com/support) to download it.

### *To connect to a remote screen*

- ▶ File manager ▶ Pictures ▶ View
  - ▶ More ▶ Remote screen.
- 64 *To add a device to your phone.*

## **PhotoDJ™**

Edit pictures using PhotoDJ™.

### *To edit and save a file*

- ▶ Entertainment ▶ PhotoDJ™ or  
▶ File manager ▶ Pictures and select  
a file ▶ More ▶ Edit in PhotoDJ™.
- Select an option.
- After you have edited the selected  
picture ▶ More ▶ Save picture.

## **Themes**

Change the appearance of the screen, for example, through items such as colours and wallpaper, by using themes. Your phone has some predefined themes that cannot be deleted if they are protected. You can create new themes and download them to your phone. For more information, visit [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

### *To select or change a theme*

- ▶ File manager ▶ Themes and select  
a theme.

### **Exchanging themes**

Exchange themes using a transfer method.

### *To send a theme*

- ▶ File manager ▶ Themes and select  
a theme.
- ▶ More ▶ Send and select a transfer  
method.

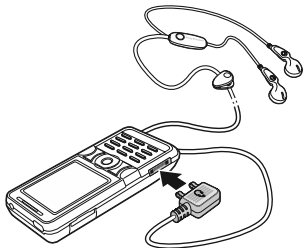
### *To receive and save a theme*

- Use a transfer method and open the  
message you received the theme in.
- Follow the instructions that appear.

## Entertainment

*Handsfree, Music and Video player, radio, MusicDJ™, VideoDJ™, ringtones and melodies, games.*

### Stereo portable handsfree



#### To use the handsfree

Connect the stereo portable handsfree to your phone to use it for calls, listening to music, videos or the radio. If you receive a call while playing music, music stops allowing you to answer the call. Music resumes when the call is ended or rejected.





 
 

## Music and video player

 
Your phone supports, for example, the following file types: MP3, MP4, M4A, 3GP, AAC, AAC+, Enhanced AAC, AMR, MIDI, iMelody, eMelody, WMA, WMV, WAV (16 kHz maximum sample rate) and Real®8. The phone also supports streamed files that are 3GPP compatible.

### To play music and videos

- ▶ **Music player** or ▶ **Entertainment**  
▶ **Video player**. A player browser opens.
- Browse for music by artist or track, or in playlists. You can also browse for video clips. Select a list ▶ **Open**.
- Highlight a title ▶ **Play**.

The following options are available:

- Press  to play or stop during playback.
- Press  to stop the playback. Press again to resume playing.
- Press  to go to the next music file.
- Press  to go to the previous music file.
- Press and hold down  or  to fast forward or rewind when playing music files or video clips.
- When in **Now playing**, press  to go to the music player browser.

- When playing music, ► **More** for options, for example, **Minimize** to use in the background.
- Press and hold down  to exit.

### Transferring music

Disc2Phone computer software and USB drivers are included on the CD that comes with the phone. Use Disc2Phone to transfer music from CDs or your computer to the memory card in your phone.

### Before you start

The following are minimum operating system requirements for using Disc2Phone on your computer:

- Windows 2000 SP4 or
- XP Home, or XP Professional SP1.

### To install Disc2Phone


- 1 Turn on your computer and insert the CD that came with your phone or visit [www.sonyericsson.com/support](http://www.sonyericsson.com/support) to download the Disc2Phone application. The CD starts automatically and the installation window opens.
- 2 Select a language and click **OK**.
- 3 Click **Install Disc2Phone** and follow the instructions.


### To use Disc2Phone

- 1 Connect the phone to a computer with the USB cable that came with your phone and select **File transfer**. The phone turns off and prepares to transfer files.


For more information

► *66 Transferring files using the USB cable.*

- 2 **Computer:** Start/Programs/Disc2Phone.
- 3 For details on transferring music, please refer to Disc2Phone Help. Click  in the top right corner of the Disc2Phone window.

 *Do not remove the USB cable from the phone or computer during transfer, as this may corrupt the memory card. You cannot view the transferred files in your phone until you have removed the USB cable from the phone.*

- 4 You can obtain CD information (artist, track, and so forth.) via Disc2Phone if you are connected to the Internet and extracting music from a CD.

 *For safe disconnection of the USB cable in file transfer mode, right-click the removable disk icon in Windows<sup>®</sup> Explorer and select **Eject**.*

More information about moving files to your memory card is available at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

### ***To transfer files with the USB cable provided***

➡ **66** *Transferring files using the USB cable.*

### **Browsing files**

Browse music files and video clips:

- **Artists** – lists music files you have transferred using Disc2Phone.
- **Tracks** – lists all music files (not ringtones) in your phone and on the memory card.
- **Playlists** – create or play your own lists of music files.

### **Playlists**

To organize the media files saved in the file manager, you can create playlists. Files in a playlist can be sorted by artist or title. You can add a file to more than one playlist.

When you delete a playlist or a file from the playlist, the actual music or video file is not deleted from the memory, just the playlist reference to it. You can still add the file to another playlist.

### ***To create a playlist***

- 1 ▶ **Music player** ▶ **Playlists**
  - ▶ **New playlist** ▶ **Add**. Enter a name
  - ▶ **OK**.
- 2 Select from the files that are available in the file manager. You can add several files at a time and you can also add folders. All files in the selected folders will be added to the playlist.

### ***To add files to a playlist***

- 1 ▶ **Music player** ▶ **Playlists** select a playlist ▶ **Open** ▶ **More** ▶ **Add media**.
- 2 Select from the files that are available in the file manager.

### ***To remove files from a playlist***

- 1 ▶ **Music player** ▶ **Playlists** select a playlist ▶ **Open**.
- 2 Select the file and press **(C)**.

### ***To delete a playlist***

- ▶ **Music player** ▶ **Playlists** select a playlist and press **(C)**.

### **Music player options**

▶ **More** for options:

- **Now playing** – go to the **Now playing** view.
- **Add media** – add files or folders to the playlist.
- **Sort by** – sort by artist or title.

- **Delete** – remove a file from the playlist. In playlists that you have created only the reference to the file is removed. In the **Tracks** list, the file is permanently deleted from the memory.
- **Minimize** – minimize the music player and return to standby with the music still playing.
- **Rename** – rename playlists that you have created.
- **Delete playlist** – delete playlists that you have created. Files are not deleted from the file manager.
- **Information** – view information about the current file or video.
- **Play mode** – change the playback order of songs and videos. Select **Shuffle** to play the playlist files in random order, or **Loop** to restart the playlist when the last file has been played.
- **Equalizer** – change treble and bass settings.
- **Send** – send a music file or video clip.
- **Stereo widening** – change the output sound.


## Online music and videos

View videos and listen to music by streaming them to your phone from the Internet. For more information, contact your network operator or visit [www.sonyericsson.com/support](http://www.sonyericsson.com/support).


### *To select a data account for streaming*

- ▶ **Settings** ▶ the **Connectivity** tab
- ▶ **Streaming settings** and select the data account to use.

### *To stream video and audio*


- 1 Press  and select a service such as **i-Menu**, or **Enter address** to manually enter the address of a Web page.
- 2 Select a link to stream from. A player opens automatically when a link is selected.

### *To stream saved music and videos*

- 1 Press  and select **Bookmarks**.
- 2 Select a bookmark to stream. A player opens and plays the music or video.

## Radio

Listen to the FM radio. Connect the handsfree to the phone as it works as the antenna.





 *Do not use the phone as a radio in places where this is prohibited.*

### To listen to the radio

Connect the handsfree to your phone

► Radio.

 

### Radio controls

- **Search** for a broadcasting frequency.
- Press  or  to move 0.1 MHz.
- Press  or  for preset channels.
- **More** for options.

### Saving radio channels

 

Save up to 20 preset channels.

### To save radio channels

► Radio set frequency ► More ► Save  
or press and hold down  -  to save in positions 1 to 10.

 

### To select radio channels

Use the navigation key or press

 -  to select a saved channel in positions 1 to 10.

## Radio options

► More for the following options:

- **Turn off** – turn off the radio.
- **Save** – save the current frequency in a position.
- **Channels** – select, rename, replace or delete a preset channel.
- **Auto save** – save tuned channels in positions 1 to 20. Previously saved channels are replaced.
- **Turn on speaker** – use the speaker.
- **Set frequency** – enter a frequency manually. Press   to go directly to Set frequency.
- **RDS** – set options for alternative frequency (AF) and station information.
- **Turn on Mono** – turn on mono sound.
- **Minimize** – return to previous to use other functions when using the radio.

### To adjust the volume

Press the volume buttons to increase or decrease volume.

## Ringtones and melodies

You can exchange music, sounds and tracks, for example, using one of the available transfer methods.




*You are not allowed to exchange some copyright-protected material. A copyright-protected file has a key symbol.*



### To select a ringtone

- ▶ Settings ▶ the Sounds & alerts tab
- ▶ Ringtone.

### To turn the ringtone on or off

Press and hold down  from standby or ▶ Settings ▶ the Sounds & alerts tab for more options. All signals except the alarm signal are affected.

### To set ringtone volume

- ▶ Settings ▶ the Sounds & alerts tab
- ▶ Ring volume and press  or  to decrease or increase the volume.
- ▶ Save.

### To set the vibrating alert

- ▶ Settings ▶ the Sounds & alerts tab
- ▶ Vibrating alert and select an option.

## Sounds and alerts options






From Settings ▶ the Sounds & alerts tab, you can also set:

- **Message alert** – select how to be notified of an incoming message.
- **Key sound** – select what sound to hear when you press the keys.

## MusicDJ™

Compose and edit your own melodies to use as ringtones. A melody consists of four types of tracks – **Drums**, **Basses**, **Chords**, and **Accents**. A track contains a number of music blocks. The blocks consist of pre-arranged sounds with different characteristics. The blocks are grouped into **Intro**, **Verse**, **Chorus**, and **Break**. You compose a melody by adding music blocks to the tracks.

### To compose a melody

- ▶ Entertainment ▶ MusicDJ™.
- ▶ Insert, Copy or Paste blocks. Use , ,  or  to move between the blocks. Press  to delete a block.
- ▶ More to view more options.


### To edit a MusicDJ™ melody

- ▶ File manager ▶ Music and select the melody ▶ More ▶ Edit.



## Exchanging MusicDJ™ melodies

Send and receive melodies using one of the available transfer methods. You are not allowed to exchange copyright-protected material.

 You cannot send a polyphonic melody or an MP3 file in a text message.

### To send a melody

- 1 ► File manager ► Music and select a melody.
- 2 ► More ► Send and select a transfer method.


### To receive a melody via a transfer method

Select a transfer method and follow the instructions that appear.

## VideoDJ™

Compose and edit your own video clips by using video clips, pictures and text. You can also trim away parts of a video clip to shorten it.

### To create a video clip

- 1 ► Entertainment ► VideoDJ™.
- 2 ► Add ► Video clip, Picture, Text or Camera ► Select.
- 3 To add more items press  ► Add.

### To edit a selected video clip

► Edit for options:

- Trim – shorten the video clip.
- Add text – add text to the video clip.
- Delete – remove the video clip.
- Move – move the video clip to another position.

### To edit a selected picture

► Edit for options:

- Duration – select the display time for the picture.
- Delete – remove the picture.
- Move – move the picture to another position.

### To edit a selected text

► Edit for options:

- Edit text – change the text.
- Colours – select Background to set background or Text colour to set font colour.
- Duration – select the display time for the text.
- Delete – remove the text.
- Move – move the text to another position.

## VideoDJ™ options

### ► More for options:

- **Play** – view the video clip.
- **Send** – send the video clip.
- **Soundtrack** – add a soundtrack to the video clip.
- **Transitions** – set transitions between video clips, pictures and text.
- **Save** – save the video clip.
- **Insert** – insert a new video clip, picture or text.
- **New video** – create a new video clip.

### *To edit video clips in the file manager*

- 1 ► **File manager ► Videos ► Open** and select a file.
- 2 ► **More ► VideoDJ™ ► Edit.**

## Sending video clips

You can send a video clip using one of the available transfer methods. Short video clips can be sent using picture messaging. If a video clip is too long, you can use the trim function to make a video clip shorter.

## *To trim a video clip*

- 1 Select a video clip from the storyboard  
► **Edit ► Trim ► OK.**
- 2 ► **Set** to set the start point and ► **Start.**
- 3 ► **Set** to set the end point and ► **End.**
- 4 Repeat steps 2 and 3 or ► **Trim.**

## Sound recorder

With the sound recorder, you can record, for example, a voice memo or calls. Recorded sounds can also be set as ringtones. Recording of a conversation is stopped if a participant ends the call. Recording of all sounds stops automatically if you receive a call.



*In some countries/regions or states it is required by law that you inform the other person before recording the call.*

## *To record a sound*

- 1 ► **Entertainment ► Record sound.**
- 2 Wait until you hear a tone. When the recording starts, **Recording** and a timer appear.
- 3 ► **Save** to end.
- 4 ► **Play to listen** or ► **More** for options: **Record new, Send, Rename, Delete, Recorded sounds.**

### *To listen to a recording*


► File manager ► Music and select a recording ► Play or ► Stop.

## **Games and applications**

Your phone contains several games. You can also download games and applications directly to the folders in your phone. Help texts are available for most games.

You can set a game or applications to appear in standby ➡ *9 Games and applications in standby*, and you can view information or set different permission levels.

### *To start and end a game*

- 1 ► Games & apps, select game ► Select.
- 2 Press and hold down  to end the game.

### *To view information for games and applications*

- 1 ► Games & apps.
- 2 Select an application or a game ► More ► Information.

### *To set permissions for games and applications*

- 1 ► Games & apps.
- 2 Select an application or a game ► More ► Permissions and set options.

### **Internet profile for games and applications**

Some games and applications need to connect to the Internet to receive information, for example, games that downloads new levels from a game server. When connecting to the Internet, the specified Internet profile is used ➡ *61 Internet profiles*.


# Connectivity

*Internet, i-mode™, synchronizing, Bluetooth™ technology, USB cable.*


## Using Internet

Use **i-mode** to browse **i-mode™** pages and other Web pages, and access online services, for example, news and banking.

### *To start browsing*

Press  and select a service such as **i-Menu**, or **Enter address** to manually enter the address of a Web page.

### *To view options*

Press  and select **i-Menu**, or **Enter address** to enter a Web page, select **More**.

### *To stop browsing*

▶ **More** ▶ **Exit browser**.



*For more information, contact your network operator.*

### **Options when browsing**

▶ **More** to view options. The menu contains the following but depends on the Web page you are visiting:

▶ **Go to** for the following:

- **i-Menu** – go to the predefined homepage set for the current profile.
- **Bookmarks** – create, use or edit bookmarks to Web pages.
- **Enter address** – enter the address of a Web page.
- **History** – list of previously visited Web pages.
- **Saved pages** – list of your saved Web pages.

▶ **Tools** for the following:

- **Add bookmark** – add a new bookmark.
- **Save picture** – save a picture.
- **Save page** – save the current Web page.
- **Send link** – send a link to the current Web page.
- **Status** – show connection information.
- **Make a call** – make a call when browsing the Internet. ▶ **More**  
▶ **End call** to end the call and continue browsing.

▶ **Refresh page** – reload the current content.

### ► Settings for the following:


- Show pictures – set on or off.
- Show animations – set on or off.
- Video auto play – set on or off.
- Set timeout – set the time for the response timeout.
- Send phone ID – select whether or not to always allow phone information to be sent.

### ► Exit browser to disconnect.

## Using bookmarks

Use, create and edit bookmarks as quick links to your favourite Web pages for the browser.

### *To work with bookmarks*

- 1 Press  and select **Bookmarks**.
- 2 Select a bookmark ► **More**.
- 3 Select an option, such as sending a bookmark as a text message.

## Downloading

Download files, for example, pictures, themes, games and ringtones from Web pages.

### *To download from a Web page*

When browsing, select a file to download and follow the instructions that appear.



## Internet profiles

You can select another Internet profile if you have more than one.



*If you select another profile it may affect your iMail access or access to your operator's portal.*

### *To select an Internet profile for the Internet browser*

- Settings and use  or  to scroll to the **Connectivity** tab
- **Internet settings** ► **Internet profiles** and select a profile.

## Passwords and cache

No passwords are saved and the cache is cleared between your browser sessions.

## Internet security and certificates

Your phone supports secure browsing. Certain Internet services, such as banking, require certificates in your phone. Your phone may already contain certificates when you buy it or you can download new certificates.

### *To check certificates in your phone*

- Settings ► the **General** tab
- **Security** ► **Certificates**.

## Synchronizing

Synchronize phone contacts, appointments, tasks and notes via Bluetooth™ wireless technology, Internet services or the USB cable included with the phone.

### Synchronization with a computer

Install synchronization software for your computer found in the Sony Ericsson PC Suite on the CD, included with the phone. The software includes help information. You can also visit [www.sonyericsson.com/support](http://www.sonyericsson.com/support) to download the software or the document *Getting Started Synchronization with a computer*.

### Remote synchronization via Internet

Synchronize online via an Internet service.

#### Before you start

- Register a synchronization account online.
- Enter remote synchronization settings.

### To enter remote synchronization settings

- 1 ▶ Organizer ▶ Synchronization ▶ New account ▶ Add to create a new account.
- 2 Enter a name for the new account ▶ Continue.
- 3 Enter the following:
  - **Server address** – server URL.
  - **Username** – account username.
  - **Password** – account password.
  - **Connection** – select an Internet profile.
  - **Applications** – mark applications to synchronize.
  - **App. settings** – select an application and enter a database name, and if required, username and password.
  - **Sync. interval** – set how often to synchronize.
  - **Remote initiation** – select to always accept, never accept or always ask when starting synchronization from a service.
  - **Remote security** – insert a server ID and a server password.
- 4 ▶ Save to save your new account.


### To start remote synchronization

- ▶ Organizer ▶ Synchronization and select an account ▶ Start.

## Bluetooth™ wireless technology

The Bluetooth™ function makes wireless connection to other Bluetooth devices possible. You can:


- Connect to handsfree devices.
- Connect to stereo headsets.
- Connect to several devices at the same time.
- Connect to computers and access the Internet.
- Synchronize information with computers.
- Use remote control computer applications.
- Use media viewer accessories.
- exchange items.

 *We recommend a range within 10 metres, with no solid objects in between, for Bluetooth communication.*

### Before you start

- Turn on the Bluetooth function to communicate with other devices.

- Add Bluetooth devices to communicate with to your phone.


 *Please check if local laws or regulations restrict the use of Bluetooth wireless technology. If Bluetooth wireless technology is not allowed, you must ensure that the Bluetooth function is turned off. The maximum allowed Bluetooth radio output power in the phone is automatically adjusted according to possible local restrictions. This means range may vary.*

### To turn the Bluetooth function on

- ▶ Settings ▶ the Connectivity tab
- ▶ Bluetooth ▶ Turn on.

### Adding devices to your phone

Enter a passcode to set up a secure link between your phone and the device. Enter the same passcode on the device when prompted. A device with no user interface, such as a handsfree, will have a predefined passcode. Consult the device User guide for more information.

 *Make sure that the device you want to add has the Bluetooth function activated and is visible.*

### ***To add a device to your phone***

- 1 ► Settings ► the Connectivity tab  
► Bluetooth ► My devices  
► New device to search for available devices. Make sure the other device is visible.
- 2 Select a device from the list.
- 3 Enter a passcode, if required.

### ***To allow connection or edit your device list***

- 1 ► Settings ► the Connectivity tab  
► Bluetooth ► My devices and select a device from the list.
- 2 ► More to view a list of options.

### ***To add a Bluetooth handsfree***

- 1 ► Settings ► the Connectivity tab  
► Bluetooth ► Handsfree.
- 2 ► Yes if you are adding a Bluetooth handsfree for the first time or  
► My handsfree ► New handsfree  
► Add if you are adding another Bluetooth handsfree. Ensure that your handsfree is in the correct mode. Consult the device User guide for more information.

### **Power save**

Turn on to reduce power consumption by optimizing your phone for use with a single Bluetooth device. Turn off to connect with several Bluetooth devices at the same time.

### ***To save power***

- Settings ► the Connectivity tab
- Bluetooth ► Powersave ► On.

### **Phone name**

Enter a name for your phone to be shown when other devices find it.

### ***To enter a phone name***

- Settings ► the Connectivity tab
- Bluetooth ► Phone name.

### **Visibility**

Choose to make your phone visible to other Bluetooth devices. If your phone is set to hide, only devices in

- Settings ► the Connectivity tab
- Bluetooth ► My devices are able to find your phone via Bluetooth wireless technology.

### ***To show or hide your phone***

- Settings ► the Connectivity tab
- Bluetooth ► Visibility ► Show phone or Hide phone.



## Exchanging items

Send or receive items using Bluetooth wireless technology as the transfer method. Choose a device from the list of found devices.

### *To send an item*

- 1 Select an item, for example  
▶ **Contacts** and select a contact.
- 2 ▶ **More** ▶ **Send contact**  
▶ **Via Bluetooth**.
- 3 Select the device to send the item to  
▶ **Select**.

### *To receive an item*

- 1 ▶ **Settings** ▶ the **Connectivity** tab  
▶ **Bluetooth** ▶ **Turn on**.
- 2 ▶ **Visibility** ▶ **Show phone**.
- 3 When you receive an item, follow the instructions that appear.

## Transferring sound

Transfer the sound for calls when using a Bluetooth handsfree.

You can also transfer the sound for calls using the keypad or the handsfree button as follows:

- Press the handsfree button for sound in your handsfree.
- Press a phone button or key (if set to **In phone**) for sound in your phone.

- Press any button (if set to **In handsfree**) for the sound in your handsfree.

### *To transfer sound when using a Bluetooth handsfree*

During a call, ▶ **More**

- ▶ **Transfer sound** and select a device.

### *To transfer sound when answering a call with a handsfree*

- 1 ▶ **Settings** ▶ the **Connectivity** tab  
▶ **Bluetooth** ▶ **Handsfree**  
▶ **Incoming call**.
- 2 ▶ **In phone** to direct to the phone or  
▶ **In handsfree** to direct to the handsfree.

## Remote control

Use your phone as a remote control device to control computer applications such as a media player or Microsoft® PowerPoint® presentations or devices that support Bluetooth HID Profile.

### *To select remote control*

- 1 ▶ **64** *To add a device to your phone, if required.*
- 2 ▶ **Entertainment** ▶ **Remote control**.
- 3 Select an application to use and the computer or device to connect to.

## File transfer

If your computer supports Bluetooth wireless technology, you can install the Sony Ericsson PC Suite to synchronize, transfer files, use the phone as modem and more via Bluetooth communication. Install the Sony Ericsson PC Suite from the CD that came with the phone or download it at [www.sonyericsson.com/support](http://www.sonyericsson.com/support). The PC Suite also includes help.

## Transferring files using the USB cable


Connect your phone to a computer, via the USB cable, to use your phone in one of the following: **File transfer** or **Phone mode**.

### File transfer

Drag and drop files between your memory card and computer in Microsoft Windows Explorer.

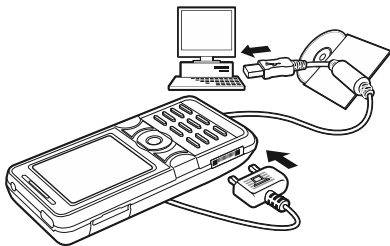
Use Sony Disc2Phone (music transfer) or Adobe™ Photoshop™ Album Starter Edition (picture transfer/storage). These applications are found on the CD that comes with the phone or at [www.sonyericsson.com/support](http://www.sonyericsson.com/support),

and can only be used with file transfer mode.

 Only use the USB cable that comes with the phone, and connect the USB cable directly to your computer. Do not remove the USB cable from the phone or computer during file transfer as this may corrupt the memory card.

### To use file transfer mode

- 1 Connect the USB cable to the phone and the computer.



- 2 **Phone:** Select **File transfer** or **▶ Settings ▶ the Connectivity tab ▶ USB ▶ USB connection ▶ File transfer**. The phone shuts down.

- 3 Wait until your memory card appears as an external disk in Windows Explorer. You can use:
- Windows Explorer to drag and drop files between your memory card and computer.
  - Sony Disc2Phone to transfer music to your memory card.
  - Adobe™ Photoshop™ Album Starter Edition to transfer and organize pictures on your computer.

### ***To disconnect the USB cable safely***

- 1 When using file transfer mode, right-click the removable disk icon in Windows Explorer and select Eject.
- 2 Remove the USB cable from your phone.

### **Phone mode**

Synchronize contacts and calendar, transfer files, use the phone as modem and more from your computer. Applications supported in phone mode include: Synchronization, File manager and Mobile Networking Wizard. For other applications, use the file transfer mode.

You need to install and use Sony Ericsson PC Suite, included on the CD that came with the phone or found at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).



*Your computer needs to have one of the following operating systems to be able to use this feature: Windows 2000 with SP3/SP4, Windows XP (Pro and Home) with SP1/SP2. USB drivers are installed automatically with the PC Suite software.*

### ***To use phone mode***

- 1 **Computer:** Install the Sony Ericsson PC Suite from the CD that came with your phone.
- 2 **Computer:** Start PC Suite from Start/Programs/Sony Ericsson/PC Suite.
- 3 Connect the USB cable to the phone and the computer.
- 4 **Phone:** Select **Phone mode** or
  - ▶ Settings ▶ the Connectivity tab
  - ▶ USB ▶ USB connection
  - ▶ Phone mode.
- 5 **Computer:** Wait while Windows installs the required drivers.
- 6 **Computer:** When PC Suite has found your phone you are notified. All applications that you can use with your connected phone are found in the Sony Ericsson PC Suite.

## More features

*Alarm clock, calendar, tasks, profiles, time and date, SIM card lock, and more.*

### Alarms

Set an alarm for a specific time or specific days to recur on. You can set the alarm signal as a sound or radio.

#### *To use alarms*

- 1 ► **Organizer** ► **Alarms** and select an alarm to set ► **Edit**.
- 2 **Time:** ► **Edit** and set a time ► **OK**.  
Select more options, if required:
  - **Recurrent:** ► **Edit** and set a day or days ► **Mark** ► **Done**.
  - **Alarm signal:** ► **Edit** and select the radio or a sound.
  - Press **⏮** to edit text, pictures and the silent mode for alarms.
- 3 ► **Save**.

#### *To turn an alarm signal off when it sounds*

Press any key, if radio is selected as alarm signal ► **Snooze**. If you do not want to repeat the alarm ► **Turn off**.

#### *To cancel an alarm*

► **Organizer** ► **Alarms** and select an alarm, ► **Turn off**.

### Calendar

You can use the calendar to keep track of important meetings. The calendar can be synchronized with a computer calendar or with a calendar on the Web ► **62 Synchronizing**.

### Appointments

Add new appointments or use existing appointments as templates.

#### *To add a new appointment*

- 1 ► **Organizer** ► **Calendar** and select a date ► **Select** ► **New appointm.** ► **Add**.
- 2 Select from the following options and confirm each entry, if required:
  - **General** tab – subject, start time, duration, reminder, start date.
  - **Details** tab – location, description, all day, recurrence.
- 3 ► **Save**.

#### *To view an appointment*

- 1 ► **Organizer** ► **Calendar** and select a day (appointment days marked with bold font).
- 2 Select an appointment ► **View**.

### To view a calendar week

- ▶ Organizer ▶ Calendar ▶ More
- ▶ View week.

### To set when reminders should sound

- ▶ Organizer ▶ Calendar ▶ More  
▶ Advanced ▶ Reminders.
- ▶ Always for a reminder to sound even when the phone is turned off or set to silent. A reminder option set in the calendar affects a reminder option set in tasks.

### Navigating in your calendar

Use the navigation key to move between days or weeks. In the monthly and weekly views, you can also use the keypad as follows.

---

**C** Today's date

**1** Back a week

**3** Next week

**4** Back a month

**6** Next month

**7** Back a year

**9** Next year

---

### Calendar settings

▶ Organizer ▶ Calendar ▶ More to select an option:

- View week – view the week's appointments.
- New appointm. – add a new appointment.

- Change date – go to another date in the calendar.
- Advanced – find an appointment, set reminders or select a start day for the week.
- Delete – delete old or all appointments.
- Help – for more information.



*If Chinese is selected as the phone language, an additional option appears, Lunar calendar.*

### Exchanging appointments

Exchange appointments using a transfer method. You can also synchronize appointments with a computer ▶ 62 Synchronizing.

### To send an appointment

Select an appointment in the list for a certain day ▶ More ▶ Send and select a transfer method.

### Tasks

Add new tasks or use existing tasks as templates. You can also set reminders for tasks.



*The maximum depends on the memory available.*

### **To add a new task**

- 1 ▶ Organizer ▶ Tasks ▶ New task  
▶ Add.
- 2 ▶ Task or Phone call.
- 3 Enter details and confirm each entry.

### **To view a task**

- ▶ Organizer ▶ Tasks and select a task
- ▶ View.

### **To set when reminders should sound**

- 1 ▶ Organizer ▶ Tasks and select a task  
▶ More ▶ Reminders.
- 2 ▶ Always for a reminder to sound even when the phone is turned off or set to silent. A reminder option set in the calendar affects a reminder option set in tasks.

### **Exchanging tasks**

Exchange tasks using a transfer method. You can also synchronize tasks with a computer  
➡ 62 *Synchronizing*.

### **To send a task**

Select a task in the list of tasks for a certain day ▶ More ▶ Send and select a transfer method.

## **Notes**

Make notes and save them in a list. You can also show a note in standby.



*The maximum depends on the memory available, as set in software.*

### **To add a note**

- ▶ Organizer ▶ Notes ▶ New note
- ▶ Add and enter the note ▶ Save.

### **To edit notes**

- 1 ▶ Organizer ▶ Notes and a list appears.
- 2 Select a note ▶ More and select an option.

### **Exchanging notes**

Exchange notes using one of the available transfer methods. You can also synchronize notes with a computer ➡ 62 *Synchronizing*.

### **To send a note**

Select a note ▶ More ▶ Send and select a transfer method.

## **Timer**

Your phone has a timer. When the signal rings, press any key to turn it off or select **Restart**.

### *To set the timer*

► **Organizer** ► **Timer** and set the hours, minutes and seconds for countdown.

## **Stopwatch**

Your phone has a stopwatch that can save several laps. The stopwatch continues to run when you answer an incoming call.

### *To use the stopwatch*





- 1 ► **Organizer** ► **Stopwatch** ► **Start**.
- 2 ► **Stop** or ► **New lap** for a new lap time.
- 3 To reset the stopwatch ► **Stop** ► **Reset**.

## **Calculator**

The calculator can add, subtract, divide and multiply.

### *To use the calculator*

► **Organizer** ► **Calculator**.

- Press  or  to select  $\div$   $\times$   $-$   $+$   $\%$   $=$ .
- Press  to delete the figure.
- Press  to enter a decimal point.



*Please note that the accuracy of the calculator is limited.*

## **Code memo**

Save security codes, such as for credit cards, in the code memo. Set a passcode to open the code memo.

### **Checkword and security**

To confirm that you have entered the correct passcode you must enter a checkword.

When you enter your passcode to open the code memo, the checkword is shown briefly. If the passcode is correct, the correct codes are shown. If you enter the incorrect passcode, the checkword and the codes that are shown are also incorrect.

### *To open code memo for the first time*

- 1 ► **Organizer** ► **Code memo**.  
A message with instructions appears  
► **Continue**.
- 2 Enter a four-digit passcode  
► **Continue**.
- 3 Re-enter the new passcode to confirm.
- 4 Enter a checkword (maximum 15 characters) ► **Done**. The checkword can consist of both letters and numbers.

### ***To add a new code***

- 1 ► Organizer ► Code memo and enter your passcode ► New code ► Add.
- 2 Enter a name associated with the code ► Continue.
- 3 Enter the code ► Done.

### ***To change the passcode***

- 1 ► Organizer ► Code memo and enter your passcode ► More ► Change passcode.
- 2 Enter your new passcode ► Continue.
- 3 Re-enter the new passcode ► Continue.
- 4 Enter a checkword ► Done.

### **Forgot your passcode?**

If you forget your passcode, you must reset the code memo.

### ***To reset code memo***

- 1 ► Organizer ► Code memo and enter any passcode to access the code memo. The checkword and codes that are then shown are incorrect.
- 2 ► More ► Reset.
- 3 Reset code memo? appears ► Yes.  
The code memo is reset and all entries are cleared. The next time you enter the code memo, you must start at  
► 71 To open code memo for the first time.

## **Profiles**

Your phone has predefined profiles that are set. Some, for example, ring volume and other options may be adjusted automatically to suit a certain environment or an accessory. You can reset all profile settings to how they were set when you bought your phone.

### ***To select a profile***

Press **(i)** and select a profile, or  
► Settings ► the General tab  
► Profiles and select a profile.

### ***To view and edit a profile***

► Settings ► the General tab  
► Profiles ► More ► View and edit.



*You cannot rename the Normal profile.*

### ***To reset profiles***

► Settings ► the General tab  
► Profiles ► More ► Reset profiles.



## Time and date

The time is always displayed in standby.

### *To set the time and time format*

- ▶ Settings ▶ the General tab  
▶ Time & date ▶ Time.
- Enter the time.
- ▶ Format and select an option.
- ▶ Save.

### *To set the date and date format*

- ▶ Settings ▶ the General tab
- ▶ Time & date ▶ Date.

## SIM card lock

The SIM card lock protects your subscription, but not the phone itself, from unauthorized use. If you change SIM cards, your phone still works with the new SIM card.

Most SIM cards are locked at the time of purchase. If the SIM card lock is on, you have to enter a PIN (Personal Identity Number) every time you turn on your phone.

If you enter your PIN incorrectly three times in a row, the SIM card is blocked. This is indicated by the message **PIN blocked**. To unblock it, you need to enter your PUK (Personal Unblocking Key). Your PIN and PUK are supplied by your network operator. You can edit your PIN and select a new four- to eight-digit PIN.



*If the message Codes do not match appears when you edit your PIN, you entered the new PIN incorrectly. If the message Wrong PIN appears, followed by Old PIN:, you entered your old PIN incorrectly.*

### *To unblock your SIM card*

- When **PIN blocked** appears, enter your PUK ▶ OK.
- Enter a new four- to eight-digit PIN ▶ OK.
- Re-enter the new PIN to confirm ▶ OK.

### *To edit your PIN*

- ▶ Settings ▶ the General tab  
▶ Security ▶ Locks ▶ SIM protection  
▶ Change PIN.
- Enter your PIN ▶ OK.
- Enter a new four- to eight-digit PIN ▶ OK.
- Re-enter the new PIN to confirm ▶ OK.

### ***To turn the SIM card lock on or off***

- 1 ► Settings ► the General tab  
► Security ► Locks ► SIM protection  
► Protection and select On or Off.
- 2 Enter your PIN ► OK.

## **Phone lock**

Protect your phone against unauthorized use if it is stolen and the SIM card is replaced. You can change the phone lock code (0000) to any four- to eight-digit personal code.

### **Automatic phone lock**

If the phone lock is set to automatic, you do not need to enter your phone lock code until a different SIM card is inserted in the phone.



*It is important that you remember your new code. If you forget it, you have to take your phone to your local Sony Ericsson retailer.*

### **To set the phone lock**

- 1 ► Settings ► the General tab  
► Security ► Locks ► Phone protection ► Protection and select an alternative.
- 2 Enter the phone lock code ► OK.

### **To unlock the phone**

If the phone lock is on, enter your code ► OK.

### **To edit your phone lock code**

- Settings ► the General tab
- Security ► Locks
- Phone protection ► Change code.

## **Keypad lock**

Lock the keypad to avoid dialling a number by accident.



*Calls to the international emergency number 112 can still be made, even when the keypad is locked.*


### **Automatic keylock**

Use automatic keylock in standby to lock the keypad soon after the last key was pressed.

### **To set the automatic keylock**


- Settings ► the General tab
- Security ► Automatic keylock.

### *To lock the keypad manually*

From standby, you can press 

► **Lock keys** to lock the keypad manually. You can still answer an incoming call and the keypad locks again after the call. The keypad remains locked until you unlock it manually.

### *To unlock the keypad manually*

From standby, press  ► **Unlock**.

## **Start-up screen**



Select a start-up screen to appear when you turn your phone on

► **48 Using pictures.**

### *To select a start-up screen*

► **Settings** ► the **Display** tab  
► **Start-up screen** and select an option.

## **Brightness**

Adjust the brightness of the screen.

### *To set the brightness*

► **Settings** ► the **Display** tab  
► **Brightness**.

# **Troubleshooting**

*Why doesn't the phone work the way I want it to?*

This chapter lists some problems that you might encounter when using your phone. Some problems require you to call your network operator, but you can easily correct most of the problems yourself.

However, if you need to take your phone in for repair, please note that you may lose information and content that you have saved in your phone. You are advised to make a copy of such information before taking your phone in for repair.

For more support go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

***I have problems with memory capacity or the phone is working slowly***

***Possible cause:*** The phone memory is full or the memory contents are not properly organized.

***Solution:*** Restart your phone every day to free memory and increase the capacity of your phone.

You also have the option to do a **Master reset**. Some of the personal data and settings you have made will be lost when you do this

➡ **78 Master reset.**

***No battery icon appears when I start charging the phone***

*Possible cause:* The battery is empty or has not been used for a long time.

*Solution:* It may take up to 30 minutes before the battery icon appears on the screen.

***Some menu options appear in grey***

*Possible cause:* A service is not activated or your subscription does not support the function.

*Solution:* Contact your network operator.

*Possible cause:* Since you cannot send themes, pictures and sounds that are copyright-protected, the **Send** menu is sometimes unavailable.

***I do not understand the language in menus***

*Possible cause:* The wrong language is set in the phone.

*Solution:* Change the language

➡ **17 Phone language.**

***I cannot turn on the phone***

*Possible cause:* The battery is discharged.

*Solution:* Recharge the battery

➡ **5 To charge the battery.**

*Solution:* Turn the phone on with the charger attached. If the phone starts, restart the phone with no charger attached.

***I cannot charge the phone or battery capacity is low***

*Possible cause:* The charger is not properly connected to the phone.

*Solution:* Make sure that the charger connector clicks properly into place when connected

➡ **5 To charge the battery.**

*Possible cause:* The battery connection is poor.

*Solution:* Remove the battery and clean the connectors. You can use one of the following lightly soaked in alcohol; a soft brush, a cloth or a cotton bud. Make sure that the battery is completely dry before you put it back. Check that the battery connectors in the phone are not damaged.

*Possible cause:* The battery is worn out and needs to be replaced.

*Solution:* Try another battery and charger for the same phone model, or visit your retailer and ask them to verify if the battery and charger are working properly.

### ***The phone turns itself off***

*Possible cause:* The **(1)** button has been pushed unintentionally.

*Solution:* Turn on the automatic key lock, or lock the keypad manually  
➡ **74 Keypad lock.**

*Possible cause:* The battery connection is poor.

*Solution:* Make sure the battery is inserted correctly  
➡ **5 To insert SIM card and battery.**

### ***I cannot use SMS/text messages on my phone***

*Possible cause:* Settings are missing or incorrect.

*Solution:* Contact your network operator to find out the correct SMS service centre setting  
➡ **38 Text messaging (SMS).**

### ***I cannot use iMMS/picture messages on my phone***

*Possible cause:* Your subscription does not include data capability.

*Solution:* Please contact your network operator.

*Possible cause:* Settings are missing or incorrect.

*Solution:* Please contact your network operator.

### ***I cannot use the Internet***

*Possible cause:* Your subscription does not include data capability.

*Solution:* Please contact your network operator.

*Possible cause:* Internet settings are missing or incorrect.

*Solution:* Please contact your network operator.

### ***The phone cannot be detected by other users via Bluetooth™ wireless technology***

*Possible cause:* You have not turned the Bluetooth function on.

**Solution:** Make sure that the Bluetooth function is on and visibility is set to show phone

➡ 65 To receive an item.

**I cannot synchronize or transfer data between my phone and my computer, when using the USB cable provided**

**Possible cause:** The cable has not been properly installed and detected on your computer, or the software that came with your phone has not been properly installed on the computer.

**Solution:** Go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support) Choose your region and country, choose your phone model, then choose *Learn more - Getting started*. The guide *Synchronizing the phone with a computer* contains installation instructions and a troubleshooting guide, that may assist you in solving the problem.

### Master reset


The changes that you have made to settings and the content that you have added or edited, will be deleted.

If you select **Reset settings**, the changes that you have made to settings will be deleted.

If you select **Reset all**, in addition to your changes to settings, all contacts, messages, personal data, and content that you have downloaded, received or edited will also be deleted.

### To reset the phone

- 1 ▶ **Settings** ▶ the **General** tab  
▶ **Master reset**.
- 2 ▶ **Reset settings** or ▶ **Reset all**.
- 3 When instructions appear ▶ **Continue**.

 *If you select **Reset all**, content such as melodies and pictures that you have downloaded, received or edited is also deleted.*

### Error messages

#### Insert SIM

**Possible cause:** There is no SIM card in the phone or you may have inserted it incorrectly.

**Solution:** Insert a SIM card  
➡ 5 To insert SIM card and battery.

**Possible cause:** The SIM card connectors need cleaning.

**Solution:** Remove the SIM card and clean it. Also check that the card is not damaged so that you cannot connect it to the phone connectors. If it is damaged, contact your network operator to ask for a new SIM card.

#### Insert correct SIM card

**Possible cause:** The phone is set to only work with certain SIM cards.

**Solution:** Check if you are using the correct operator SIM card for your phone.

#### Wrong PIN/Wrong PIN2

**Possible cause:** You have entered your PIN or PIN2 incorrectly.

**Solution:** Enter the correct PIN or PIN2  
▶ Yes ➡ 73 SIM card lock.

#### PIN blocked/PIN2 blocked

**Possible cause:** You have entered your PIN or PIN2 code incorrectly three times in a row.

**Solution:** To unblock  
➡ 73 SIM card lock.

#### Codes do not match

**Possible cause:** The two codes that you have entered do not match.

**Solution:** When you want to change a security code (for example your PIN) you have to confirm the new code by entering exactly the same code again.  
➡ 73 SIM card lock.

#### No netw. coverage

**Possible cause:** Your phone is in flight mode.

**Solution:** Restart the phone in normal mode ➡ 7 Flight mode menu.

**Possible cause:** Your phone is not receiving any radio signal, or the received signal is too weak.

**Solution:** Contact your network operator and make sure that the network has coverage where you are. If so, search for a network.

**Possible cause:** The SIM card is not working properly.

**Solution:** Insert your SIM card in another phone. If you still get the same or a similar message, please contact your network operator.

**Possible cause:** The phone is not working properly.

**Solution:** Insert your SIM card in another phone. If this works, it is probably the phone that is causing the problem. Please contact the nearest Sony Ericsson service location.

#### **Emerg. calls only**

**Possible cause:** You are within range of a network, but you are not allowed to use it. However, in an emergency, some network operators allow you to call the international emergency number 112.

**Solution:** You have to move to get a signal that is strong enough. Contact your network operator and make sure you have the right subscription  
➡ *26 Emergency calls.*

#### **Phone lock**

**Possible cause:** The phone is locked.

**Solution:** To unlock the phone  
➡ *74 Phone lock.*

#### **Phone lock code:**

**Possible cause:** The phone lock code is required.

**Solution:** Enter a phone lock code. Your phone has a default phone lock code 0000 ➡ *74 Phone lock.*

#### **PUK blocked. Contact operator.**

**Possible cause:** You entered your personal unblocking key code (PUK) incorrectly 10 times in a row.

**Solution:** Contact your network operator.

#### **Charging, alien battery**

**Possible cause:** The battery that you are using is not a Sony Ericsson-approved battery.

**Solution:** ➡ *84 Battery.*



# Important information

*Sony Ericsson Consumer Web site, service and support, safe and efficient use, end user license agreement, warranty, declaration of conformity.*

## Sony Ericsson Consumer Web site

At [www.sonyericsson.com/support](http://www.sonyericsson.com/support) is a support section where help and tips are only a few clicks away. Here you will find the latest computer software updates and tips on how to use your product more efficiently.

## Service and support

From now on you will have access to a portfolio of exclusive service advantages such as:

- Global and local Web sites providing support
- A global network of Call Centers
- An extensive network of Sony Ericsson service partners

Country/region	Phone number
----------------	--------------

Australia	1-300 650 050
Argentina	800-333-7427
Austria	0810 200245
Belgium	02-7451611
Brazil	4001-0444
Canada	1-866-766-9374
Central Africa	+27 112589023
Chile	123-0020-0656
China	4008100000
Colombia	18009122135
Croatia	062 000 000
Czech Republic	844 550 055

- A warranty period. Learn more about the warranty conditions in this User guide

At [www.sonyericsson.com](http://www.sonyericsson.com), under the support section in the language of your choice, you will find the latest support tools and information, such as software updates, Knowledge base, Phone setup and additional help when you require it.

For operator-specific services and features, please contact your network operator for more information.

You can also contact our Call Centers. Use the phone number for the nearest Call Center in the list below. If your country/region is not represented in the list, please contact your local dealer. (The phone numbers below were correct at the time of going to print. You can always find the latest updates at [www.sonyericsson.com](http://www.sonyericsson.com).)

In the unlikely event that your product needs service, please contact the dealer from whom it was purchased, or one of our service partners. Save your proof of purchase, you will need it if you need to claim warranty.

You will be charged for a call to one of our Call Centers according to national rates, including local taxes, unless the phone number is a toll-free number.

## Email address

[questions.AU@support.sonyericsson.com](mailto:questions.AU@support.sonyericsson.com)  
[questions.AR@support.sonyericsson.com](mailto:questions.AR@support.sonyericsson.com)  
[questions.AT@support.sonyericsson.com](mailto:questions.AT@support.sonyericsson.com)  
[questions.BE@support.sonyericsson.com](mailto:questions.BE@support.sonyericsson.com)  
[questions.BR@support.sonyericsson.com](mailto:questions.BR@support.sonyericsson.com)  
[questions.CA@support.sonyericsson.com](mailto:questions.CA@support.sonyericsson.com)  
[questions.CF@support.sonyericsson.com](mailto:questions.CF@support.sonyericsson.com)  
[questions.CL@support.sonyericsson.com](mailto:questions.CL@support.sonyericsson.com)  
[questions.CN@support.sonyericsson.com](mailto:questions.CN@support.sonyericsson.com)  
[questions.CO@support.sonyericsson.com](mailto:questions.CO@support.sonyericsson.com)  
[questions.HR@support.sonyericsson.com](mailto:questions.HR@support.sonyericsson.com)  
[questions.CZ@support.sonyericsson.com](mailto:questions.CZ@support.sonyericsson.com)

Denmark	33 31 28 28	questions.DK@support.sonyericsson.com
Finland	09-299 2000	questions.FI@support.sonyericsson.com
France	0 825 383 383	questions.FR@support.sonyericsson.com
Germany	0180 534 2020	questions.DE@support.sonyericsson.com
Greece	801-11-810-810 210-89 91 919 (from mobile phone)	questions.GR@support.sonyericsson.com
Hong Kong	8203 8863	questions.HK@support.sonyericsson.com
Hungary	+36 1 880 47 47	questions.HU@support.sonyericsson.com
India	1800 11 1800 (toll free number) 39011111 (from mobile phone)	questions.IN@support.sonyericsson.com
Indonesia	021-2701388	questions.ID@support.sonyericsson.com
Ireland	1850 545 888	questions.IE@support.sonyericsson.com
Italy	06 48895206	questions.IT@support.sonyericsson.com
Lithuania	8 700 55030	questions.LT@support.sonyericsson.com
Malaysia	1-800-889900	questions.MY@support.sonyericsson.com
Mexico	01 800 000 4722 (international toll free number)	questions.MX@support.sonyericsson.com
Netherlands	0900 899 8318	questions.NL@support.sonyericsson.com
New Zealand	0800-100150	questions.NZ@support.sonyericsson.com
Norway	815 00 840	questions.NO@support.sonyericsson.com
Pakistan	111 22 55 73 Outside Karachi: (92-21) 111 22 55 73	questions.PK@support.sonyericsson.com
Philippines	+63 (02) 7891860	questions.PH@support.sonyericsson.com
Poland	0 (prefix) 22 6916200	questions.PL@support.sonyericsson.com
Portugal	808 204 466	questions.PT@support.sonyericsson.com
Romania	(+4021) 401 0401	questions.RO@support.sonyericsson.com
Russia	8(495) 787 0986	questions.RU@support.sonyericsson.com
Singapore	67440733	questions.SG@support.sonyericsson.com
Slovakia	02-5443 6443	questions.SK@support.sonyericsson.com
South Africa	0861 632222	questions.ZA@support.sonyericsson.com
Spain	902 180 576	questions.ES@support.sonyericsson.com
Sweden	013-24 45 00	questions.SE@support.sonyericsson.com
Switzerland	0848 824 040	questions.CH@support.sonyericsson.com
Taiwan	02-25625511	questions.TW@support.sonyericsson.com
Thailand	02-2483030	questions.TH@support.sonyericsson.com
Turkey	0212 47 37 777	questions.TR@support.sonyericsson.com
Ukraine	(+380) 44 590 1515	questions.UA@support.sonyericsson.com

United Arab Emirates	43 919880
United Kingdom	08705 23 7237
United States	1-866-766-9374
Venezuela	0-800-100-2250

## Guidelines for Safe and Efficient Use

Please read this information before using your mobile phone.

These instructions are intended for your safety. Please follow these guidelines. If the product has been subject to any of the conditions listed below or you have any doubt as to its proper function make sure you have the product checked by a certified service partner before charging or using it. Failure to do so might entail a risk of product malfunction or even a potential hazard to your health.



## Recommendations for safe use of product (mobile phone, battery, charger and other accessories)

- Always treat your product with care and keep it in a clean and dust-free place.
- Warning!** May explode if disposed of in fire.
- Do not expose your product to liquid or moisture or humidity.
- Do not expose your product to extremely high or low temperatures. Do not expose the battery to temperatures above +60°C (+140°F).
- Do not expose your product to open flames or lit tobacco products.
- Do not drop, throw or try to bend your product.
- Do not paint your product.
- Do not attempt to disassemble or modify your product. Only Sony Ericsson authorized personnel should perform service.



questions.AE@support.sonyericsson.com  
 questions.GB@support.sonyericsson.com  
 questions.US@support.sonyericsson.com  
 questions.VE@support.sonyericsson.com

- Do not use your product near medical equipment without requesting permission from your treating physician or authorized medical staff.
- Do not use your product when in, or around aircraft, or areas showing the sign "turn off two-way radio".
- Do not use your product in an area where a potentially explosive atmosphere exists.
- Do not place your product or install wireless equipment in the area above an air bag in your car.



## CHILDREN

KEEP OUT OF CHILDRENS REACH. DO NOT ALLOW CHILDREN TO PLAY WITH YOUR MOBILE PHONE OR ITS ACCESSORIES. THEY COULD HURT THEMSELVES OR OTHERS, OR COULD ACCIDENTALLY DAMAGE THE MOBILE PHONE OR ACCESSORY. YOUR MOBILE PHONE OR ITS ACCESSORY MAY CONTAIN SMALL PARTS THAT COULD BECOME DETACHED AND CREATE A CHOKING HAZARD.



## Power supply (Charger)

Connect the AC power adapter only to designated power sources as marked on the product. Make sure the cord is positioned so that it will not be subjected to damage or stress. To reduce risk of electric shock, unplug the unit from any power source before attempting to clean it. The AC power adapter must not be used outdoors or in damp areas. Never alter the cord or plug. If the plug does not fit into the outlet, have a proper outlet installed by a qualified electrician.

Use only Sony Ericsson branded original chargers intended for use with your mobile phone. Other chargers may not be designed to the same safety and performance standards.

## Battery

We recommend that you fully charge the battery before you use your mobile phone for the first time. A new battery or one that has not been used for a long time could have reduced capacity the first few times it is used. The battery should only be charged in temperatures between +5°C (+41°F) and +45°C (+113°F).

Use only Sony Ericsson branded original batteries intended for use with your mobile phone. Using other batteries and chargers could be dangerous. Talk and standby times depend on several different conditions such as signal strength, operating temperature, application usage patterns, features selected and voice or data transmissions when the mobile phone is being used.

Turn off your mobile phone before removing the battery. Do not put the battery into your mouth. Battery electrolytes may be toxic if swallowed. Do not let the metal contacts on the battery touch another metal object. Doing this could short-circuit and damage the battery. Use the battery for the intended purpose only.

## Personal medical devices

Mobile phones may affect the operation of pacemakers and other implanted equipment. Please avoid placing the mobile phone over the pacemaker, e.g. in your breast pocket. When using the mobile phone, use it at the ear on the opposite side of the body to the pacemaker. If a minimum distance of 15 cm (6 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you have any reason to suspect that interference is taking place,

immediately turn off your mobile phone. Contact your cardiologist for more information.

For other medical devices, please consult your physician and the manufacturer of the device.

## Driving

Please check if local laws and regulations restrict the use of mobile phones while driving or require drivers to use handsfree solutions. We recommend that you use only Sony Ericsson handsfree solutions intended for use with your product.

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a handsfree kit with an external antenna has been installed.

Always pay full attention to driving and pull off the road and park before making or answering a call if driving conditions so require.

## Emergency calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. You should therefore never rely solely upon any mobile phone for essential communications (e.g. medical emergencies).

Emergency calls may not be possible in all areas, on all cellular networks, or when certain network services and/or mobile phone features are in use. Check with your local service provider.

## Antenna

This phone contains a built-in antenna. Use of antenna devices not marketed by Sony Ericsson specifically for this model could damage your mobile phone, reduce performance, and produce SAR levels above the established limits (see below).

## Efficient use

Hold your mobile phone as you would any other phone. Do not cover the top of the phone when it is in use, as this affects call quality and may cause the phone to operate at a higher power level than needed, thus shortening talk and standby times.

## Radio frequency (RF) exposure and Specific Absorption Rate (SAR)

Your mobile phone is a low-power radio transmitter and receiver. When it is turned on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.g. ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (The Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while it is operating can be well below this value. This is because the mobile phone is designed to use the minimum power required to reach the network. Variations in SAR below the radio frequency exposure guidelines do not mean that there are variations in safety. While there may be differences in SAR levels among mobile phones, all Sony Ericsson mobile phone models are designed to meet radio frequency exposure guidelines.

For phones sold in the U.S. before a phone model is available for sale to the public, it must be tested and certified by the Federal Communications Commission (FCC) that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (that is, at the ear and worn on the body) as required by the FCC for each model. For body-worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the phone or when used with the original Sony Ericsson accessory intended for this phone and worn on the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

A separate leaflet with SAR information about this mobile phone model is included with the material accompanying this mobile phone. This information can also be found, together with more information on radio frequency exposure and SAR, at [www.sonyericsson.com/health](http://www.sonyericsson.com/health).

## Accessible Solutions/Special Needs

For phones sold in the US, you can use your TTY terminal with your Sony Ericsson mobile phone (with the necessary accessory). For information on Accessible Solutions for individuals with special needs call the Sony Ericsson Special Needs Center on 877 878 1996 (TTY) or 877 207 2056 (voice), or visit the Sony Ericsson Special Needs Center at [www.sonyericsson-snc.com](http://www.sonyericsson-snc.com).

## Disposal of old electrical and electronic equipment

This symbol indicates that all electrical and electronic equipment included shall not be treated as household waste. Instead it shall be left at the appropriate collection point for recycling of



electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## Disposing of the battery

Please check local regulations for disposal of batteries or call your local Sony Ericsson Call Center for information.

The battery should never be placed in municipal waste. Use a battery disposal facility if available.



## Memory card

Your phone is equipped with a memory card reader. Check memory card compatibility before purchase or use.

Memory cards are generally formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the memory card or contact customer support.

### WARNING:

If the memory card requires an adapter for insertion into the phone or another device, do not insert the memory card directly without the required adapter.

Precautions on memory card use:

- Do not expose the memory card to moisture.
- Do not touch terminal connections with your hand or any metal object.
- Do not strike, bend, or drop the memory card.
- Do not attempt to disassemble or modify the memory card.

- Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.
- Do not press or bend the end of the memory card adapter with excessive force.
- Do not let dirt, dust, or foreign objects get into the insert port of any memory card adapter.
- Check you have inserted the memory card correctly.
- Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- We recommend that you make a backup copy of important data. We are not responsible for any loss or damage to content you store on the memory card.
- Recorded data may be damaged or lost when you remove the memory card or memory card adapter, turn off the power while formatting, reading or writing data, or use the memory card in locations subject to static electricity or high electrical field emissions.

## Protection of personal information

To safeguard your privacy and prevent information being accessible to a third party, you should erase all personal data before selling or disposing of the product. To delete personal data, perform a master reset and remove the memory card. **DELETION OF MATERIAL FROM THE PHONE MEMORY DOES NOT ENSURE THAT SAID INFORMATION CANNOT BE RECOVERED BY A SUBSEQUENT USER. SONY ERICSSON DOES NOT WARRANT AGAINST A SUBSEQUENT USER OF THE DEVICE ACCESSING YOUR INFORMATION AND DOES NOT ASSUME ANY RESPONSIBILITY FOR SUBSEQUENT DISCLOSURE OF SAID INFORMATION EVEN IF A MASTER RESET HAS BEEN PERFORMED.** If you are concerned about such potential disclosure retain your device or secure its permanent destruction.

## Accessories

Sony Ericsson recommends use of Sony Ericsson original accessories for safe and efficient use of its products. Use of third-party accessories may decrease performance or pose a risk to your health or safety.

### LOUDNESS WARNING:

Please adjust the audio volume cautiously when using third-party audio accessories to avoid volume levels that may be harmful to your hearing. Sony Ericsson does not test use of third-party audio accessories with this mobile phone. Sony Ericsson recommends using only Sony Ericsson original audio accessories.

## End User Licence Agreement

This wireless device, including without limitation any media delivered with the device, ("Device") contains software owned by Sony Ericsson Mobile Communications AB and its affiliated companies ("Sony Ericsson") and its third party suppliers and licensors ("Software").

As user of this Device, Sony Ericsson grants you a non-exclusive, non-transferable, non-assignable license to use the Software solely in conjunction with the Device on which it is installed and/or delivered with. Nothing herein shall be construed as a sale of the Software to a user of this Device.

You shall not reproduce, modify, distribute, reverse engineer, decompile, otherwise alter or use any other means to discover the source code of the Software or any component of the Software. For avoidance of doubt, you are at all times entitled to transfer all rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided always that such third party agrees in writing to be bound by these rules.

You are granted this license for a term of the useful life of this Device. You can terminate this license by transferring all your rights to the Device on which you have received the Software to a third party in writing. If you fail to comply with any of the terms and conditions set out in this license, it will terminate with immediate effect.

Sony Ericsson and its third party suppliers and licensors are the sole and exclusive owner of and retain all rights, title and interest in and to the Software. Sony Ericsson, and, to the extent that the Software contains material or code of a third party, such third party, shall be entitled third party beneficiaries of these terms.

The validity, construction and performance of this license shall be governed by the laws of Sweden. The foregoing shall apply to the full extent permitted by, when applicable, statutory consumer rights.

## Limited Warranty

Sony Ericsson Mobile Communications AB, SE-221 88 Lund, Sweden, (Sony Ericsson) or its local affiliated company, provides this Limited Warranty for your mobile phone and original accessory delivered with your mobile phone (hereinafter referred to as "Product").

Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Sony Ericsson Call Center (national rates may apply) or visit [www.sonyericsson.com](http://www.sonyericsson.com) to get further information.

## OUR WARRANTY

Subject to the conditions of this Limited Warranty, Sony Ericsson warrants the mobile phone to be free from defects in design, material and workmanship at the time of its original purchase by a consumer, and for a subsequent period of one (1) year. All original accessory delivered with the mobile phone will be warranted within six (6) months from the date of purchase.

## WHAT WE WILL DO

If, during the warranty period, this Product fails to operate under normal use and service, due to defects in design, materials or workmanship, Sony Ericsson authorised distributors or service partners, in the country/region\* where you purchased the Product, will, at their option, either repair or replace the Product in accordance with the terms and conditions stipulated herein.

Sony Ericsson and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads or other information may be lost when your Sony Ericsson Product is repaired or replaced. At present Sony Ericsson may be prevented by applicable law, other regulation or technical restrictions from making a backup copy of certain downloads. Sony Ericsson does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Sony Ericsson Product such as downloads, calendar and contacts before handing in your Sony Ericsson Product for repair or replacement.

## CONDITIONS

- 1 The warranty is valid only if the original proof of purchase issued to the original purchaser by a Sony Ericsson authorised dealer, specifying the date of purchase and serial number\*\*, for this Product, is presented with the Product to be repaired or replaced. Sony Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.

- 2 If Sony Ericsson repairs or replaces the Product, the repaired or replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony Ericsson.
- 3 This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sony Ericsson instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, acts of God or damage resulting from liquid.

A rechargeable battery can be charged and discharged hundreds of times. However, it will eventually wear out – this is not a defect. When the talk-time or standby time is noticeably shorter, it is time to replace your battery. Sony Ericsson recommends that you use only batteries and chargers approved by Sony Ericsson.

Minor variations in display brightness and color may occur between phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable.

Minor variations in the appearance of the camera image may occur between phones. This is not uncommon in digital cameras and does not mean that the camera is defective in any way.

- 4 Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony Ericsson, Sony Ericsson will not be responsible for the operation, availability, coverage, services or range of that system.



- 5 This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony Ericsson authorised person.
- 6 The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony Ericsson branded original accessories intended for use with the Product.
- 7 Tampering with any of the seals on the Product will void the warranty.
- 8 THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY ERICSSON OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

## \*EUROPEAN UNION (EU)

If you have purchased your Product in an EU country/region you can have your Product serviced, under the conditions set out above, within the warranty period in any EU country/region where an identical Product is sold by an authorised Sony Ericsson distributor. To find out if your Product is sold in the EU country/region you are in, please call the local Sony Ericsson Call Center. Please observe that certain services may not be possible elsewhere than in the country/region of original purchase, for example due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other EU countries/regions. It may not be possible to repair SIM-locked Products.

\*\* In some countries/regions additional information is requested. If so, this is clearly shown on the valid proof of purchase.

## FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.



## Bluetooth wireless technology

Bluetooth™ Qualified Design ID is B011122.

## Declaration of Conformity

We, Sony Ericsson Mobile Communications AB of  
Nya Vattentornet

SE-221 88 Lund, Sweden

declare under our sole responsibility that our  
product

**Sony Ericsson type AAC-1052023-BV**

and in combination with our accessories, to which  
this declaration relates is in conformity with the  
appropriate standards 3GPP TS 51.010-1,  
EN 301489-7, EN 300328, EN 301489-17 and  
EN 60950, following the provisions of, Radio  
Equipment and Telecommunication Terminal  
Equipment directive **99/5/EC** with requirements  
covering EMC directive **89/336/EEC**, and Low  
Voltage directive **73/23/EEC**.

Lund, December 2006

**CE 0682**



**Shoji Nemoto,**  
*Head of Product Business Group GSM.*

We fulfil the requirements of the R&TTE Directive  
**(99/5/EC)**.

# Index

- A**
  - alarms ..... 68
  - animation ..... 48
  - answering service ..... 31
  - applications ..... 59
  - appointments ..... 68
  - automatic redialling ..... 25
- B**
  - battery
    - inserting and charging ..... 5
    - use and care ..... 84
  - Bluetooth wireless technology ..... 63
  - business cards ..... 38
  - buttons ..... 10, 14
- C**
  - calculator ..... 71
  - calendar ..... 68–69
  - call divert ..... 33
  - call list ..... 30
  - call numbers in message ..... 39
  - call time ..... 37
  - call waiting ..... 34
  - caller-specific ringtones ..... 29
  - calls
    - accepting ..... 35
    - answering and rejecting ..... 25
    - emergency ..... 26
    - handling two calls ..... 34
    - international ..... 25
    - making and receiving ..... 6, 25
    - making notes during ..... 37
    - missed ..... 26
    - putting on hold ..... 34
    - recording ..... 58
    - restricting ..... 36
  - camera ..... 8
    - effects ..... 47
    - options ..... 46
    - overview ..... 45
    - settings ..... 46
  - code memo ..... 71
  - conference calls ..... 34
  - contacts
    - adding phone contacts ..... 27
    - default contacts ..... 27
    - groups of ..... 37
    - synchronizing ..... 62

<b>D</b>		<b>Internet</b>	
date .....	73	bookmarks .....	61
delivery status .....	41	i-mode™ .....	60
Disc2Phone .....	52	passwords and cache .....	61
display, brightness .....	75	profiles .....	61
downloading files .....	61	security and certificates .....	61
<b>E</b>		<b>K</b>	
effects, camera .....	47	keypad lock .....	15, 74
emergency call .....	26	keys .....	10, 14
entering letters .....	17	<b>L</b>	
<b>F</b>		language .....	76
file manager .....	22	lock	
fixed dialling .....	36	keypad .....	74
<b>G</b>		phone .....	74
games .....	59	SIM card .....	73
groups .....	37	long messages .....	40
<b>H</b>		<b>M</b>	
handsfree .....	11, 31, 32, 51	M2™ .....	11
Bluetooth .....	64	magic word .....	32
help .....	6	master reset .....	78
hiding number .....	37	memory card .....	23
<b>I</b>		M2™ .....	86
icons .....	16	memory status .....	23
iMail .....	43	menu overview .....	12
iMMS See picture messaging (iMMS) ..	41	menus .....	14
i-mode™ activity menu .....	7		

messages		pictures	48–49
area and cell information	44	editing	50
delivery status	41	screen saver	48
iMail	43	PIN code	
picture (iMMS)	41	changing	73
text	38	unblocking	4
microphone	26	profiles	72
music		PUK	4, 73
transferring	52	<b>R</b>	
music player	51	remote control	65
MusicDJ™	56	ringtones	56
my numbers	35	caller-specific	29
<b>N</b>		<b>S</b>	
navigating menus	14	safety guidelines	83
networks	25	screen saver	48
notepad	37	sending	
notes	70	appointments and tasks	69
<b>P</b>		business cards	38
phone		melodies and ringtones	57
assembly	4	notes	70
language	17	pictures	48, 49
lock	74	themes	50
phone overview	10	settings	
PhotoDJ™	50	display brightness	75
picture messages (iMMS)	41–42	setup wizard	5
picture sizes	46	shortcuts	16

SIM card		turning on/off	
contact numbers .....	27	Bluetooth wireless technology .....	63
copying to/from .....	29	phone lock .....	74
locking and unblocking .....	73	SIM lock protection .....	74
SMS See text messaging (SMS) .....	38	<b>U</b>	
SOS See emergency calls .....	26	USB cable .....	66
sound recorder .....	58	<b>V</b>	
sound, transferring and directing .....	65	video player .....	51
speed dialling .....	30	video recorder .....	45
standby .....	6	VideoDJ™ .....	57
start-up screen .....	48, 75	voice answering .....	32
stopwatch .....	71	voice control .....	31–33
synchronizing .....	62	voicemail .....	31
<b>T</b>		volume	
T9™ Text Input .....	18	ear speaker .....	26
tasks .....	69–70	ringtone .....	56
templates .....	40	<b>W</b>	
text messages .....	38, 38–41	wallpaper .....	48
themes .....	50	warranty .....	87
time .....	73	writing languages .....	17
timer .....	70	<b>Z</b>	
transfer method		zoom .....	46
Bluetooth wireless technology .....	63		
USB .....	66		
transferring			
camera pictures .....	47		
files .....	66		
music .....	52		

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>