Mobile Broadband ExpressCard EC400g HSPA/UMTS/EDGE and GPS

Quick Start Guide



INTRODUCTION

Thank you for choosing a Sony Ericsson EC400/EC400g Mobile Broadband ExpressCard. The Wireless Manager application is automatically installed when you plug in the EC400 to your computer. You can connect using HSPA, UMTS, EDGE and GPRS; you can also send and receive SMS messages. The EC400g provides GPS capability. **Note:** Your EC400 does not support GSM or UMTS voice calls.

BEFORE YOU BEGIN

Wireless Manager works with the following versions of the Windows® operating system: • Windows 2000 Service Pack 4 (SP4)

- Windows XP Service Pack 2 (SP2); 32-bit (x86) and 64-bit (x64) processors

 Windows Vista™; 32-bit (x86) and 64-bit (x64) processors
 Your PC must meet or exceed the minimum system requirements for your version of Windows. In addition, you will need: • an ExpressCard slot

110 MB of available disk space

Your subscription must support Internet access over GPRS/EDGE/UMTS/HSPA.

INSTALLING YOUR EC400 AND WIRELESS MANAGER 5

Insert your SIM card into the SIM slot on your EC400. Make sure the gold contacts on the SIM card are facing towards the EC400 and the angled corner (A) of the SIM card is positioned as shown in Figures 1 and 2.



- 2. Fully insert your EC400 into the ExpressCard slot on your laptop and put the antenna in the up position as shown in Figure 3.
- After a few seconds, the Sony Ericsson EC400 dialog box opens. Select Install Wireless 3 Manager.

Note: If the Sony Ericsson EC400 dialog box fails to appear, open Windows Explorer, navigate to My Computer, find the disk drive called Sony Ericsson EC400 and double-click Setup.exe in the INSTALL folder.

The software installation procedure starts. Follow the on-screen instructions

Important: The installation process might pause for several minutes. During this time the drivers are saved to your hard drive. DO NOT cancel.

Note: Wireless Manager is installed in the same language as your Windows operating system. If Wireless Manager does not support your language, English is installed.

- 5.
- When installation is complete, click **Finish**. Eject, wait 10 seconds and reinsert the EC400.
- 6. 7. Once you receive the Hardware Ready message, your EC400 and Wireless Manager are now installed and ready for use.

STARTING WIRELESS MANAGER

- Select Start + All Programs + Sony Ericsson + Wireless Manager 5 + 1. Wireless Manager 5.
- Wireless Manager opens. If requested, enter your SIM card PIN, and then click OK.
- 3 Click the **Enable** button to turn on the radio transmitter. After a short delay your signal strength and the name of your network operator are displayed in the Status window.

CREATING A CONNECTION PROFILE

Wireless Manager should identify your network operator from the information in your SIM card and automatically configure your Internet connection. The Connect button will be ready for you to click and make a connection.

If you see a 'No Connection Profile' message or if you wish to define your connection manually: 1. From the Wireless Manager window, select View → Settings and click on Profiles.

- 2. Un-check the Let Wireless Manager Choose the Connection Profile check box and click the New button.
- 3. Enter the necesary information and click OK. Press F1 if you need help

USING A CONNECTION

- Start Wireless Manager. 1.
- Click the Connect button or right-click the status icon Man and select Connect. 2.
- 3. To end the connection, click Disconnect or right-click the status icon and select Disconnect.

WIRELESS MANAGER STATUS ICON

The Wireless Manager status icon 🔚 is displayed in the Windows notification area located in the lower right-hand corner of the screen, by the clock.

The icon displays the status of your EC400, typically the signal

strength on a scale of zero to five bars and the type of network available. The most common states are

The EC400 has mobile network service of type <u>H</u>SPA, <u>U</u>MTS, <u>E</u>DGE or <u>G</u>PRS.

- -The EC400 is searching for a network.
- Ø Radio is disabled. Right-click and select Enable Radio to turn it on.
- Wireless Manager is waiting for your EC400 to be inserted
- Wireless Manager is waiting for you to enter your SIM PIN code

DISABLING THE RADIO AND EXITING WIRELESS MANAGER

To disable the radio, right-click 🌌 or select Radio 🔿 Disable Radio. To exit Wireless Manager, select Radio 🔹 Exit or right-click the status icon 📶 and select Exit

FURTHER WIRELESS MANAGER AND EC400 FEATURES

You can also use Wireless Manager to view and change settings Z, work with the SIM phone book ■, send and receive SMS messages ■ and access PlayNow™ I. Press F1 or click Help for detailed information. Select View + GPS to access the EC400g GPS functions.

Status LEDs

LED	Color	Flash Rate	Description	
Mobile	Red 🔴	Fast	Searching for a mobile network	
Service	Green 🌘	Medium	Registered to GPRS or EDGE service, not	
connected	Green 🌘	Slow	Connected - GPRS or EDGE service	
	Blue 🔵	Medium	Registered to UMTS or HSPA service, not connected	
	Blue 🔵	Slow	Connected - UMTS or HSPA service	
GPS	Yellow 😑	Fast	Searching, position not fixed	
	Yellow 😑	Slow	Position fixed	
	Off		Off	

ADDITIONAL RESOURCES

When you install Wireless Manager, the *EC400 User Guide* is automatically saved to your PC. Click Start + All Programs + Sony Ericsson + Wireless Manager 5 to select the document. The latest information, updates and a printable Wireless Manager User Guide are available from the Sony Ericsson Web site: www.sonyericsson.com/support

SERVICE AND SUPPORT

Purchasing an EC400 gives you access to a number of exclusive advantages such as global and local web site support, a global network of call centers, and an extensive global network of Sony Ericsson service partners.

The terms and conditions of your Sony Ericsson warranty are listed in the User Guide and also available on the web at www.sonvericsson.com/support. Save your original proof of purchase. you will need it for warranty repair claims. In the unlikely event your product needs service, please return it to the dealer from

whom it was purchased or one of our service partners. For more information, go to www.sonvericsson.com/support or contact our call center. The phone numbers and e-mail addresses are listed on the back page of this guide. If your country/region is not represented on the list, please contact your local dealer.

The caller will be charged according to national rates, including local taxes, unless the phone number is a toll-free number.

TRADEMARKS AND NOTICES

© Sony Ericsson Mobile Communications AB, 2008. All rights reserved. Publication number: EN/1210-7001

This document is published by Sony Ericsson Mobile Communications AB, Sweden, without any warranty. The information in this document may change without notice due to typographical errors, inaccurate information, or improvements to programs and/or equipment. Such changes will be incorporated into new editions of this document by Sony Ericsson Mobile Communications AB. Sony Ericsson is the trademark or registered trademark of Sony Ericsson Mobile Communications AB. Windows 2000, XP and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

All other product or service names mentioned in this guide are trademarks of their respective companies. The information contained in this document was correct at the time of printing.

Wireless Manager status icon

CONTACT SONY ERICSSON

		·	
Argentina	800-333-7427 questions.AR@support.sonyericsson.com	Lithuania	8 700 55030 questions.LT@support.sonyericsson.com
Aruba	888-821-8408	Malaysia	1-800-889900 guestions.MY@support.sonvericsson.com
Australia	questions.AU@support.sonyericsson.com	Mexico	01 800 000 4722 questions.MX@support.sonvericsson.com
Austria	uestions.AT@support.sonyericsson.com	Netherlands	0900 899 8318
Barbados	1-888-821-8408		questions.NL@support.sonyencsson.com
Belgium	02-7451611 questions.BE@support.sonyericsson.com	New Zealand	0800-100150 questions.NZ@support.sonyericsson.com
Bolivia	800 101 110 - 800 853 3458 (English) 800 101 111 - 800 853 3458 (Spanish)	Nicaragua	1 800 0174 - 800 853 3458 1 800 0164 - 800 853 3458 (Spanish)
Brazil	4001-0444 questions.BR@support.sonyericsson.com	Norway	815 00 840 questions.NO@support.sonyericsson.com
Canada	1-866-766-9374 questions.CA@support.sonyericsson.com	Pakistan	111 22 55 73 (92-21) 111 22 55 73 (Outside Karachi) questions.PK@support.sonvericsson.com
Cayman Islands	1-888-821-8408	Panama	001-888-821-8408
Central Africa	+27 112589023 questions.CF@support.sonyericsson.com	Paraguay	800 853 3458 008 11 800-800 853 3458 (Asuncion City)
Chile	123-0020-0656 questions.CL@support.sonyericsson.com	Peru	0 800 70 088 - 800 853 3458 0 800 50 288 - 800 853 3458 (English)
China	400810000 guestions.CN@support.sonyericsson.com	Dhilipping	0 800 5 0000 - 800 853 3458 (Spanish)
Colombia	18009122135 questions CO@support sonvericsson.com	Philippines	403 (02) 789 1800 questions.PH@support.sonyericsson.com
Costa Rica	0-800-011-0400	Poland	0 (prefix) 22 6916200 questions.PL@support.sonyericsson.com
Croatia	062 000 000	Portugal	808 204 466 questions.PT@support.sonyericsson.com
Czech Republic	844 550 055	Romania	(+4021) 401 0401 questions.RO@support.sonyericsson.com
Denmark	questions.C2@support.sonyericsson.com 33 31 28 28	Russia	8(495) 787 0986 questions.RU@support.sonyericsson.com
Dominican Republic	questions.DK@support.sonyericsson.com 1-888-821-8408	Singapore	67440733 questions.SG@support.sonvericsson.com
Ecuador	1 999 119 - 800 853 3458 1 800 225 528 - 800 853 3458	Slovakia	02-5443 6443 questions.SK@support.sonyericsson.com
	1 800 999 119 - 800 853 3458 (Spanish)	South Africa	0861 632222
Estonia	372 (0)6 032 032	Spain	902 180 576
Finland	09-299 2000	Ot Margaret and	questions.ES@support.sonyericsson.com
France	0 825 383 383	the Grenadines	1888-821-8408
	questions.FR@support.sonyericsson.com	Suriname	156
Germany	0180 534 2020 questions.DE@support.sonyericsson.com	Sweden	013-24 45 00 questions.SE@support.sonyericsson.com
Greece	801-11-810-810 210-89 91 919 (from mobile phone)	Switzerland	0848 824 040 questions.CH@support.sonyericsson.com
Guatemala	questions.GR@support.sonyericsson.com 1-800-999-4030	Taiwan	02-25625511 questions.TW@support.sonvericsson.com
Haiti	001-800-0-123	Thailand	02-2483030
Honduras	001 800 0 123 - 800 853 3458		questions.TH@support.sonyericsson.com
Hong Kong	8203 8863	Trinidad and Tobago	1888-821-8408
Hungary	404 47 47 47 47 47	Turkey	u212 4/3 // // questions.TR@support.sonyericsson.com
India	questions.HU@support.sonyericsson.com 1800.11.1800.(toll free number)	Ukraine	(+380) 44 590 1515 questions.UA@support.sonyericsson.com
	39011111 (from mobile phone) questions.IN@support.sonyericsson.com	United Arab Emirates	43 919880 questions.AE@support.sonyericsson.com
Indonesia	021-2701388 questions.ID@support.sonyericsson.com	United Kingdom	08705 23 7237 questions.GB@support.sonyericsson.com
Ireland	1850 545 888 questions.IE@support.sonyericsson.com	United States	1-866-766-9374 questions.US@support.sonyericsson.com
Italy	06 48895206	Uruguay	000 410 - 800 853 3458
Jamaica	questions.IT@support.sonyericsson.com 1-888-821-8408	Venezuela	0-800-100-2250 questions.VE@support.sonyericsson.com
Latvia	67 21 43 01	Vietnam	111 2255 73
			questions.VN@support.sonyericsson.com

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com