

DVD Home Theatre System

Operating Instructions

©2010 Sony Corporation Printed in China

DAV-TZ130

GB

Trademarks

This system incorporates with Dolby® Digital and Dolby Pro Logic adaptive matrix surround decoders.
* Manufactured under license from Dolby Laboratories.
Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.

This system incorporates High-Definition Multimedia Interface (HDMI™) technology. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

"BRAVIA" is a trademark of Sony Corporation.

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

Windows Media is a registered trademark of Microsoft Corporation in the United States and/or other countries.

ABOUT MPEG-4 VISUAL: THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NONCOMMERCIAL USE OF A CONSUMER FOR DECODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO.

NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE <http://www.mpegla.com/>

For non-US models:

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video. ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified™ device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

DivX®, DivX Certified™ and associated logos are registered trademarks of DivX, Inc. and are used under license.

About these Operating Instructions

"DVD" may be used as a general term for a DVD VIDEO, DVD+RW/DVD+R, and DVD-RW/DVD-R.

The system enters standby mode automatically.


When the system is in pause, stop, open, or no disc mode, the system will enter standby mode automatically after 30 minutes.

5

Connecting the Speakers


Caution
Do not use any speakers other than those supplied with this system.

To attach the foot pads to the subwoofer

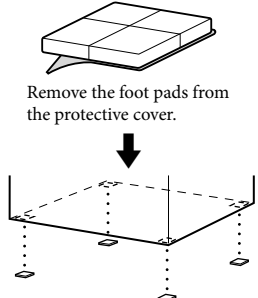

Note
Use caution when placing the speakers and/or speaker stands attached to the speakers on a specially treated (waxed, oiled, polished, etc.) floor, as staining or discoloration may result.


Insert the connectors of the speaker cords to match the color of the SPEAKERS jacks of the unit until they click.

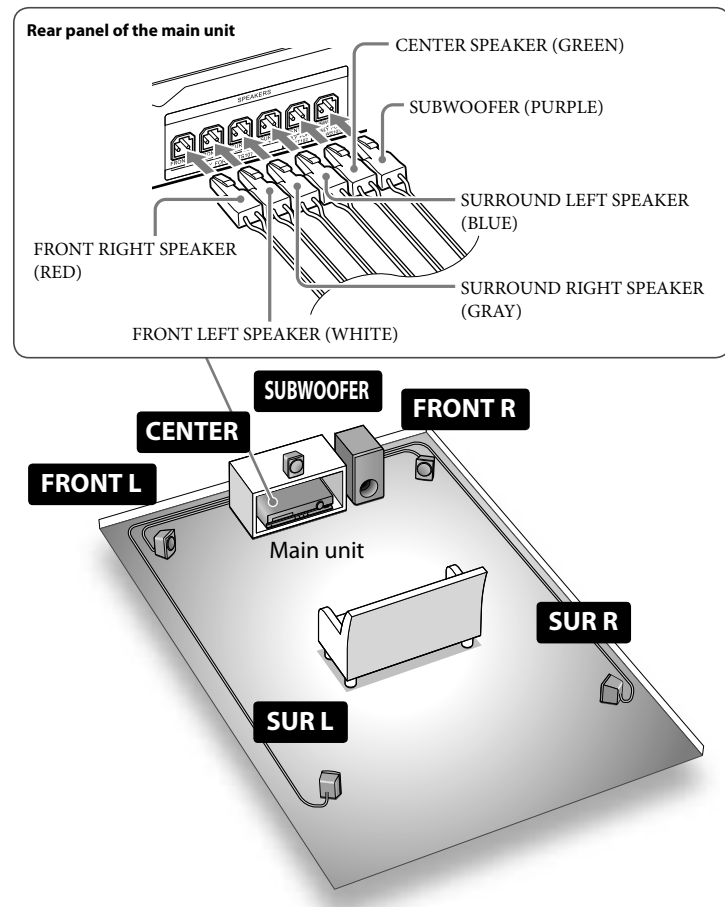

9

Color System Setup

- 1 Connect the AC power cord.
- 2 Turn on the power of the main unit and TV.

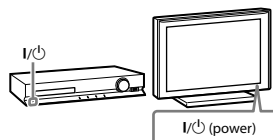


- 3 Press **FUNCTION** repeatedly or **DVD/CD** to switch the function to **DVD/CD**. Playback starts automatically if a disc with an auto playback function is loaded. Press **■** twice to stop playback.
- 4 Switch the input selector on your TV to display "Home Theatre System."
- 5 Press **SETUP** in stop mode. The Setup Menu appears.
- 6 Press **←/→** repeatedly to select [Preference Page], then press **○**.
- 7 Press **↑/↓** repeatedly to select [TV Type], then press **○**.
- 8 Press **↑/↓** repeatedly to select [PAL] or [NTSC] from the displayed list, then press **○**.
- 9 Press **SETUP** to turn off the Setup Menu.

Note
The display on the TV screen may be interrupted momentarily after changing the color system as described above.

Parts and Controls :


Front panel

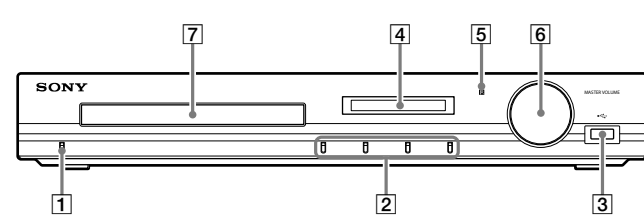

- 1 I/O (on/standby)
Turns on the unit, or sets it to standby mode.
- 2 Play operation buttons
▲ (open/close)
Opens or closes the disc tray.
▶ (play)
Starts or re-starts playback (resume play).
■ (stop)
Stops playback and remembers the stop point (resume point).
The resume point for a title/track is the last point you played.

- FUNCTION**
Selects the playback source.
- 3 **⏏ (USB port)**
Used for connecting a USB device.
 - 4 **Front panel display**
 - 5 **Remote sensor**
 - 6 **MASTER VOLUME control**
Adjusts the system's volume.
 - 7 **Disc tray**

Rear panel

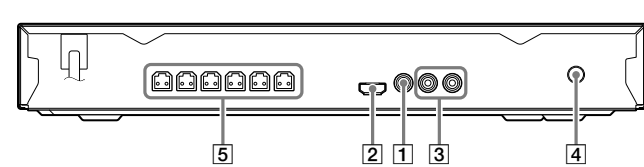

- 1 VIDEO OUT jack
- 2 HDMI OUT jack
- 3 TV/CABLE (AUDIO IN L/R) jacks
- 4 ANTENNA (FM COAXIAL 75Ω) jack
- 5 SPEAKERS jacks

13

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus. To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc. Do not place the naked flame sources such as lighted candles on the apparatus. As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately. The main plug is used to disconnect this device from the AC outlet, so position this device in a location where it can be easily unplugged. Do not install the appliance in a confined space, such as a bookcase or built-in cabinet. Do not expose batteries or apparatus with battery-installed to excessive heat such as sunshine, fire or the like. The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off. To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions. Indoor use only.

CAUTION
The use of optical instruments with this product will increase eye hazard.

Owner's Record
The model and serial numbers are located on the rear exterior of the unit. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

For European and Mexican models:
This appliance is classified as a CLASS 1 LASER product. This marking is located on the rear exterior of unit.

For European and Mexican models:
This appliance is classified as a CLASS 1 LASER product. This marking is located on the rear exterior of unit.

For the customers in the USA
To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Owner's Record
The model and serial numbers are located on the rear exterior of the unit. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

2

Playable Discs

DVD	DVD-ROM DVD-R/DVD-RW DVD+R/DVD+RW
CD	CD-DA (Music CD) CD-ROM CD-R/CD-RW VIDEO CD Super VCD

A CD or DVD will not play if it has not been correctly finalized. For more information, refer to the operating instructions supplied with the recording device.

Discs that cannot be played

- Blu-ray Discs
- HD DVDs
- DVD-RAMs
- DVD Audio discs
- PHOTO CDs
- Super Audio CDs
- Data track of CD-Extras
- Audio material side on DualDiscs
- DVD-R/DVD-RW/DVD+R/DVD+RW in VR (Video Recording) mode
- CPRM (Content Protection for Recordable Media)-compatible DVD-R/RW containing content flagged as "Copy once."

Notes on discs

This product is designed to playback discs that conform to the Compact Disc (CD) standard. DualDiscs and some music discs encoded with copyright protection technologies do not conform to the Compact Disc (CD) standard. Therefore, these discs may not be compatible with this product.

Note on playback operations of a DVD
Some playback operations of a DVD may be intentionally restricted by software producers. Since this system plays a DVD according to the disc contents the software producers designed, some playback features may not be available.

Note about double-layer DVDs
The playback picture and sound may be momentarily interrupted when the layers switch.

Region code (DVD VIDEO only)
Your system has a region code printed on the rear of the unit and will only play a DVD VIDEO (playback only) labeled with an identical region code or

Note about Multi Session CD
You cannot play all sessions of a multisession disc.


6

Connecting your TV

Depending on the jacks on your TV or set-top box, select the video and audio connection method.


Connecting your TV/set-top box

When connecting to a TV only

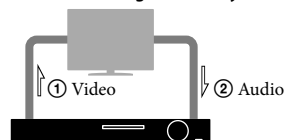

1 Connecting the video to your TV

Depending on the jacks on your TV, select one of the connection methods.

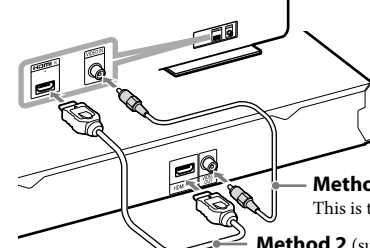

Method 1 (supplied)


This is the basic connection.

Method 2 (supplied only with certain models)

Picture quality will be improved compared to Method 1.

2 Connecting the audio from your TV/set-top box


To listen to TV or set-top box sound via the system, you need to perform a connection with an audio cord (not supplied).

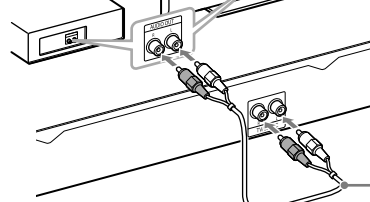

Not supplied

10

Remote control

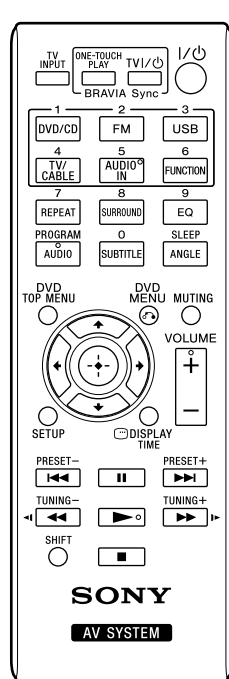

- TV INPUT**
Switches the TV's input source between the TV signal and other input sources.
- BRAVIA Sync**
ONE-TOUCH PLAY
Activates One-Touch Play.
- TV I/O (on/standby)**
Turns on the TV or sets it to standby mode.

14

Model No. DAV-TZ130
Serial No. _____

The following FCC statement applies only to the version of this model manufactured for sale in the USA. Other versions may not comply with FCC technical regulations.

NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
— Reorient or relocate the receiving antenna (aerial).
— Increase the separation between the equipment and receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for help.

CAUTION
You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.



Important Safety Instructions

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

3

Playable Types of Files

Video	
File format	Extensions
MPEG4 Video ¹⁾	"mp4", "m4v"
DivX Video ²⁾	"avi", "divx"

Music	
File format	Extensions
MP3 (MPEG1 Audio Layer 3) ³⁾	"mp3"
WMA ⁴⁾	"wma"
AAC	"m4a"

Photo	
File format	Extensions
JPEG	"jpg", "jpeg"

- 1) AVC is not compatible.
- 2) Unavailable on US models.
- 3) MP3PRO format is not compatible.
- 4) WMA DRM, WMA Lossless or WMA PRO format are not compatible.

- Note**
- Some files may not play depending on the format, the encoding, or recording condition.
 - Some USB devices may not work with this system.
 - The system supports ISO 9660 Level 1/ Level 2, or Joliet in DATA CD.
 - The system supports UDF (Universal Disk Format) in DATA DVD.
 - The system supports FAT12, FAT16, and FAT32 in USB device.
 - The system can recognize the following files or folders in DATA DVD, DATA CD and USB device:
 - up to 300 folders
 - up to 648 files

- It may take time to read files in the following cases:
 - there are many folders or files.
 - the memory capacity of the USB device that you are using is very large.
 - the memory of the USB device that you are using is fragmented.

7

- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

For the customers in Europe



Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)
This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. Applicable accessories: Remote Control.

Applicable accessories: Remote Control.

Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)
This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources. In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries. For more detailed information about recycling of this information or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

4


Unpacking

Checking the supplied items
(The inclusion of a SCART adapter and HDMI cable varies depending on the area/model.)

- Main unit (1)
- Subwoofer (1)
- SCART adapter (1)
- Speakers (5)
- FM wire antenna (aerial) (1)
- Video cord (1)
- Operating Instructions (this manual)
- Remote commander (remote) (1)
- R6 (size AA) batteries (2)
- Foot pads (subwoofer) (1 set)
- HDMI cable (1)

Preparing the remote control

Insert two R6 (size AA) batteries (supplied) by matching the ⊕ and ⊖ ends on the batteries to the markings inside the compartment.


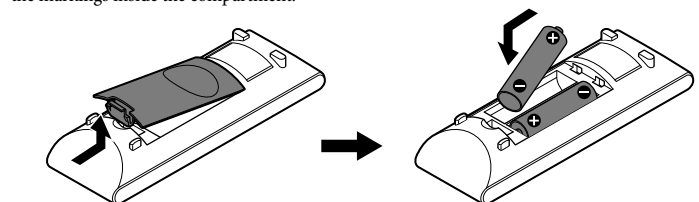


8



When Installing the Speakers on a Wall

- Caution**
- Contact a screw shop or installer for information regarding the wall material or screws to be used.
 - Use screws that are suitable for the wall material and strength. As a plaster board wall is especially fragile, attach the screws securely to a beam. Install the speakers on a vertical and flat wall where reinforcement is applied.
 - Sony is not responsible for accidents or damage caused by improper installation, insufficient wall strength or improper screw installation, natural calamity, etc.

 - 1 Prepare screws (not supplied) that are suitable for the hole on the back of each speaker. See the illustrations below.

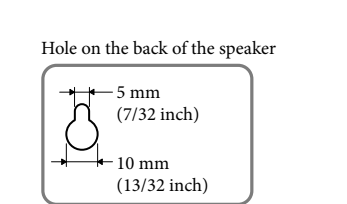


- 2 Fasten the screws to the wall, then hang the speaker on the wall.

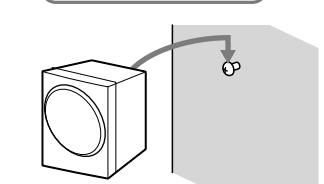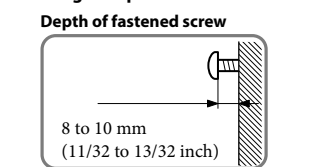

12

Playing a Disc

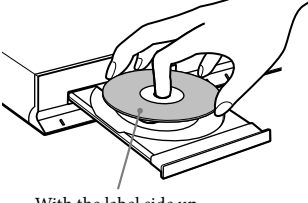- Press DVD/CD. You can also select this function by pressing FUNCTION repeatedly.
 - Press **▲** to open the disc tray.
 - Place a disc on the tray, then press **▲**.
- 
- With the label side up.
- Press **▶** to start playback.
 - Press VOLUME +/- to adjust the volume.

17

Convenient Functions

About the Control for HDMI function ("BRAVIA" Sync)

You can control a TV compatible with the Control for HDMI function by connecting it to the system via an HDMI cable.

Available features

- One-Touch Play With one touch of ONE-TOUCH PLAY on the remote control, the system and your TV automatically turn on and the TV's input is switched to the system. Playback starts automatically.
- System-Power Off When you turn the TV off by using the I/O button on the TV's remote control or TV I/O on the system's remote control, the system turns off automatically.
- System Audio Control You can switch the audio output to either the TV speakers or this system's speakers via the TV's menu.

Sleep timer

You can set the system to turn off at a preset time, so you can fall asleep listening to music.

Press and hold **SHIFT**, then press **SLEEP**. Each time you press this button, the minute display (the remaining time) changes by 10 minutes.

A countdown of the last 20 seconds until the unit turns off appears in the front panel display.

To check the remaining time Press and hold **SHIFT** and **SLEEP** for 3 seconds. The remaining time until the unit turns off appears in the front panel display.

21

Precautions

On placement

- At high volume, over long periods of time, the cabinet becomes hot to the touch. This is not a malfunction. However, touching the cabinet should be avoided. Do not place the system in a confined space where ventilation is poor as this may cause overheating.
- Do not install the system near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration, or shock.
- Do not install the system in an inclined position. It is designed to be operated in a horizontal position only.
- Do not place heavy objects on the system.

On operation

- If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the unit. Should this occur, the system may not operate properly. In this case, remove the disc and leave the system turned on for about half an hour until the moisture evaporates.
- If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.

On cleaning

- Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzine. If you have any questions or problems concerning your system, please consult your nearest Sony dealer.

25

Specifications

AUDIO POWER SPECIFICATIONS for the U.S. models

POWER OUTPUT AND TOTAL HARMONIC DISTORTION: (FTC)
Front L + Front R With 3 ohms loads, both channels driven, from 180 - 15,000 Hz; rated 23 watts per channel minimum RMS power, with no more than 1% total harmonic distortion from 250 milli watts to rated output.

Amplifier Section

POWER OUTPUT (rated):
Front L + Front R 32 W + 32 W (at 3 ohms, 1 kHz, 1% THD)

POWER OUTPUT (reference):
Front L/Front R/Surround L/Surround R: 43 watts (per channel at 3 ohms, 1 kHz)
Center: 89 watts (per channel at 6 ohms, 1 kHz)
Subwoofer: 89 watts (at 6 ohms, 100 Hz)


Inputs

TV/CABLE: Pin jack

29

Playing Files on a Disc/USB Device

- Press DVD/CD or USB.
 - DVD/CD: For a disc.
 - USB: For a USB device.You can also select the function by pressing FUNCTION repeatedly.
- Load the source.
 - For a disc Place a disc on the tray by pressing **▲** to open/close the disc tray.
 - For a USB device Connect a USB device to the **↔** (USB) port.

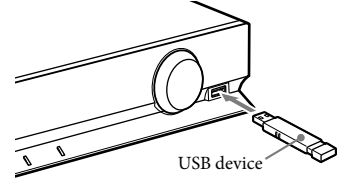

- Press **↑/↓** to select a folder, then press **○** and select a file.
- Press **▶** to start playback.
- Press VOLUME +/- to adjust the volume.

Note

- Do not remove the USB device during operation. To avoid data corruption or damage to the USB device, turn the system off when connecting or removing the USB device.

17

To cancel the sleep timer function Press and hold **SHIFT**, then press **SLEEP** repeatedly until "OFF" appears in the front panel display.

To view information about the disc

You can check the playing time and remaining time of the current title, chapter, or track.

Press and hold **SHIFT**, then press **TIME** repeatedly.

Each time you press and hold **SHIFT**, then press **TIME** while playing the disc, the displayed item changes depending on the disc.

Press and hold **SHIFT**, then press **TIME** repeatedly. Each time you press and hold **SHIFT**, then press **TIME** while playing the disc, the displayed item changes depending on the disc.

Press and hold **SHIFT**, then press **SLEEP**. Each time you press this button, the minute display (the remaining time) changes by 10 minutes.

A countdown of the last 20 seconds until the unit turns off appears in the front panel display.

To check the remaining time Press and hold **SHIFT** and **SLEEP** for 3 seconds. The remaining time until the unit turns off appears in the front panel display.

21

On cleaning discs, disc/lens cleaners

- Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction.

On your TV's color

IMPORTANT NOTICE
Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Projection televisions are especially susceptible to this.

On moving the system

Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).

On handling discs

- To keep the disc clean, handle the disc by its edge. Do not touch the surface.
- Do not stick paper or tape on the disc.
- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.

On cleaning discs

- Before playing, clean the disc with a cleaning cloth.
- Wipe the disc from the center out.
- Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.

25

CD/DVD System

Laser Diode Properties
Emission Duration: Continuous
Laser Output*: Less than 1,000 μ W
* This output is the value measurement at a distance of 200 mm from the objective lens surface on the Optical Pick-up block with 7 mm aperture.

USB Section
↔ (USB) port.
Maximum current: 500 mA

Tuner Section
System PLL quartz-locked digital synthesizer

Tuning range
North American and Brazilian models: 87.5 MHz - 108.0 MHz (100 kHz step)
Other models: 87.5 MHz - 108.0 MHz (50 kHz step)

Antenna (aerial) terminals
75 ohms, unbalanced
Intermediate frequency 10.7 MHz

Video Section
Outputs VIDEO: Pin jack
HDMI OUT: HDMI 19-pin

Speakers
Front
SS-TS107
Dimensions (approx.) 91 mm \times 112 mm \times 101 mm (3 $\frac{5}{8}$ in \times 4 $\frac{1}{2}$ in \times 4 in) (w/h/d) incl. projecting parts
Mass (approx.) 0.4 kg (15 oz)

29

Other Playback Operations

To change angles

Press ANGLE during playback to select the desired angle.

To display subtitles

Press SUBTITLE during playback to select the desired subtitle language.

To change the sound

When the system is playing a DVD VIDEO, DivX video file, or MPEG4 video file recorded in multiple audio formats (PCM, Dolby Digital, or MPEG audio), you can change the audio format. If the DVD VIDEO is recorded with multilingual tracks, you can also change the language.

With a VIDEO CD or CD, you can select the sound from the right or left channel and listen to the sound of the selected channel through both the right and left speakers. Press AUDIO repeatedly during playback to select the desired audio signal.

The selected audio signal format is displayed on the TV screen.

To play a VIDEO CD with PBC functions

When you start playing a VIDEO CD with PBC (Playback control) functions, the menu for your selection appears.

To play without using PBC

Press and hold **SHIFT**, then press the number buttons to select the item number you want in stop mode.


18

Using the Setup Display

You can make various adjustments to items such as picture and sound.


Displayed items vary depending on the country/model. The default setting is underlined.

- Press **SETUP** in stop mode. The setup menu appears.
- Press **←/→** to select one of the setup menu categories, then press **○**.
- Press **↑/↓** to select a setup item, then press **→** or **○**.
- Select the option you wish to change and press **○** to confirm and go back to the previously selected item.
- Press **SETUP** to turn off the menu. Selected category Setup categories

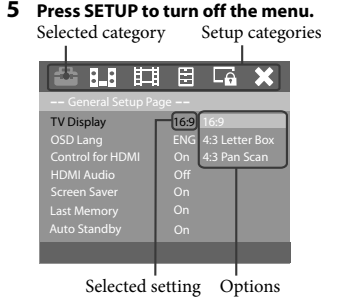

General Setup Page

 ■ **[TV Display]**
[L6.9]: Select this when you connect a wide-screen TV or a TV with a wide mode function.



22

This system can only play back a standard circular disc. Using neither standard nor circular discs (e.g., card, heart, or star shape) may cause a malfunction. Do not use a disc that has a commercially available accessory attached, such as a label or ring.

On heat radiation

Due to the slim type of main unit design, you may feel some heat on the top of the unit. This is normal. Please consult your nearest Sony dealer if you have any questions.

Power

The power is not turned on.

- Check that the AC power cord (mains lead) is connected securely.

Picture

- There is no picture.
- The video connecting cords are not connected securely.
 - The unit is not connected to the correct TV input jack.
 - The system is not selected via the video input of the TV.
 - Check the output method on your system.

Even though you set the aspect ratio in [TV Display] of [General Setup Page], the picture does not fill the TV screen.

- The aspect ratio on the disc is fixed.

Color irregularity occurs on the TV screen.

The system's speakers contain magnet parts, so magnetic distortion may occur. When color irregularity occurs on the TV screen, check the following items.

- Install the speakers at least 0.3 meters (1.0 ft) from your TV set.

26

Center
SS-CT102
Dimensions (approx.) 91 mm \times 112 mm \times 101 mm (3 $\frac{5}{8}$ in \times 4 $\frac{1}{2}$ in \times 4 in) (w/h/d) incl. projecting parts
Mass (approx.) 0.5 kg (1 lb 2 oz)

Surround
SS-TS107
Dimensions (approx.) 91 mm \times 112 mm \times 101 mm (3 $\frac{5}{8}$ in \times 4 $\frac{1}{2}$ in \times 4 in) (w/h/d) incl. projecting parts
Mass (approx.) 0.4 kg (15 oz)

Subwoofer
SS-WS103
Dimensions (approx.) 190 mm \times 345 mm \times 225 mm (7 $\frac{1}{2}$ in \times 13 $\frac{3}{8}$ in \times 8 $\frac{7}{8}$ in) (w/h/d) incl. projecting parts
Mass (approx.) 3.5 kg (7 lb 12 oz)

General
Power requirements
North American and Mexican models: 120 V AC, 60 Hz
Argentine models: 220 V - 240 V AC, 50/60 Hz
Brazilian models: 127 V - 240 V AC, 50/60 Hz
Latin American models: 110 V - 240 V AC, 50/60 Hz
Other models: 220 V - 240 V AC, 50/60 Hz

Power consumption On: 67 W
Standby: <1 W*

* Valid when the system is in the following status:
- [Control for HDMI] is set to [Off].

30

To search for a title/chapter/track/scene, etc.

■ **When playing a DVD/VCD**

- Press **○** **DISPLAY** during play. The Display Menu appears on the TV screen.
- Press **↑/↓** to select an option, then press **○**.
- Press and hold **SHIFT**, then press the number buttons to jump to the desired option.

■ When playing a CD

- Press **○** **DISPLAY** during play. The selection display appears on the TV screen.
- Press and hold **SHIFT**, then press the number buttons to select the desired track.

■ When playing an MP3/JPEG/DivX file

- Press **○** **DISPLAY** during play. The selection display appears on the TV screen.
- Press and hold **SHIFT**, then press the number buttons to select the desired number.

To play in programmed order

Selects the tracks to play in the order you want (only for CDs).

 
- Press and hold **SHIFT**, then press **PROGRAM**. The Program Menu display appears on the TV screen.
- Press and hold **SHIFT**, then press the number buttons to select the desired track.
- Press **←/↑/↓/→** to select [Start] to play the program.

18

[4:3 Letter Box]: Displays a wide picture with black bands on the top and bottom.



[4:3 Pan Scan]: Displays a full-height picture on the entire screen, with trimmed sides.



■ **[OSD Lang] (On-Screen Display)**
You can switch the display language on the TV screen.

■ **[Control for HDMI]**
This function is available when you connect the system and a TV that is compatible with the Control for HDMI function via an HDMI cable.

[On]: You can operate mutually between components that are connected via an HDMI cable.
[Off]: Turns off HDMI audio output. You can still enjoy sound output via the speaker system.
[All]: The HDMI audio output format will be same as the audio stream being played. If the playback audio format is not supported, the audio output will be changed to PCM automatically.
[PCM]: HDMI audio output will be downmixed to linear PCM (2-channel).

■ **[HDMI Audio]**
This setting is only required if you are using the HDMI OUT jack for an audio connection.
[On]: Turns off HDMI audio output. You can still enjoy sound output via the speaker system.
[All]: The HDMI audio output format will be same as the audio stream being played. If the playback audio format is not supported, the audio output will be changed to PCM automatically.
[PCM]: HDMI audio output will be downmixed to linear PCM (2-channel).

22

Troubleshooting

If you experience any of the following difficulties while using the system, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer.

Note that if service personnel changes some parts during repair, these parts may be retained.

Power

The power is not turned on.

- Check that the AC power cord (mains lead) is connected securely.

Picture

- There is no picture.
- The video connecting cords are not connected securely.
 - The unit is not connected to the correct TV input jack.
 - The system is not selected via the video input of the TV.
 - Check the output method on your system.

Even though you set the aspect ratio in [TV Display] of [General Setup Page], the picture does not fill the TV screen.

- The aspect ratio on the disc is fixed.

Color irregularity occurs on the TV screen.

The system's speakers contain magnet parts, so magnetic distortion may occur. When color irregularity occurs on the TV screen, check the following items.

- Install the speakers at least 0.3 meters (1.0 ft) from your TV set.

26

Center
SS-CT102
Dimensions (approx.) 91 mm \times 112 mm \times 101 mm (3 $\frac{5}{8}$ in \times 4 $\frac{1}{2}$ in \times 4 in) (w/h/d) incl. projecting parts
Mass (approx.) 0.5 kg (1 lb 2 oz)

Surround
SS-TS107
Dimensions (approx.) 91 mm \times 112 mm \times 101 mm (3 $\frac{5}{8}$ in \times 4 $\frac{1}{2}$ in \times 4 in) (w/h/d) incl. projecting parts
Mass (approx.) 0.4 kg (15 oz)

Subwoofer
SS-WS103
Dimensions (approx.) 190 mm \times 345 mm \times 225 mm (7 $\frac{1}{2}$ in \times 13 $\frac{3}{8}$ in \times 8 $\frac{7}{8}$ in) (w/h/d) incl. projecting parts
Mass (approx.) 3.5 kg (7 lb 12 oz)

General
Power requirements
North American and Mexican models: 120 V AC, 60 Hz
Argentine models: 220 V - 240 V AC, 50/60 Hz
Brazilian models: 127 V - 240 V AC, 50/60 Hz
Latin American models: 110 V - 240 V AC, 50/60 Hz
Other models: 220 V - 240 V AC, 50/60 Hz

Power consumption On: 67 W
Standby: <1 W*

* Valid when the system is in the following status:
- [Control for HDMI] is set to [Off].

30

To play repeatedly/shuffle, etc.

Press REPEAT repeatedly to select the desired playback mode. The selected mode appears in the front panel display.

- "REP CHP": Repeats the current chapter.
- "REP TT": Repeats the current title.
- "REP ALL": Repeats all titles.
- "REP TRA": Repeats the current track.
- "REP OFF": The system returns to normal playback mode.
- "SHUFFLE": Plays the contents once in random order until all the contents have been played.
- "SHUF REP": Repeats shuffle play.
- "FOLDER": Plays the current folder.
- "RANDOM": Plays all files in random order.
- "SINGLE": Plays the current file.
- "REP ONE": Repeats the current file.
- "REP FLD": Repeats the current folder.

Note

- The selectable modes and their order differ depending on the disc or file.

19

■ **[Screen Saver]**
[On]: The screen saver image appears if you do not operate the system for about 15 minutes.
[Off]: Off.

■ **[Last Memory]**
This system recalls the point where you stopped the disc the last time it was played and resumes playback from that point the next time you insert the same disc.
[On]: The system stores the resume points in memory.
[Off]: The system does not store the resume points in memory. Playback restarts at the resume point only for the current disc in the unit.

Note

- When the resume playback memory is full, the resume playback point for the earliest disc is deleted.

■ **[Auto Standby]**
[On]: Enters standby mode automatically when in stop, pause, no disc, or eject mode for more than 30 minutes.
[Off]: The unit does not enter standby mode automatically.

Speaker Setup Page

■ **[Level]**
You can adjust the sound level of all the speakers and the subwoofer.

[L]: Adjusts the sound level of left speaker. It is possible to adjust the parameter from -6.0 dB to +0.0 dB.
[C]: Adjusts the sound level of center speaker. It is possible to adjust the parameter from -6.0 dB to +6.0 dB.
[R]: Adjusts the sound level of right speaker. It is possible to adjust the parameter from -6.0 dB to +0.0 dB.

■ **[Center Speaker]**
[On]: Activates the center speaker.
[Off]: Deactivates the center speaker.

■ **[Sur. Speaker]**
[On]: Activates the surround speakers.
[Off]: Deactivates the surround speakers.

■ **[Test Tone]**
The speakers will emit a test tone to set the Level.
[On]: The speakers emit the test tone.
[Off]: The speakers do not emit the test tone.

Tip

- To adjust the volume of all speakers, turn MASTER VOLUME on the unit or press VOLUME +/- on the remote control.

23

• If the color irregularity persists, turn off the TV set once, then turn it on after 15 to 30 minutes.

• Reposition the speakers farther away from your TV set.

The [TV Type] setting does not match your TV.

- [TV Type] can be reset according to the following procedure:
 - Press **▲** to take out the disc.
 - Press **○** **DISPLAY**.
 - Press **○**.[TV Type] will be reset.

Sound

There is no sound. Severe hum or noise is heard.

- The speaker cords are not connected securely.
- Clean the disc.

The sound loses stereo effect when you play a VIDEO CD or CD.

- Set the audio setting to [Stereo] by pressing AUDIO.

Operation

Radio stations cannot be tuned in.

- Check that the antenna (aerial) is connected securely. Adjust the antenna (aerial) or connect an external antenna (aerial) if necessary.

A disc does not play.

- The region code on the DVD does not match the system.
- Moisture has condensed inside the unit and may cause damage to the lenses. Remove the disc and leave the unit turned on for about half an hour.

27

Selecting the Sound Effect

To select an equalizer setting

Press EQ repeatedly during playback until the desired mode appears on the front panel display.

- "FLAT": Flat and pure sound mode.
- "CLASSIC": Ideal for listening to classical music and watching live concert DVDs.
- "JAZZ": Clear mid and high range. Recreates the atmosphere of a live club with the artist just in front of you. Good for jazz music and watching dramas.
- "ROCK": Enhanced low and high range for great sounding movie effects and atmosphere. Great for action movies and rock/pop music.

To select a surround setting

Press SURROUND repeatedly during playback to select a surround audio output mode. The selected mode appears in the front panel display.

- "MULTI" (A.F.D. MULTI): When the source is 2 channel, sound is output from all speakers.
- "STANDARD" (A.F.D. STANDARD): The system discriminates the sound format of the source and presents sound as it was recorded/encoded.
- "DOLBY PL" (PRO LOGIC): Performs Dolby Pro Logic decoding.
- "2CH

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>