

SONY[®]

User guide

Xperia™ P TV Dock
DK21

Contents

 
Introduction.....	3
TV Dock back overview.....	3
Getting started.....	4
LiveWare™ manager	4
Upgrading LiveWare™ manager.....	4
Using TV Dock.....	5
Charging your phone.....	5
Connecting your phone to a TV set using TV Dock.....	5
Legal information.....	7
FCC Statement.....	7
Industry Canada Statement.....	7

Introduction

Use TV Dock to charge your phone and to view content saved in the phone on a TV screen using a HDMI™ (High Definition Multimedia Interface) cable.


- ! To get the most up-to-date User guide for your accessory, go to www.sonymobile.com/support.

TV Dock back overview

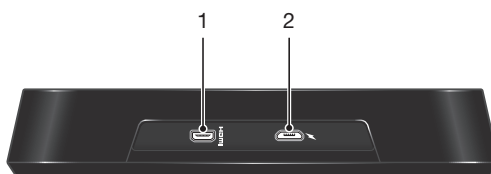


- 1 HDMI™ port
- 2 Micro USB port for charger cable

 To connect your phone to the TV Dock

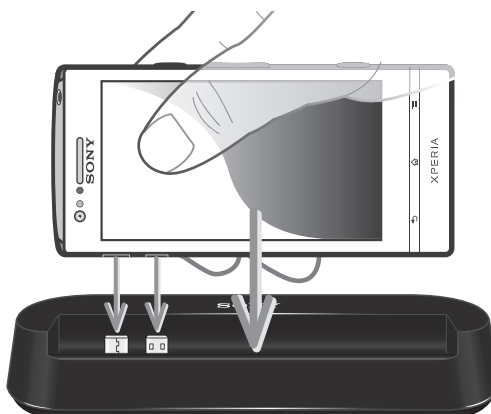

 To disconnect your phone from the TV Dock

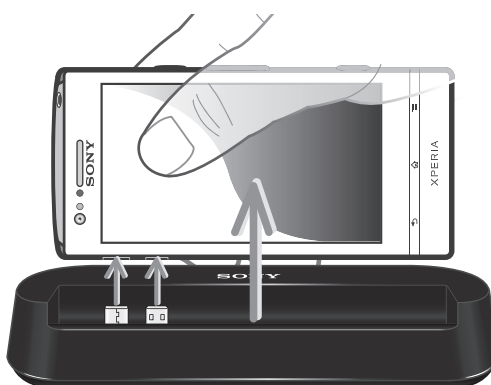

Getting started



LiveWare™ manager

LiveWare™ manager is a setup application that is pre-installed on Sony and/or Sony Ericsson phones running Android™ version 2.3 and later. When you connect your phone to a TV set via TV Dock using a HDMI™ cable, LiveWare™ manager identifies the connection and starts the TV launcher application. Always make sure that you have the latest version of LiveWare™ manager installed on your phone.

Upgrading LiveWare™ manager

Before you can upgrade the LiveWare™ manager application, make sure that you have a Google™ account and a working Internet connection. For more information about upgrading LiveWare™ manager, go to www.sonymobile.com/support.

To upgrade the LiveWare™ manager application

- 1 From your phone's main application screen, find and tap **Play Store**.
- 2 Tap  to open the search field, then type *LiveWare*.
- 3 Tap  to start searching.
- 4 Select **LiveWare™ manager** in the result list, then tap **Update**.

 
! Google Play™ may not be available in all countries or regions. When you download content to your phone, you may be charged for the amount of data transferred to your phone. Contact your operator for information about data transfer rates in your country or region.

Using TV Dock

Charging your phone

To charge your phone using TV Dock

- 1 Plug one end of the USB cable into your phone charger.
- 2 Plug the charger into a power outlet.
- 3 Plug the other end of the cable into the TV Dock charger port.
- 4 Connect your phone to the TV Dock.

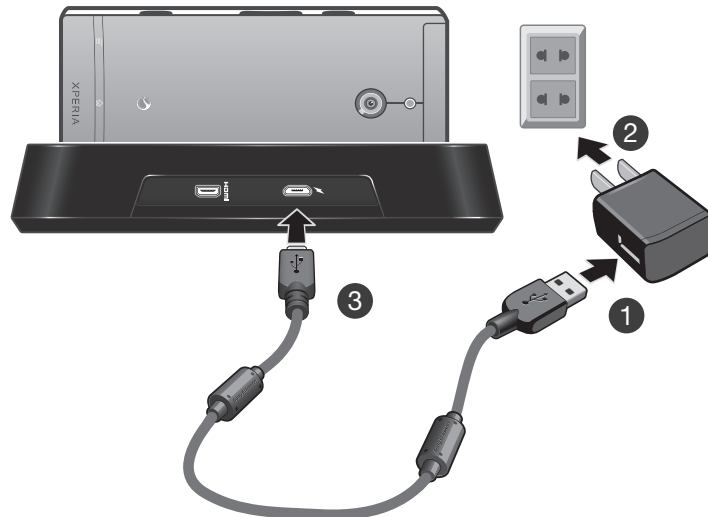


Connecting your phone to a TV set using TV Dock

Connect your phone to a TV set using TV Dock and start viewing content saved in your phone on a larger screen. Once the devices are connected, you can use the remote control for the TV to navigate content in your phone and control playback.

To view phone content on a TV using TV Dock

 - 1 Connect the TV Dock to a TV set using a HDMI™ cable.
 - 2 Connect your phone to the TV Dock. The TV launcher application starts automatically.
 - 3 Use the TV remote control to navigate and view phone content.
- 💡 You can also tap the relevant items on the phone screen to navigate and open phone content for viewing on the TV screen.
 - ⚠️ You may need to purchase a Type D to Type A HDMI™ cable separately.

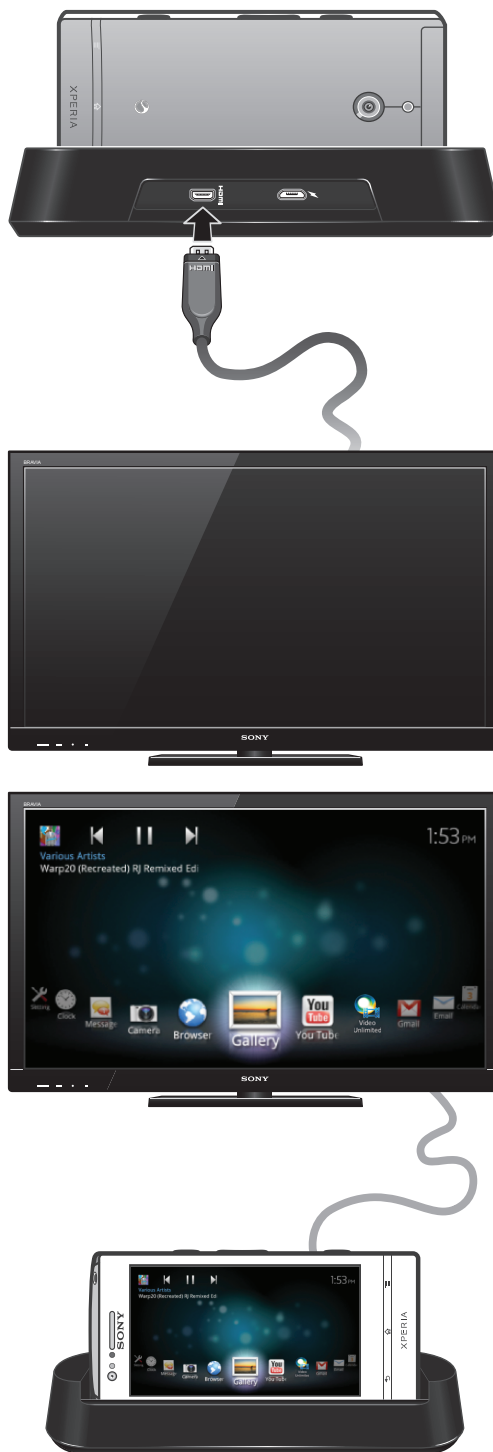

To get help about using the TV remote control

- 1 Connect your phone to the TV set using TV Dock. The TV launcher application starts.
- 2 Using the TV remote control, open the options menu.
- 3 Select **Information**. Instructions appear about how to use the TV remote control.

! The TV must be CEC (Consumer Electronics Control) enabled in order for the TV remote control to work with TV Dock. Contact your TV vendor for more information.

Legal information

Sony DK21

Prior to use, please read the *Important information* leaflet separately provided.

This User guide is published by Sony Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved.

©Sony Mobile Communications AB, 2012

Publication number: 1263-3747.1

Sony is the trademark or registered trademark of Sony Corporation. Xperia is the trademark or registered trademark of Sony Mobile Communications AB.

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.

Visit www.sonymobile.com for more information.

All illustrations are for illustration only and may not accurately depict the actual accessory.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.



Any change or modification not expressly approved by Sony may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Statement

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>