 


Location of controls

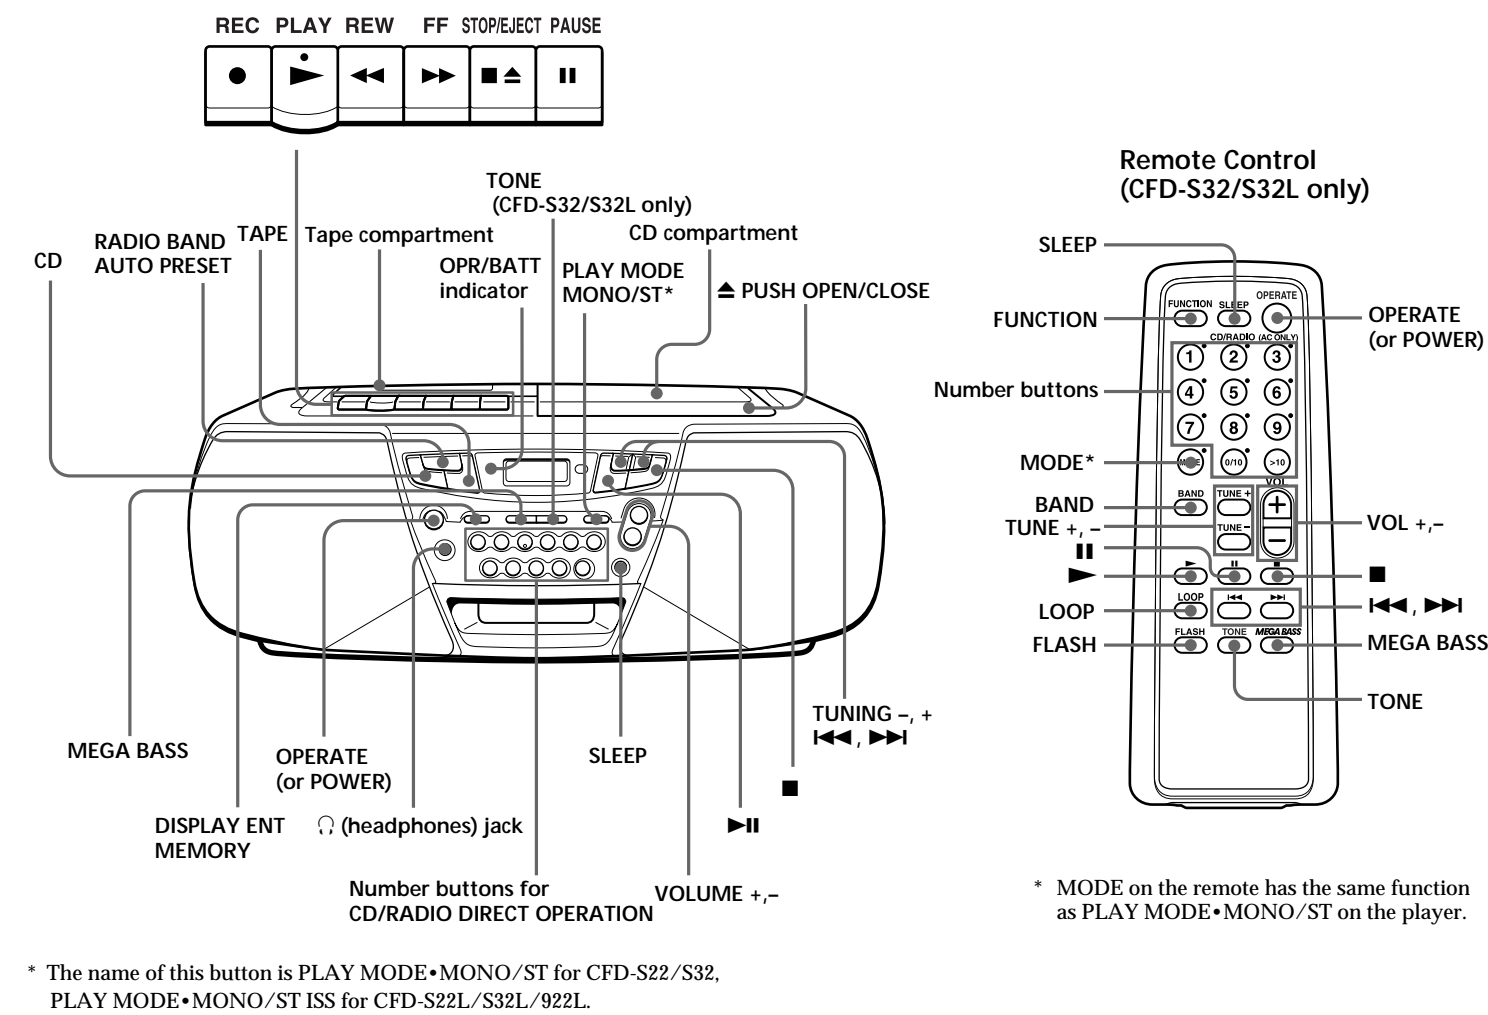

Tip
To listen through headphones, connect the headphones to the (headphones) jack.

Adjusting the sound emphasis (MEGA BASS/TONE)

Reinforcing the bass sound


Press MEGA BASS.
"MEGA BASS" appears in the display.
To return to normal sound, press the button again.

Adjusting the tone (CFD-S32/S32L only)


To enhance	Display
the high tone	HI
the low tone	LO

Playing a CD

 
1 Press CD (direct power-on).

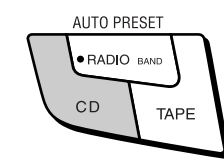

 
2 Press ▲ PUSH OPEN/CLOSE down to open the CD compartment and place a CD in the CD compartment.

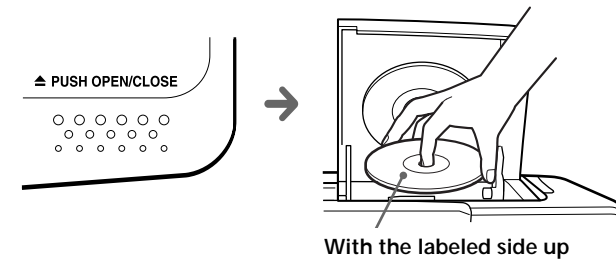

3 Close the CD compartment.

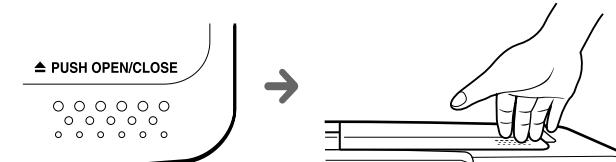 

 
4 Press ►► (► on the remote, CFD-S32/S32L only). The player plays all the tracks once.

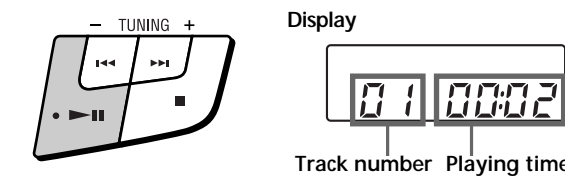

To	Press
adjust the volume	VOLUME +, - (VOL +, - on the remote, CFD-S32/S32L only)
stop playback	■
pause playback	►► (► on the remote, CFD-S32/S32L only) Press the button again to resume play after pause.
go to the next track	►►
go back to the previous track	◄◄
remove the CD	▲ PUSH OPEN/CLOSE
turn on/off the player	OPERATE (or POWER)

Using the display

 Checking the total track number and playing time
Press DISPLAY ENT•MEMORY in stop mode.

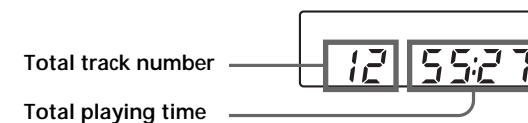

Checking the remaining time

Press DISPLAY ENT•MEMORY while playing a CD.

To display	Press DISPLAY ENT•MEMORY
the current track number and the remaining time on the current track*	once
the number of tracks left and remaining time on the CD	twice
the current track number and playing time	three times

* For a track whose number is more than 20, the remaining time appears as "----" in the display.

Locating a specific track

To locate	Press
a specific track directly	a number button of the track.
a point while listening to the sound	►► (forward) or ◄◄ (backward) while playing until you find the point.
a point while observing the display	►► (forward) or ◄◄ (backward) in pause until you find the point.

Tip

When you locate a track numbered over 10, press >10 first, then 2 and 3.
Example: To play track number 23, press >10 first, then 2 and 3.

Note

You cannot locate a specific track if "SHUF" or "PGM" is lit in the display.
Turn off the indication by pressing ■.

Repeat Play

1 Press CD.

2 Proceed as follows:

To repeat	Do this
a single track	1 Press PLAY MODE•MONO/ST until "REP 1" appears. 2 Press the number button for the track you want to repeat.
all the tracks	1 Press PLAY MODE•MONO/ST until "REP ALL" appears. 2 Press ►►.
tracks in random order	1 Press PLAY MODE•MONO/ST until "SHUF REP" appears. 2 Press ►►.
programmed tracks	1 Press PLAY MODE•MONO/ST until "PGM REP" appears. 2 Press the number buttons for the tracks you want to programme in the order you want up to 20 tracks. 3 Press ►►.

To cancel Repeat Play

Press PLAY MODE•MONO/ST until "REP" disappears from the display.

Shuffle Play

1 Press CD.

2 Press PLAY MODE•MONO/ST until "SHUF" appears in the display.

3 Press ►► to start shuffle play.

To cancel Shuffle Play

 
Press PLAY MODE•MONO/ST until "SHUF" disappears from the display.

Programme Play

1 Press CD.

2 Press PLAY MODE•MONO/ST until "PGM" appears in the display.

3 Press the number buttons for the tracks you want to programme in the order you want. You can arrange the playing order of up to 20 tracks.

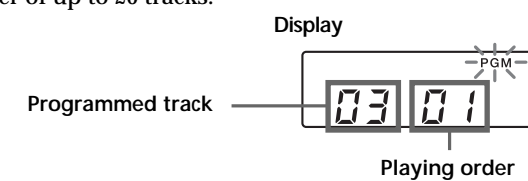

4 Press ►► to start program play.

To cancel Programme Play

Press PLAY MODE•MONO/ST until "PGM" disappears from the display.

To check the order of tracks before play

Press DISPLAY ENT•MEMORY.
Every time you press the button, the track number appears in the programmed order.

To change the current programme

Press ■ once if the CD is stopped and twice if the CD is playing. The current program will be erased. Then create a new programme following the programming procedure.

Tips

- You can play the same program again, since the program is saved until you open the CD compartment.
- You can record your own program. After you've created the programme, insert a blank tape and press ● to start recording.

Enjoying Sound effects (LOOP/FLASH) (CFD-S32/S32L only)

You can repeat part of a CD (LOOP) and can "flash" the CD sound (FLASH) during playback.

1 Play a CD.

2 Press and hold LOOP or FLASH at the point you want to start the function.

To	Press and Hold
repeat a selected part of a CD	LOOP on the remote
"flash" the CD sound	FLASH on the remote

To cancel the LOOP or FLASH function

Release the button.
The player returns to normal play.

Notes on CDs

- Before playing, clean the CD with a cleaning cloth. Wipe the CD from the center out.



 
- Do not use solvents such as benzine, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight as there can be a considerable rise in temperature inside the car.
- Do not stick paper or sticker on the CD, nor scratch the surface of the CD.
- After playing, store the CD in its case.

If there is a scratch, dirt or fingerprints on the CD, it may cause tracking error.


Listening to the radio

1 Press RADIO BAND•AUTO PRESET until the band you want appears in the display (direct power-on). Each time you press the button, the indication changes as follows:

CFD-S22/S32: "FM1" → "FM2" → "AM"
CFD-S22L/S32L/922L: "FM1" → "FM2" → "MW" → "LW".

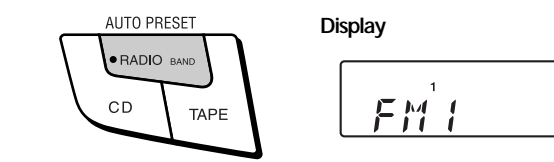

 2 Hold down TUNING + or - (TUNE + or - on the remote, CFD-S32/S32L only) until the frequency digits begin to change in the display.

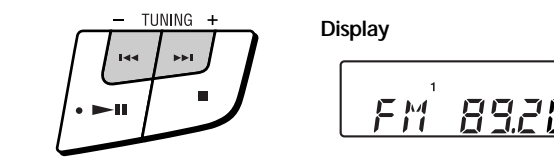


The player automatically scans the radio frequencies and stops when it finds a clear station.
If you can't tune in a station, press the button repeatedly to change the frequency step by step.

To	Press
adjust the volume	VOLUME +, - (VOL +, - on the remote, CFD-S32/S32L only)
turn on/off the radio	OPERATE (or POWER)

To improve broadcast reception

 Reorient the antenna for FM. Reorient the player itself for AM or MW/LW.

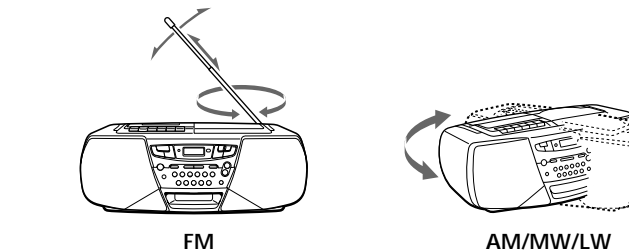


Tips

- The "FM1" and "FM2" bands have the same functions. You can store the stations you want separately in "FM1" and "FM2".
- If the FM broadcast is noisy, press PLAY MODE•MONO/ST until "Mono" appears in the display and the radio will play in monaural.


Presetting radio stations

You can store radio stations into the player's memory. You can preset up to 30 radio stations (CFD-S22/S32) or 40 radio stations (CFD-S22L/S32L/922L), 10 for each band in any order.

 1 Press RADIO BAND•AUTO PRESET to select the band.

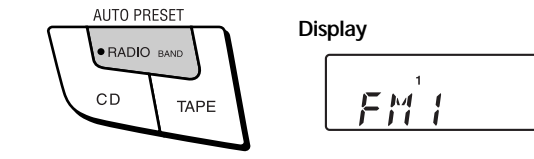

 2 Hold down RADIO BAND•AUTO PRESET for 2 seconds until "AUTO" flashes in the display.

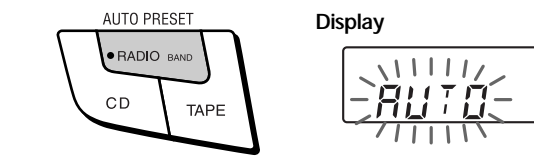

3 Press DISPLAY ENT•MEMORY.
The stations are stored in memory from the lower frequencies to the higher ones.

Tip

If you automatically preset the "FM1" or "FM2" band, 10 radio stations are stored in "FM1" band and 10 more radio stations are stored in "FM2" band.

 
If a station cannot be preset automatically

You need to preset a station with a weak signal manually.

1 Press RADIO BAND•AUTO PRESET to select the band.

2 Tune in a station you want.

3 Hold down the number buttons that you want to preset the new station on for about 2 seconds.

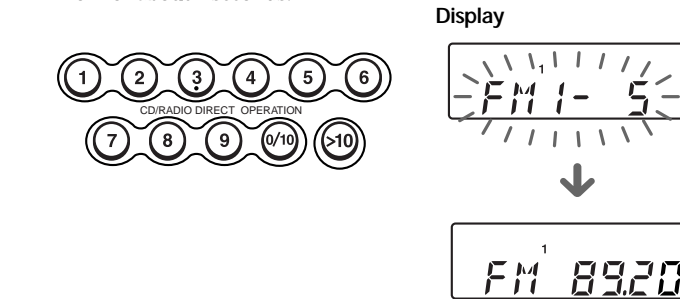


The new station replaces the old one.

Playing preset radio stations

1 Press RADIO BAND•AUTO PRESET to select the band.

 2 Press the number buttons to tune in the stored station.

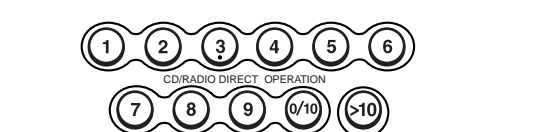

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>